

Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name:

MFC-L2922DW, MFC-L2920DW, MFC-L2886DW
 MFC-L2862DW, MFC-L2861DW, MFC-L2860DWE,
 MFC-L2860DW, MFC-L2835DW, MFC-L2827DWXL, MFC-L2827DW, MFC-L2806DW,
 MFC-L2802DW, MFC-L2800DW, MFC-B7811DW, MFC-B7810DW
 DCP-L2665DW, DCP-L2660DW, DCP-B7620DW,
 DCP-L2627DWXL, DCP-L2627DWE, DCP-L2627DW, DCP-L2622DW, DCP-L2620DW
 MFC-L2802DN, MFC-B7800DN
 DCP-L2640DN

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode	To Networked Standby mode	To Off mode
USB	0.6W	N/A	1min	N/A	0min~20min	N/A
Ethernet	0.7W	N/A	1min	N/A	0min~20min	N/A
Wi-Fi	0.9W	N/A	1min	N/A	0min~20min	N/A
NFC	0.6W	N/A	1min	N/A	0min~20min	N/A
Telecom(FAX)	0.6W	N/A	1min	N/A	0min~20min	N/A
All network ports activated and connected*	3.6W		1min		0min~20min	

*Power consumption is reduced as the number of activated and connected network ports decreases.


How to enable/disable wireless LAN (available for certain models)

• **LCD models:**

Press **Menu** (if available on your machine), and then press **▲** or **▼** to select the following:

1. Select [Network]. Press **OK**.
2. Select [WLAN (Wi-Fi)]. Press **OK**.
3. Select [WLAN Enable]. Press **OK**.
4. Select [On] or [Off]. Press **OK** or **Go**.

• **Touchscreen models:**

Press  [Settings] > [All Settings] > [Network] > [WLAN (Wi-Fi)] > [WLAN Enable] > [On] or [Off].


How to enable/disable Wi-Fi Direct (available for certain models)

• **LCD models:**

Press **Menu** (if available on your machine), and then press **▲** or **▼** to select the following:

1. Select [Network]. Press **OK**.
2. Select [Wi-Fi Direct]. Press **OK**.
3. Select [I/F Enable]. Press **OK**.
4. Select [On] or [Off]. Press **OK** or **Go**.

• **Touchscreen models:**

Press  [Settings] > [All Settings] > [Network] > [Wi-Fi Direct] > [I/F Enable] > [On] or [Off].

How to enable/disable NFC (available for certain models)

• **Touchscreen models:**

Press  [Settings] > [All Settings] > [Network] > [NFC] > [On] or [Off].

Power consumption

Your machine has power-saving functions. If you deactivate this function or choose to delay its activation, power consumption will increase.