

Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name:DCP-T730DW, DCP-T735DW, DCP-T530DW, DCP-T535DW, DCP-T536DW, DCP-T580DW, DCP-T583DW

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby	Off mode	To Networked Standby mode	To Off mode	To Networked Standby	To Off mode
USB	0.6W	N/A	1min	N/A	1min ~ 20min	N/A
Wi-Fi	0.6W	N/A	1min	N/A	1min ~ 20min	N/A
All network ports activated and connected	0.7W		1min		1min ~ 20min	

How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press the following buttons on your control panel or LCD.

Note:

Depending on your machine, you may need to press the OK button to select the option.

The message below may be slightly different from the actual message displayed.

Press **Wi-Fi**, and then press ▲ or ▼ to select the following:

1. Select **WLAN Enable**. Press **OK**.
2. Select **On** or **Off**. Press **OK**.

How to enable/disable Wi-Fi Direct

Press **Menu**, and then press ▲ or ▼ to select the following:

1. Select **Network**. Press **OK**.
2. Select **Wi-Fi Direct**. Press **OK**.
3. Select **WFD Enable**. Press **OK**.
4. Select **On** or **Off**. Press **OK**.

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.