

Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name: DCP-J1460DW, DCP-J1360DW, DCP-J1313DW, DCP-J1310DW, DCP-T780DW

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby	Off mode	To Networked Standby mode	To Off mode	To Networked Standby	To Off mode
USB	0.6W	N/A	1min	N/A	1min ~ 20min	N/A
Wi-Fi	0.9W	N/A	1min	N/A	1min ~ 20min	N/A
All network ports activated and connected	1.0W		1min		1min ~ 20min	

How to enable/disable Wireless LAN

To turn on or off the wireless network connection, press the following buttons on your control panel or LCD.

Note:

Depending on your machine, you may need to press the OK button to select the option.


The message below may be slightly different from the actual message displayed.

•DCP-J1310DW/DCP-J1313DW/DCP-J1360DW/DCP-T780DW

Press **Settings**, and then press **▲** or **▼** to select the following:

1. Select [Network]. Press **OK**.
2. Select [WLAN (Wi-Fi)]. Press **OK**.
3. Select [WLAN Enable]. Press **OK**.
4. Select [On] or [Off]. Press **OK**.

•DCP-J1460DW

Press  [Settings] > [Network] > [WLAN (Wi-Fi)]
> [WLAN Enable] > [On] or [Off].


How to enable/disable Wi-Fi Direct

•DCP-J1310DW/DCP-J1313DW/DCP-J1360DW/DCP-T780DW

Press **Settings**, and then press **▲** or **▼** to select the following:

1. Select [Network]. Press **OK**.
2. Select [Wi-Fi Direct]. Press **OK**.
3. Select [I/F Enable]. Press **OK**.
4. Select [On] or [Off]. Press **OK**.

•DCP-J1460DW

Press  [Settings] > [Network] > [Wi-Fi Direct] > [I/F Enable] > [On] or [Off].

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.