Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name: MFC-15740DW, MFC-15345DW, MFC-15345DW, MFC-12340DW, MFC-12340DW, MFC-13340DW, MFC-13340DW, MFC-15340DW, MFC-16540DW, MFC-12340DW, MFC-12

Woder Name: Wil 0-007400W, Wil 0-000400W, Wil 0-000400W, Wil 0-000400W, Wil 0-000400W, Wil 0-000400W						
Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby	Off mode	To Networked	To Off mode	To Networked Standby	To Off mode
		On mode	Standby mode			
Ethernet	0.9W	N/A	3min	N/A	1min ~ 20min	N/A
USB	0.9W	N/A	3min	N/A	1min ~ 20min	N/A
Wi-Fi	1.2W	N/A	3min	N/A	1min ~ 20min	N/A
Telecom(FAX)	1.0W	N/A	3min	N/A	1min ~ 20min	N/A
All network ports activated and connected	1.9W		3min		1min ~ 20min	

How to enable/disable wireless LAN (available for certain models)

Press [Network] > [Network I/F] > [Wired LAN] or [WLAN (Wi-Fi)].

How to enable/disable Wi-Fi Direct (available for certain models)

Press | This | Settings | > [Network] > [Wi-Fi Direct] > [I/F Enable] > [On] or [Off].

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.