


Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)


Model Name: MFC-J6957DW, MFC-J6955DW, MFC-J6940DW, MFC-J3940DW, MFC-J5955DW

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby	Off mode	To Networked Standby mode	To Off mode	To Networked Standby	To Off mode
Ethernet	0.9W	N/A	3min	N/A	1min ~ 20min	N/A
USB	0.9W	N/A	3min	N/A	1min ~ 20min	N/A
Wi-Fi	1.2W	N/A	3min	N/A	1min ~ 20min	N/A
NFC	0.8W	N/A	3min	N/A	1min ~ 20min	N/A
Telecom(FAX)	1.0W	N/A	3min	N/A	1min ~ 20min	N/A
All network ports activated and connected	1.9W		3min		1min ~ 20min	

How to enable/disable wireless LAN (available for certain models)

- Press  [Settings] > [Network] > [Network I/F] > [Wired LAN] or [WLAN (Wi-Fi)].

How to enable/disable Wi-Fi Direct (available for certain models)

- Press  [Settings] > [Network] > [Wi-Fi Direct] > [I/F Enable] > [On] or [Off].

How to enable/disable NFC (available for certain models)

- Press  [Settings] > [Network] > [NFC] > [On] or [Off].

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.