Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name: MFC-T4500DW

| Network Port | Power consumption | | Default Timer Values | | Timer Values | |
|---|-------------------|----------|----------------------|-------------|----------------------|-------------|
| | Networked Standby | Off mode | To Networked | To Off mode | To Networked Standby | To Off mode |
| | | On mode | Standby mode | | | |
| Ethernet | 1.5W | N/A | 5min | N/A | 1min ~ 20min | N/A |
| USB | 1.4W | N/A | 5min | N/A | 1min ~ 20min | N/A |
| Wi-Fi | 1.7W | N/A | 5min | N/A | 1min ~ 20min | N/A |
| Telecom(FAX) | 1.3W | N/A | 5min | N/A | 1min ~ 20min | N/A |
| All network ports activated and connected | 2.2W | | 5min | | 1min ~ 20min | |

How to enable/disable wireless LAN (available on certain models)



[Settings] > [All Settings] > [Network] > [Network I/F] > [Wired LAN] or [WLAN(Wi-Fi)].

How to enable/disable Wi-Fi Direct® (available on certain models)



[Settings] > [All Settings] > [Network] > [Wi-Fi Direct] > [I/F Enable] > [On] or [Off].

How to enable/disable NFC (available on certain models)



[Settings] > [All Settings] > [Network] > [NFC] > [On] or [Off].

Power consumption
Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.