

HL-10W

Read the *Product Safety Guide* first, then read this *Quick Setup Guide* for the correct installation procedure.



Operation Videos:
www.95105369.com





Installation & Using Videos

EN

Unpack the machine and check the components


Remove the protective tape or film covering the machine and the supplies.

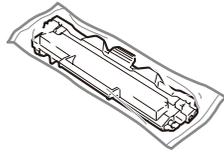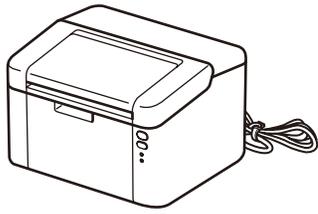

Toner Cartridge



A5 Paper Long Edge Support

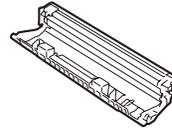

Drum Unit
(Installed in the machine)



USB Interface Cable



Quick Setup Guide



Product Safety Guide

NOTE:


• The available connection interfaces vary depending on the model.

USB cable


We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.

• Save all packing materials and the box in case you need to ship your machine.


1 Remove the packing materials and install the toner cartridge

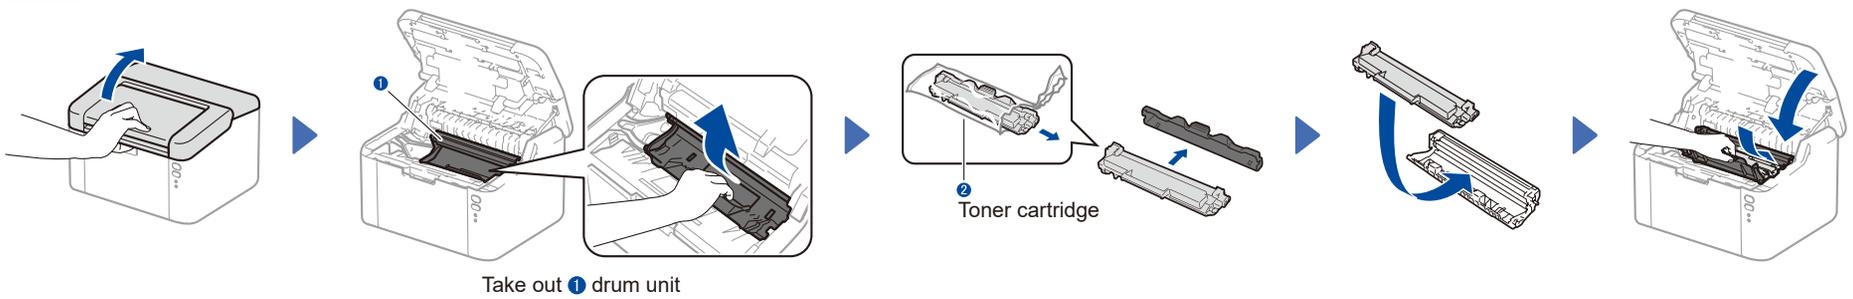

2 Load paper in the paper tray

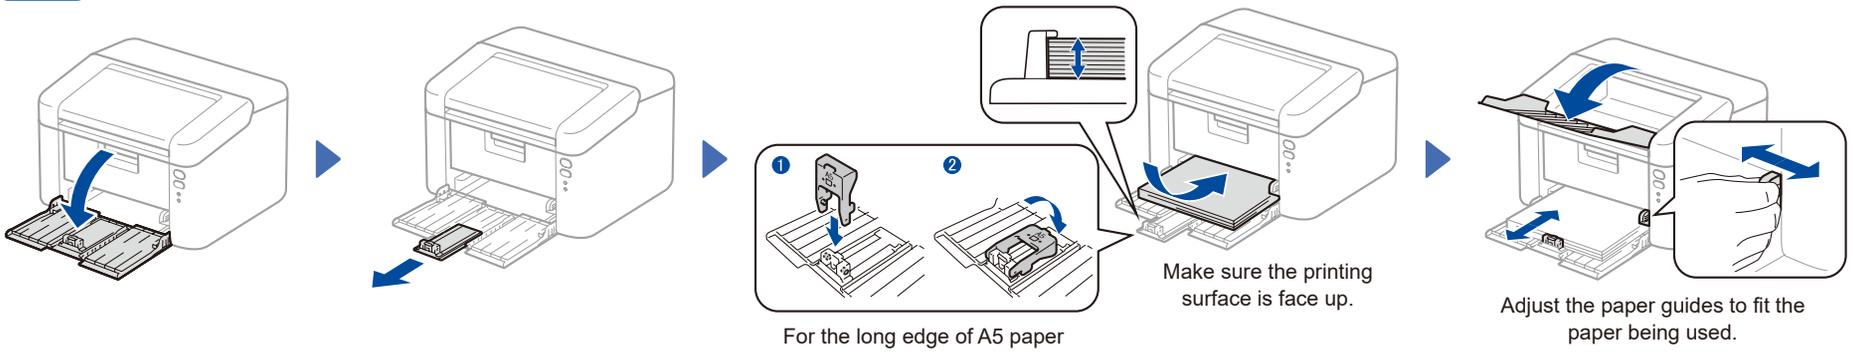

3 Connect the power cord and turn the machine on

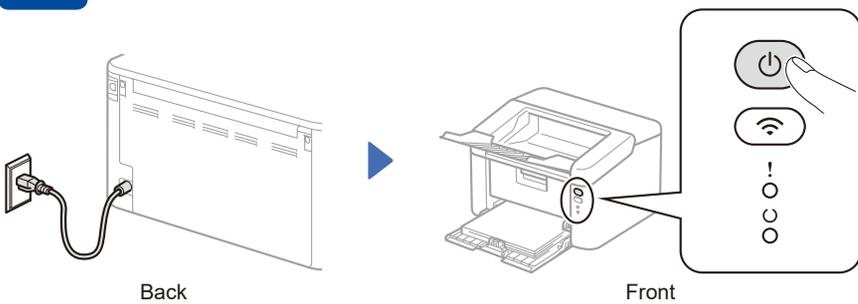

Printer LED Indications

Blinking: ☀ or 🌱 ON: ● OFF: ○


	Power Off	Ready Data Remaining	Sleep Deep Sleep	Warming Up Cooling Down	Receiving Data	Toner Low	Replace Toner	Paper Jam	Drum End Soon Replace Drum
!	○	○	○	○	○	☀ ○	☀ ○	☀ ☀ ○	☀ ☀ ☀ ○
⏻	○	●	● Dimmed	🌱 1 second interval	🌱 0.5 second interval	●	○	○	●

4 Connect your computer or mobile device to your machine

Follow these steps to complete the setup using one of the connection types available on your machine.

You can also print directly from your mobile devices using AirPrint or Mopria™ Print Service. For more information, see the *Online User's Guide*.

Visit setup.brother.com to download and install Brother software.

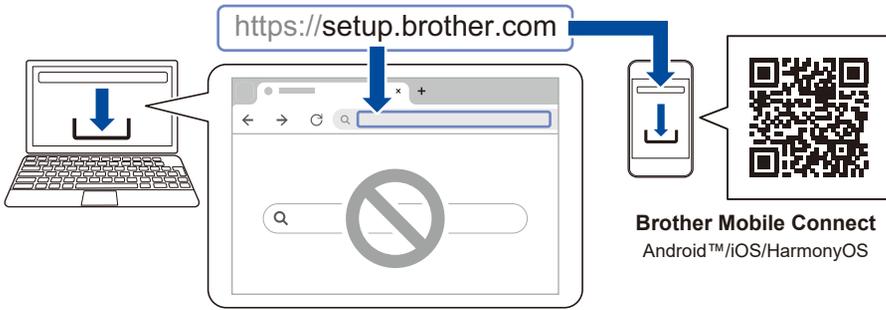

Follow the on-screen instructions and prompts.


Setup Finished

You can now print using your machine.

Important Notice for Network Security:


The default password to manage this machine's settings is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to protect your machine from unauthorised access.

Can't Connect? Check the following:

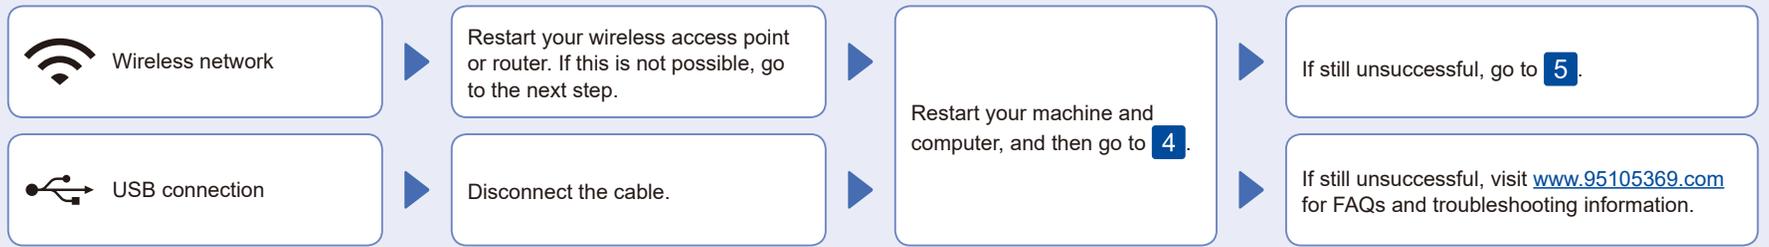


5 Manual wireless setup

If the wireless setup is unsuccessful, set up the connection manually.

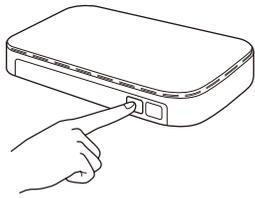

Press the WPS* button on your wireless LAN access point or router.

* WPS (Wi-Fi Protected Setup) mode is a feature used to simplify the connection between wireless routers and devices. When using WPS, there is no need to manually enter a long password; simply press the button to connect to the Wi-Fi network. Operate according to the actual situation, since the name of the WPS button may vary depending on the router.

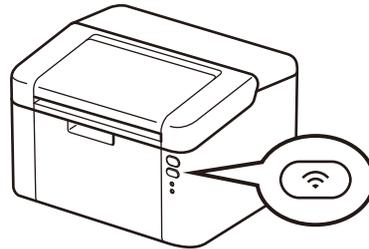

Press and hold the Wi-Fi button on your machine for about 2 seconds. The Wi-Fi button will light up when connected.

If the setup is unsuccessful, restart your Brother machine and your wireless access point or router, and repeat 5. If still unsuccessful, visit www.95105369.com.

Go to 4 to install software.

6 Charge printable pages

1. When the connection is complete, the home screen of Brother Mobile Connect, as shown on the right, will display your device name.
2. Click **云充功能设置** on the home page.
3. Follow the screen to activate, and add the administrator account. Click the **Start wechat mini program** button or scan the QR code to start the **Brother Cloud Charge** wechat mini program.
4. Use the **Brother Cloud Charge** wechat mini program to charge printable pages.



Setup Complete

Scan the QR code to query the product usage guide

Contains installation instructions videos such as unpacking, network connection, activation, and frequently asked questions.

