

Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name:DCP-L1640W, DCP-L1642W, DCP-L1660W, DCP-L1642WXL

Network Port	Power consumption		Timer Values	
	Networked Standby	Off mode	To Networked Standby	To Off mode
Ethernet	1.0W	N/A	1min	N/A
USB	1.0W	N/A	1min	N/A
Wi-Fi	1.4W	N/A	1min	N/A
All network ports activated and connected	3.2W		1min	

How to enable/disable wireless LAN (available for certain models)

• LCD models:

Press **Menu** (if available on your machine), and then press **▲** or **▼** to select the following:

1. Select [Network]. Press **OK**.
2. Select [WLAN(Wi-Fi)]. Press **OK**.
3. Select [WLAN Enable]. Press **OK**.
4. Select [On] or [Off]. Press **OK**.

How to enable/disable Wi-Fi Direct/Wireless Direct (available for certain models)

• LCD models:

Press **Menu** (if available on your machine), and then press **▲** or **▼** to select the following:

1. Select [Network]. Press **OK**.
2. Select [Wi-Fi Direct]. Press **OK**.
3. Select [I/F Enable]. Press **OK**.
4. Select [On] or [Off]. Press **OK**.

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.