



Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)



Model Name:HL-L1240W, HL-L1242W, HL-L1242WXL

Network Port	Power consumption		Timer Values	
	Networked Standby	Off mode	To Networked Standby	To Off mode
USB	0.9W	N/A	1min	N/A
Wi-Fi	1.3W	N/A	1min	N/A
All network ports activated and connected	1.3W		1min	

How to enable/disable wireless LAN (available for certain models)

- LED models:
 1. Make sure that the power cord is plugged in and the top cover is closed.
 2. Press  to turn the machine on and make sure only the Ready LED () lights up.
 3. Press the **Wi-Fi** button seven times.

How to enable/disable Wi-Fi Direct/Wireless Direct (available for certain models)

- LED models:
 1. Make sure that the power cord is plugged in and the top cover is closed.
 2. Press  to turn the machine on and make sure only the Ready LED () lights up.
 3. Press the **Wi-Fi** button five times.

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay itsactivation, power consumption will increase.