

## Information for compliance with Commission Regulation (EU) 2023/826

Model Name: DCP-T420W, DCP-T425W, DCP-T426W

Network Port	Power consumption		Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB	0.8W	N/A	1 - 60min	N/A
Wi-Fi	1.0W	N/A	1 - 60min	N/A
All network ports activated and connected*	1.0W		1 - 60min	

\*Power consumption is reduced as the number of activated and connected network ports decreases.

### How to enable/disable Wireless LAN (available for certain models)

Press **WiFi** and **Power** at the same time, and then press **MONO COPY**

### How to enable/disable Wi-Fi Direct® (available for certain models)

Press **WiFi** and **Power** at the same time, and then press **COPY Shortcut**

#### Power consumption

Your machine has power-saving functions.

If you deactivate this function or choose to delay its activation, power consumption will increase.