Information for compliance with Commission Regulation (EU) 2023/826

Model Name: DCP-T720W, DCP-T520W, DCP-T525W

Network Port	Power consumption		Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB	0.8W	N/A	1 - 60min	N/A
Wi-Fi	1.0W	N/A	1 - 60min	N/A
All network ports activated and connected*	1.3W		1 - 60min	

^{*}Power consumption is reduced as the number of activated and connected network ports decreases.

How to enable/disable Wireless LAN (available for certain models)

- 1.Press WiFi.
- 2.Press ▲ or ▼ to select the following:
 - a.Select [WLAN Enable]. Press OK.
 - b.Select [On] or [Off]. Press OK

How to enable/disable Wi-Fi Direct® (available for certain models)

- 1.Press Wi-Fi direct.
- 2.Press I/F Enable.
- 2.Press ▲ or ▼ to select the following:
 - a.Select [On]. Press OK.
 - b.Select [Off]. Press OK

Power consumption

Your machine has power-saving functions.

If you deactivate this function or choose to delay its activation, power consumption will increase.