

Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name:MFC-J1010DW

| Network Port | Power consumption | | Default Timer Values | | Timer Values | |
|--|------------------------|----------|---------------------------|-------------|---------------------------|-------------|
| | Networked Standby mode | Off mode | To Networked Standby mode | To Off mode | To Networked Standby mode | To Off mode |
| USB | 1.1W | N/A | 5min | N/A | 1 - 60min | N/A |
| Wi-Fi | 1.3W | N/A | 5min | N/A | 1 - 60min | N/A |
| Telecom(FAX) | 0.9W | N/A | 5min | N/A | 1 - 60min | N/A |
| All network ports activated and connected* | 1.3W | | 5min | | 1 - 60min | |

*Power consumption is reduced as the number of activated and connected network ports decreases.

How to enable/disable Wireless LAN (available for certain models)

press Settings, and then press ▲ or ▼ to select the following:

1. Select [Network]. Press OK.
2. Select [WLAN Enable]. Press OK.
3. Select [On] or [Off]. Press OK.

How to enable/disable Wi-Fi Direct® (available for certain models)

press Settings, and then press ▲ or ▼ to select the following:

1. Select [Network]. Press OK.
2. Select [Wi-Fi Direct]. Press OK.
3. Select [I/F Enable]. Press OK.
4. Select [On] or [Off]. Press OK.

Power consumption

Your machine has power-saving functions. If you deactivate this function or choose to delay its activation, power consumption will increase.