## Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

## Model Name: DCP-J1200W, DCP-J1200WE

|  | Power consumption      |          | Default Timer Values         |             | Timer Values                 |             |
|--|------------------------|----------|------------------------------|-------------|------------------------------|-------------|
|  | Networked Standby mode | Off mode | To Networked<br>Standby mode | To Off mode | To Networked<br>Standby mode | To Off mode |
| USB  | 0.8W                   | N/A      | 5min                         | N/A         | 1 - 60min                    | N/A         |
| Wi-Fi                                      | 1.1W                   | N/A      | 5min                         | N/A         | 1 - 60min                    | N/A         |
| All network ports activated and connected* | 1.1W                   |          | 5min                         |             | 1 - 60min                    |             |

\*Power consumption is reduced as the number of activated and connected network ports decreases.

## How to enable/disable Wireless LAN (available for certain models)

Press WiFi and Power at the same time, and then press MONO COPY

## How to enable/disable Wi-Fi Direct® (available for certain models)

Press WiFi and Power at the same time, and then press COPY Shortcut

Power consumption

Your machine has power-saving functions. If you deactivate this function or choose to delay its activation, power consumption will increase.