

Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name: MFC-J4350DW

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby	Off mode	To Networked Standby	To Off mode	To Networked Standby	To Off mode
USB	0.8W	N/A	1min	N/A	1 - 20min	N/A
Wi-Fi	1.0W	N/A	1min	N/A	1 - 20min	N/A
Telecom(FAX)	0.9W	N/A	1min	N/A	1 - 20min	N/A
All network ports activated and connected*	1.3W		1min		1 - 20min	

*Power consumption is reduced as the number of activated and connected network ports decreases.

How to enable/disable Wireless LAN (available for certain models)

Press **Settings**, and then press ▲ or ▼ to select the following:

1. Select [Network]. Press **OK**.
2. Select [WLAN (Wi-Fi)]. Press **OK**.
3. Select [WLAN Enable]. Press **OK**.
4. Select [On] or [Off]. Press **OK**.

How to enable/disable Wi-Fi Direct® (available for certain models)

Press **Settings**, and then press ▲ or ▼ to select the following:

1. Select [Network]. Press **OK**.
2. Select [Wi-Fi Direct]. Press **OK**.
3. Select [I/F Enable]. Press **OK**.
4. Select [On] or [Off]. Press **OK**.

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.