


Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)

Model Name: MFC-J4550DW


Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby	Off mode	To Networked Standby	To Off mode	To Networked Standby	To Off mode
USB	1.0W	N/A	1min	N/A	1 - 20min	N/A
Ethernet	1.0W	N/A	1min	N/A	1 - 20min	N/A
Wi-Fi	1.1W	N/A	1min	N/A	1 - 20min	N/A
Telecom(FAX)	1.0W	N/A	1min	N/A	1 - 20min	N/A
All network ports activated and connected*	2.1W		1min		1 - 20min	

*Power consumption is reduced as the number of activated and connected network ports decreases.

How to enable/disable Wireless LAN (available for certain models)

Press  [Settings] > [Network] > [WLAN (Wi-Fi)] > [WLAN Enable] > [On] or [Off].

How to enable/disable Wi-Fi Direct® (available for certain models)

Press  [Settings] > [Network] > [Wi-Fi Direct] > [I/F Enable] > [On] or [Off].

Power consumption

Your machine has a power-saving function. If you deactivate this function or choose to delay its activation, power consumption will increase.