

Information for compliance with Commission Regulation (EU) 801/2013 (Great Britain only), (EU) 2023/826 (Europe only)


Model Name: MFC-J3660DW, MFC-J3960DW, MFC-J6760DW, MFC-J6960DW, MFC-J6975DW, MFC-J6977DW

Network Port	Power consumption		Default Timer Values		Timer Values	
	Networked Standby	Off mode	To Networked Standby	To Off mode	To Networked Standby	To Off mode
Ethernet	0.8W	N/A	1min	N/A	1 - 20min	N/A
USB	1.3W	N/A	1min	N/A	1 - 20min	N/A
Wi-Fi	1.1W	N/A	1min	N/A	1 - 20min	N/A
Telecom(FAX)	0.7W	N/A	1min	N/A	1 - 20min	N/A
NFC	0.7W	N/A	1min	N/A	1 - 20min	N/A
Full Connection	1.8W		1min		1 - 20min	

*Power consumption is reduced as the number of activated and connected network ports decreases.


How to enable/disable Wireless LAN (available for certain models)

for MFC-J3660DW, MFC-J3960DW, MFC-J6760DW, MFC-J6960DW, MFC-J6975DW, MFC-J6977DW

Press  [Settings] > [Network] > [WLAN (Wi-Fi)] > [WLAN Enable] > [On] or [Off].

How to enable/disable Wi-Fi Direct® (available for certain models)

for MFC-J3660DW, MFC-J3960DW, MFC-J6760DW, MFC-J6960DW, MFC-J6975DW, MFC-J6977DW

Press  [Settings] > [Network] > [Wi-Fi Direct] > [I/F Enable] > [On] or [Off].

How to enable/disable Wireless NFC (available for certain models)

for MFC-J6975DW, MFC-J6977DW

Press  [Settings] > [Network] > [NFC] > [On] or [Off].

Power consumption

Your printer has a powersaving function that automatically turns it off if no key is pressed within a certain time, under certain operating conditions. When this function is deactivated, power consumption shall increase.