▲ Home > Lock the Machine Settings from the Control Panel

Lock the Machine Settings from the Control Panel

Use the Setting Lock feature to block unauthorized access to machine settings. When Setting Lock is set to On, you cannot access the machine settings without entering the password.

Before turning on the machine's Setting Lock, write down and save your password. If you forget the password, you must reset all passwords stored in the machine by contacting your administrator or Brother Customer Service.

- Set the Setting Lock Password
- Change the Setting Lock Password
- Turn On Setting Lock

▲ Home > Lock the Machine Settings from the Control Panel > Set the Setting Lock Password

Set the Setting Lock Password

- 1. Press Settings.
- 2. Press ▲ or ▼ to make your selections:
 - a. Select [General Setup]. Press OK.
 - b. Select [Setting Lock]. Press OK.
- 3. Enter a four-digit number for the password.
- 4. Press OK.
- 5. When the LCD displays [Verify], re-enter the password.
- 6. Press OK.
- 7. Press Stop/Exit.

V

Related Information

• Lock the Machine Settings from the Control Panel

▲ Home > Lock the Machine Settings from the Control Panel > Change the Setting Lock Password

Change the Setting Lock Password

- 1. Press Settings.
- 2. Press ▲ or ▼ to make your selections:
 - a. Select [General Setup]. Press OK.
 - b. Select [Setting Lock]. Press OK.
 - c. Select [Set Password]. Press OK.
- 3. Enter the current four-digit password.
- 4. Press OK.
- 5. Enter a new four-digit password.
- 6. Press OK.
- 7. When the LCD displays [Verify], re-enter the password.
- 8. Press OK.
- 9. Press Stop/Exit.

✓

Related Information

• Lock the Machine Settings from the Control Panel

▲ Home > Lock the Machine Settings from the Control Panel > Turn On Setting Lock

Turn On Setting Lock

- 1. Press Settings.
- 2. Press ▲ or ▼ to make your selections:
 - a. Select [General Setup]. Press OK.
 - b. Select [Setting Lock]. Press OK.
 - c. Select [Lock Off⇒On]. Press **OK**.
- 3. Enter the current four-digit password.
- 4. Press OK.



To turn off Setting Lock, press **Settings**, enter the current four-digit password, and then press **OK**.



Related Information

· Lock the Machine Settings from the Control Panel