


Quick Setup Guide

DCP-L8630CDW

Read the *Product Safety Guide* first, then read this *Quick Setup Guide* for the correct installation procedure.

EN

Unpack the machine and check the components

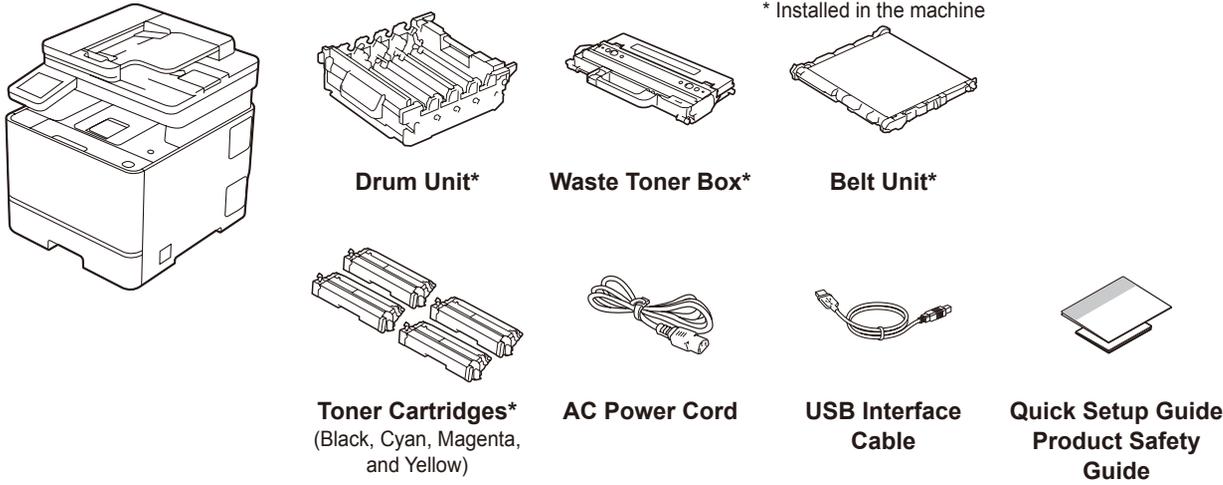


NOTE:


- Use the appropriate interface cable for the connection you want to use. (Network cable is not a standard accessory.)
- **USB cable**
We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.
- **Network cable**
Use a straight-through Category 5e (or greater) twisted-pair cable.
- Save all packing materials and the box in case you need to ship your machine.

1 Remove packing materials from the toner cartridge and drum unit assembly


Remove all blue tape and orange parts.

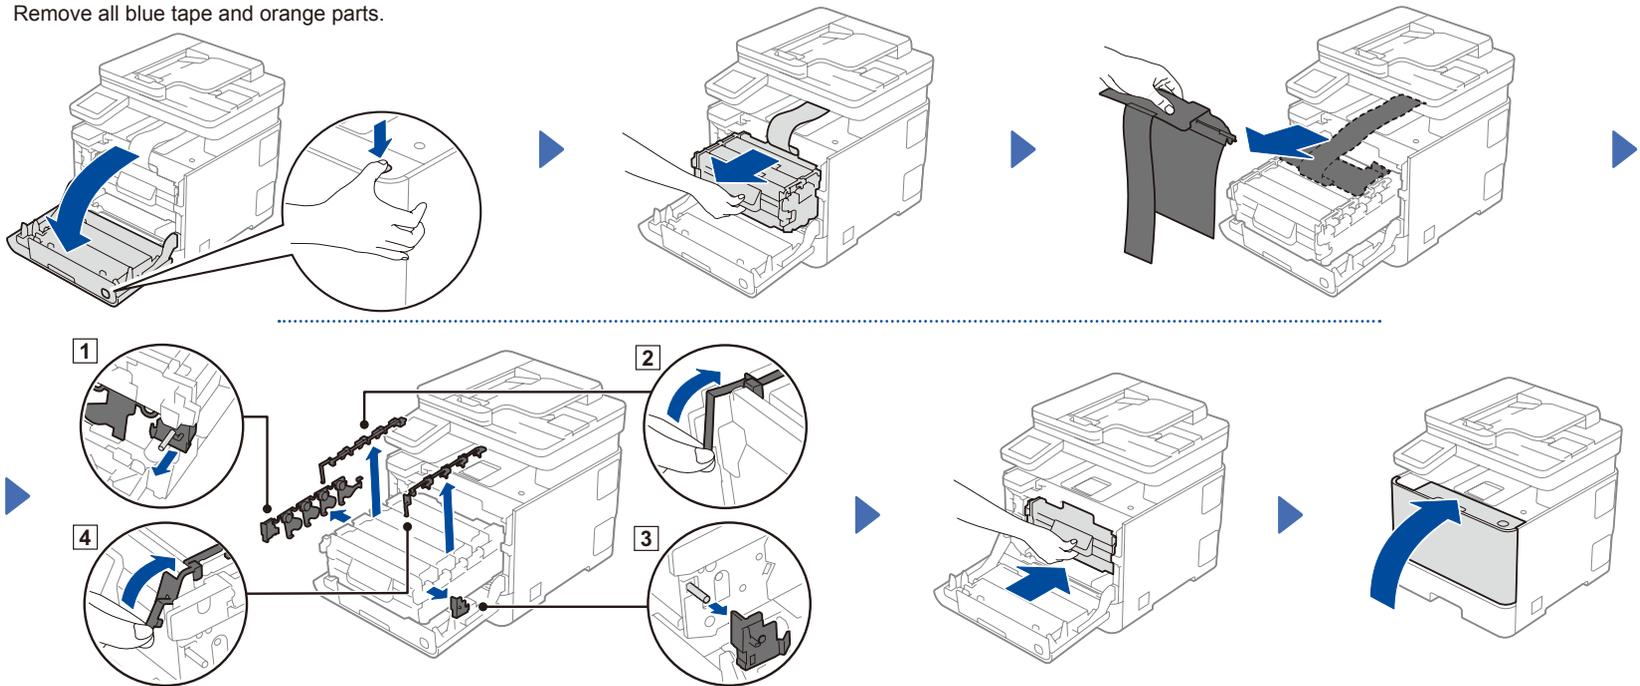


2 Remove packing materials from the fuser unit

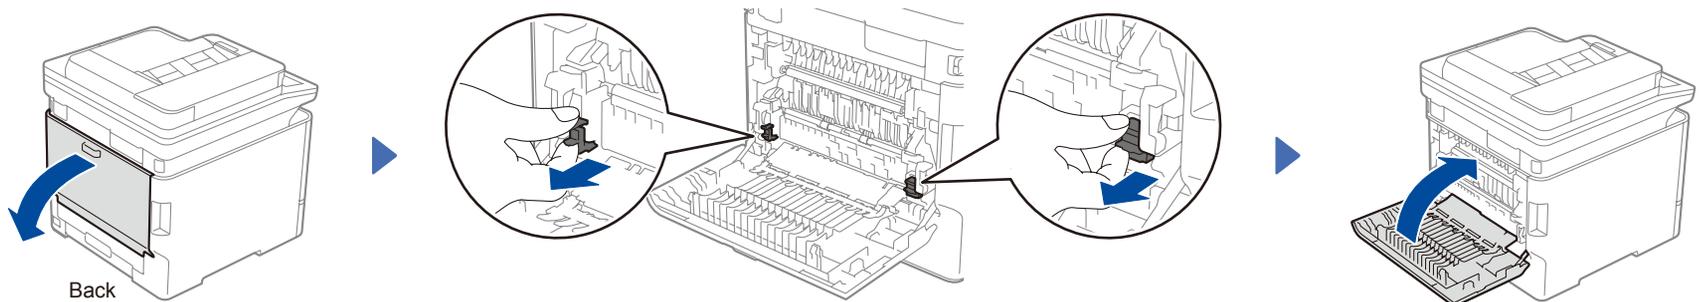


3 Load paper in the paper tray

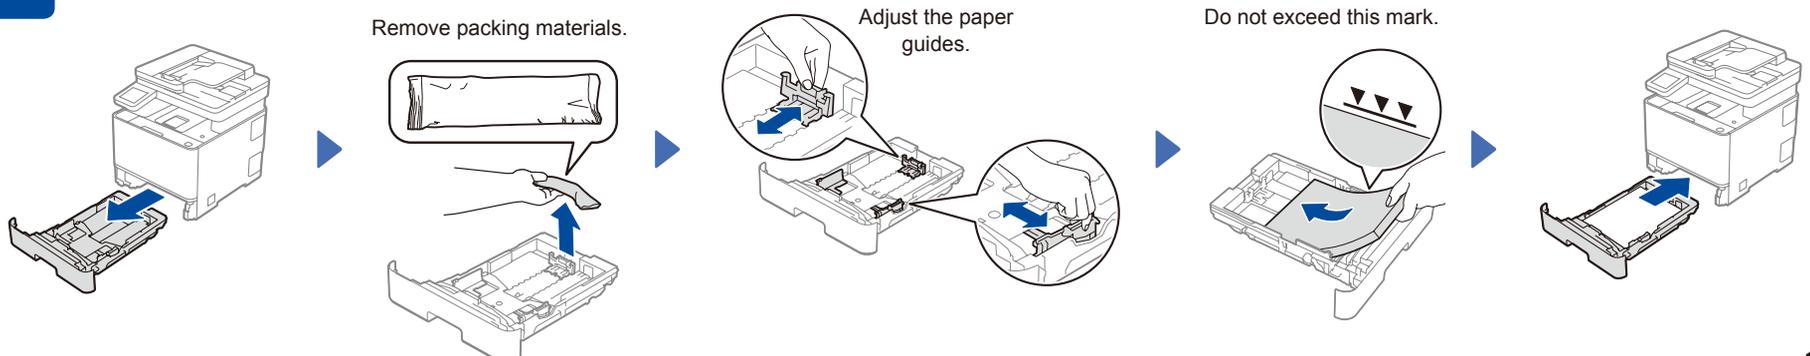

4 Connect the power cord and turn the machine on

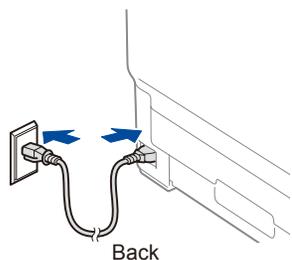

NOTE:
Before connecting the power cord, locate the Serial Number and password (marked "Pwd:") label on the back or side of the machine. Record them for future use.

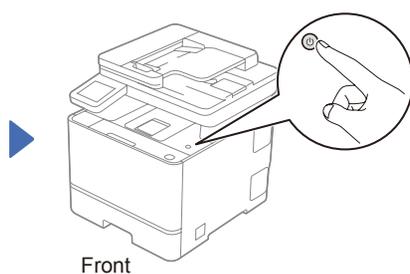

5 Connect your computer or mobile device to your machine

Follow these steps to complete the setup using one of the connection types available on your machine.

Visit setup.brother.com to download and install Brother software.


Follow the on-screen instructions and prompts.

Setup Finished


You can now print and scan using your machine.

Important Notice for Network Security:

We recommend immediately changing the default password to protect your machine from unauthorised access.

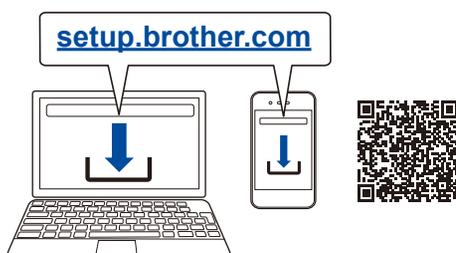

Can't Connect? Check the following:

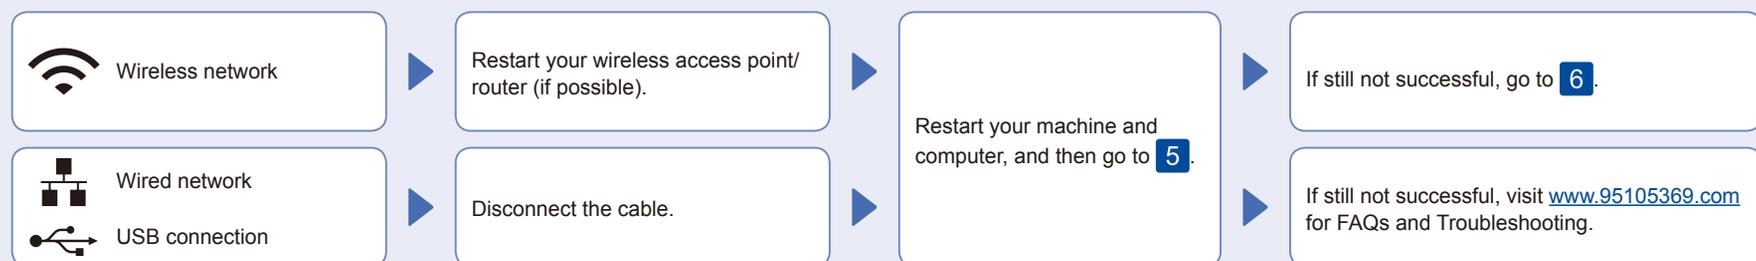


6 Manual wireless setup (for wireless models only)

If the wireless setup is not successful, try to set up the connection manually.


Find your SSID (Network Name) and Network Key (Password) on your wireless access point/router and write them in the table provided below.

SSID (Network Name)	
Network Key (Password)	

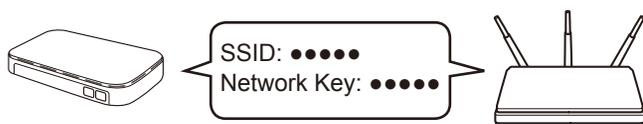

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.

Press > [Find Wi-Fi Network]. Follow the Touchscreen instructions.

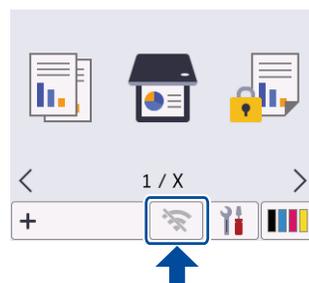

Select the SSID (Network Name) for your access point/router and enter the Network Key (Password).

When the wireless setup is successful, the Touchscreen displays [Connected].

Go to **5** to install software.

If setup is unsuccessful, restart your Brother machine and your wireless access point/router, and repeat **6**.