



Replace Supplies Guide

**HL-L2300D/HL-L2305W/HL-L2320D/HL-L2321D/HL-L2340DW/HL-L2360DN/
HL-L2361DN/HL-L2365DW/HL-L2366DW/DCP-L2520D/DCP-L2540DW/
DCP-L2541DW/HL-L2380DW/MFC-L2700D/MFC-L2700DW/MFC-L2701D/
MFC-L2701DW/MFC-L2703DW/MFC-L2720DW/MFC-L2740DW**

Definitions of Notes

We use the following symbols and conventions throughout this User's Guide:

 WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.
 CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.
IMPORTANT	IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.
NOTE	NOTE specifies the operating environment, conditions for installation, or special conditions of use.
	Tips icons indicate helpful hints and supplementary information.
	Electrical Hazard icons alert you to possible electrical shock.
	Fire Hazard icons alert you to the possibility of a fire.
	Hot Surface icons warn you not to touch hot machine parts.
	Prohibition icons indicate actions you must not perform.
Bold	Bold style identifies buttons on the machine's control panel or computer screen.
<i>Italics</i>	Italicised style emphasises an important point or refers you to a related topic.
Courier New	Courier New font identifies messages shown on the machine's LCD.

Important Notes

- Not all models are available in all countries.
- The screens or images in this User's Guide are for illustration purposes only and may differ from those of the actual products.
- The contents of this document and the specifications of this product are subject to change without notice.

Table of Contents

Replace Supplies 1

Replace the Toner Cartridge 3

Replace the Drum Unit..... 5

Reset the Drum Counter 7

Replace Supplies

You must replace supplies when the machine indicates that the life of the supply is over.

Using non-Brother supplies may affect the print quality, hardware performance, and machine reliability.




The toner cartridge and drum unit are two separate supplies. Make sure both are installed as an assembly.


NOTE


- Availability of toner cartridges differs from one country to another. Go to the Brother Solutions Center at support.brother.com or contact your local Brother office for further details.
- Be sure to seal up the used supplies tightly in a bag so that toner powder does not spill out of the cartridge.
- Discard used consumable items according to local regulations, keeping it separate from domestic waste. If you have questions, call your local waste disposal office. Be sure to reseal the consumable items tightly so that the material inside does not spill.
- We recommend placing used supplies on a piece of paper to prevent accidentally spilling or scattering the material inside.
- If you use paper that is not a direct equivalent for the recommended print media, the life of supplies and machine parts may be reduced.
- The projected life for each of the toner cartridges is based on ISO/IEC 19752. Frequency of replacement will vary depending on the print volume, percentage of coverage, types of media used, and powering on/off the machine.
- Frequency of replacement supplies except toner cartridges will vary depending on the print volume, types of media used, and powering on/off the machine.
- Handle the toner cartridge carefully. If toner scatters on your hands or clothes, immediately wipe or wash it off with cold water.
- To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.

<Toner cartridge>

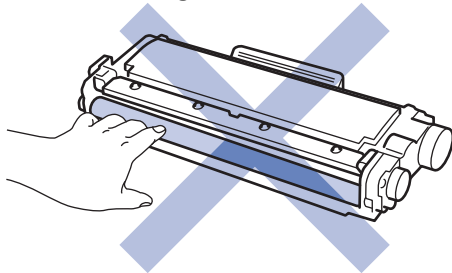

<Drum unit>

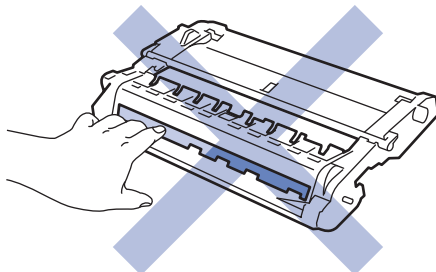

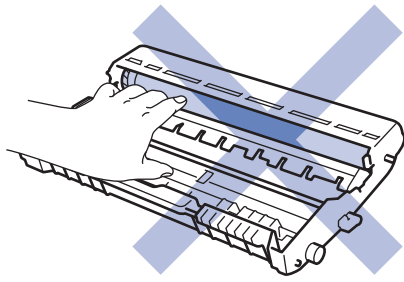


Related Information

Related Topics:


- [Replace the Toner Cartridge](#)
 - [Replace the Drum Unit](#)
 - [Reset the Drum Counter](#)
-

Replace the Toner Cartridge


1. Make sure the machine is turned on.
2. Open the front cover.

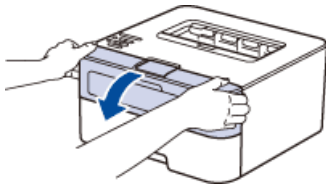


3. Remove the toner cartridge and drum unit assembly from the machine.

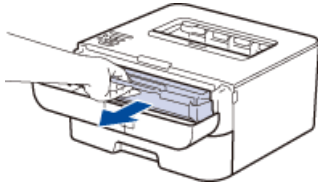


4. Push down the green lock lever and take the toner cartridge out of the drum unit.

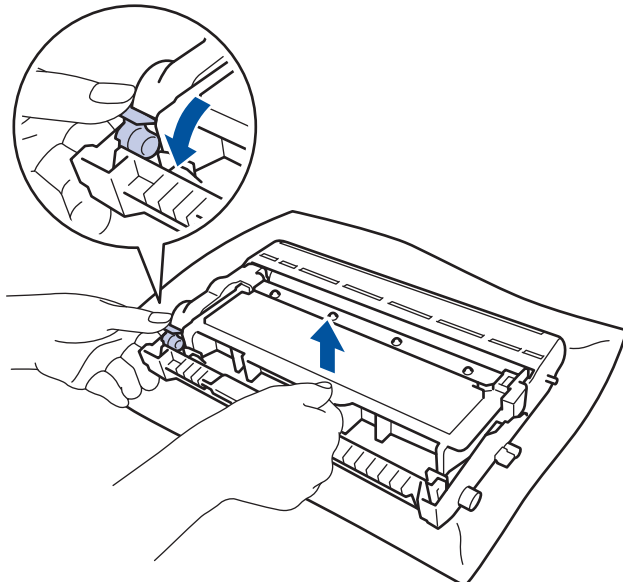

5. Unpack the new toner cartridge.
6. Remove the protective cover.

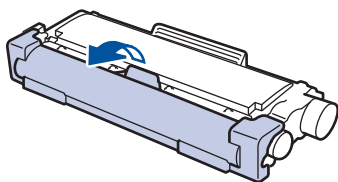


7. Put the new toner cartridge firmly into the drum unit until you hear it lock into place.

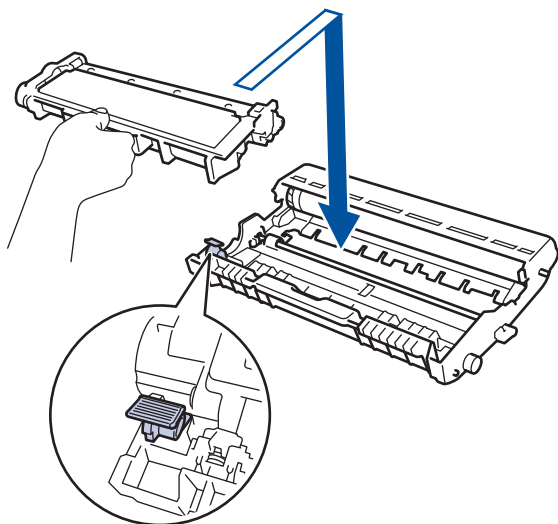


Make sure you put the toner cartridge in correctly or it may separate from the drum unit.

8. Clean the corona wire inside the drum unit by gently sliding the green tab from left to right and right to left several times.

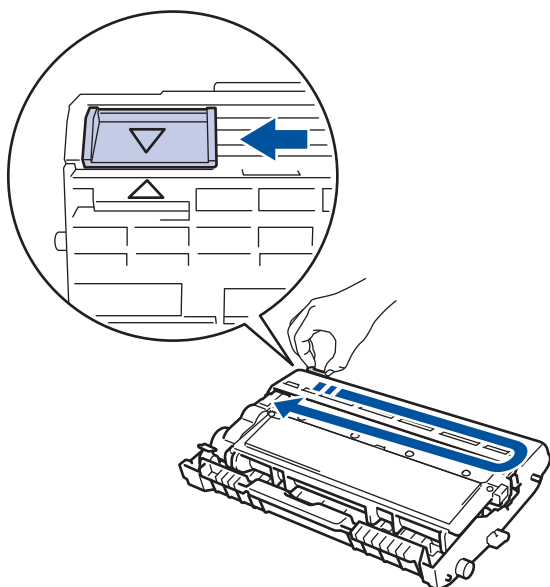

Be sure to return the tab to the Home position (▲). The arrow on the tab must be aligned with the arrow on the drum unit. If it is not, printed pages may have a vertical stripe.

9. Install the toner cartridge and drum unit assembly back into the machine.

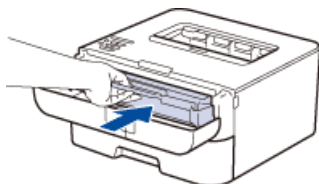

10. Close the front cover of the machine.



Do not turn off the machine or open the front cover until the machine returns to Ready Mode.




Related Information

Related Topics:


- [Replace Supplies](#)

Replace the Drum Unit


1. Make sure the machine is turned on.
2. Open the front cover.

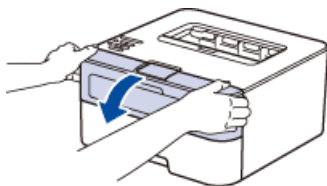


3. Remove the toner cartridge and drum unit assembly from the machine.

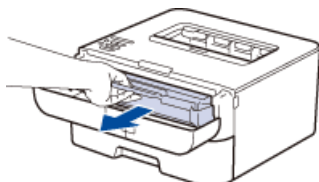

4. Push down the green lock lever and take the toner cartridge out of the drum unit.

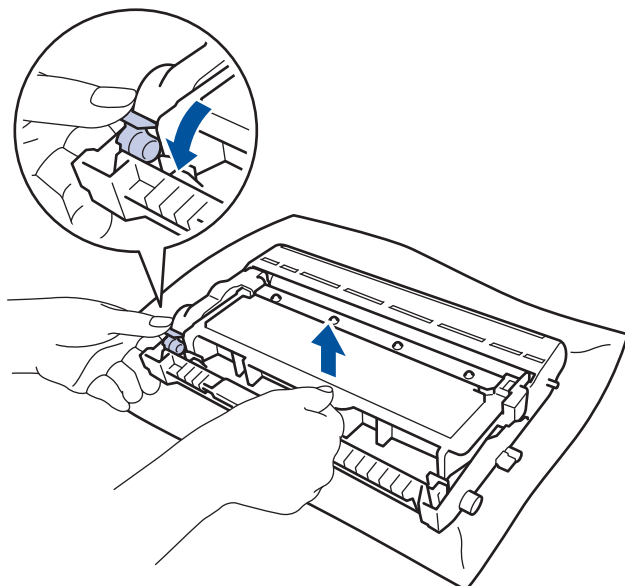


5. Unpack the new drum unit.
6. Put the toner cartridge firmly into the new drum unit until you hear it lock into place.

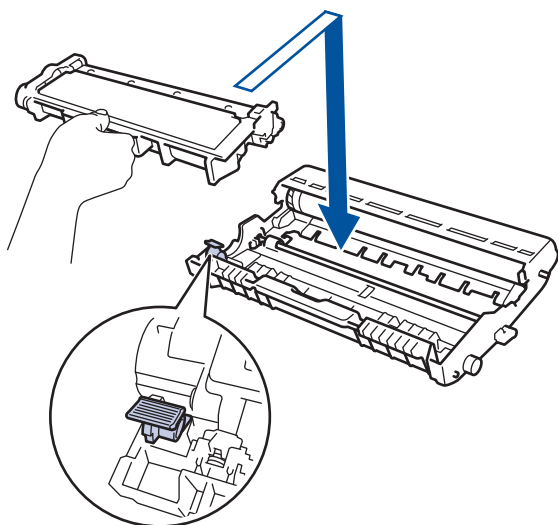


Make sure you put the toner cartridge in correctly or it may separate from the drum unit.

-
7. Clean the corona wire inside the drum unit by gently sliding the green tab from left to right and right to left several times.

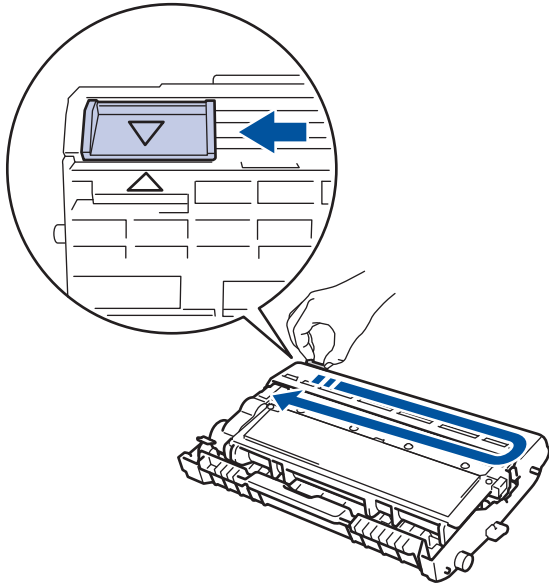

Be sure to return the tab to the Home position (▲). The arrow on the tab must be aligned with the arrow on the drum unit. If it is not, printed pages may have a vertical stripe.

8. Install the toner cartridge and drum unit assembly back into the machine.

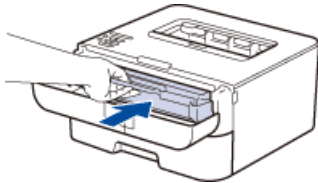

9. Close the front cover of the machine.



Related Information

Related Topics:

- [Replace Supplies](#)

Reset the Drum Counter

When you replace the drum unit with a new one, you must reset the drum counter by completing the following steps:

IMPORTANT

DO NOT reset the drum counter unless you are replacing the drum unit.

>> HL-L2300D/HL-L2320D/HL-L2321D


>> HL-L2305W/HL-L2340DW/HL-L2360DN/HL-L2361DN/HL-L2365DW/HL-L2366DW

>> DCP-L2520D/DCP-L2540DW/DCP-L2541DW/MFC-L2700D/MFC-L2700DW/MFC-L2701D/MFC-L2701DW/MFC-L2703DW

>> HL-L2380DW/MFC-L2720DW/MFC-L2740DW

HL-L2300D/HL-L2320D/HL-L2321D


1. Leave the machine turned on for 10 minutes for the internal fan to cool the extremely hot parts inside the machine.
2. Open the front cover.

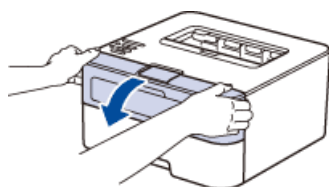

3. Press and hold the **Go** for about 4 seconds until all LEDs light up. Once all 4 LEDs are lit, release **Go**.
4. Close the front cover of the machine.
5. Make sure the **Drum** LED is now off.

HL-L2305W/HL-L2340DW/HL-L2360DN/HL-L2361DN/HL-L2365DW/HL-L2366DW


1. Leave the machine turned on for 10 minutes for the internal fan to cool the extremely hot parts inside the machine.
2. Open the front cover.

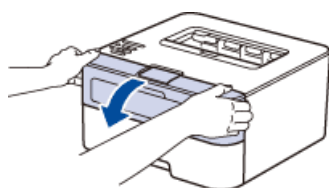

3. Press and hold **OK** for about two seconds to display the **Drum Unit** option, and then press **OK**.
4. Press **▲** for **Reset** to reset the drum counter.

DCP-L2520D/DCP-L2540DW/DCP-L2541DW/MFC-L2700D/MFC-L2700DW/MFC-L2701D/MFC-L2701DW/MFC-L2703DW

1. Open the front cover.

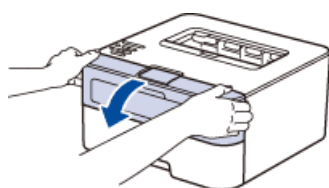

2. Press and hold **OK** for 2 seconds.
3. Press **▲** or **1** to reset the drum counter.

HL-L2380DW/MFC-L2720DW/MFC-L2740DW

1. Press  to interrupt the error.
2. Press  (Settings) > All Settings > Machine Info. > Parts Life.
3. Press and hold # until the LCD message changes.
4. Press Drum.
5. Press Yes.
6. Press .



Related Information

Related Topics:

- [Replace Supplies](#)
-



These machines are approved for use in the country of purchase only. Local Brother companies or their dealers may only support machines purchased in their own countries.



OCE/ASA/SAF/GLF/TWN
Version 0