

EN


Additional Features of PR1000e


This supplement provides instructions on using the functions not described in the operation manual. Screens in the English language are used as examples. Refer to the operation manual for detailed instructions.

1 CERTIFICATION screen for Upgrade KIT

A key for certifying the Upgrade KIT is added to the settings screen. For details on Upgrade KIT, visit our website "www.brother.com" or contact your authorized Brother dealer.

2 Frame movement speed keys for changing the embroidering position

Press  to move the frame by ① 0.1 mm, ② 0.5 mm.

③ Keep pressing  to move the frame at maximum speed.

3 The thread color cancelling key is changed from to

4 Adjusting the brightness of the screen display

5 Pattern will be displayed in the selected color when in the uninterrupted embroidering mode (Monochrome)

6 The spool thread indicator is turned off, after you press the automatic needle-threading button

7 on the error message screen

The operation key is added to move the needle back or forward.

ZH


PR1000e 的其他功能

此附件為使用說明書中未提及的功能提供使用指示。以英文版的畫面作為範例說明。如需詳細資訊，請參考使用說明書。

1 Upgrade KIT 的 CERTIFICATION 畫面

在設定畫面中加入 Upgrade KIT 的認證鍵。如需關於 Upgrade KIT 的詳細資訊，請造訪 "www.brother.com" 網站或洽詢授權的 Brother 經銷商。

2 用於變更刺繡位置的繡花框移動速度鍵

按  可將繡花框移動 ① 0.1 mm、② 0.5 mm。

③ 按住  能以最大速度移動繡花框。

3 繡線顏色取消鍵從 變為

4 調整顯示器的亮度

 
5 在不間斷刺繡模式中（使用單色），將以所選顏色顯示花樣

6 按自動穿線鈕後，繡線顏色指示燈將熄滅


7 錯誤訊息畫面上的

加入可將車針向後或向前移動的操作鍵。


1

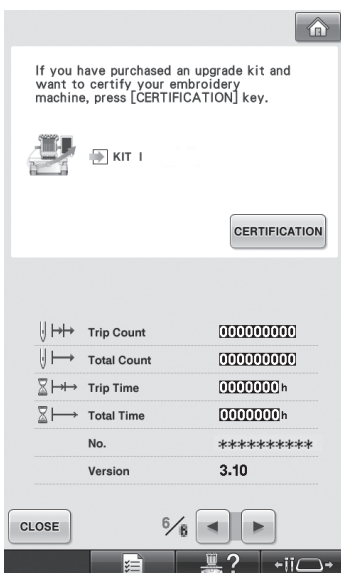


2

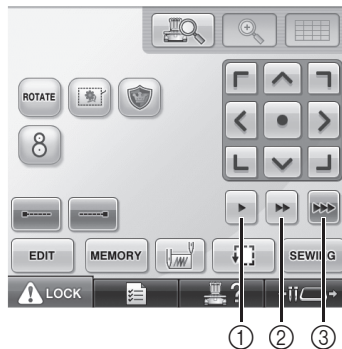 

3

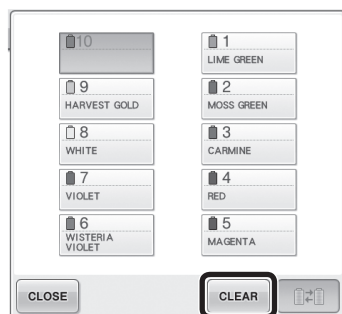 

4

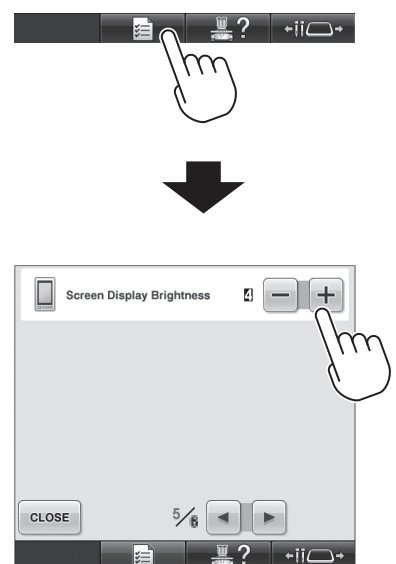 



KO PR1000e 추가 기능

작동 설명서에 나오지 않은 기능의 사용 방법을 설명합니다. 설명은 영어 화면을 기준으로 합니다. 자세한 설명은 작동 설명서를 참조하세요.

1 Upgrade KIT의 CERTIFICATION 화면

Upgrade KIT 인증 키가 설정 화면에 추가됩니다. Upgrade KIT에 관한 자세한 내용은 웹사이트 “www.brother.com”을 방문하거나 공인 Brother 대리점에 문의하세요.

2 자수 위치를 변경하기 위한 틀 이동 속도 키

를 누르면 틀이 ① 0.1 mm씩, ② 0.5 mm씩 이동합니다.
③ 를 누르고 있으면 틀이 최대 속도로 이동합니다.

3 실 색 취소 키가 에서 로 변경

4 화면 디스플레이 밝기 조절

5 연속 자수 모드(단색)인 경우 패턴이 선택한 색으로 표시

6 자동 실 끼우기 버튼을 누른 후에는 실패 실 표시기가 꺼짐

 
 
7 오류 메시지 화면의

바늘을 전후로 이동하는 작동 키가 추가됩니다.


5



6

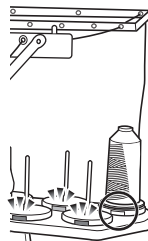

7

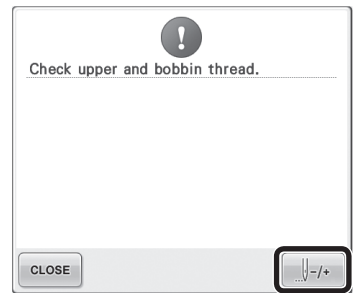 

XF0791-001