

Notice / 注意



 



 

The pattern type selection screen and the descriptions in the included manual and guide may differ from those for your machine. Refer to the following when selecting a pattern.

本机附带的使用说明书和指南中的花样类型选择画面和描述可能与您所购买的机器有所不同。选择花样时请参见下列内容。

Embroidery pattern types 绣花花样类型

An embroidery pattern can be selected from the following types available.

可以从下列可用类型中选择绣花花样。

- | | | | | |
|--|---|---|---|---|
| ① Embroidery patterns
① 绣花花样 | ① | ② | ③ | ④ |
| ② Patterns (Differ depending on the model.)
② 花样 (根据机型有所不同。) |  |  |  |  |
| ③ Alphabet patterns
③ 字母花样 |  |  |  |  |
| ④ Frame patterns
④ 框架花样 | ⑤ | ⑥ | ⑦ | |
| ⑤ Embroidery card
⑤ 绣花卡 | | | | |
| ⑥ Patterns stored in the machine's memory
⑥ 保存在机器存储器中的花样 | | | | |
| ⑦ Patterns retrieved from a USB flash drive (USB flash memory)
*For details on the operations performed using this key, refer to Operation Manual.
⑦ 从 USB 闪存驱动器 (USB 闪存) 中检索花样
*有关使用此键操作的详细信息, 请参见使用说明书-USB功能。 | | | | |

Selecting an embroidery pattern 选择绣花花样

The procedure for selecting embroidery patterns is described below, which differs from the description in the Operation Manual. There are a total of 136 embroidery patterns.

下述选择绣花花样的步骤与使用说明书内的描述有所不同。总共有 136 种绣花花样。



70 Embroidery patterns
70 种绣花花样



66 Embroidery patterns
66 种绣花花样

 


Memo / 备注

- Refer to "Embroidery Pattern Color Change Table" in the Quick reference guide for samples of completed patterns and the thread used.
- 有关已完成花样的示例与使用的线, 请参见快速操作指南中的“绣花花样颜色对照表”。

① Press .

① 按下 .

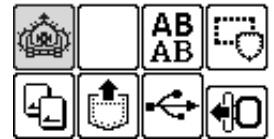

② Select the type of the embroidery pattern.
→ The pattern selection screen is displayed.

② 选择绣花花样类型。
→ 显示花样选择画面。



③ Refer to step ② of "Selecting an embroidery pattern" on page 162 of the Operation Manual to select the pattern.

③ 请参见使用说明书第 162 页上的“选择绣花花样”步骤 ② 以选择花样。

