

Operation Manual Addendum

Features Added with Update Ver. 4.50


Artspira App Compatible

Functions have been added for the Artspira App. With these functions, you can transfer content published on the app to the sewing machine and enjoy creating original works using the functions on the app.

For more information about the app, refer to the official website. For details on how to operate the sewing machine using the app, see the Artspira Quick Guide on Artspira support page (<https://s.brother/csyai/>).


■ Artspira

You can link with the Artspira app on page 13 of the settings screen. For details about the registration method, refer to the Artspira Quick Guide.

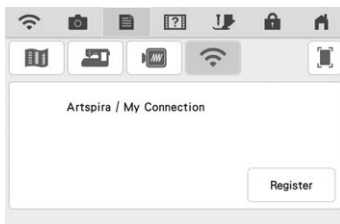


■ App Guide

The Artspira app has been added to the App Guide in the Machine Help key.

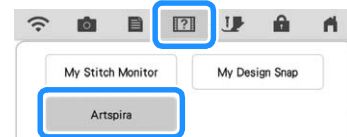

■ Retrieving Embroidery Pattern

 
Artspira has been added to the embroidery pattern recall destinations. You can recall transferred patterns from the Artspira app.


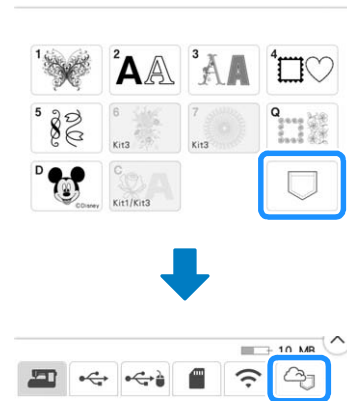


Features Added with Update Ver. 4.00

Utility Stitches and Character/Decorative Stitches

■ Flip Guidelines

  
Touch  to flip the main guideline position on the center needle position.

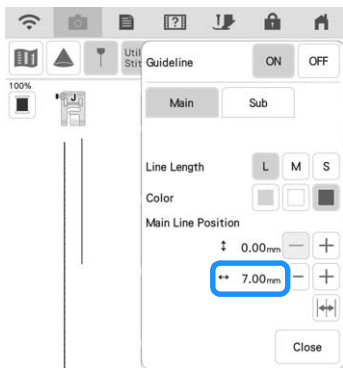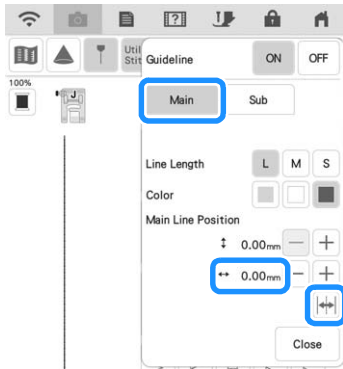

Embroidery

■ Embroidery Frame


The optional magnetic frame can be used. For details on the magnetic frame, contact your authorized Brother dealer.

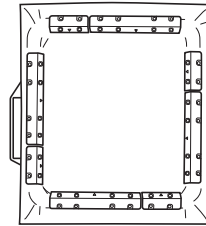

254 mm × 254 mm (10 inches × 10 inches)

■ Thread Tension Setting

 If the thread tension is changed from the default setting, the new setting will remain after turning the machine off and on. This new setting will apply to any selected design.

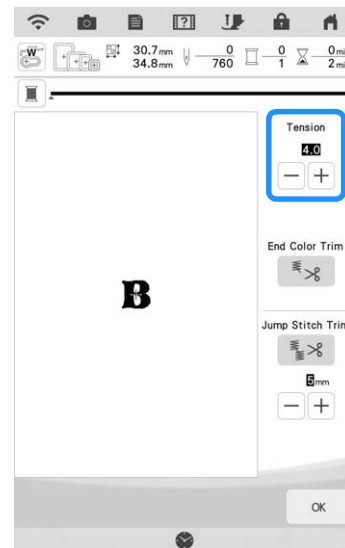


Messages for Connecting Patterns Using the Camera




Note

- For details on the procedure, refer to “USING THE CAMERA TO CONNECT PATTERNS” in the machine’s Operation Manual (Embroidery).

After the two embroidery positioning stickers have been detected, the messages show the distance between the embroidery positioning stickers for reference.

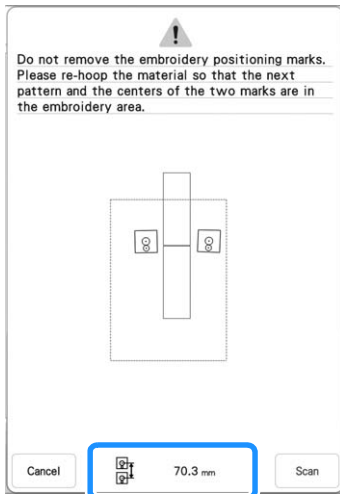


In order to cleanly connect the patterns, make sure that the distance between the embroidery positioning stickers (distance between the centers of the large circles) is the same before and after rehooping the fabric. If the distance is not the same, the fabric may not be taut. At this time, do not correct the distance by moving a sticker.

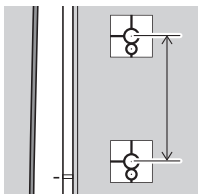

My Design Center


Stamp Labels

A number is displayed in the upper left of the stamps.

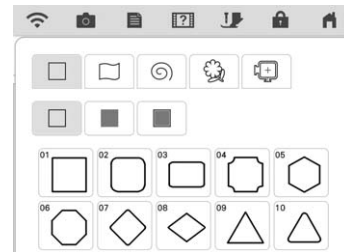


Entering the Size

- 1 Touch **Size**, and then touch .

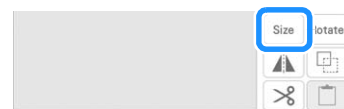

 - 2 Touch the box for the height or width, specify a value with the number keys, and then touch **Set**.

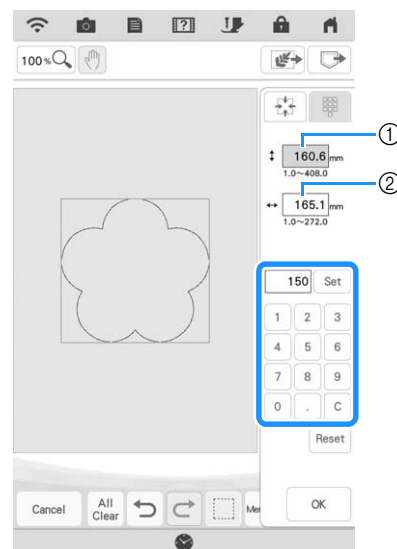

- ① Box for height
- ② Box for width

- 3 Touch **OK** when finished specifying size.

Other Functions

Resetting machine

If necessary, all saved data, customized settings and network information in the machine can be erased.



Update Procedure Using Wireless LAN Connection

If the machine is connected to a wireless network with a strong, reliable connection, update files can be downloaded directly to the machine using this network.

For details on the wireless LAN connection, refer to "WIRELESS NETWORK CONNECTION FUNCTIONS" in the machine's Operation Manual (Sewing).

Memo


- The machine periodically checks if there is a new update file on the server. When there is a new update file, the wireless LAN key is displayed as .



1 Display page 12 of the settings screen.

2 Touch .

- * The machine starts to download the update file, if there is a new update file on server.

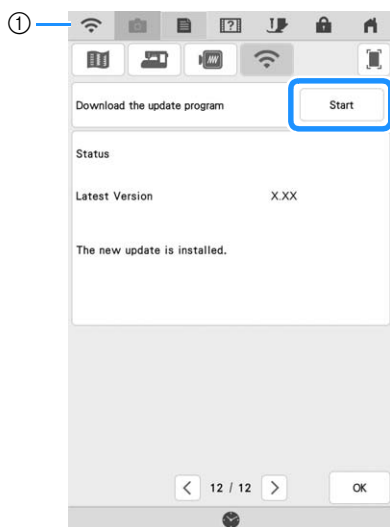


- ① When the wireless LAN key appears as , touching causes the machine to check if there is a new update file. If there is a new file, downloading begins.


Note

- Do not turn off the machine during the download.
- Touch to pause the download. To restart, touch .

3 When downloading is finished, turn off the machine, then hold down the "Automatic Threading" button while turning on the machine.

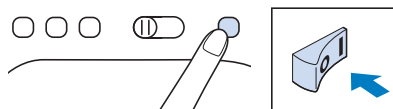

4 Touch .

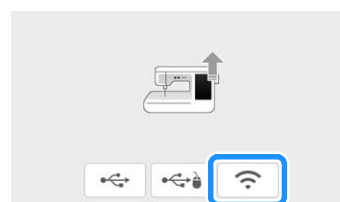

5 Touch to update the machine.

 
- * Do not turn off the machine during the update.

Memo

- If there are changes or additions to functions, manuals available on the machine may be updated.

Others


"KIT III" has been added to the settings screen. The keys or tabs of some stitch patterns or embroidery patterns may appear in light gray and not be available. In order to activate the "KIT", an optional Upgrade KIT must be purchased.

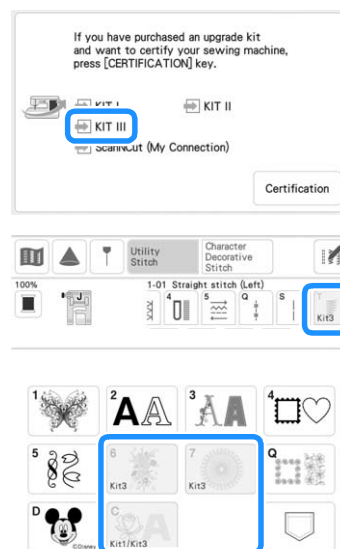

Features Added with Update Ver. 3.50

■ ScanNCut (My Connection)

 “ScanNCut (My Connection)” has been added to the settings screen.

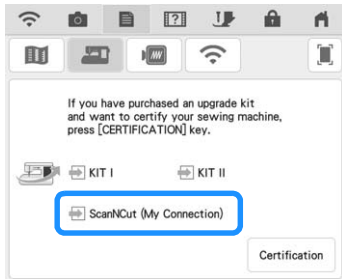

After activating “ScanNCut (My Connection)”, you will be able to use functions that can be combined with functions on the Brother cutting machine (compatible models only).


- Send a built-in pattern from the cutting machine to the embroidery machine and edit the pattern in My Design Center for embroidering.
- Send an embroidery pattern from the embroidery machine to the cutting machine for cutting/drawing
- Apply appliqué settings to part of an embroidery pattern on the embroidery machine, then create an appliqué

For details on compatible machines, check the Brother support website (<http://s.brother/cnxaa/>).

For details on activating “ScanNCut (My Connection)” and the combined functions, visit the following webpage and refer to the “My Connection” Operation Manual.


<http://s.brother/cmdab/>

* The “My Connection” Operation Manual can also be viewed from the screen of the embroidery machine.

Press , press “PDF Manual”, and then select “ScanNCut (My Connection)”.

■ Embroidery Frame

The optional magnetic frame can be used. For details on the magnetic frame, contact your authorized Brother dealer or the nearest Brother authorized service center.

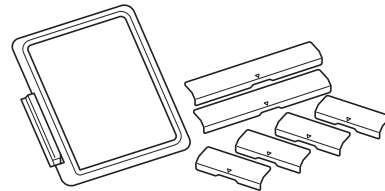

Magnetic frame

180 mm (H) × 130 mm (W)

(7 inches (H) × 5 inches (W))

Features Added with Update Ver. 3.00

Utility Stitches and Character/Decorative Stitches

 
Projector Function

While the projector is activated, the “Background Color” setting can be adjusted or the projection can be stopped using the Dual Purpose Stylus.


Memo

- For details on the projector functions, refer to “PROJECTOR FUNCTIONS (UTILITY STITCHES AND CHARACTER/DECORATIVE STITCHES)” in the machine’s Operation Manual (Sewing).

1 Press .

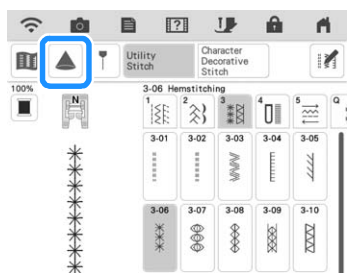


2 With the dual purpose stylus included with the machine, press a key projected onto the fabric to perform the desired operation.

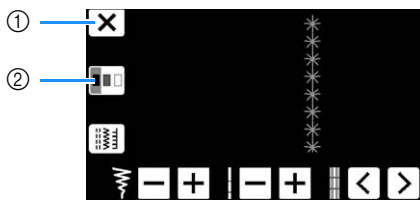


- Press this key to stop the projection.
- Press this key to change the “Background Color” setting.

Memo

- The setting can also be changed with “Background Color” in the machine settings screen.

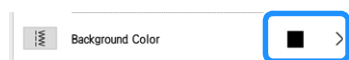

Guideline

As a default, when  is pressed, “Guideline” is set to “ON” and the Guideline is displayed on the fabric.




Memo

- For details on the projector functions, refer to “Projecting the Guidelines with the Projector” in the machine’s Operation Manual (Sewing).

Embroidery


Embroidery Frame

The optional magnetic sash frame can be used. For details on the magnetic sash frame, contact your authorized Brother dealer or the nearest Brother authorized service center.

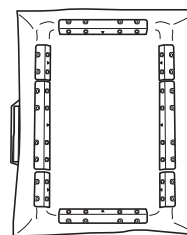

360 mm (H) × 180 mm (W)
(14 inches (H) × 7 inches (W))

 
Aligning the Embroidery Patterns

Patterns can be aligned by pressing  in the editing window, then selecting the pattern(s) to be aligned.

 
Memo


- For details on the procedure, refer to “Aligning the Embroidery Patterns” in the machine’s Operation Manual (Embroidery).

1 Press .

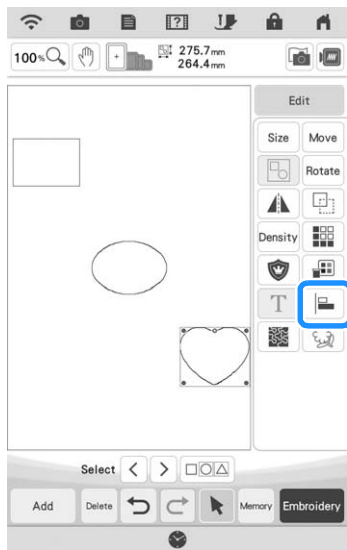

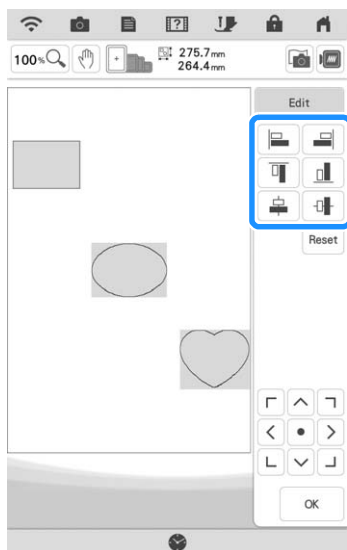

 2 Touch each pattern to select multiple patterns and then select the key for the desired alignment.



When the patterns are aligned, touch .

Memo

- Touch  to move the pattern.
- Touch  to reset the alignment.

Changes to Thread Brands

The available thread brand “Simplicity Pro” has been changed to “Pacesetter PRO”.

Memo

- For details on selecting a thread brand, refer to “Changing the Thread Color Display” in the machine’s Operation Manual (Embroidery).



My Design Center



Transparency Adjustment


When a picture or drawing is scanned and displayed as a background image for tracing, the transparency of the background and the density of the drawn lines can be adjusted to one of six levels.

Memo

- For details on the procedure, refer to “Scanning to Trace Background Image” in the machine’s Operation Manual (Embroidery).

Press  or  to adjust the transparency of the background and the density of the drawn lines.

Each press of  lightens the background, making the line pattern darker. Each press of  darkens the background, making the line pattern lighter.

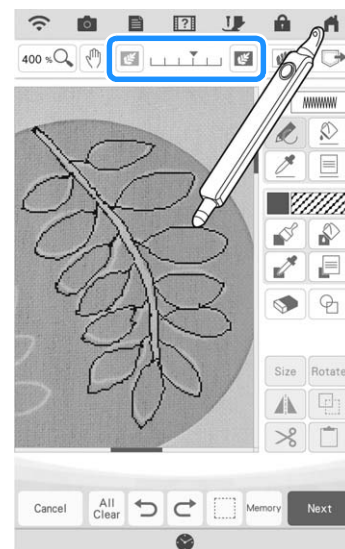


Saved Scanned Images

The most recently scanned image from background image scanning, line scanning or illustration scanning is automatically stored in the machine’s memory. This is useful for recalling a scanned image. Only the most recent scan can be saved for recall.


Memo

- For details on background image scanning, line scanning and illustration scanning, refer to “Scanning to Trace Background Image”, “Using the Scanning Frame to Create a Pattern with Line Scan”, and “Using the Scanning Frame to Create a Pattern with Illustration Scan” in the machine’s Operation Manual (Embroidery).


- 1 Press , and then press the key for the desired function.




- 2 Press .

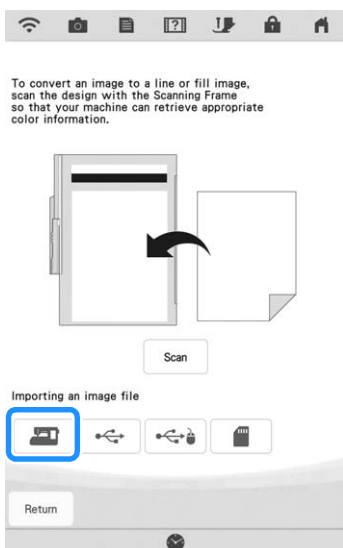

→ The most recently scanned image appears.

- 3 Select the data, and then press .

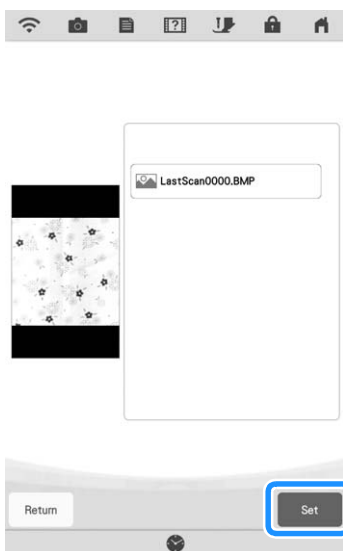

Line Scan

Memo

- For details on line scanning, refer to “Using the Scanning Frame to Create a Pattern with Line Scan” in the machine’s Operation Manual (Embroidery).

Press the corresponding key in the following screens to change the line color or stitch type.



Upgrade KIT Enhancements

In addition to the features added for the machine, update Version 3.00 also enhances some functions of optional Upgrade KIT I or KIT II. These enhancements are explained in this section.


Memo


- In order to activate the “KIT”, an optional Upgrade KIT must be purchased. Contact your authorized Brother dealer or the nearest Brother authorized service center.

■ Semi-Auto Split Quilt Sash Function (Only on machines where KIT I or KIT II has been activated)


Memo

- The semi-auto split quilt sash function allows you to embroider split patterns sequentially while viewing them in the screen. For details, refer to the manual for the upgrade kit.
- You can continue to the next pattern or return to the previous pattern. This is useful when you want to re sew or skip a pattern.


1 Press  in the embroidery screen.

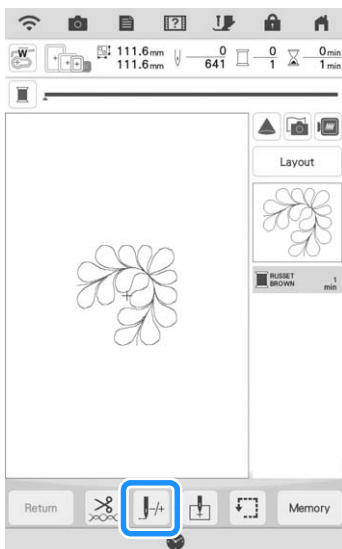

 2 Press  or  to display the pattern that you want to embroider.

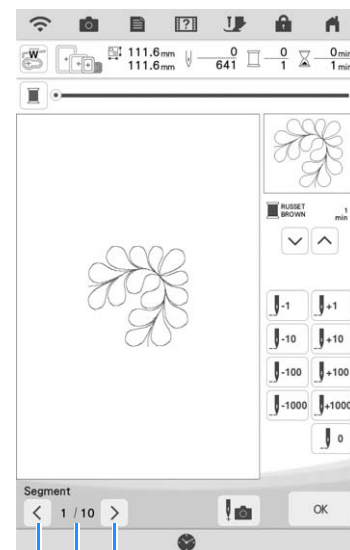


- ① Return to the previous pattern.
 - ② Embroidering order of current pattern/Total number of segments
 - ③ Continue to the next pattern.
- When aligning patterns, guidelines are projected by the projector, making alignment easier.

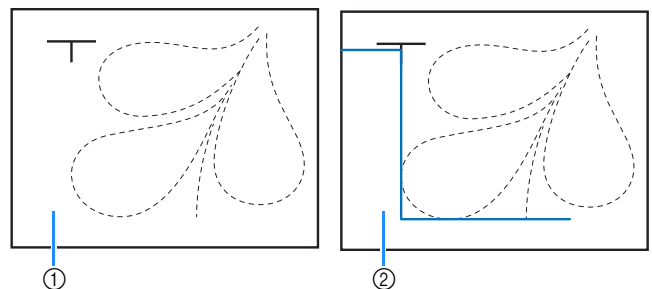


- ① Before Version 3.00
- ② Version 3.00 or later


Others


- The keys or tabs of some stitch patterns or embroidery patterns may appear in light gray and not be available. Certify the KIT indicated on the key or tab to be able to use the function.

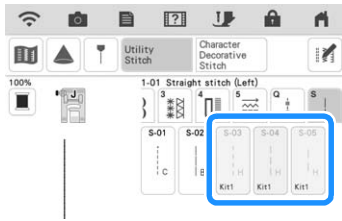

 - "KIT II" has been added to the settings screen. Certify it in order to use its various functions.

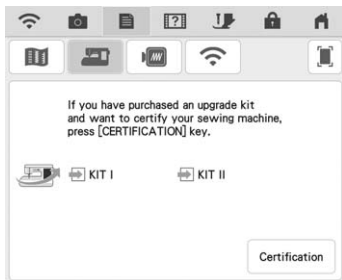

- Press  App Guide in the settings screen or machine help screen to view details on the two apps available through the upgrade kits. In order to use the app, the corresponding KIT must be certified.

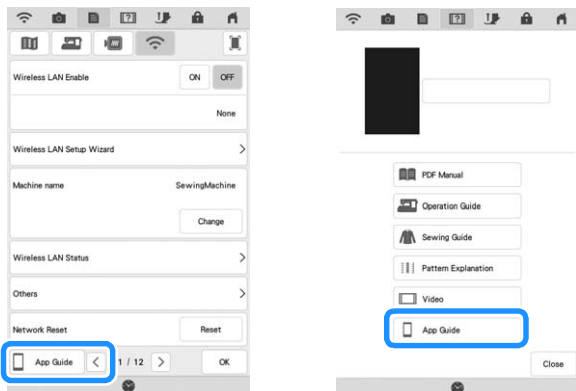

My Stitch Monitor allows you to wirelessly monitor the progress of embroidery stitching.


My Design Snap allows you to wirelessly send images from your smart device to My Design Center to create embroidery designs.

Features Added with Update Ver. 2.00

Utility Stitches and Character/Decorative Stitches


■ Guideline with Stitch Pattern on Screen

Guideline can be displayed with stitch pattern on touch screen.

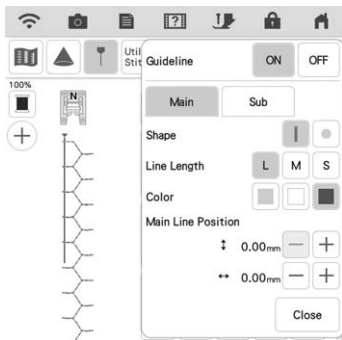

■ Projecting Both the Stitch Pattern and Guidelines onto the Fabric

By turning on the projector function, then the guideline function, both the stitch pattern and the guidelines can be projected onto the fabric at the same time.

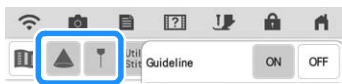

Embroidery

■ Reinforcement during Embroidery

 
When changing the bobbin thread in embroidery mode, press the "Reinforcement Stitch" button to sew reinforcement stitches before cutting the thread. This will prevent stitches from unraveling.

■ Time Passage Display

After embroidering is started, the embroidering time displayed on the screen is updated every minute.

My Design Center

■ Region Settings for Decorative Fill Patterns


The  (Outline) default setting for Decorative fill will be "OFF".

■ Resume Feature

If the machine is turned off while My Design Center is being used, then turned on again and "My Design Center" is selected, a message appears, requesting confirmation to recall the screen that was displayed before the machine was turned off.


■ Magnifying Patterns

 Patterns can be magnified by up to 1600%.

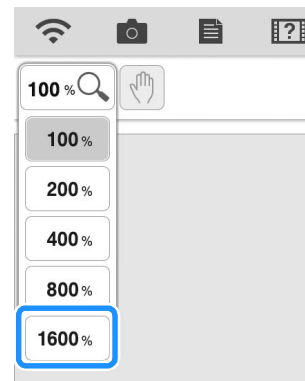

■ Line Motif Stitches

The axis for flipping some motif stitches has changed.

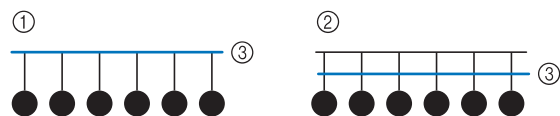

- ① Version 2.00 or later
- ② Before Version 2.00
- ③ Axis


Other Functions


■ Projector


The accuracy of the projector's position correction was improved. For the procedure, refer to "Needle Calibration Using the Built-in Camera" in the Operation Manual.

■ Downloading Update Files


If the machine is connected to a wireless network, the machine can download update files via a wireless network connection.

- 1 Press , display the following screen, and then download the file using either method.

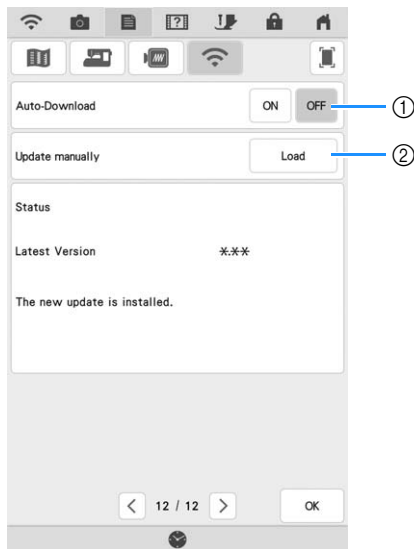

- ① When set to "ON", the machine periodically checks if there is a new version of the update file. If there is one, it is downloaded.
 - ② If  is pressed, the machine will check if there is a new version of the update file. If there is one, it is downloaded.
- The result from checking appears at the bottom of the screen.

Memo


- If downloading is in progress, or if downloading is complete,  appears on the Wireless LAN key in the upper-left corner of the screen. Press the key to view the status in the settings screen.



- Operation of the machine may become slow during downloading.

- 2 When downloading is finished, turn off the machine, then hold down the "Automatic Threading" button while turning on the machine.

- 3 Press  to update the machine.

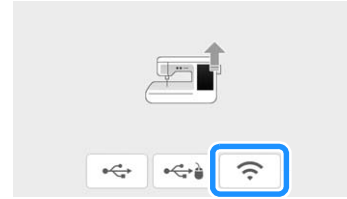

Memo

- If there are changes or additions to functions, manuals available on the machine may be updated.