

brother

Quick reference guide  
快速導覽手冊





Refer to the Operation Manual for detailed instructions.


Also, there are differences in the keys and screens depending on the display language. In this guide, English screens are used for basic explanations.

關於詳細指示，請參閱使用說明書。

另外，不同顯示語言的按鍵及畫面會有所差異。

在本手冊中，基本說明均以英文畫面為準。

## <English display> <英語顯示>

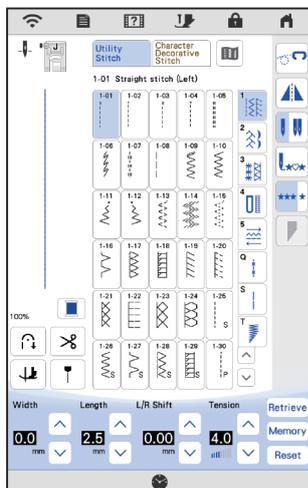

## Contents

- 3 Wireless Network Connection Functions
- 5 Wireless Network Connection
- 7 Winding the Bobbin
- 10 Setting the Bobbin
- 11 Upper Threading
- 12 Preparing to Embroider
- 14 Removing and Installing the Needle Plate
- 15 Selecting Stitch or Embroidery Patterns
- 20 Summary of Stitch Patterns

## 目錄

- 3 無線網絡連線功能
- 5 無線網絡連線
- 7 梭子繞線
- 10 安裝梭子
- 11 穿上線
- 12 準備刺繡
- 14 取下與安裝針板
- 15 選擇針趾或刺繡花樣
- 20 刺繡花樣概要

# Wireless Network Connection Functions

## 無線網絡連線功能

### Operations Available with a Wireless Network Connection

This machine supports a wireless network connection. The following useful operations will be available if the machine is connected to a wireless network.

#### ■ For updating

Directly download the update file to the machine.

### 使用無線網絡連線可執行的操作

本機支援無線網路連線。若本機連線至無線網路，可執行以下實用操作。

#### ■ 更新


直接將更新檔案下載至本機。





■ For embroidering

■ 刺繡

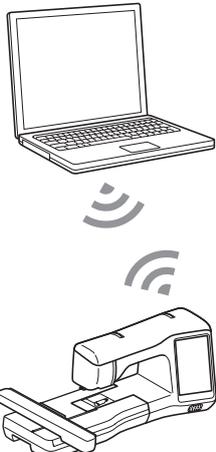	<p><b>My Design Snap</b></p> <p>With <b>My Design Snap</b> app, you can position your embroidery designs on the fabric by capturing image of the hooped fabric and sending the image to your machine. Please visit the following URL for more features and details. <a href="https://s.brother/cneka/">https://s.brother/cneka/</a></p> <p>藉由 <b>My Design Snap</b> 應用程式，透過擷取繡好布料的圖像並將圖像傳送至本機，即可將刺繡設計固定在布料上。請瀏覽下列 URL 獲取更多功能及詳細資訊。 <a href="https://s.brother/cneka/">https://s.brother/cneka/</a></p>
	<p><b>My Stitch Monitor</b></p> <p>Conveniently check the operating status of the machine from your smart device by using <b>My Stitch Monitor</b> app.</p> <p>透過使用 <b>My Stitch Monitor</b> 應用程式，可方便從智慧型裝置查看本機的運作狀況。</p>
	<p><b>Artspira</b></p> <p>With <b>Artspira</b> app, you can transfer content published on the app to the embroidery machine and enjoy creating original works using the functions on the app. Please visit the following URL for more features and details. <a href="https://s.brother/csyai/">https://s.brother/csyai/</a></p> <p>藉由 <b>Artspira</b> 應用程式，您可以將應用程式上發佈的內容傳輸至刺繡機，並使用應用程式上的功能享受製作原創作品的樂趣。請瀏覽下列 URL 獲取更多功能及詳細資訊。 <a href="https://s.brother/csyai/">https://s.brother/csyai/</a></p>
	<p><b>Design Database Transfer</b></p> <p>Wirelessly transfer an embroidery pattern from your computer to the machine by using <b>Design Database Transfer</b> app. Please visit the following URL for more features and details. <a href="https://s.brother/caeka/">https://s.brother/caeka/</a></p> <p>透過使用 <b>Design Database Transfer</b> 應用程式將刺繡花樣從電腦無線傳輸至本機。請瀏覽下列 URL 獲取更多功能及詳細資訊。 <a href="https://s.brother/caeka/">https://s.brother/caeka/</a></p>
	<p><b>PE-Design</b></p> <p>Wirelessly transfer to the machine an embroidery pattern edited with embroidery editing software (<b>PE-DESIGN version 11 or later</b>) on a computer. Also, transfer to PE-DESIGN an embroidery pattern edited on the machine.</p> <p>於電腦使用刺繡編輯軟件 (<b>PE-DESIGN 11或更高版本</b>) 編輯的刺繡花樣無線傳輸至本機。亦可將在本機上編輯的刺繡花樣傳輸至 PE-DESIGN。</p>

For details on each function, refer to the Operation Manual.

如需關於各功能的詳細資訊，請參考使用說明書。


# Wireless Network Connection

## 無線網絡連線



- When you first turn on the machine, the following message about a wireless LAN connection appears. To set up a connection, touch  , and then continue with step **5** .


- 第一次開機時，會出現關於無線 LAN 連線的以下訊息。若要設定連線，請按下  ，然後繼續執行步驟 **5** 。

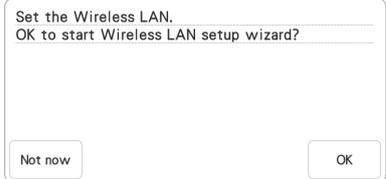

**1**



**2**

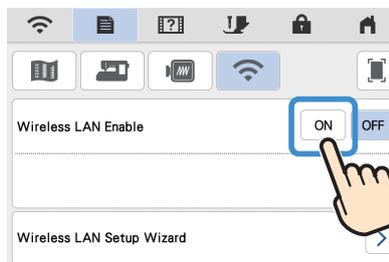


**3**

Find your security information (SSID and network key) and note it.

找出您的安全性資訊 (SSID 和網路金鑰) 並記下來。

**4**

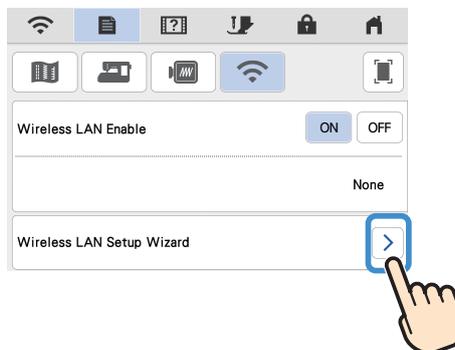


Touch **>** beside "Wireless LAN Setup Wizard".

按下「無線 LAN 設定精靈」旁邊的 **>** 。




5

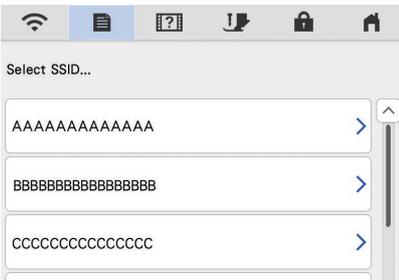

Select **>** beside the SSID that was noted in step **3**.

選擇步驟 **3** 中記下 SSID 旁邊的 **>**。


6

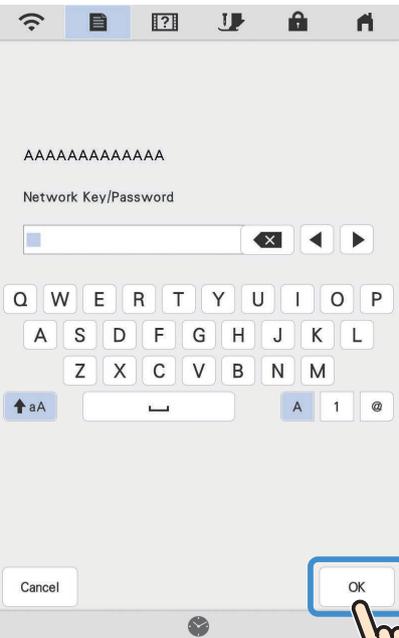


Enter the network key (password) that was noted in step **3** and then touch **OK**.

輸入步驟 **3** 中記下的網路金鑰 (密碼)，然後按下 **OK**。


7

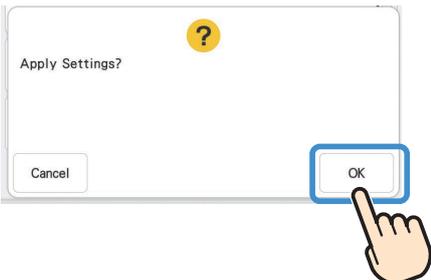

8

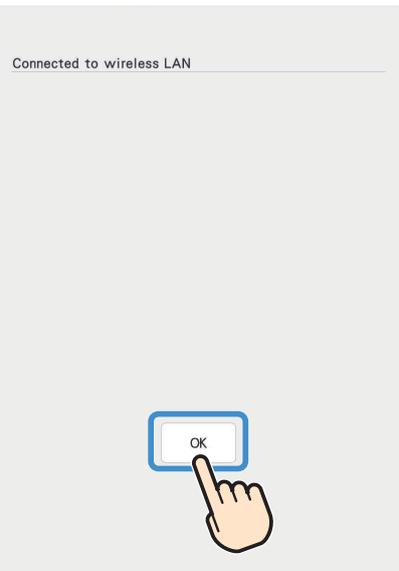

9

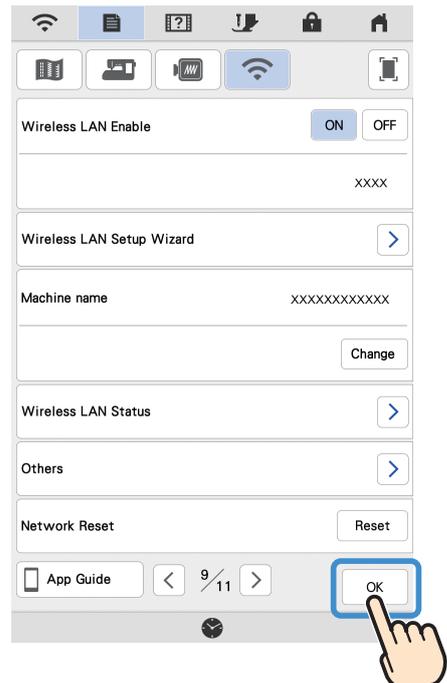

# Winding the Bobbin

## 梭子繞線

Follow the numbered steps below in order. Refer to the operation manual for detailed instruction.  
依序按下列編號步驟進行。關於詳細指示，請參閱使用說明書。

Use the plastic bobbin that comes with this machine or bobbins of the same type.  
Bobbin included with the machine is Class 15 type bobbin.  
使用本機隨附的塑膠梭子或相同類型的梭子。本機隨附的梭子為 Class 15 型梭子。
















### Using the Supplemental Spool Pin

You can wind the bobbin during sewing.

### 使用輔助線輪柱

可以在縫紉過程中繞線。

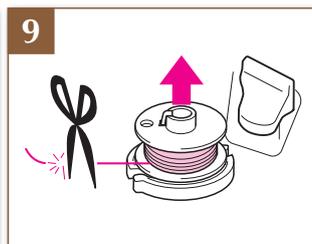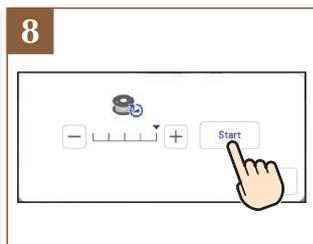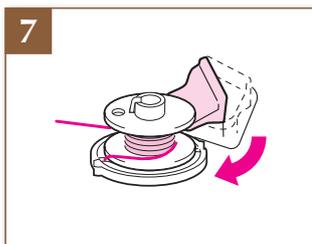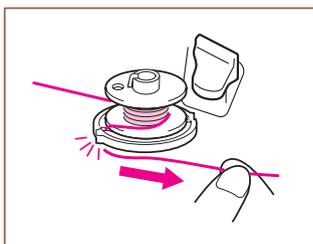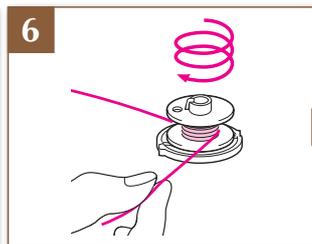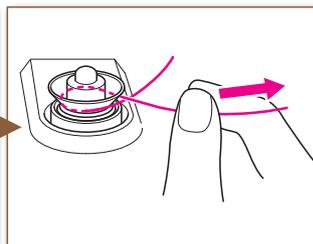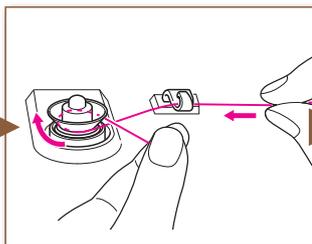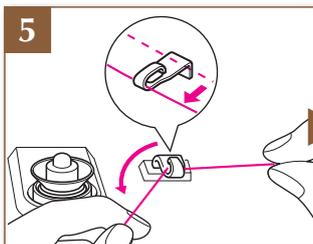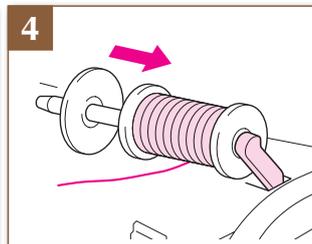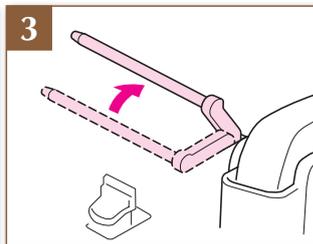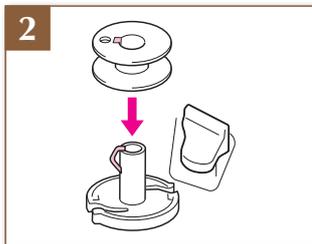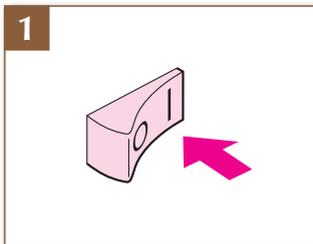
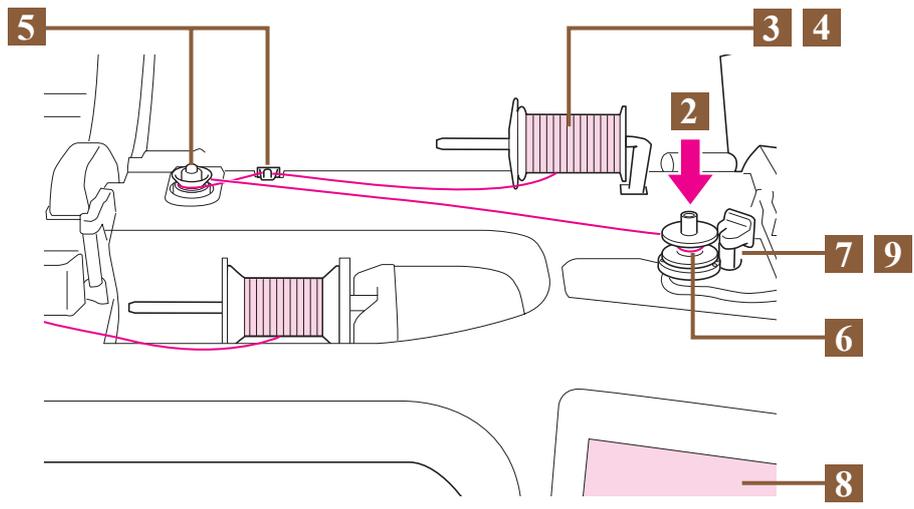


 Using the Spool Pin









You can use the main spool pin to wind the bobbin before sewing.

 使用線輪柱



縫紉前，可以使用主線輪柱來繞線。

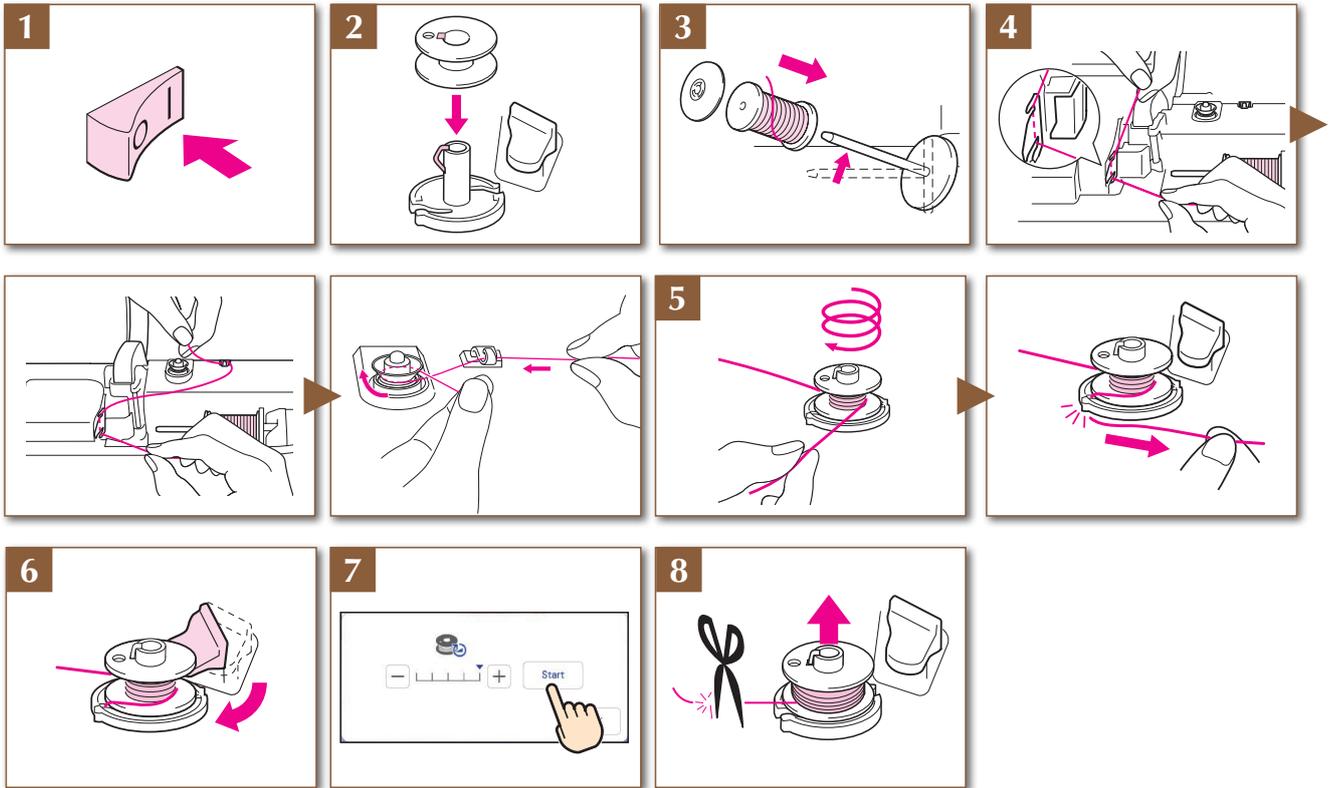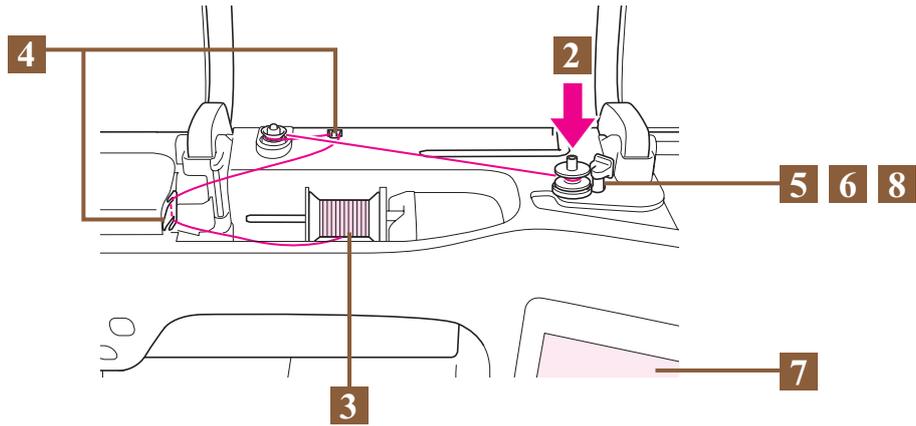











# Setting the Bobbin 安裝梭子










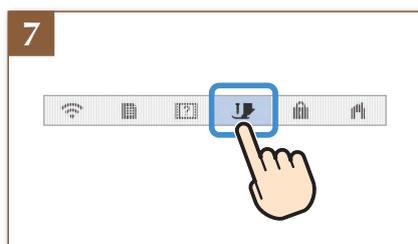
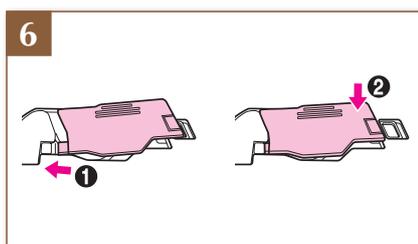
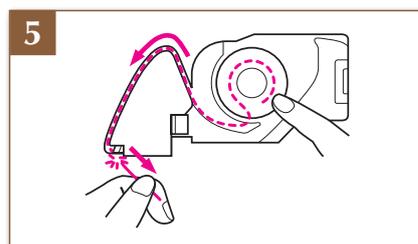
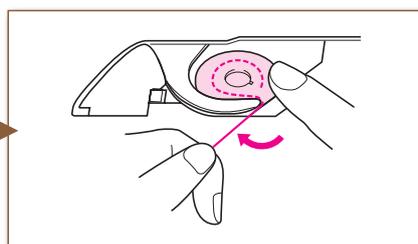
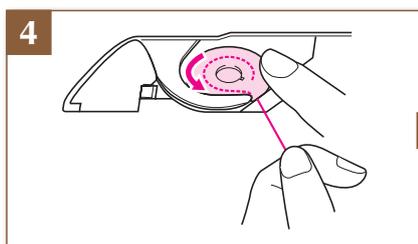
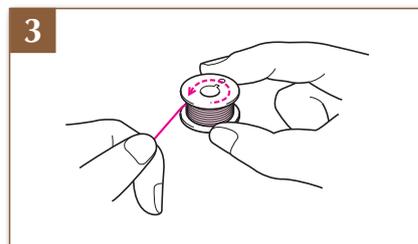
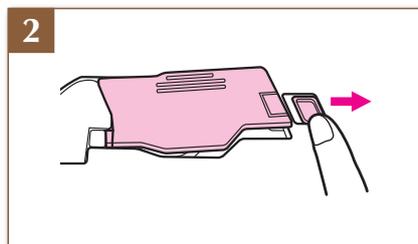
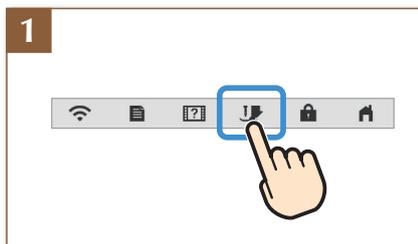


# Upper Threading 穿上線

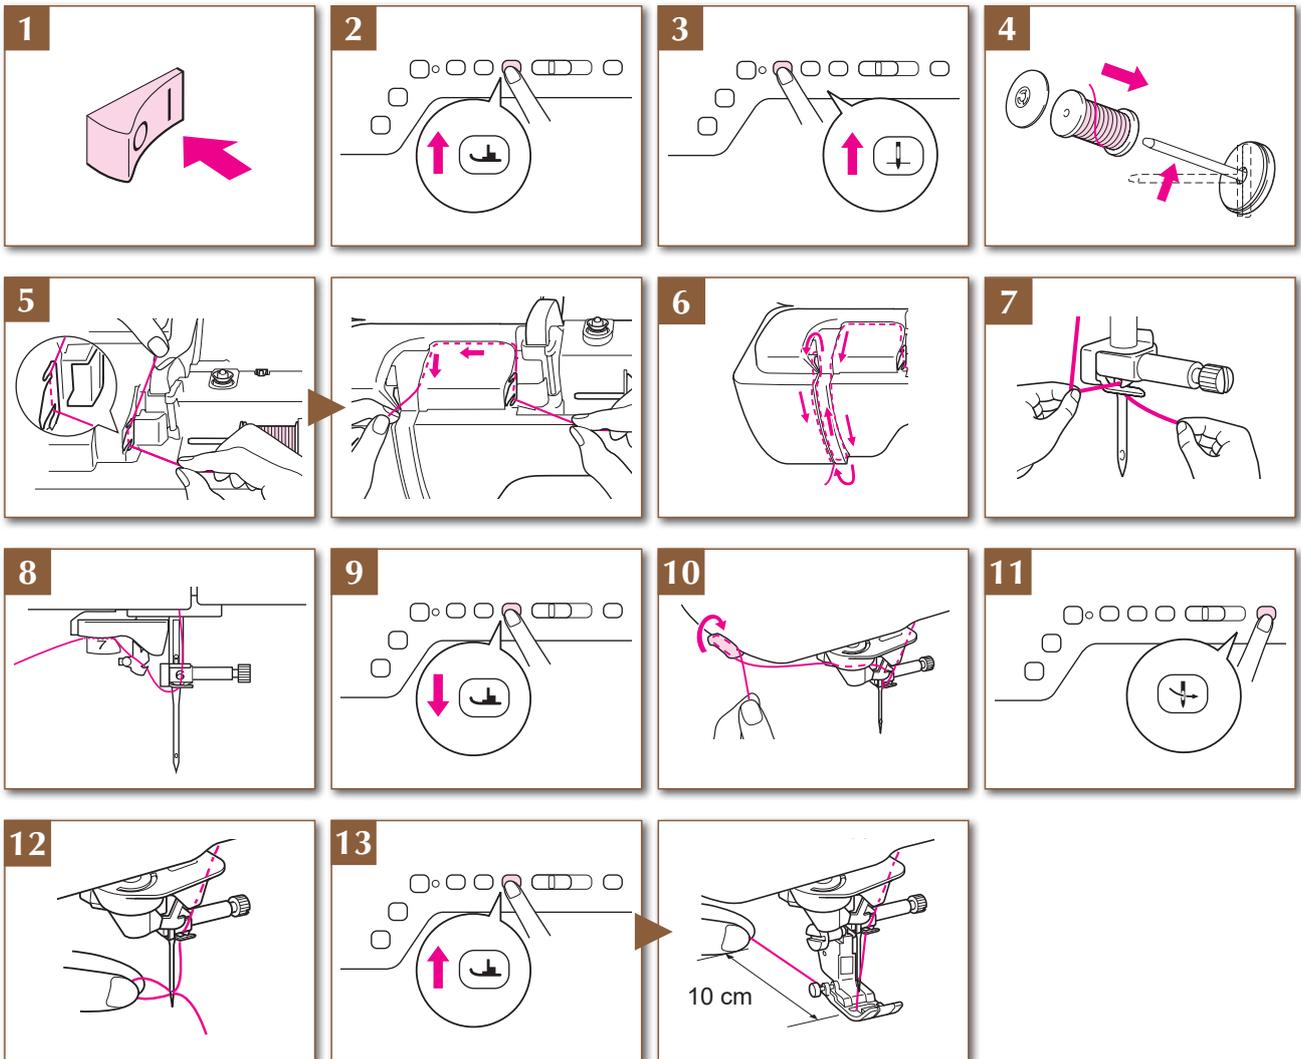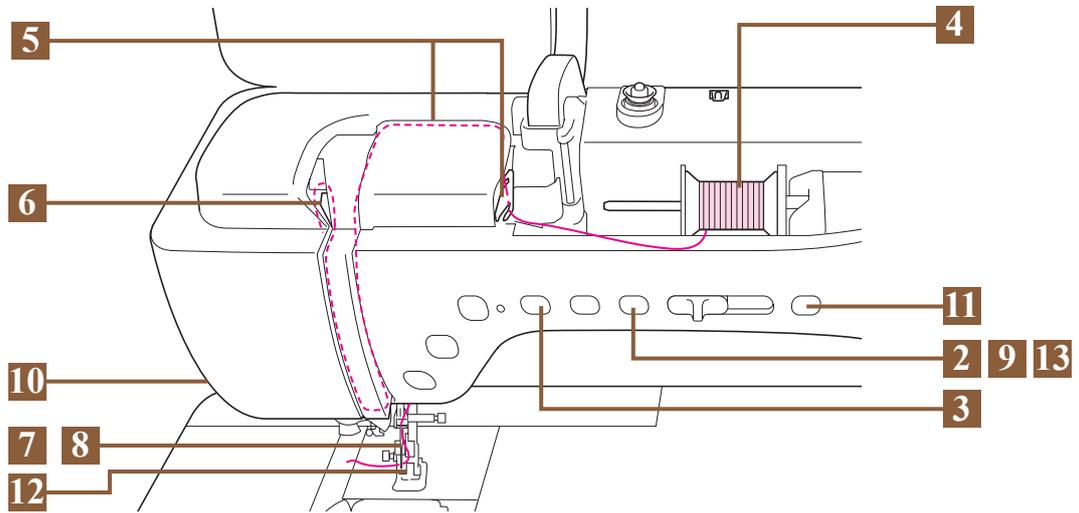

# Preparing to Embroider 準備刺繡

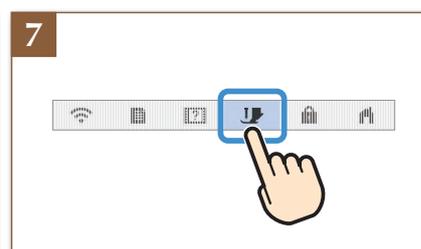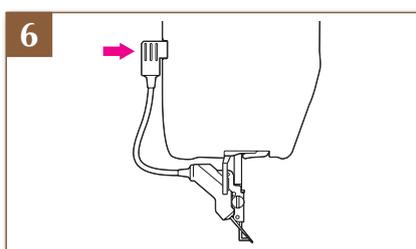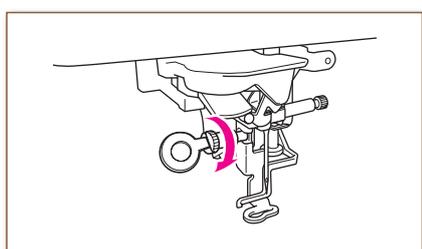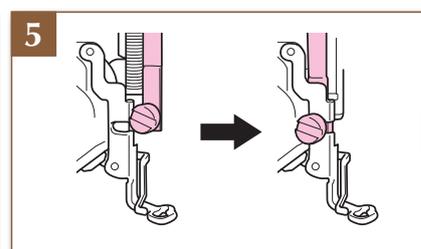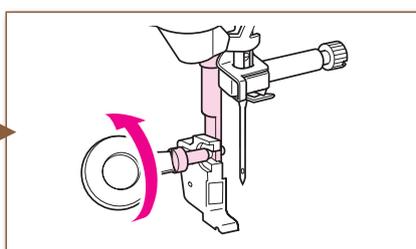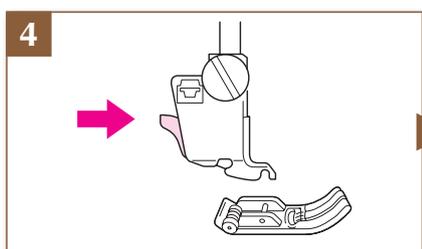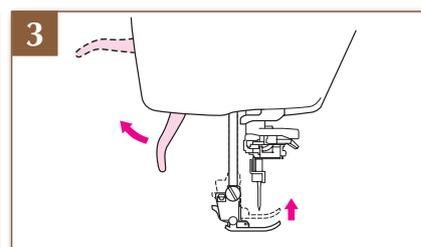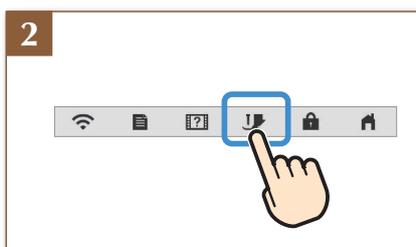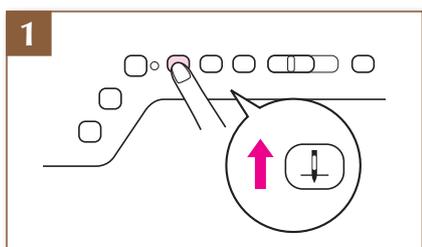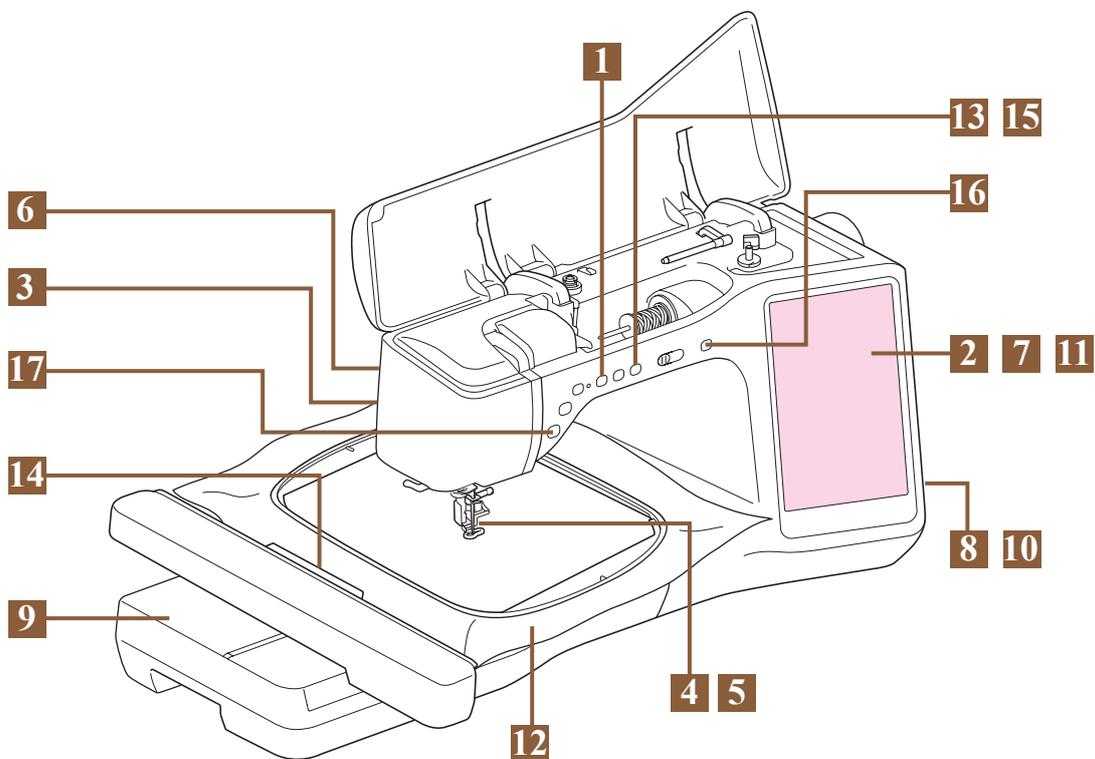


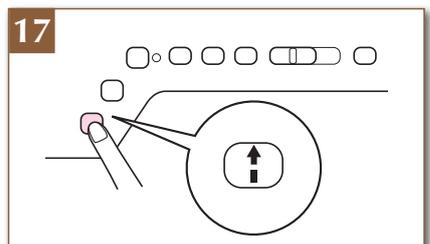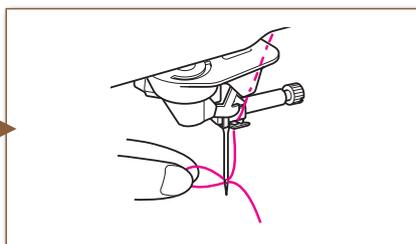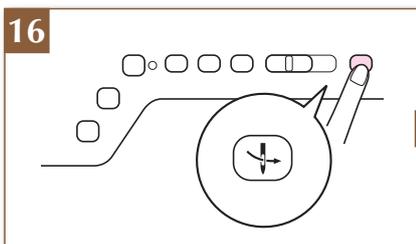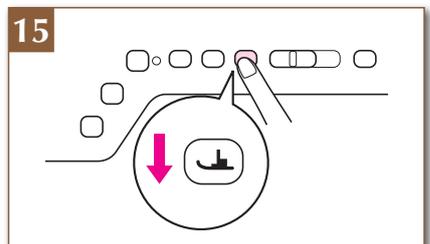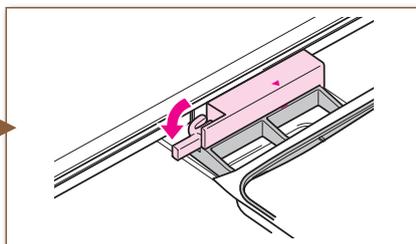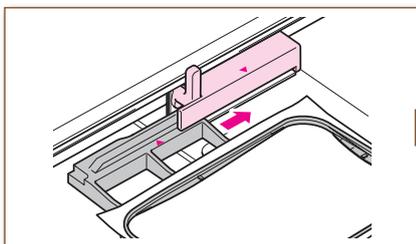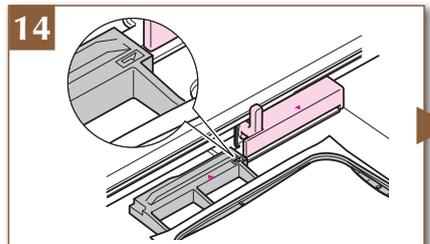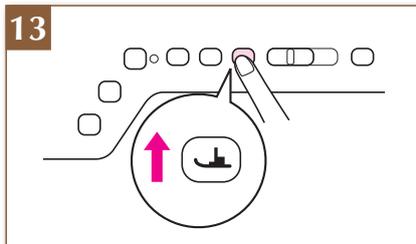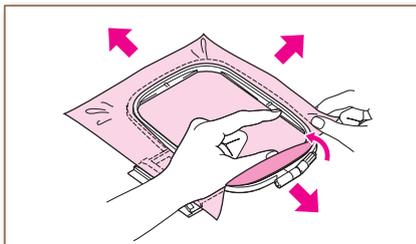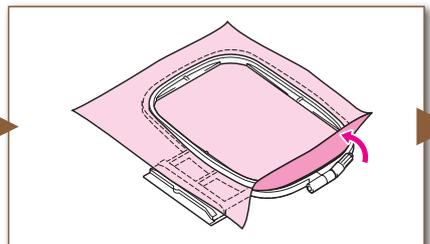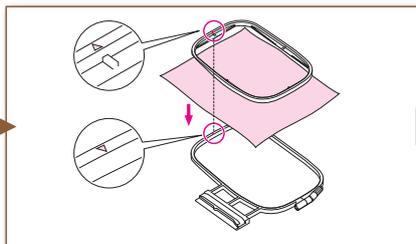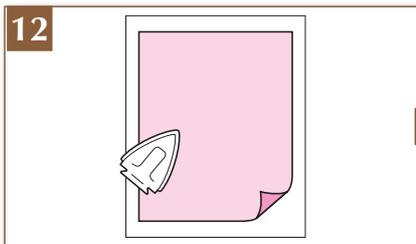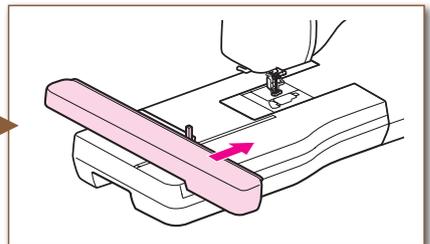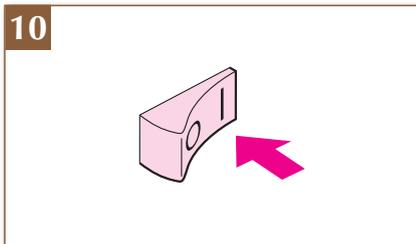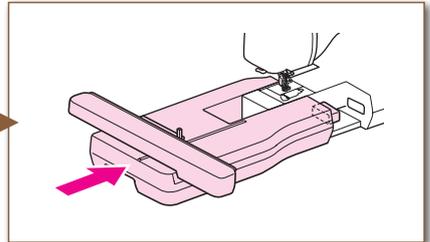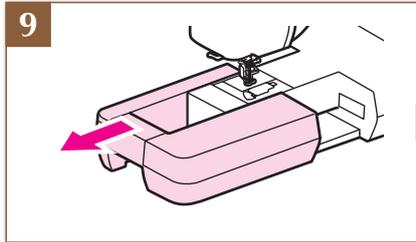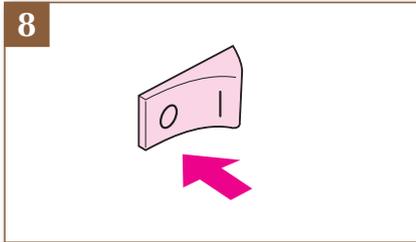

# Removing and Installing the Needle Plate 取下與安裝針板


## ■ Removing the needle plate

## ■ 取下針板

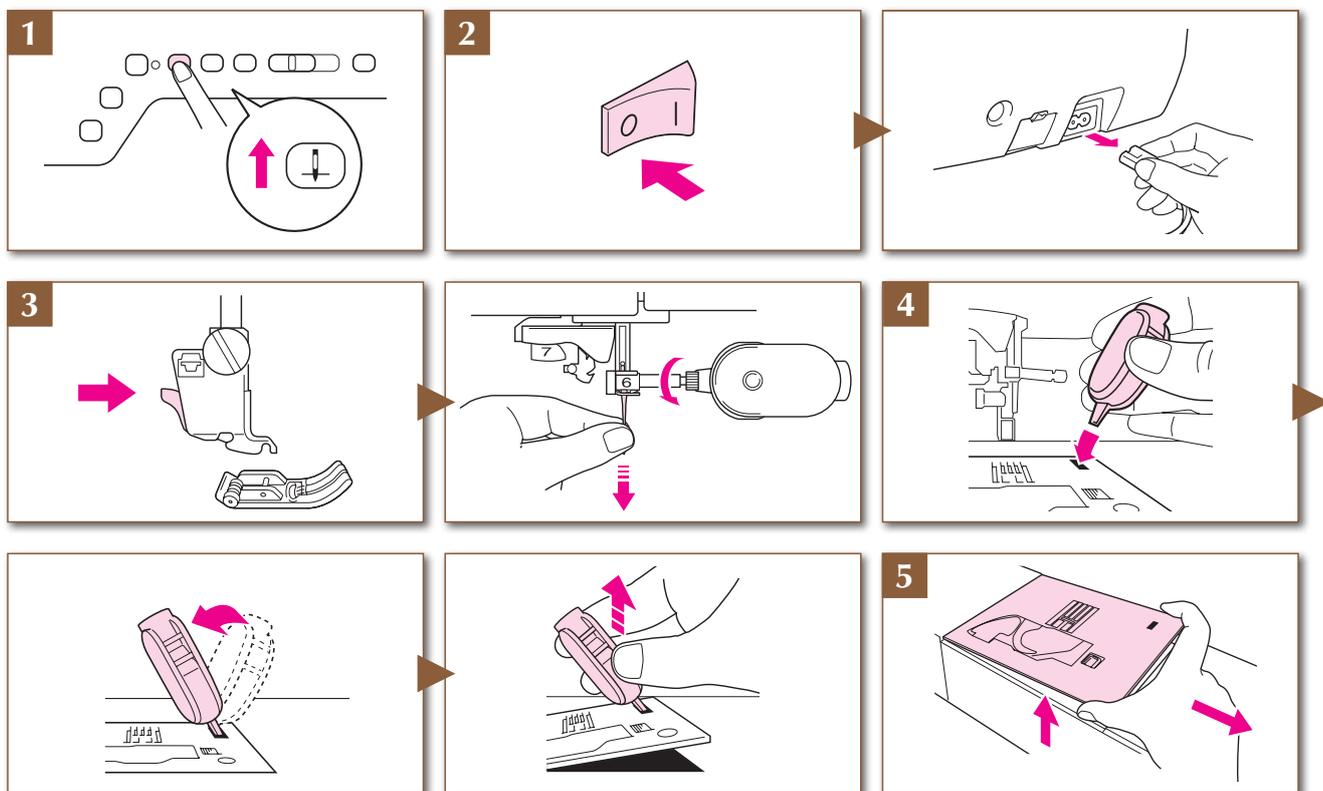

## ■ Installing the needle plate


## ■ 安裝針板

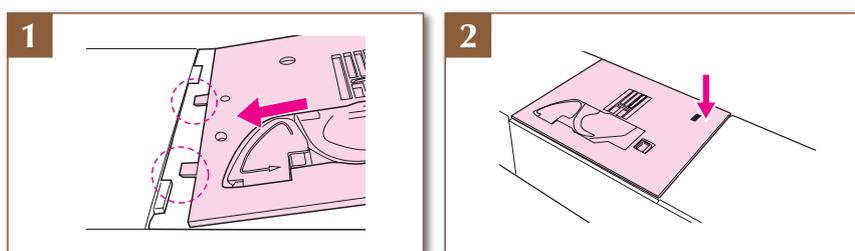

# Selecting Stitch or Embroidery Patterns 選擇針趾或刺繡花樣

❁ LCD Flow Chart

❁ LCD 流程圖

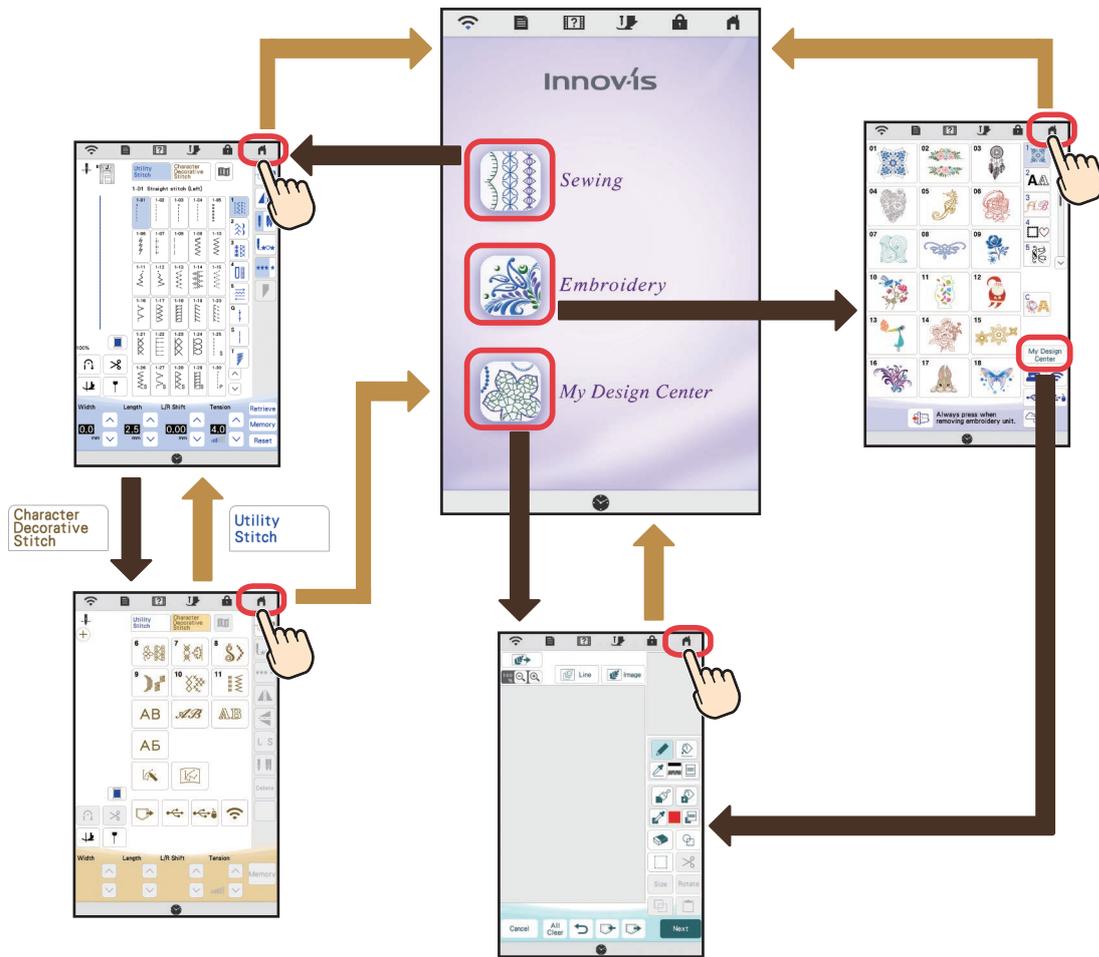




## Utility Stitches

When the machine is turned on, the opening movie is played. Touch the screen to display the home screen. Touch  to display the utility stitch screen. Either "1-01 Straight stitch (Left)" or "1-03 Straight stitch (Middle)" is displayed, depending on the "Initial Position" selected in the settings screen.

## 實用針趾


本機開機後，螢幕顯示歡迎動畫。按下螢幕可顯示主頁畫面。按下  可顯示實用針趾畫面。因設定畫面中選擇的「初始位置」而異，可能顯示「1-01 直線針趾（左針位）」或「1-03 直線針趾（中針位）」。

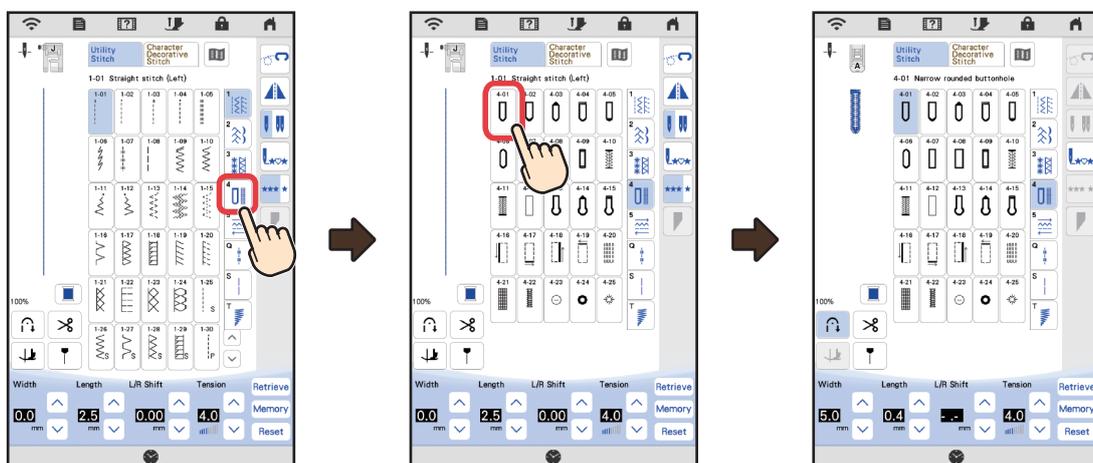

Selecting Stitch or Embroidery Patterns  
選擇針趾或刺繡花樣




❖ Character/Decorative Stitches

❖ 文字/裝飾性針趾

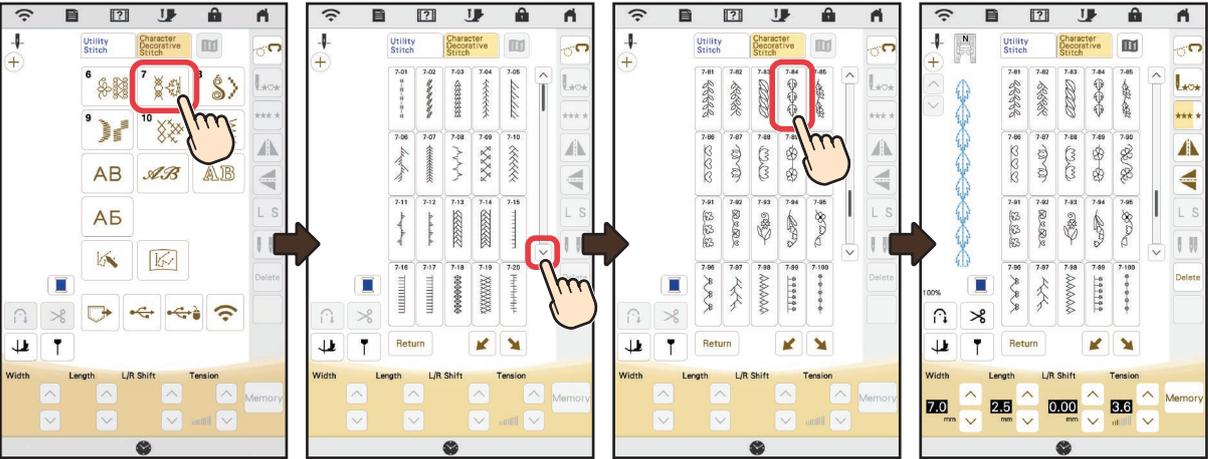




✿ Embroidery Patterns ✿ 刺繡花樣

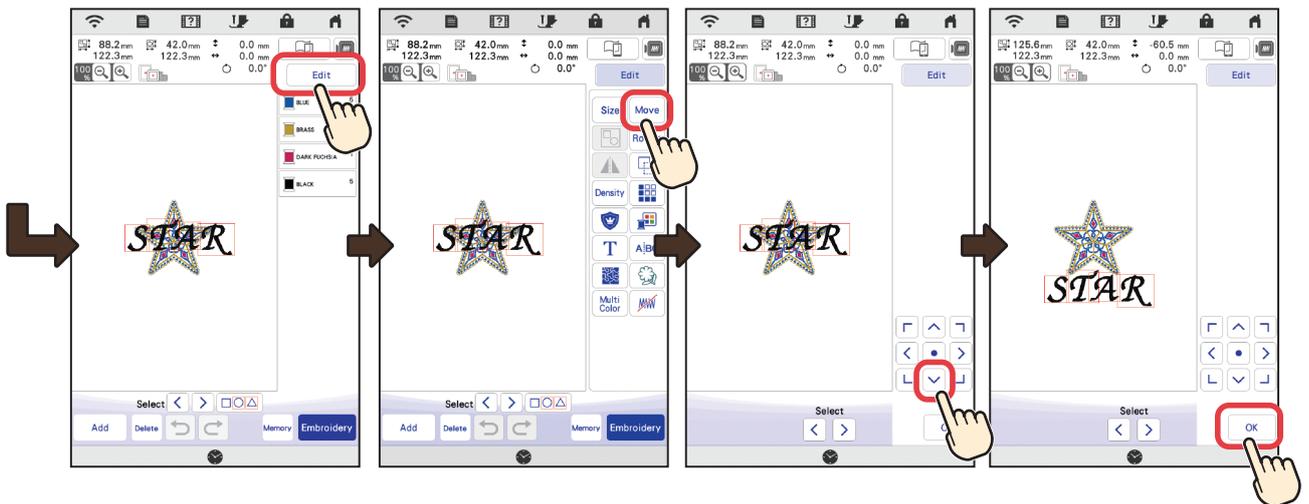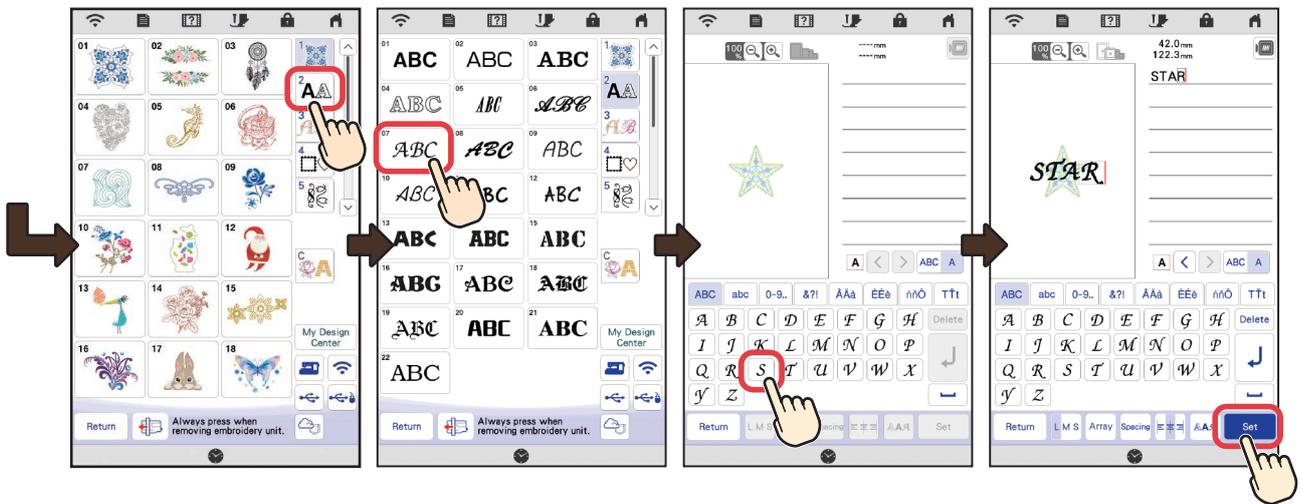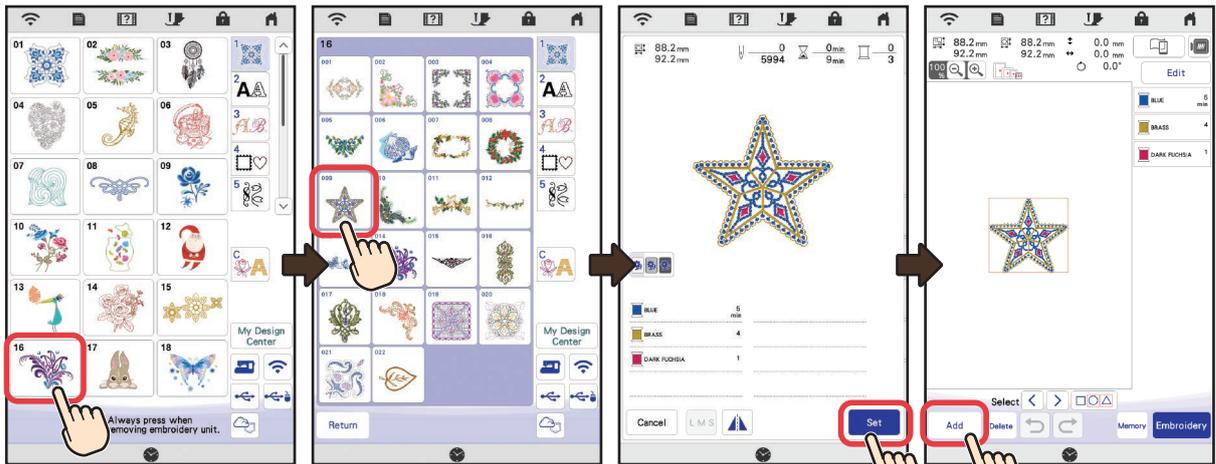











Selecting Stitch or Embroidery Patterns  
選擇針趾或刺繡花樣

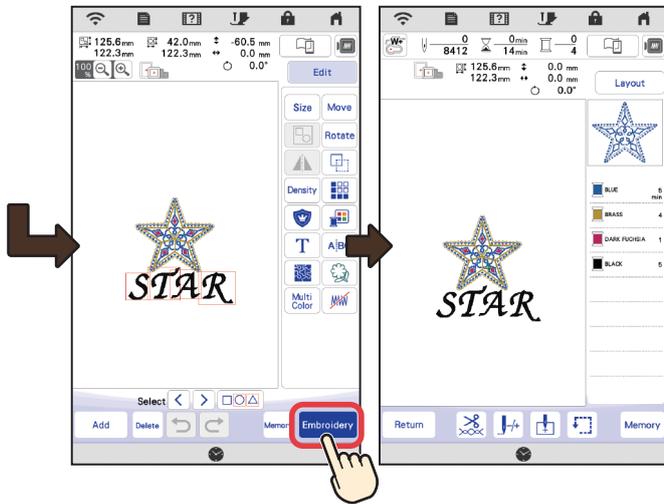


# Summary of Stitch Patterns 刺繡花樣概要

## Utility Stitches











## 實用針趾

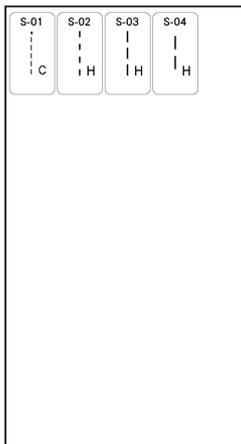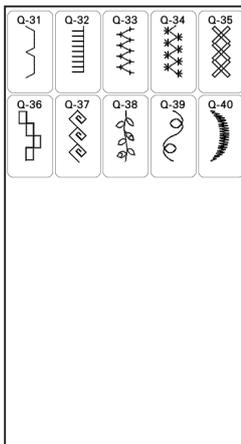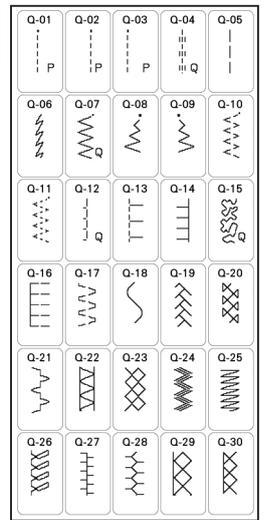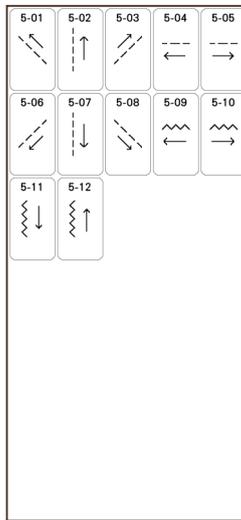
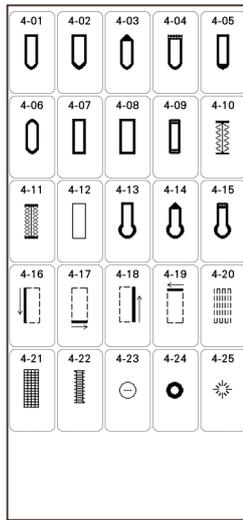
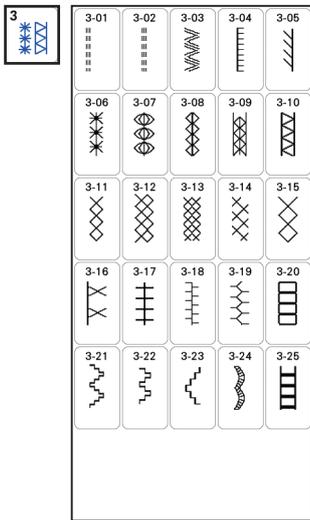
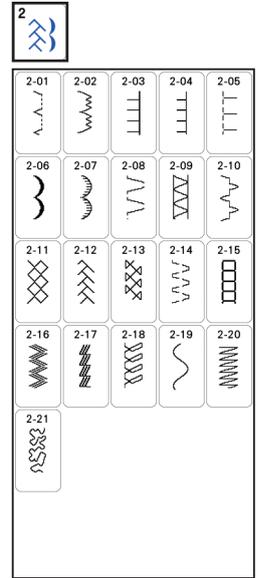
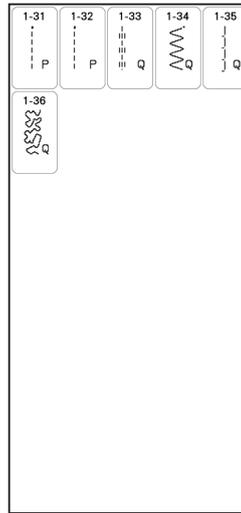
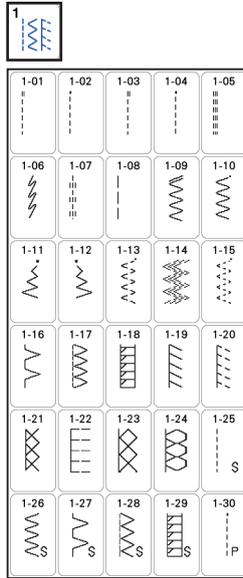
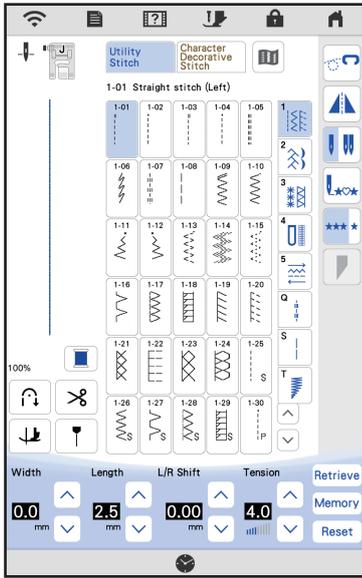


\* The stitch "S-01" is to be used with the optional couching foot.  
\* 針趾「S-01」用於選購的釘線縫壓布腳。




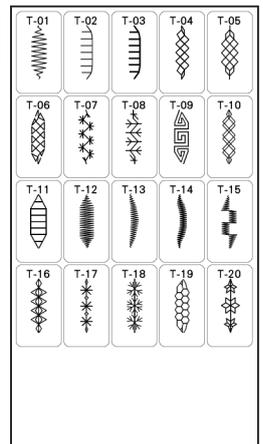


❁ Character/Decorative Stitches ❁ 文字/裝飾性針趾

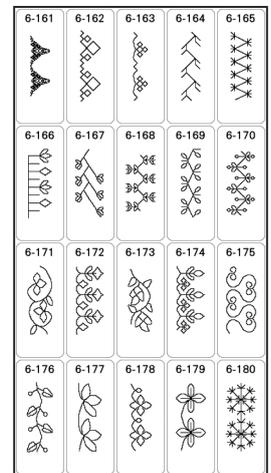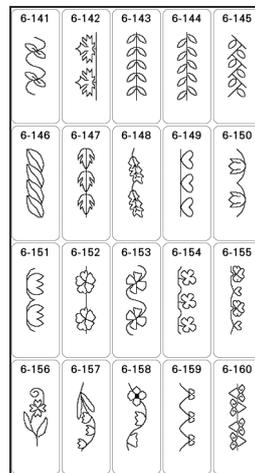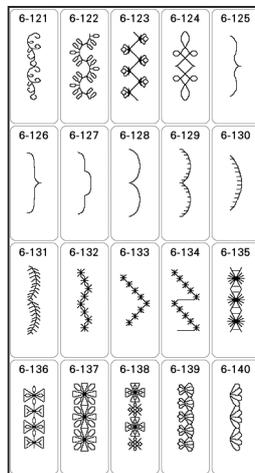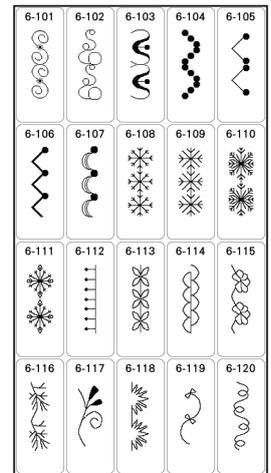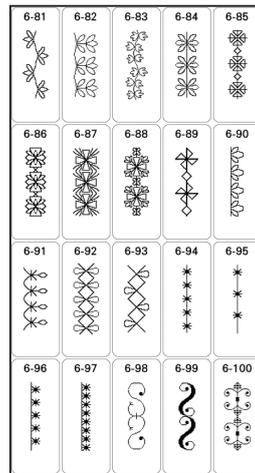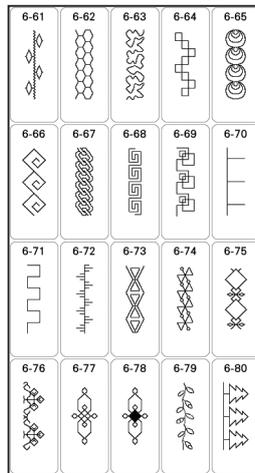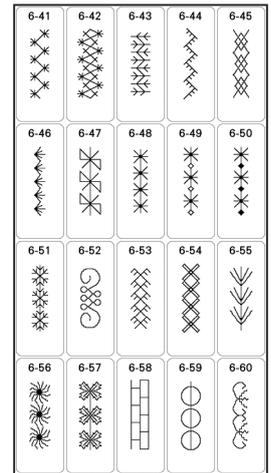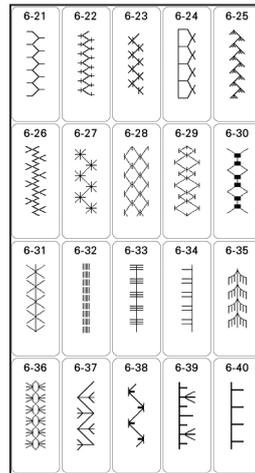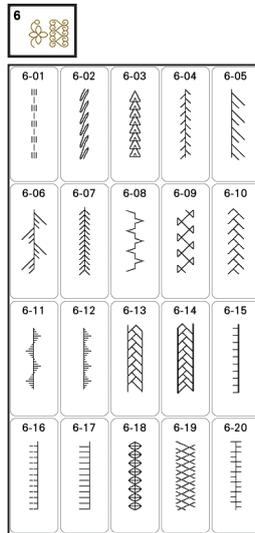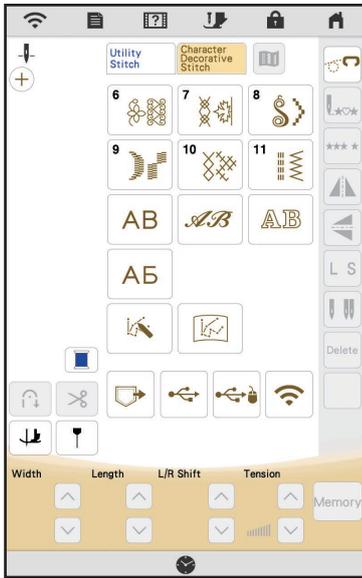

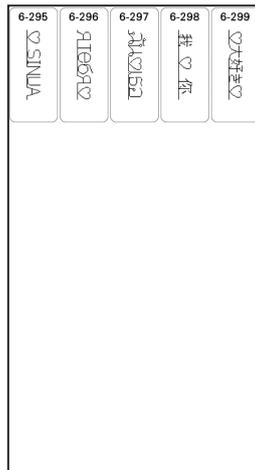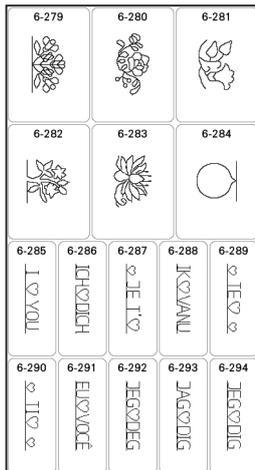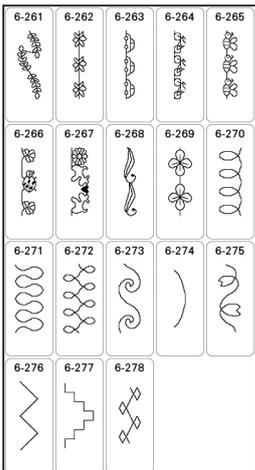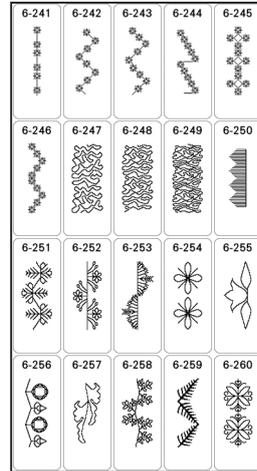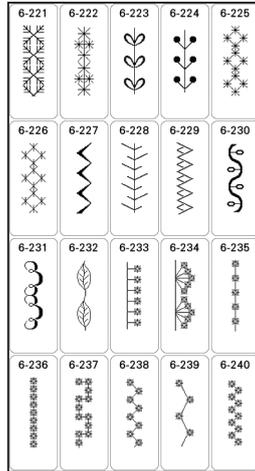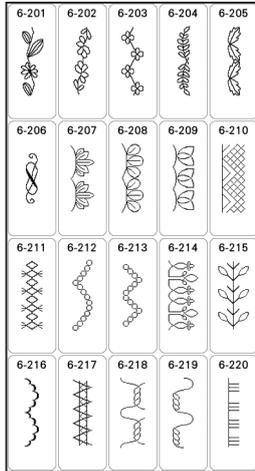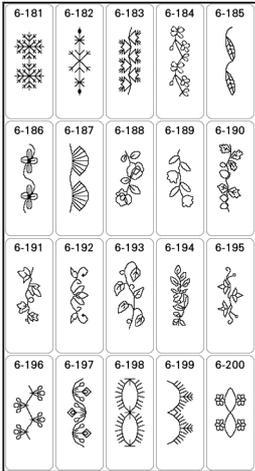

7

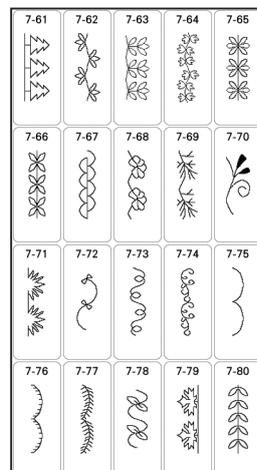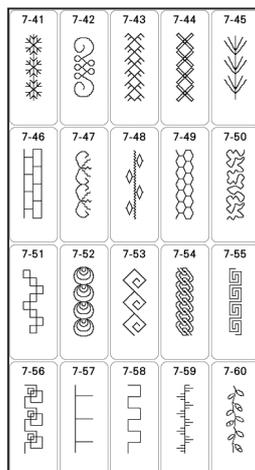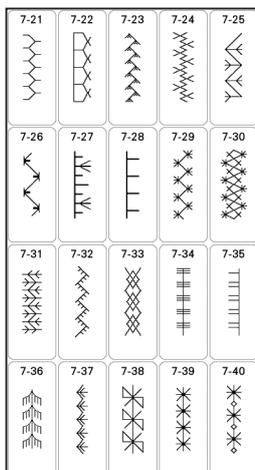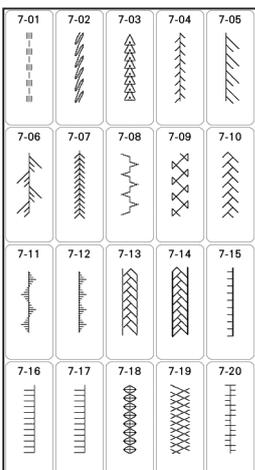

# Summary of Stitch Patterns

## 刺繡花樣概要

7-81	7-82	7-83	7-84	7-85
7-86	7-87	7-88	7-89	7-90
7-91	7-92	7-93	7-94	7-95
7-96	7-97	7-98	7-99	7-100

7-101	7-102	7-103	7-104	7-105
7-106				

### 8

8-01	8-02	8-03	8-04	8-05
8-06	8-07	8-08	8-09	8-10
8-11	8-12	8-13	8-14	8-15
8-16	8-17	8-18	8-19	8-20

8-21	8-22	8-23	8-24	8-25
8-26	8-27	8-28	8-29	8-30
8-31	8-32	8-33	8-34	8-35
8-36	8-37	8-38	8-39	8-40

8-41	8-42	8-43	8-44	8-45
8-46	8-47	8-48	8-49	8-50
8-51	8-52	8-53	8-54	8-55
8-56	8-57	8-58	8-59	8-60

8-61	8-62	8-63	8-64	8-65
8-66	8-67	8-68	8-69	8-70
8-71	8-72			

### 9

9-01	9-02	9-03	9-04	9-05
9-06	9-07	9-08	9-09	9-10
9-11	9-12	9-13	9-14	9-15
9-16	9-17	9-18	9-19	9-20

### 10

10-01	10-02	10-03	10-04	10-05
10-06	10-07	10-08	10-09	10-10
10-11	10-12	10-13	10-14	10-15
10-16	10-17			



11

11-01	11-02	11-03	11-04	11-05
11-06	11-07	11-08	11-09	11-10
11-11	11-12	11-13	11-14	11-15
11-16	11-17	11-18	11-19	11-20

11-21	11-22	11-23	11-24	11-25
11-26	11-27	11-28	11-29	11-30
11-31	11-32	11-33	11-34	11-35
11-36	11-37	11-38	11-39	11-40

11-41	11-42	11-43	11-44	11-45
11-46	11-47	11-48	11-49	11-50
11-51	11-52	11-53	11-54	11-55
11-56	11-57	11-58	11-59	11-60

11-61	11-62	11-63
-------	-------	-------

AB

A	B	C	D	ABC
E	F	G	H	abc
I	J	K	L	0-9..
M	N	O	P	&?!
Q	R	S	T	ÄÄä
U	V	W	X	ŃŃń
Y	Z	'	_	

α	b	c	d	ABC
e	f	g	h	abc
i	j	k	l	0-9..
m	n	o	p	&?!
q	r	s	t	ÄÄä
u	v	w	x	ŃŃń
y	z	'	_	

0	1	2	3	ABC
4	5	6	7	abc
8	9	#	%	0-9..
\$	£	€	¥	&?!
-	+	X	÷	ÄÄä
=	*	.	,	ŃŃń
'	_			

&	?	!	@	ABC
<	>	(	)	abc
[	]	/	\	0-9..
~	:	:	©	&?!
®	™	“	”	ÄÄä
”	'	'	'	ŃŃń
_				

Â	Ä	Å	Æ	ABC
à	ä	å	æ	abc
ä	ä	æ	ç	0-9..
ø	Ð	È	É	&?!
Ê	Ë	ë	é	ÄÄä
ê	ë	í	ï	ŃŃń
î	ì	í	ï	
ì	'	_		

Ñ	Ñ	ñ	Ô	ABC
Ö	Ø	Õ	Œ	abc
ò	ó	ô	ö	0-9..
ø	ø	œ	ƒ	&?!
ı	Û	U	ü	ÄÄä
ú	ù	ü	z	ŃŃń
þ	þ	ß	'	
_				

# Summary of Stitch Patterns 刺繡花樣概要

*AB*

A	B	C	D	ABC
E	F	G	H	abc
I	J	K	L	0-9.
M	N	O	P	&?! ÄÄä ÑÑñ
Q	R	S	T	
U	V	W	X	
Y	Z	'	-	

a	b	c	d	ABC
e	f	g	h	abc
i	j	k	l	0-9.
m	n	o	p	&?! ÄÄä ÑÑñ
q	r	s	t	
u	v	w	x	
y	z	'	-	

0	1	2	3	ABC
4	5	6	7	abc
8	9	#	%	0-9.
\$	£	€	¥	&?! ÄÄä ÑÑñ
-	+	x	÷	
=	*	.	,	
'	-			

&	?	!	@	ABC
<	>	(	)	abc
[	]	/	\	0-9.
~	:	;	©	&?! ÄÄä ÑÑñ
®	™	“	”	
”	'	•	,	
-				

A	A	A	A	ABC
à	á	â	ã	abc
ä	å	æ	ç	0-9.
ç	ð	é	ê	&?! ÄÄä ÑÑñ
ë	è	í	î	
ï	ì	í	î	
ï	'	-		

A	A	n	ó	ABC
ô	õ	ö	ç	abc
è	é	ê	ë	0-9.
è	é	æ	í	&?! ÄÄä ÑÑñ
t	ù	ú	û	
ü	ü	ü	z	
ð	þ	ß	'	
-				

*AB*

A	B	C	D	ABC
E	F	G	H	abc
I	J	K	L	0-9.
M	N	O	P	&?! ÄÄä ÑÑñ
Q	R	S	T	
U	V	W	X	
Y	Z	'	-	

a	b	c	d	ABC
e	f	g	h	abc
i	j	k	l	0-9.
m	n	o	p	&?! ÄÄä ÑÑñ
q	r	s	t	
u	v	w	x	
y	z	'	-	

0	1	2	3	ABC
4	5	6	7	abc
8	9	#	%	0-9.
\$	£	€	¥	&?! ÄÄä ÑÑñ
-	+	x	÷	
=	*	.	,	
'	-			

&	?	!	©	ABC
<	>	(	)	abc
[	]	/	\	0-9.
~	:	;	©	&?! ÄÄä ÑÑñ
©	™	“	”	
”	'	•	,	
-				

À	Á	Â	Ã	ABC
à	á	â	ã	abc
ä	å	æ	ç	0-9.
ç	ð	é	ê	&?! ÄÄä ÑÑñ
ë	è	í	î	
ï	ì	í	î	
ï	'	-		



Ñ	Ń	ñ	ń	ABC
Ö	Ø	ő	ø	abc
ò	ó	õ	ö	0-9,.
ø	õ	œ	ƒ	&?! ÀÁâ
ƒ	Ů	ů	ů	ÑÑñ
Ů	Ů	ů	ů	
Ɔ	Ɔ	Ɔ	°	
—				

АБ				
А	Б	В	Г	АБВ
Д	Е	Ё	Ж	ЦШЩ
З	И	Й	К	абв
Л	М	Н	О	цшщ
П	Р	С	Т	0-9,.
У	Ф	Х	Ц	
—				

Ч	Ш	Щ	Ь	АБВ
Ы	Ь	Э	Ю	ЦШЩ
Я	Г	Е	І	абв
Ї	Ў	Ң	Ң	цшщ
Ј	Ј	Њ	Њ	0-9,.
Ѓ	Ѕ	Ї	—	

а	б	в	г	АБВ
д	е	ё	ж	ЦШЩ
з	и	й	к	абв
л	м	н	о	цшщ
п	р	с	т	0-9,.
у	ф	х	ц	
—				

ч	ш	щ	ь	АБВ
ы	ь	э	ю	ЦШЩ
я	г	е	і	абв
ї	ў	ґ	ґ	цшщ
ј	ј	њ	њ	0-9,.
ѓ	ѕ	ї	—	

0	1	2	3	АБВ
4	5	6	7	ЦШЩ
8	9	—	.	абв
,	&	?	!	цшщ
(	)	/	'	0-9,.
—				















English  
Chinese-trad

882-W73



D02M4D-001