 


# Included Accessories

Thank you for purchasing this machine.  
The following accessories are included with this product.

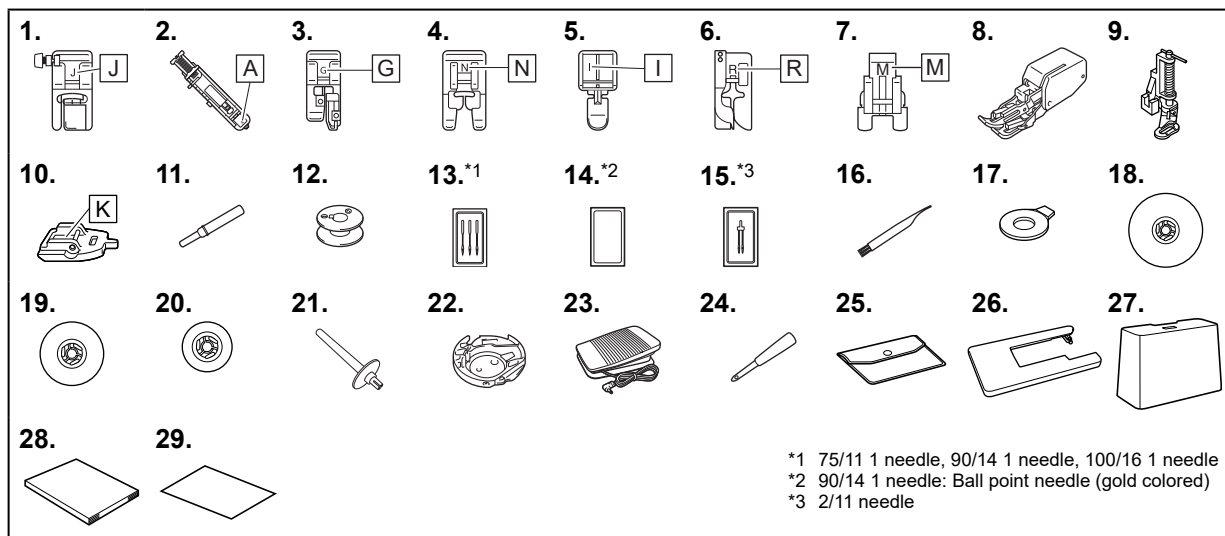

\*1 75/11 1 needle, 90/14 1 needle, 100/16 1 needle  
\*2 90/14 1 needle: Ball point needle (gold colored)  
\*3 2/11 needle

No.	Part Name	Part Code
1	Zigzag foot "J" (on machine)	XZ5134-001
2	Buttonhole foot "A"	XC2691-133
3	Overcasting foot "G"	XC3098-031
4	Monogramming foot "N"	XD0810-131
5	Zipper foot "I"	X59370-021
6	Blind stitch foot "R"	XE2650-001
7	Button fitting foot "M"	XE2137-101
8	Walking foot	F033N
9	Quilting foot	F005N
10	Concealed zipper foot "K"	F080
11	Seam ripper	XZ5082-101
12	Bobbin (4) (One bobbin is on machine.)	SFB
13	Needle set	XC8834-021
14	Ball point needle	XD0360-021
15	Twin needle	131096-121

No.	Part Name	Part Code
16	Cleaning brush	X59476-051
17	Disc-shaped screwdriver	XC1074-051
18	Spool cap (large)	130012-027
19	Spool cap (medium) (on machine)	XE1372-003
20	Spool cap (small)	130013-126
21	Extra spool pin	XE2241-002
22	Bobbin case (on machine)	XF5707-101
23	Foot controller	XD0501-121 (European area) XC8816-071 (Other areas)
24	Eyelet punch	XG7791-001
25	Accessory bag	XC4487-021
26	Wide table	XG3634-101
27	Hard case	XG1251-001
28	Operation Manual	Contact your authorized Brother dealer.
29	Quick Reference Guide	

 
# Optional Accessories

Various optional accessories are available to be purchased separately. Please visit our website for more details.  
To obtain optional accessories or parts, contact your nearest authorized Brother dealer.



<https://s.brother/cokka/>

### Example



1/4" piecing foot



Quilting guide



D033SW-001