Introduction

Thank you for purchasing the QL-1050/1050N

This guide briefly describes the steps to start using your QL-1050/1050N. Refer to the Software User's Guide for more detailed information. The Software User's Guide can be found in the Manuals folder of the CD-ROM included with the QL-1050/1050N

Federal Communications Commission (FCC) Declaration of Conformity (For USA Only)

100 Somerset Corporate Boulevard Bridgewater, NJ 08807-0911 USA

TEL: (908) 704-1700 declares that the product

Label Printer QL-1050 Product Name

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

¥ Reorient or relocate the receiving antenna.

¥ Increase the separation between the equipment and receiver.

¥ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. ¥ Consult the dealer or an experienced radio/TV technician for help.

¥The enclosed interface cable should be used in order to ensure compliance with the limits for a Class B digital device. ¥ A shielded interface cable should be used in order to ensure compliance with the limits for a Class B digital device

¥ Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.

Safety Precautions and Other Information

¥Always hold the plug when removing the power cord from or inserting it into the outlet. Do not pull on the cord when removingit from the electrical socket. The wire in the cord may become damaged.

¥Do not use included power cord for other products. Do not use the damaged power cord. ¥Use only the approved power source (120V AC) and USB cable for the QL-1050/1050N.

¥Unplug the power cord immediately and stop using the printer if you notice any abnormal odor, heat, discoloration, deformation or anything unusual whilst the printer is in use or storage. ¥Do not remove the power cord from nor insert it into the electrical outlet with wet hands.

¥Be sure to disconnect the QL-1050/1050N from the power outlet when not using the QL-1050/1050N for any extended period of time ¥Place the printer near a standard electrical outlet that is easily accessible. ¥The internal parts of the printer become very hot right after using the label printer. Never touch the printer head with barehands since this could cause burns

¥Do not place the QL-1050/1050N in direct sunlight, near heaters or other hot appliances, in any location exposed to extremely high or low temperatures, high humidity, or dusty locations. Standard operating temperature range: 50F to 95F.

¥When using the printer, place it on a stable desk, shelf, or table.

¥Do not clean the machine with alcohol or other organic solvents. Only use a soft, dry cloth ¥Remove all dust from the printer before use.

¥If a paper jam should occur due to a build up of adhesive on the paper guide surface, unplug the power cord from the electrical outlet and wipe away the adhesive buildup

on the paper guide surface with a swab dipped in ethanol or isopropyl (rubbing) alcohol.

¥Do not touch the thermal print head. Printing problems can occur. ¥Do not insert any objects into or block the label output or USB port or a serial port.

\$\frac{1}{2}\$Do not place any heavy objects on top of the QL-1050/1050N. Do not use the QL-1050/1050N with a foreign object in it. If water, metallic substance or any foreign object enters the QL-1050/1050N, disconnect the machine from the power, and contact Brother Customer Service. ¥Do not disassembles the QL-1050/1050N. For inspection, adjustment, and repair of the QL-1050/1050N, contact Brother Customer Service.

¥Do not put plastic packing bag near face, mouth or nose as bag may present the choking hazard. Dispose of keep the plastic bagout of reach of children.

¥To prevent injury from cutter unit, follow these points: Close the top cover when operating the cutter unit.

¥Cutter unit is not replaceable. The average number of cuts is depending on the operating environment.

¥Do not apply excessive pressure to the cutter unit. ¥Do not touch the blade of the cutter unit.

¥Do not connect the QL-1050/1050N to your personal computer until directed to do so when installing the printer driver.

¥Be careful not to scratch the CD-ROM. Do not place the CD-ROM in any location exposed to high or low temperatures. Do not place heavy objects on the CD-ROM or bend it.

¥The software on the CD-ROM is intended for use with the QL-1050/1050N and may be installed on more than one PC. ¥Use only genuine Brother accessories and supplies (with DK LABEL A DK TAPE A DK T

¥The last label on the DK roll is not attached to the core. As a consequence, the last label may not be cut correctly, howeverthis does not indicate a problem with the QL-1050/1050N. Should there be a problem with the last label, remove any existing labels, insert another DK Roll and re-print. This equipment should not be used by children.

¥Always test the label on a sample area before use. ¥Scrafching the printed surface of the label with your finger nails or metal objects, or touching the printed surface with hands dampened by water, sweat, or medicated cream, etc., can cause the color to change or fade.

¥Some DK Rolls use permanent adhesive for their labels. These labels cannot be easily peeled off once attached.

¥Prior to using CD/DVD labels, be sure to follow the instructions in your CD/DVD player's instruction manual regarding applying CD/DVD labels.

¥Do not use CD/DVD labels in a slot loading CD/DVD player, for example a CD player in a car where the CD is slid into a slot inthe CD player. ¥Do not peel off the CD/DVD label once it is applied to the CD/DVD, a thin surface layer may come off, resulting in damage to the disk.

¥Do not apply CD/DVD labels to CD/DVD disks designed for use with ink jet printers. Labels peel off these disks easily and using disks with peeled labels can result in loss or damage of data. ¥When applying CD/DVD labels, use the applicator included with the CD/DVD label rolls. Failure to do so could cause damage to the CD/DVD player.

¥User's shall take full responsibility for applying CD/DVD labels. Brother accepts no responsibility for any loss or damage of data caused by the inappropriate use of CD/DVD labels. ¥Each roll contains more labels than the number shown. The last few labels might not be printable but the number of sheets will be never be less than shown.

¥LED indication -Lights up in green- QL-1050/1050N is operating normally.

-Flashes in green- QL-1050/1050N is receiving data. Please do not power off. -Lights up in orange- The cover is opened.

-Flashes in orange- Cooling. -Flashes in red- Errors (user solvable)

-Lights up in red- System error (user unsolvable)

¥Microsoft and Windows are registered trademarks of Microsoft Corporation, USA.

¥Macintosh and Mac OS are registered trademarks of Apple Computer, Inc.

¥The names of other software or products used in this document are trademarks or registered trademarks of the respective comparies that developed them.

Installing the Software

The installation procedure differs depending on the operating system running on your personal computer. Refer to the installation procedure for the appropriate operating system to install the software.

If you use the QL-1050N, please see the PS-9000 manuals and follow the PS-9000 manuals.

Start up the PC and put the CD-ROM into the CD-ROM

The QL-series Installer starts up and the P-touch Setup screen is displayed.

¥ It may take a short time to display the screen. ¥ If it does not start up automatically, double click the Setup.exeÓ

Click Standard Installation Ó The preparation for installing the software starts and the License Agreement screen is

displayed. Each button selects the following operations

Standard Installation

icon on the CD-ROM.

P-touch Editor 4.2, P-touch Address Book 1.0, Printer Driver, and Software User's Guide are all installed

Custom Installation P-touch Editor 4.2, P-touch Address Book 1.0, Printer Driver,

and Software User's Guide can be installed individually

Show Software User's Guide The Software User's Guide PDF manual can be viewed without

actually installing the QL-1050/1050N software. Install Acrobat Reader

Adobe" Acrobat" Reader" can be installed so that you can view the Software User's Guide (PDF Manual).

Adobe Acrobat Reader 5.1 will be installed. If you have a

later version already installed you do not have to install the

Read the license agreement carefully. If you agree with the terms and conditions of the license agreement, click [Yes] to continue the installation.

The Customer Information screen is displayed.

Enter vour user name and company name, then click [Next]. The Choose the **Destination Location** screen is displayed.

Click [Next].

The Add shortcut screen is displayed.

To install to a different folder click [Browse] and select another

Check the locations where you want the installer to add the program shortcuts and click [Next]. The Start Copying Files screen is displayed.

If you are happy with your settings, click [Next].

¥ It may take some time to display this screen ¥ If it is not set correctly, click [Back] and set it again.

The Add-In settings screen is displayed.

Check the box for each Microsoft " Office application that you want to install the Addin for, then click [Next]. Make sure that you have closed all Microsoft Office" applications. For details on Add-In setting. See the

ÒSoftware User's Guide (PDF Manual)Ó. The Driver Setup (Brother P-touch) screen is displayed.

Click [OK] on the Driver Setup (Brother P-touch) screen to start the installation.

Click [Next]. The installation of the driver is completed, the User Registration screen is displayed.

Select if you want to register your printer and then [Next]. ¥ If you select Yes, display the page Qyou will be directed to the online user registration page. After user registration, continue with the installation (registration is recommended).

¥ If you select No, do not display the page Q the installation will Click [Finish].

The software installation is now complete. To complete the driver installation, connect the printer to the PC and press the ON/OFF button to power on the printer. When the installation is

complete, you may be

RestartOand click [Finish]. Starting up the installed software.

Book 1.0].

prompted to reboot the PC.

¥ When starting P-touch Editor, click [Start] - [All Programs (Programs)] - [Brother Ptouch] - [P-touch Editor 4.2]. ¥ When starting P-touch Address Book, click [Start] - [All

Programs (Programs)] - [Brother P-touch] - [P-touch Address

Unpacking Your QL-1050/1050N

Check that the package contains the following before using your QL-1050/1050N. If any item is missing or damaged, please contact your Brother dealer.

*2-way AC power cord Please refer to the PS-9000 Setup Guide for details

regarding the cord shapes and ways of connecting



Label tray

USB cable

¥ Quick Start Guide ¥ DK Label & Tape Guide ¥ Warranty Card

Back

Front

<QL-1050N> QL-1050N includes bellow material additionally *P-touch Print Server PS-9000 *CD for PS-9000

Connecting to the Power Supply

Connect the AC power cord to the QL-1050/1050N and then plug the power supply cord into a standard electrical outlet.

¥ Check that the electrical outlet is 120V AC before inserting the plug. ¥ Remove the power supply cord from the electrical outlet after you have finished using the QL-1050/1050N. ¥ Do not pull the cord when removing it from the electrical outlet. The wire in the cord may become damaged



Close the head cover until it

DK Roll compartment cover

LED lame

CUT button

FEED button

AC Power cord

ON/OFF buttor

Installing the DK Roll

CD-ROM

QL-1050

Starter roll

The QL-1050/1050N includes one starter roll of

DK Die-cut 4" X 6" Labels, and one starter roll

of DK Continuous Paper Tape 2-3/7"

Locate the printer near the outlet where the power plug can be pulled out easily.

are inserted firmly in the spool

guides on the left and right.

á Insert the spool with the DK

Roll located on the right hand side of the QL- 1050/1050N.

Press the ON/OFF button to turn the QL-1050/1050N off. Pull up the left and right levers on the machine under the top cover, and open the cover.

Place the spool into the spool guides in the DK Roll compartment. á Make sure that the spool arms

Thread the end of the DK roll under the protruding portion and gap in the cutter unit.

Thread it in until it can be seen from the other side and close the cover. Press the ON/OFF button to turn the QL-1050/1050N or and then press the FEED button to set the roll.



Installing the Label Tray

Attach the label tray to the front of the QL-1050/1050N as shown in the figure.

¥ Remove the label tray when printing more than 10 labels continuously and cutting each label automatically. ¥ When you print continuous roll more than 6" length, please close the label tray, otherwise it will cause the paper jam.



PS-9000 does not support Mac. So QL-1050N is not used in Mac environment

Do not connect the QL-1050/1050N to your personal computer until directed to do so when installing the printer driver.

Start up your Mac and put the CD-ROM into the CD-ROM drive.

The QL-Series screen is displayed. If it does not start up automatically, double click the QL-Series (CD-ROM)

Click the [MAC OS X] folder and double click [P-touch Editor 3.2

P-touch Editor 3.2 Installer starts up and the Introduction screen is displayed.

Check the OIntroductionO and click [Next]. The Important Information screen is displayed.

Check the Olmportant Information O and click [Next].

Click [Next]. You can choose which programs are installed Uncheck any programs that you do not want to install. The Choose Alias Folder

Select the location where you want to create the alias, and click

The Pre-Installation Summary screen is displayed

screen is displayed.

Click [Install]. The installation starts. When the installation is complete, click [Done]. The software installation is now complete. Next, install the printer driver.

Double click [QL-1050/1050N D Driver.pkg] in [Mac OS X] folder. The Driver Installer starts up and the Driver Setup screen is displayed.

Click [Continue]. The Important Information screen is displayed.

Click [Continue].

The Software License Agreement screen is displayed.

The Select a Destination screen is displayed.

Check the ÔSoftware License AgreementÕ and click [Continue]. The License agreement screen is displayed. When continuing the installation, click [Agree]

Select the destination you want to install, and click [Continue]. The Easy Install screen is displayed Select the drive where the Mac OS X is installed.

Click [Install]

The screen in which the name and password of the administrator is

Input the ONameO and the OPasswordO of the administrator and click [OK]

The screen to check the installation is displayed.

The installation starts. When the installation is completed and the message OThe software was successfully installedÓ is displayed, click [Restart].

The installation of the printer driver is now complete.

When continuing the installation, click [Continue Installation].

After rebooting, connect the USB cable and power cord to the printer. Remove the caution label before connecting the USB cable.

Your Mac will restart.

Power cord slot AC Power cord

Connect the USB cable to the USB port of the Mac Press the ON/OFF button (\bigcirc of the printer to turn on the power. If you are using a USB hub and your Mac has problems recognizing the printer, try connecting the printer directly to your Mac

Double click the drive where Mac OS X is installed, and click in order [Applications]-[Utility]-[Printer Setup Utility (Print Center)]. The Printer List screen is displayed.

When the Printer List screen is displayed, click [Add].

Click [Add] (Add Printer).

Select ÒQL-1050Ó and [Add]. The screen returns to Printer List screen

When using Mac OS 10.1~10.3, Click [USB], ÒQL-1050Ó and [Add].

Check that OQL-1050O is added, and close the Printer List screen. You can start using your Brother QL-1050/1050N.

Double click the drive where P-touch Editor is installed, click in order [Applications (or Application)] - [P-Touch Editor 3.2] and double click P-touch Editor 3.2 icon. P-touch Editor will start.

PC LABEL PRINTER

QUCK START GUIDE



[Creating Labels]

Label Creation Outline


This section describes the general procedure for creating labels using your QL-1050/1050N.


Learn the basic workflow of P-touch Editor while creating a shipping label.



Shown above are a few of the types of labels you can create with the

 
QL-1050/1050N.

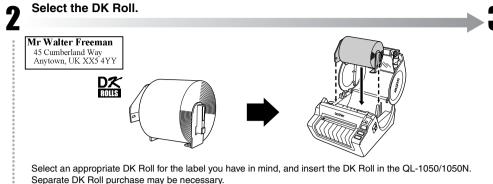


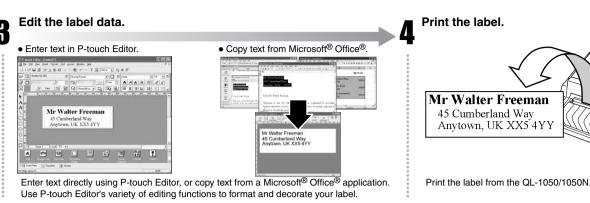








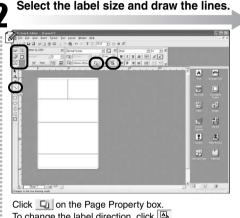


To change the label direction, click Click \ and draw a line. If the required Property box is not displayed in the Property dock,

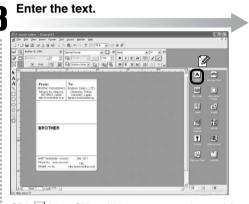


Click lack A in the Object dock to create a text box, and then enter the text. You can use the Text Property box to select options for formatting the text.



Click , select the desired code from the Protocol, and enter the data.

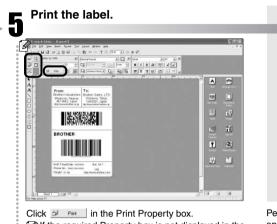


If the required Property box is not displayed in the Property dock, click the corresponding button at the left of the dock to open it.

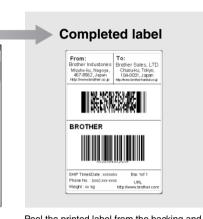



Peel the printed label from the backing and apply the label.

Creating an Address Label using Microsoft Word Add-In


Copy text from Microsoft Word and create an address label.

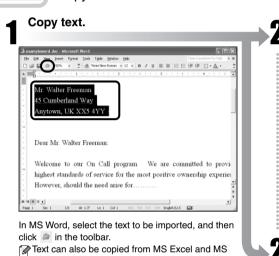


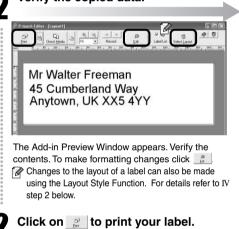

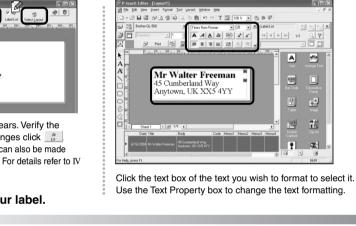


Format the text.

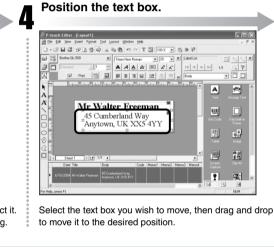

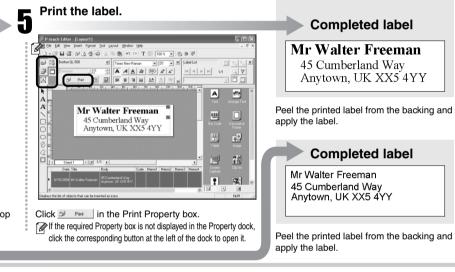


Creating an Address Label using Microsoft Outlook Add-In


Create an address label using data from Microsoft Outlook, taking advantage of the Layout Style Function.

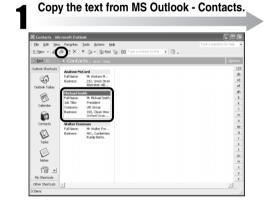


Outlook.

 
In MS Outlook, select the contacts to be imported, and then click in the Toolbar.

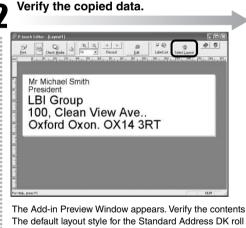





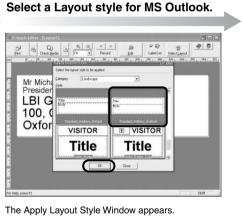

 Select the "Standard_Address_Outlook" layout and click

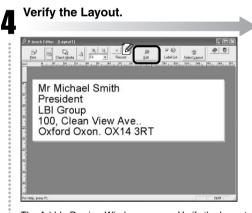



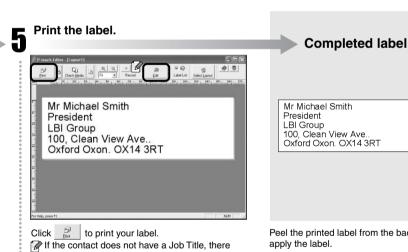


Peel the printed label from the backing and may be a blank space before the address. Use


Completed label


Creating a Banner Label


Create a banner using DK Continuous Durable Paper Tape.

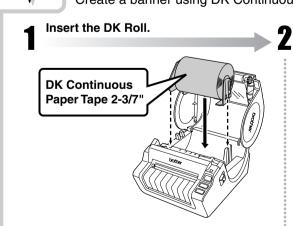




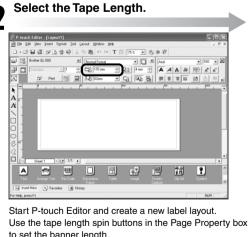

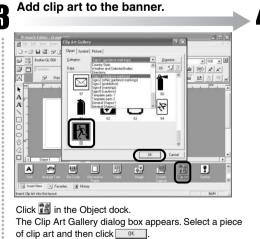

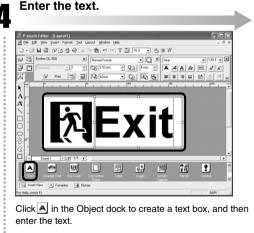

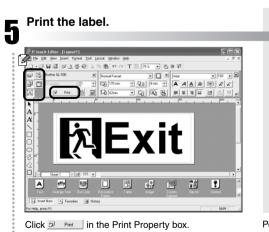

P-touch Editor to change any formatting.




 
Peel the printed label from the backing and If the required Property box is not displayed in apply the label. the Property dock, click the corresponding


Creating a Name Badge Label using Auto Format Wizard function





Create a name badge label quickly and easily using the Auto Format Wizard.

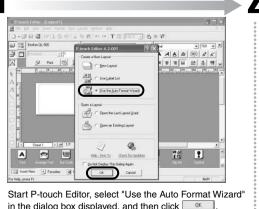




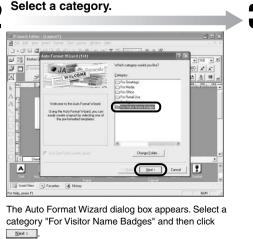

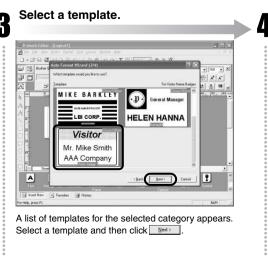

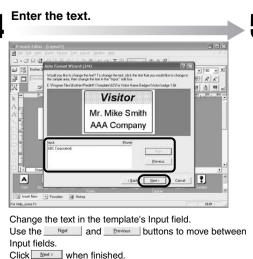

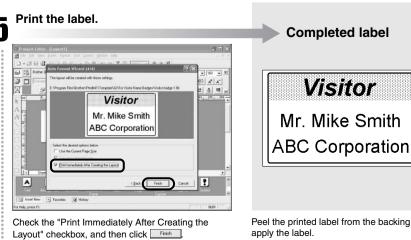

Peel the printed label from the backing and apply the label.