brother



P-touch
2700



Read this User's Guide before you start using your P-touch. Keep this User's Guide in a handy place for future reference.



1 BEFORE USING YOUR P-TOUCH

Quick Index

- 2 GETTING STARTED
- 3 EDITING A LABEL
- 4 LABEL PRINTING
- 5 USING THE MEMORY
- 6 MAINTAINING YOUR P-TOUCH
- 7 TROUBLESHOOTING
- 8 APPENDIX
- 9 INDEX

www.brother.com

Declaration of Conformity

(Europe/Turkey only)

We. BROTHER INDUSTRIES, LTD.

15-1, Naeshiro-cho, Mizuho-ku,

Nagoya, 467-8561, Japan

declare that this product is in compliance with the essential requirements and other relevant provisions of Directives 2004/108/EC and 2005/32/EC.

The Adapter AD-24ES is in compliance with the essential requirements and other relevant provisions of Directive 2006/95/EC.

The Declaration of Conformity (DoC) is on our Web site. Please go to http://solutions.brother.com -> choose region (eg. Europe) -> choose country -> choose your model -> choose "Manuals"-> choose Declaration of Conformity (*Select Language when required).

■ Compilation and Publication Notice

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product's descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

- © 2009 Brother Industries Ltd.
- Microsoft and Windows are registered trademarks of Microsoft Corporation, USA.
- · Macintosh and Mac OS are registered trademarks of Apple Inc.
- The names of other software or products used in this document are trademarks or registered trademarks of the respective companies that developed them.

Contents

BEFORE USING YOUR P-TOUCH	4
Safety Precautions	
Symbols Used in this Guide	
GETTING STARTED	8
Unpacking Your P-touch	
General Description	
LCD Display & Keyboard	
LCD Display	
Key Names and Functions	
Power Supply	
Battery	
AC Adaptor	
Inserting a Tape Cassette	15
Turning Power On/Off	17
Creating Your First Label	18
Quick Index	
Feeding Tape	
LCD Display	
LCD Contrast	
Display Mode	22
Back Light	
Setting Language and Unit	23
Language	23
Unit	23
EDITING A LABEL	24
Entering and Editing Text	24
Entering Text from the Keyboard	24
Adding a New Line	
Adding a New Block	
Moving the Cursor	24
Inserting Text	
Inserting a Tab	
Deleting Text	
Entering Symbols	
Entering Symbols Using Key	
Entering Symbols Using the Symbol Function	
Using Symbol Update Function	

Setting Character Attributes	
Setting Character Attributes by Label	31
Setting Character Attributes by Each Line	31
Setting Auto Fit Style	35
Setting Label Attributes	36
Using Auto-Format Layouts	
Using Templates - Example creating an Asset Tag	38
Using Block Layouts	43
Using Time & Date Function	48
Clock Setting	
Time & Date Format Setting	49
Time Stamp Setting	51
[Timing]	51
[Time Stamp Format]	52
[Forward]	53
Creating a Bar Code Label	54
Setting Bar Code Parameters	54
Entering Bar Code Data	55
Editing and Deleting a Bar Code	57
LABEL PRINTING	
Label Preview	58
Labor 1 To view	
Printing a Label	58
Printing a Label Printing a Single Copy	58 59
Printing a Label Printing a Single Copy Printing Multiple Copies	58 59 59
Printing a Label Printing a Single Copy	58 59 59
Printing a Label	58 59 60
Printing a Label	58 59 60 61
Printing a Label	58 59 60 61 62
Printing a Label	58 59 60 61 62 64
Printing a Label	58 59 60 61 62 64
Printing a Label	58 59 60 61 62 64 64
Printing a Label Printing a Single Copy Printing Multiple Copies Auto-numbering Labels Mirror Printing Tape Cutting Options Manual Cutting Adjusting the Label Length Accuracy Attaching Labels USING THE FILE MEMORY	58 59 61 62 64 64 65
Printing a Label	5859606162646566
Printing a Label	5859596061626464656666666666
Printing a Label	
Printing a Label Printing a Single Copy Printing Multiple Copies Auto-numbering Labels Mirror Printing Tape Cutting Options Manual Cutting Adjusting the Label Length Accuracy Attaching Labels USING THE FILE MEMORY Storing a Label into Memory Opening a Stored Label File Printing a Stored Label File	58 59 59 60 61 62 64 64 65 66 66 69 69
Printing a Label Printing a Single Copy Printing Multiple Copies Auto-numbering Labels Mirror Printing Tape Cutting Options Manual Cutting Adjusting the Label Length Accuracy Attaching Labels USING THE FILE MEMORY Storing a Label into Memory Opening a Stored Label File Printing a Stored Label File Deleting a Stored Label File MAINTAINING YOUR P-touch	
Printing a Label Printing a Single Copy Printing Multiple Copies Auto-numbering Labels Mirror Printing Tape Cutting Options Manual Cutting Adjusting the Label Length Accuracy Attaching Labels USING THE FILE MEMORY Storing a Label into Memory Opening a Stored Label File Printing a Stored Label File Deleting a Stored Label File	

Cleaning the Print HeadCleaning the Tape Cutter	70
TROUBLESHOOTING	72
What to do when	
APPENDIX	80
Specifications	80 83
INDEX	89

BEFORE USING YOUR P-TOUCH

Thank you for purchasing the P-touch 2700.

Your new P-touch is an easy to operate, feature packed labelling system that makes creating professional, high quality labels a breeze. In addition to easy label creation via pre-formatted label layouts, the P-touch editing software features advanced label formatting, block formats, bar codes and auto-numbering functions.

Safety Precautions

To prevent injury and damage, important notes are explained using various symbols. The symbols and their meanings are as follows:

 MARNING	Tells you what to do to avoid the risk of injury.
 ∴ CAUTION	Tells you about procedures you must follow to prevent damage to the P-touch.

The symbols used in this manual are as follows:



The incorrect setup icon alerts you to devices and operations that are not compatible with the P-touch. (e.g. the figure on the left indicates a warning against disassembly).



 
The special instructions icon indicates operations to be carried out. (e.g. the figure on the left shows removal of the power plug from the power outlet).

P-touch

Follow these guidelines to avoid fire, damage, electric shock, and choke.



Do not disassemble the P-touch. For inspection, adjustment, and repair of the P-touch, contact the retail outlet where the P-touch was purchased or your local authorized service center.





Do not touch any metal parts near the print head. The print head becomes very hot during use and remains very hot immediately after use. Do not touch it directly with your hands.



Do not allow the P-touch to get wet in anv wav.

Do not use the P-touch with a foreign object in it. If water, metallic substance or any foreign object enters the P-touch, disconnect the AC adaptor and remove batteries. and contact the retail outlet where the P-touch was purchased or your local authorized service center.

Dispose of plastic bags correctly and keep away from babies and children. Do not wear or play with plastic bags.



Disconnect the AC adaptor and remove batteries immediately and stop using when you notice abnormal odor, heat, discoloration, deformation or anything unusual while using or storing it.

Battery

Follow these guidelines to avoid liquid leakage, heat, rupture of the battery.

(N) Do not throw into fire, heat up, or disassemble the battery.

AC adaptor

Follow these guidelines to avoid fire, electric shock, or failure.



Always use the suggested AC adaptor (AD-24ES).



Do not overload the power outlet.



Do not drop, hit or otherwise damage the AC adaptor.



Do not place heavy objects on, damage or modify the power cord or plug. Do not forcibly bend or pull the power cord.



 
Do not use a damaged power cord.



Do not touch the AC adaptor or power plug with wet hands.



Do not use the AC adaptor in places of high humidity such as bathrooms.



















! CAUTION

Battery

Follow these guidelines to avoid liquid leakage, heat, rupture of the battery.

Do not use old and new batteries together.

Do not mix alkaline batteries with other type batteries.

Do not set the positive and negative end in the wrong position.

Remove the batteries if you do not intend to use the P-touch for an extended period of time.

AC adaptor

Be sure to disconnect the AC adaptor from the power outlet and the P-touch when not using the P-touch for any extended period of time.

Always hold the plug when disconnecting the power cord from the power outlet.

Tape Cutter

Follow these guidelines to avoid personal injury and damage of the P-touch.

Do not touch the blade of the cutter unit.

Do not apply excessive pressure to the cutter unit.

Do not open the tape compartment cover when operating the cutter unit.

Usage/Storage

Follow these guidelines to avoid personal injury and damage of the P-touch.

Place the P-touch on a flat, stable surface such as a desk.

Do not place any heavy objects on top of the P-touch.

Memory

Any data stored in memory will be lost due to failure or repair of the P-touch, or if the battery expires.

When power is disconnected for more than two minutes, all text and format settings will be cleared. Any text files stored in the memory and clock settings will also be cleared.

Tape

Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the colour of the label may change or be transferred to other objects.

 
Before applying the label, check the environmental condition and the material. Test the label by affixing a small piece of it to an inconspicuous area of the intended surface.

 
General Precautions

- Do not use the P-touch in any way or for any purpose not described in this guide. Doing so may result in accidents or damage the machine.
- Use only Brother TZ tapes with this machine. Do not use tapes that do not have the mark.
- · Do not pull or press on the tape in the cassette.
- Do not put any foreign objects into the tape exit slot, AC adaptor connector, or USB port, etc.
- Do not try to print labels using an empty tape cassette or without a tape cassette set in the P-touch. Doing so will damage the print head.
- Do not touch the print head with your fingers.
- · Do not clean the machine with alcohol or other organic solvents. Only use a soft, dry cloth.
- Do not place the P-touch in direct sunlight, near heaters or other hot appliances, in any location exposed to extremely high or low temperatures, high humidity, or dusty locations. Standard operating temperature range: (10°C to 35°C).
- It is recommended that you use the USB cable supplied with the P-touch. Should another USB cable need to be used, ensure it is of high quality construction.
- Be careful not to scratch the CD-ROM. Do not place the CD-ROM in any location exposed to high or low temperatures. Do not place heavy objects on the CD-ROM or bend it.
- The software on the CD-ROM is intended for use with the P-touch and may be installed on more than one PC.
- We strongly recommend that you read this User's Guide carefully before using your P-touch, and then keep it nearby for future reference.

Symbols Used in this Guide

The following symbols are used throughout this guide to indicate additional information.























GETTING STARTED

Unpacking Your P-touch

Check that the package contains the following before using your P-touch.

P-touch PT-2700



TZ tape cassette



CD-ROM



USB cable



AC adaptor




User's Guide




Software Installation Guide



General Description

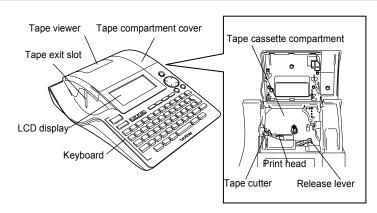

When shipped from the factory, the LCD display is covered with a protective sheet to prevent damage. Remove this sheet before using the P-touch.

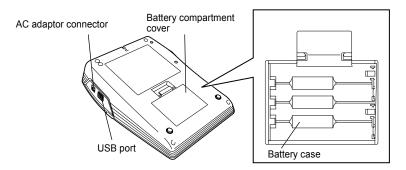
















LCD Display & Keyboard

 LCD Display



1. Line number

Displayed at the beginning of each line, this mark indicates the line number within the label layout.

2. Cursor

Indicates the current position of the cursor. New characters are entered to the left of the cursor, and the character to the left of the cursor is deleted when the key is pressed.

3. Return mark

Indicates the end of a line of text.

4. Caps mode

Indicates that the Caps mode is on.

5.~8. Style guidance

Indicates the current font (5), character size (6), character style (7), frame (8) settings.

9. Tape length


Indicates the tape length for the text entered.

10.Cursor selection

Indicates that you can use the cursor keys to select the items on the screen. Use the \blacktriangle and \blacktriangledown keys to select a menu item, and the \blacktriangleleft and \blacktriangleright keys to change the setting.

• Refer to "LCD Display" on page 21 for changing the contrast and display mode, and for turning the back light on/off.

Key Names and Functions

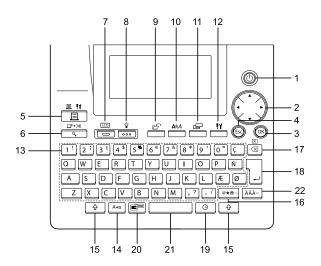

1. (D) (Power):

Turns the P-touch on and off.



- Moves the cursor in the direction of the arrow when entering or editing characters, entering symbols or accented characters, and when setting label attributes in the function menus.
- 3. (OK)

Selects the option displayed when setting label attributes in the function menus, or when entering symbols or accented characters.

4. (Escape):

Cancels the current command and returns the display to the data entry screen or the previous step.

- 5. Είγ (Print):
- Prints the current label design onto the tape.
- Opens the Print Options menu when used in combination with the key.
- 6. □¹+≫ (Preview):
- · Displays a preview of the label.
- Feeds 23 mm of blank tape and then automatically cuts the tape when used in combination with the key.
- 7. (Mode):

Use this key to change the display view of the text entry screen and clock display.

8. (Light):

Turns the back light of the LCD display on and off.



















GETTING STARTED

9. <u>~</u> (File): :

Opens the File menu, where you can print, open, save, or delete the frequently used labels in the file memory.

10. AAA (Text):

- Opens the Text menu, where you can set character attributes for the label.
- Character attributes can be set to each line of the label when the Text menu is opened in combination with the
 key.

11. (Label):

Opens the Label menu, where you can set label attributes for the label.

12. [Y] (Setup):

 Opens the Setup menu, where you can set operating preferences for the P-touch.

13. 1 - . / :

- Use these keys to type letters or numbers.
- Uppercase letters and symbols can be entered using these keys in combination with the A-a or A keys.

14. A•a (Caps):

Turns the Caps mode on and off. When the Caps mode is on, uppercase letters can be entered by simply pressing a character key.

15. 🔐 (Shift):

Use this key in combination with the letter and number keys to type uppercase letters or the symbols indicated on the number keys.

16. **@★☎**··· (Symbol):

- Use this key to select and enter a symbol from a list of available symbols.
- Opens the Barcode Input screen for entering the bar code data when used in combination with the key.

17. Backspace):

- Deletes the character to the left of the cursor.
- Clears all text entered, or all text and current label settings when used in combination with the key.

18. [(Enter):

- · Enters a new line when entering text.
- Enters a new block when used in combination with the key.

19. (Time):

- Enters the selected date / time to the position of the cursor in the text entry screen.
- Clock display appears when used in combination with the 🙀 key.

20. (Auto-Format):

Opens the Auto-Format menu, where you can create labels using pre-defined templates or block formats.

21. (Space):

- Enters a blank space.
- Returns a setting to the default value.
- Inserts a tab to the position of the cursor in the text entry screen when used in combination with the key.

 
22. ÁÄ··· (Accent):

Use this key to select and enter an accented character.

Power Supply

Battery

- After making sure that the power is off, remove the battery compartment cover on the back of the machine. If the batteries are already in the machine, remove them.
 - Make sure that the power is turned off when replacing batteries.



- 2 Insert eight new AA-size alkaline batteries (LR6), making sure that their poles point in the correct direction.
 - Always replace all eight batteries at the same time using brand new ones.



3 Attach the battery compartment cover by inserting the three hooks at the bottom into the slots on the machine, then pushing down firmly until it snaps into place.



- Remove the batteries if you do not intend to use the P-touch for an extended period of time.
 - When power is disconnected for more than two minutes, all text and format settings will be cleared. Any text files stored in the memory and clock settings will also be cleared.






















AC Adaptor

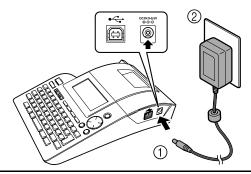


- _____ Insert the plug on the AC adaptor cord into the connector marked DC IN 9-9.5V on the P-touch.
- 2 Insert the AC adaptor plug into a standard electrical outlet.
- (!)
- Turn the P-touch off before disconnecting the AC adaptor.
 - Disconnect the AC adaptor from the P-touch and electrical outlet when you do not intend to
 use the P-touch for an extended period.
 - Do not pull or bend the AC adaptor cord.
 - Use only the AC adaptor (AD-24ES) designed exclusively for your P-touch. Failure to observe
 this may result in an accident or damage. Brother shall not assume any responsibility for any
 accident or damage resulting from not using the specified AC adaptor.
 - Do not connect the AC adaptor to a non-standard electrical outlet. Failure to observe this may
 result in an accident or damage. Brother shall not assume any responsibility for any accident
 or damage resulting from not using a standard electrical outlet.
 - When power is disconnected for more than two minutes, all text and format settings will be cleared. Any text files stored in the memory and clock settings will also be cleared.
- For backup of memory and clock setting, when the AC adaptor is unplugged from the P-touch, please use AA-size alkaline batteries (LR6).


Inserting a Tape Cassette

Tape cassettes of 3.5mm, 6mm, 9mm, 12mm, 18mm, 24mm width can be used in your P-touch. Use only tape cassettes with the **Table 1.5mm, 12mm, 12m

 (1) If the new tape cassette has a cardboard stopper, be sure to remove the stopper before inserting the cassette.



 
Check that the end of the tape is not bent and that it passes through the tape guide.



After making sure that the power is off, lift open the tape compartment cover. If there is already a tape cassette in the machine, remove it by pulling it straight up.



 - Insert the tape cassette into the tape compartment, with the end of the tape facing the machine's tape exit slot, and press firmly until you hear a click.
 - When inserting the tape cassette, make sure that the tape and ink ribbon do not catch on the print head.



















4 Close the tape compartment cover.



- •
- Make sure that the release lever is up when closing the tape compartment cover. The tape compartment cover cannot be closed if the release lever is pressed down.
 - Be sure to feed tape to remove any slack in the tape and ink ribbon after inserting the tape cassette. Refer to "Feeding Tape" on page 21.
 - Do not pull the label coming out of the tape exit slot. Doing so will cause the ink ribbon to be discharged with the tape.
 - Store tape cassettes in a cool dark location, away from direct sunlight and high temperature, high humidity, or dusty locations. Use the tape cassette as quickly as possible after opening the sealed package.

Turning Power On/Off

Press the key to turn the P-touch on.

Press the key again to turn the P-touch off.

	HEL 🕰	mm
7		
$(1)_{-}$		

Q

- Your P-touch has a power saving function that automatically turns itself off if no key is
 pressed within a certain time under certain operating conditions. Refer to the Auto Power-Off
 Time table below for details.
- If batteries are installed or the P-touch is connected to an electrical outlet by the AC adaptor, the previous session's information is displayed when the power is turned on.

Auto Power-Off Time

	P-touch only	Connected to PC						
With AC adaptor	8 hours	8 hours						
With battery	5 minutes	5 minutes with no operation. 1 hour after printing from PC.						



















Creating Your First Label

■ Create a label with the P-touch

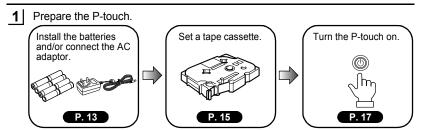


2 Enter the label text.

 

In addition to entering text, the P-touch has a large range of editing functions.
"Create labels like these"



 3 Print the label.



You can check the layout of your label before printing.

Checking the label preview before printing prevents wasting tape on incomplete labels.

 


■ Create a label with your personal computer


- **1** Prepare the P-touch. (Refer to step 1 in the previous section.)
- 2 Prepare the personal computer.



3 Enter the label text using P-touch Quick Editor.



4 Print the label.

 

P-touch Quick Editor (simple label editing software) is ideal for creating simple labels.

To create labels with more complex designs, use P-touch Editor (fully featured label editing software).





"Create labels with complex designs like these"























This section provides quick and easy access to information on tasks often needed by users. Simply look for your task below and then go to the page indicated.

If the task you are looking for is not shown here, try the Contents or Index pages.



To enter text, symbols and accent characters...

Entering text/symbols/accent characters

P. 24



To format the label...

Text/Label format functions

P. 31



To change the cutting and margin settings

Tape cutting options

P. 62



To add time and date to your labels...

Time&Date function





To print multiple copies (with autonumbering)...

Multiple copy/autonumbering functions

P. 59



To save a label layout...

File memory function

P. 66

Feeding Tape

The Feed & Cut function feeds 23mm of blank tape then cuts the tape, which may be needed when installing a new tape cassette.

- Be sure to feed tape to remove any slack in the tape and ink ribbon after inserting the tape cassette.
 - Do not pull the label coming out of the tape exit slot. Doing so will cause the ink ribbon to be discharged with the tape.
 - Do not block the tape exit slot during printing or when feeding tape. Doing so will cause the tape to jam.
- Hold down the key and press the key. "Feed & Cut?" appears on the display.
- Press the ⊚ or ☐ key to feed tape.
 The message "Feeding Tape... Please Wait" appears while the tape is fed, and then the tape is cut.
 - Press while "Feed & Cut?" is displayed to cancel tape feeding.

LCD Display

LCD Contrast

You can change the contrast setting of the LCD display to one of five levels (+2, +1, 0, -1, -2) to make the screen easier to read. The default setting is "0".

Press the the key to display the Mode menu, select "LCD Contrast" using the or key, and then press the or key.





- **3** Press the ⊚ or ¬ key.
- Press the key to return to the previous step.
 Pressing the key on the contrast setting screen sets the contrast to the default value "0".











 






Display Mode


You can change the display mode to your preferred style by pressing the key repeatedly. You can select from three text entry screens (guidance + 2 text lines, 3 text lines, guidance + 1 line) and clock display.



- You can also change the clock display to the text entry screen (guidance + 2 text lines) by pressing any other key on the keyboard besides **\bar{v} \bar{v} \bar{v}
 - For adjusting the clock to current date and time, refer to "Clock Setting" on page 48.
 - For selecting a desired format for displaying the date and time, refer to "Time & Date Format Setting" on page 49.

Back Light

 You can turn the back light on / off by pressing the $\frac{\bar{v}}{\bar{v}}$ key. The back light can be used when you wish to see the display more clearly. The default setting is ON.



Power can be saved when the back light is turned off.

Setting Language and Unit

Language

Select the language ("English", "Español", "Français", "Português", "Deutsch", "Nederlands", "Italiano", "Dansk", "Svenska", "Norsk", or "Suomi") for menu commands and messages shown on the LCD display. The default setting is "English".

Press the ____ key to display the Setup menu, select "Language" using the ▲ or ▼ key, and then press the ⊚ or 및 key. Auto Fit Style Manual Cutting Language Unit

2 Select a language using the ▲ or ▼ key.

(Language) Dansk Deutsch English

3 Press the or key.

Y I

Press the 🕲 key to return to the previous step.

Unit

Select the units ("mm" or "inch") for dimensions shown on the LCD display. The default setting is "mm".

Press the ___ key to display the Setup menu, select "Unit" using the ▲ or ▼ key, and then press the ⊚ or ☐ key.

Auto Fit Style Manual Cutting Language Unit

2 Select a Unit using the ▲ or ▼ key.

(Unit)

3 Press the o or key.

Press the less key to return to the previous step.

<u>(1)</u>

2

3

4

<u>(5)</u>

(6) (7)

8

9

EDITING A LABEL

Entering and Editing Text

Using the keyboard of your P-touch is very similar to using a typewriter or word processor.

Entering Text from the Keyboard

- To enter a lowercase letter or a number, simply press the desired key.
- To enter a blank space in the text, press the _____ key.
- To enter an uppercase letter or one of the symbols on the number keys, hold down the tey key and then press the desired key.
- To enter uppercase letters continuously, press the key to enter Caps mode, and then press the desired keys.

\sim	• To e	vit Ca	ps mode	nrece	the	A4a	kev	again
()	100	AII Ca	ps mode.	press	tiic	_	ксy	again.

To enter a lowercase letter while in Caps mode, hold down the wey and then press the desired key.

Adding a New Line

- To end the current line of text and start a new line, press the
 ☐ key. A return mark
 appears at the end of the line and the cursor moves to the start of the new line.
- There is a maximum number of lines of text that can be entered for each tape width. A maximum of 7 lines can be entered for 24mm tape, 5 lines for 18mm tape, 3 lines for 12mm tape, 2 lines for 9mm and 6 mm tape, and 1 line for 3.5mm tape.
 - If you press the \[\] key when seven lines already exist, an error message is displayed.
 - To change the character attribute of each line, refer to "Setting Character Attributes by Each Line" on page 31.

Adding a New Block

- To create a new block of text/lines to the right of your current text, press the \(\bar{\cup} \) key while holding down the \(\bar{\cup} \) key. A \(\bar{\cup} \) mark will appear at the end of the block and the cursor moves to the start of the new block.
- (1) A maximum of 5 blocks can be entered in one label.

Moving the Cursor

Inserting Text

To insert additional text into an existing line of text, move the cursor to the character
to the right of the position where you want to start inserting text and then enter the
additional text. The new text is inserted to the left of the cursor.

Inserting a Tab

•	To insert a tab space between the existing line of text, move the cursor where you
	wish to add a tab and press the key to open the Setup menu, select "Tab" by
	using ▲ or ▼ keys, and then press the on ¬ key. A ■ mark appears to indicate
	the position which the tab space will be entered.

	• To change the length setting of the tab, refer to "Setting Label Attributes" on page 36.
A	• The tab space can also be entered by pressing the key while holding down the
	♦ key.

 
Deleting Text

■ Deleting one character at a time


- If you hold down the a key, the characters left to the cursor are deleted continuously.

■ Deleting all text at once


- Use the 🔯 and 🖺 key to delete all text at once.
- Press the key while holding down key. The Clear options are displayed.




 2 Using the ▲ or ▼ keys, select "Text Only" to delete all text while retaining the current format settings, or select "Text & Format" to delete all text and format settings.



  Press the key to return to the text entry screen.























Entering Symbols

In addition to the symbols available on the keyboard, there are various symbols (including international and extended ASCII characters) available with the symbol function.

There are two methods of entering symbols:

- Using the key.
- Using the Symbol function.

Entering Symbols Using Key

Symbols printed in upper-right corner of the keys on the keyboard can be entered using the 💮 key.

To enter one of these symbols, hold down the key and then press the desired key.

Entering Symbols Using the Symbol Function

 
Press the → key.

A list of symbol categories and symbols in that category is displayed.

The last symbol entered is selected in the list displayed.

Select a symbol category (Punctuation, Business, Mathematics, etc.) using the ▲ or ▼ key or by pressing the → key repeatedly, and then select a

Press the or key.
The selected symbol is inserted into the line of text.



• Press the 🕲 key to return to the previous step.

symbol using the ◀ or ▶ keys.

• Refer to the "Symbol List" on page 28 for a complete list of symbols and symbol categories.

 
Using Symbol Update Function

You can create your personal category of symbols by using the Symbol Update Function. The "Personal category" will appear first when selecting the symbols to help you locate the desired symbols quickly.

1 Press the ★ key to display the Setup menu, and then select "Symbol Update" using the ▲ or ▼ keys.

Set Clock Tab LCD Contrast Symbol Update


Press the ⊚ or ☐ key to display the symbol Update screen, and then select "On" to create your personal category by using the ▲ or ▼ keys.




Press the o or key to apply the setting. The screen returns to the text entry screen.



 
Enter the symbol you wish to add to your personal Category.



 Refer to "Entering Symbols Using the Symbol Function" on page 26 for detail.



 Press the *** key. The "Personal category" appears, including the symbol entered in step 4.



- Up to 20 symbols can be added to the "Personal category". The oldest symbol will be deleted from the category when the symbols added to the "Personal category" exceed 20 symbols.
 - To stop updating the symbols in the "Personal caegory", select "Off" in the Symbol Update screen.



1













Symbol List

Category									5	Syn	nbo	ols									
Personal category	Re	fer	to "	Us	ing	Sy	mbo	ol U	Jpd	ate	Fu	ncti	on'	or	pa	ige	27	for	de	tail.	
Punctuation		,	:	;	"	'	•	?	!	Ċ	i	-	&	7	_	\	/	§			
Business	@	#	%	B	©	тм	Œ	✓													
Mathematics	+	-	×	÷	±	=	*														
Bracket	()	[]	<	>	«	>>													
Arrow	1	+	t	1	‡	₽	P	SEI													
Unit	\$	¢	€	£	¥	0															
International	α	ß	γ	δ	μ	Ω	ф	<u>a</u>	ō												
Number	2	3	2	3	1/4	1/2	3/4														
Pictograph	*	•	0		Δ	•	¥	•	*	Þ	+	•	ð	우							
Electrical	Ţ	~		⊣⊢	ψ	8	Ф	7		0	Ī	Ф	(1)	\bigcirc	⊘	4		₽			
Others	0	\triangle	A	æ	8	7	8		\boxtimes		•	rese	\$	Ä	¥	ð	*				



The use of the CE mark is strictly governed by one or more European Council directives. Ensure that any labels you produce which use this mark conform with the relevant directives.

Entering Accented Characters

The P-touch can display and print a set of accented characters such as other language specific characters.

1 Enter the character you wish to change to a composite character.

 
2

41


A48 HEL A44 68mm Ð(f)

Caps mode can be used with the Accent function.


Press the [AĀĀ--] key. The character you entered will change to an accented character.



 3 Press the AAA key repeatedly until the desired accented character is selected, or select it by using the \triangleleft or \triangleright keys.



 The order of composite characters which appear on display differ by the selected LCD language.



A48 HEL A44 68mm ÐÜ

• Press the key to return to the previous step.

Press the \bigcirc or \bigcirc kev.

line of text.

• Refer to the Accented Character List table for a complete list of all accented characters available.



















Accented Character List

Character	Accented Characters	Character	Accented Characters
а	áàâäæãąåāă	n	ñňńņ
Α	A A A A Æ A A A A A	N	ÑŇŃŅ
С	çčć	0	óòôøöõœő
С	ÇČĆ	0	0 0 0 0 0 Œ 0
d	ď ð đ	r	řfţ
D	ĎĐ	R	ŘŔŖ
е	é è ê ë ę ě ė ē	S	š ś ş ş ß
E	ÉÈĒËĘĔĖĒ	S	Š \$ \$ B
g	ģğ	t	ť ţ þ
G	ĢĞ	Т	ŤΤÞ
i	îîîïįīı	u	ú ù û ü ų ů ū ű
I	î Ì î ï Į ī	U	ύὺῦΰΨυῦΰ
k	ķ	у	ýÿ
K	Ķ	Ý	ÝΫ
I	ł (ľ	Z	žźż
L	ŁĹĻĽ	Z	ŽŹŻ

Setting Character Attributes


Setting Character Attributes by Label

Using the $\stackrel{\mbox{\tiny MM}}{=}$ key, you can select a font and apply size, width, style, line, and alignment attributes.

Press the key.
The current settings are displayed.

†Font	>HEL	
Size	: Auto	- Λ
Width	: x 1	А
Style	: Off	•

 2 Select an attribute using the ▲ or ▼ keys, and then set a value for that attribute using the ◀ or ▶ keys.



3 Press the or key to apply the settings.





- Press the key to return to the previous step.
 - Press the key to set the selected attribute to the default value.
 - Refer to the Setting Options table for a list of all available settings.
 - Small characters may be difficult to read when certain styles are applied (e.g. Shadow + Italic).

Setting Character Attributes by Each Line

When a label consists two or more lines of text, you can set different value of character attributes (font, size, width, style, line and alignment) for each line.

Move the cursor to the line you wish to change the character attribute by using the ▲ or ▼ keys. Next, press the key while holding down key to display the attributes. (on the screen indicates that you are now applying the attribute for that specific line only.)



When different value of attribute is set for each line, the value will be displayed as **** when you press the key. When you change this setting (****) by using the dor keys, the new setting will be applied to all lines of the label.

Font	>*****
Size	: 36pt
Width	: x 1
Style	: X 1 : Off

















Setting Options

Attribute	Value	Result
Font	HEL (Helsinki)	ABCabc
	BRU (Brussels)	ABCabc
	US (USA)	ABCabc
	FLO (Florida)	ABCabc
	BEL (Belgium)	ABCabc
	SGO (San Diego)	ABCabe
	LA (Los Angeles)	ABCabc
	CAL (Calgary)	АВСавс

Attribute	Value	Result
Size	Auto	When Auto is selected, the text is automatically adjusted to print in the largest size available for each tape width.
	48pt	ABCabc
	42pt	ABCabc
	36pt	ABCabc
	24pt	ABCabc
	18pt	ABCabc
	12pt	ABCabc
	9pt	ABCabc
	6pt	ABCabe
Width	x2	ABCabc
	x3/2	ABCabc
	х1	ABCabc
	x2/3	ABCabc
	x1/2	ABCabc



















Attribute	Value	Result
Style	Off	ABCabc
	BLD (Bold)	ABCabc
	OUT (Outline)	ABCabc
	SHD (Shadow)	ABCabc
	SLD (Solid)	ABCabc
	ITL (Italic)	ABCabc
	I+BLD (Italic Bold)	ABCabc
	I+OUT (Italic Outline)	ABCabc
	I+SHD (Italic Shadow)	ABCabc
	I+SLD (Italic Solid)	ABCabc
	VRT (Vertical)	CDaCa
Line	Off	ABCabc
	UND (Underline)	<u>ABCabc</u>
	STR (Strikeout)	ABCabc

Attribute	Value			Res	ult		
Align (Alignment)	Left	ΑE	3C	abc	;		
	Center		Α	BC	abo	0	
	Right			Α	BC	Cab	С
	Just (Justify)	Α	В	С	a	b	С

Setting Auto Fit Style

When "Size" is set to "Auto" and "Length" is set to a specific length, you can select the way of reducing the text size to fit within the label length.

 
When "Text Size" is selected, the total text size is modified to fit within the label. When "Text Width" is selected, the text width will be reduced to the size of x1/2 setting. (If further size reduction is required to fit the text into the selected label length, the P-touch will automatically reduce the text size further after applying the x1/2 setting.)

1 Press the ____ key to display the Setup menu, Select "Auto Fit Style" using the ▲ or ▼ keys, and then press the ⑥ or ☐ key. The Auto Fit Style screen is displayed. Auto Fit Style Manual Cutting Language Unit

2 Select the style using the ▲ or ▼ keys.



3 Press the or key to apply the setting.



• Press the _____ key to set the style to the default setting ("Text Size").



















Setting Label Attributes

Using the — key, you can create a label with a frame around the text and specify the label length and tab length. (Cut Options and Length Adjust setting which may be needed when printing a label can also be set by using the — key. Refer to "Tape Cutting Options" and "Adjusting the Label Length Accuracy" on page 62 and 64.)

 
Press the key.
The current settings are displayed.

Frame ><mark>Off</mark> Length : Auto Cut : Large Option Margin

- 2 Select an attribute using the ▲ or ▼ keys, and then set a value for that attribute using the ◀ or ▶ keys.
 - When setting the label length or tab length, hold down the ◀ or ▶ keys to change the value faster.



- **3** Press the o or key to apply the settings.
 - New settings are NOT applied if you do not press the or left key.



- \bigcirc
- Press the key to return to the previous step.
- Press the _____ key to set the selected attribute to the default value.
- Refer to the Setting Options table for a list of all available settings.

Setting Options

Attribute	Value	Result
	Off	ABCabc
	1	ABCabc
	2	ABCabc
	3	ABCabc
	4	ABCabc
	5	ABC abc ABC ABC abc ABC ABC abc ABC
	6	
Frame	7	ABCabc
Trame	8	[∠] ABCabc -
	9	[ABCabc]
	10	{ABCabc}
	11	§ABCabc
	12	ABCabc
	13	ABCabc
	14	ABCabc
	15	@ ABCabc







Attribute	Value	Result	
Frame	16	%ABCabc	
	17	ABCabc	
	18	ABCabc	
	19	ABCabc	
	20	ABCabc	
Length	The length of the label can be set within the range 30mm (1.2") - 300mm (12.0"). When Auto is selected, the length of the label is automatically adjusted based on the amount of text entered.		
Tab Length	The length of the tab can be set within the range 0mm (0.0") - 100mm (4.0"). The default setting is 50mm (2.0") .		

Using Auto-Format Layouts

Using the Auto-Format function you can quickly and easily create labels for a variety of purposes, such as file tabs, equipment labels, name badges, etc. Simply select a layout from the templates or block layouts, enter the text and apply formatting as desired.



 
Symbols and accented characters can also be used in auto-format layouts.

Using Templates - Example creating an Asset Tag

Press the key to display the Auto-Format screen, and then select "Templates" using the or keys.



Press the ⊚ or ☐ key.
The last template used is displayed.



3 Select a template using the ▲ or ▼ keys.



4 Press the \bigcirc or \bigcirc key. The Style screen is displayed.



5 Select an attribute using the ▲ or ▼ keys, and then set a value for that attribute using the ◀ or ▶ keys.

 


6 Press the o or key. The Bar Code Setup screen is displayed.



7 Select an attribute using the ▲ or ▼ keys, and then set a value for that attribute using the ◀ or ▶ keys.


> The "C-Digit" attribute is only available for the CODE39, I-2/5 and CODABAR protocols.



8 Press the \bigcirc or \bigcirc kev. The template text entry screen is displayed.



 Caps mode can be used when entering text.





displayed when the \bigcirc or \bigcirc key is pressed. Select "Print" using the ▲ or ▼ keys and then press the ⊚ or ¬ key to print the 10



- label.
 - Select "Edit" to change the text data or style settings. Select "Save" to store the label in a file memory.
 - · Select "Quit" to exit the Auto-Format function.



1

7 8

9

EDITING A LABEL

Options menu.

\cap	 Press the key to return to the previous step.
¥	 Press the key to return to the previous step. On the Style and Bar Code Setup screens, press the key to return the selected
	attribute to the default value.
	 Refer to the Templates table for a list of available templates.
	• The "Clear All Text?" message is displayed when the [8] key is pressed while holding down
	the key. Press the or key to delete all text, or press the key to not delete the
	file.
	• To print multiple copies, sequentially numbered copies, or a mirror image of the label, with
	the print menu displayed hold down the wey and press the key to display the Print

- If the width of the current tape cassette does not match the set width for the selected layout, an error message is displayed when you try to print the label. Press the key or any other key to clear the error message, and insert a tape cassette of the correct width.
 - If the number of characters entered exceeds the limit, an error message is displayed when the or limit, an error message is displayed when the error message, and edit the text using fewer characters.
 - When using the Auto-Format function the label is cut with a margin on the left and right ends regardless of the current Tape Cutting Option setting (refer to page 62).

■ Templates

Attribute	Value	Details
	Binder Spine 1	PRESENTATION MATERIAL
		(24 mm x 219 mm [1" x 8.6"])
	Binder Spine 2	PRESENTATION MATERIAL
	-	(18mm x 219mm [3/4" x 8.6"])
	File Folder Tab	PAYABLES
		(12 mm x 82 mm [1/2" x 3.2"])
	Divider Tab (Hanging Folder)	AUGUST
	(Hanging Folder)	(12 mm x 42 mm [1/2" x 1.6"])
	Asset Tag	Property of: ABC Company, Inc.
		(18 mm x 70 mm [3/4" x 2.7"])
Template Name	Bin Box	Lock Washer 1/4-20 NF Thread Size 0 1/2502 1/05400 9 (18 mm x 76 mm [3/4" x 3.0"])
		ABC Company, Inc.
	Equipment Label	Control Sales Equipment No. 123456789
	' '	(24 mm x 58 mm [1" x 2.2"])
	Faceplate (VRT)	C A11
		(12 mm x 70 mm [1/2" x 2.7"])
	Cable Wren 4	888 8883 8883 8883 8883 8883 8883 8883
	Cable Wrap 1	444444
		(24 mm x 39 mm [1" x 1.5"])
	Cable Wrap 2	7A-823 7A-823 7A-823 7A-823 7A-823 7A-823
		(18 mm x 39 mm [3/4" x 1.5"])



















Attribute	Value	Details			
	Name Badge 1	Robert Becker Sales Manager ABC Company, Inc.			
		(24mm x 72mm [1" x 2.8"])			
	Name Badge 2	Robert Becker ABC Company, Inc.			
		(18mm x 72mm [3/4" x 2.8"])			
	Name Badge 3	Robert Becker			
		(12mm x 72mm [1/2" x 2.8"])			
Template Name	CD Case Spine 1	My Favorite Music			
	ou out op.i.e i	(6 mm x 113 mm [1/4" x 4.4"])			
	CD Case Spine 2	My Favorite Music			
		(3.5 mm x 113 mm [9/64" x 4.4"])			
	VHS Spine	Mike's Favorite Films Spenie. Spenie.			
		(18 mm x 140 mm [3/4" x 5.5"])			
	MiniDV Spine	Julie's Wedding			
		(9 mm x 42 mm [3/8" x 1.7"])			

Using Block Layouts

 Press the key to display the Auto-Format screen, and then select "Block Layouts" using the ▲ or ▼ keys.



 Press the ⊚ or ☐ key to display the Tape Width screen, and then select a tape width using the ▲ or ▼ keys.




Press the ⊚ or ☐ key.

When the tape width has not changed, the last block layout selected is displayed. When the tape width has changed, the default layout for the new tape width is displayed.



 
4 Select a block layout using the **▲** or **▼** keys.




Press the o or key.
The Style screen is displayed.



 6 Select an attribute using the ▲ or ▼ keys, and then set a value for that attribute using the ◀ or ▶ keys.




 
Press the key to set the selected attribute to the default value.





  Caps mode can be used when entering text.






5 6

3

(1) (8)

9

9	Sel	ect Print using the $▲$ or \blacktriangledown keys and then press the \circledcirc or \bigcirc to print the labe	el
		 Select "Edit" to change the text data or style settings. Select "Save" to store the label in a file memory. Select "Ouit" to exit the Auto-Format function. 	

 

Select "Change Layout" to use a different layout.

- The "Clear All Text?" message is displayed when the a key is pressed while holding down
 key. Press the or key to delete all text, or press the key to not delete the text.
- To print multiple copies, sequentially numbered copies, or a mirror image of the label, with the print menu displayed hold down the key and press the key to display the Print Options menu.
- If the width of the current tape cassette does not match the set width for the selected layout, an error message is displayed when you try to print the label. Press the we key or any other key to clear the error message, and insert a tape cassette of the correct width.
 - If the number of characters entered exceeds the limit, an error message is displayed when the
 or \(\subseteq \) key is pressed. Press the \(\subseteq \) key or any other key to clear the error message, and edit the text using fewer characters.
 - When using the Auto-Format function the label is cut with a margin on the left and right ends regardless of the current Tape Cutting Option setting (refer to page 62).

■Block Layouts

Attribute	Value	Details
	2LineA	12pt 36pt
	2LineB	36pt 12pt
	3 Line	12pt 12pt 24pt
Block layout	1+2Line A	48pt
(24mm [1"] tape)	1+2Line B	48pt
	1+3Line	48pt
	1+4Line	48pt[]
	1+5Line	48pt

















Attribute	Value	Details
	2LineA	12pt 24pt
	2LineB	24pt 12pt
	3Line	9pt
Block layout (18 mm [3/4"]	1+2LineA	42pt
tape)	1+2LineB	42pt
	1+3Line	42pt}-12pt
	1+4Line	42pt[]} 9pt
	1+5Line	42pt
	2LineA	9pt
Block layout (12 mm [1/2"] tape)	2LineB	12pt 9pt
	3Line	
	1+2Line	24pt

Attribute	Value	Details
	2LineA	6pt 12pt
Block layout (9 mm [3/8"] tape)	2LineB	12pt 6pt
	1+2Line	18pt[************* ****** 9pt
Block layout (6 mm [1/4"] tape)	1+2Line	12pt <u></u> 6pt 6pt













 


Using Time & Date Function

You can add a time and date to your label by positioning the cursor on the text screen to the position you wish to add time/date and then pressing the <a> \text{©} key.


Clock Setting

The time and date set in the clock setting can be displayed on the screen, it can also be added to the label in your desired format.



The Set Clock screen is displayed. Set the year, month, date, hour and minute to the current figure using the ▲ or ▼ keys. To move to the next parameter, use the ◀ or ▶ keys.

 You can also use the Num keys to type in the figure.







- Press the key to return to the previous step.
- Press the _____ key to set the format to default setting.
- The clock will activate from when the clock setting is applied.
- To keep the clock setting when the AC adaptor is unplugged you will need to insert AA size alkaline batteries.

Time & Date Format Setting

You can select from various formats of time and date to add to your label.

Also, the indication of time can be selected between 12 hour clock and 24 hour clock. The format applied in this setting will also be applied for the clock display which appears on the screen when you press the key. (Refer to "Display Mode" on page 22 for detail.)

1 Press the "\text{" key to display the Setup menu, select "Time & Date Format" using the ▲ or ▼ keys, and then press the ⊚ or \(\bar{\cup} \) key.



The Time & Date Format screen is displayed.
Select date or time using the ▲ or ▼ keys, and then set the format using the ◀ or ▶ keys.



- **3** Press the o or key to apply the settings.
 - New settings are not applied if you do not press the or key.
- Press the lack key to return to the previous step.
 - Press the _____ key to set the format to default setting.
 - Refer to the Format Options for a list of all available format.

















■Time & Date Format Options

Attribute	Value	Description	
	31/12/2099	Date/Month/Year	
	31.12.2099	Date.Month.Year	
	31-12-2099	Date-Month-Year	
	31.December 2099	Date.Month Year	
	31.Dec.2099	Date.Month.Year	
D	12/31/2099	Month/Date/Year	
(Date)	12.31.2099	Month.Date.Year	
	12-31-2099	Month-Date-Year	
	December 31, 2099	Month Date, Year	
	Dec. 31, 2099	Month. Date, Year	
	2099/12/31	Year/Month/Date	
	2099-12-31	Year-Month-Date	
Т	11:59 PM	12 hour clock	
(Time)	23:59	24 hour clock	



[•] The time and date used for the value is a sample setting. When a format is selected, the date and time set in the clock setting will appear in the selected format style.

Time Stamp Setting

[Timing]

You can add a time and date to your labels. You can select whether to add the time and date the label was created, or let your P-touch update the label to the current time and date each time you print it.

Bar Code Setup Bar Code Input Time & Date Format Time Stamp Setting

2 Select "Timing" using the ▲ or ▼ keys, and then select the value for the setting using the ◀ or ▶ key.

(Time Stamp Setting) Timing ≯<mark>Fixed</mark> Format : Date Forward : Off

- **3** Press the or key to apply the settings.
- Press the key to return to the previous step.
 - Press the _____ key to set the format to default setting.
 - Refer to the Time Stamp: Timing Options for available settings.

■Time Stamp : Timing Options

Attribute	Value	Description
Timing	Auto	Press the key; a clock icon will be inserted to where the cursor is positioned on the text input screen. When you press the key, the latest date/time will be printed on the label where the clock icon is positioned on the label layout.
	Fixed	Press the key; the current date/time will be inserted to where the cursor is positioned on the text input screen. When you press the key, the date/time will be printed as shown on the input screen.

• When "Auto" is selected for the Timing setting and a clock icon is added to the text by pressing the key, you can confirm what settings are applied for the icon by positioning the cursor under the clock icon, and then pressing the key.



















[Time Stamp Format]

You can select how the time and/or date information is printed on your label. Four options (Date; Time; Date and Time; or Time and Date) are available.

Press the ☐ key to display the Setup menu, select "Time Stamp Setting" using the ▲ or ▼ keys, and then press the ⊚ or ☐ key.

Bar Code Setup Bar Code Input Time & Date Format Time Stamp Setting

Select "Format" using the ▲ or ▼ keys, and then select the value for the setting using the ◀ or ▶ key.



3 Press the o or key to apply the settings.

_	_	
1	$\overline{}$	
(-)	
Λ.		

- Press the 🕲 key to return to the previous step.
- Press the key to set the value to default setting.
- Refer to the Time Stamp: Format Options for available settings.

■ Time Stamp : Format Options

Attribute	Value	Description
	Date	Date only will be printed on the label.
Format	Date & Time	The date and time will be printed on the label.
Tomat	Time	Time only will be printed on the label.
	Time & Date	The time and date will be printed on the label.

[Forward]

You can select whether to use a forwarded date and time or the current date and time when using the Time & Date Function.

Press the — key to display the Setup menu, select "Time Stamp Setting" using the ▲ or ▼ keys, and then press the ⊚ or ☐ key.

Bar Code Setup Bar Code Input Time & Date Format Time Stamp Setting

Select "Forward" using the ▲ or ▼ keys, and then to specify the amount of date and time to increase, select "On" using the ◀ or ► key.

⟨Time Stamp Setting⟩

†Timing : Auto
| Format : Date
| Forward : ♥On

3 Press the ⊚ or ☐ key. The Forward screen is displayed. Set the figures for the year, month, week, day, hour, and minute to increase from the currently set clock using the ▲ or ▼ Keys. For moving to the next parameter, use the ◀ or ▶ keys.

⟨Forward⟩
YY/MM/WW/DDD/hh/mmm
00 00 00 000

 \mathbb{Q}

You can also use the Num keys to type in the figure.

- **4** Press the ⊚ or ¬ key to apply the settings.
- O . Pr
- Press the key to return to the previous step.
 - Press the _____ key to set the format to default setting.
 - Refer to the Time Stamp: Forward Options for a list of all available formats.

■Time Stamp : Forward Options

Attribute	Value	Description
Forward	On	The time/date will be increased according to the value selected in the Forward setting.
	Off	Current time/date will be printed.



















Creating a Bar Code Label

Using the Bar Code function you can create labels with bar codes for use with cash registers, stock control systems or other bar code reader systems, or even asset control tags used in an asset management system.



- The P-touch is not designed exclusively for creating bar code labels. Always check that bar code labels can be read by the bar code reader.
- For best results, print bar code labels in black ink on white tape. Some bar code readers may not be able to read bar code labels created using coloured tape or ink.
- Use the "Large" setting for "Width" whenever possible. Some bar code readers may not be able to read bar code labels created using the "Small" setting.
- Continuously printing a large number of labels with bar codes can overheat the print head, which may effect printing quality. If this happens you should stop printing for a few moments to let the print head cool down.

Setting Bar Code Parameters

Press the mkey to display the Setup menu, select "Bar Code Setup" using the ▲ or ▼ keys, and then press the or T key.

The Bar Code Setup screen is displayed.

⟨Bar Code Setup⟩

Protocol → CODE39

Width : Large

Under# : On

- Select an attribute using the ▲ or ▼ keys, and then set a value for that attribute using the ◄ or ► keys.
 - The "C-Digit" attribute is only available for the CODE39, 1-2/5 and CODABAR protocols.
 - Characters may not appear below the bar code even when "ON" is selected for "Under #", depending on the tape width being used, the number of lines entered, or the current character style settings.



- **3** Press the **()** or **(**] key to apply the settings.
 - New settings are NOT applied if you do not press the \bigcirc or \bigcirc key.
- Press the step key to return to the previous step.
 - Press the _____ key to set the selected attribute to the default value.
 - Refer to the Bar Code Settings table for a list of all available settings.

■Bar Code Settings

Attribute	Value	
Protocol	CODE39, CODE128, EAN8, EAN13, EAN128, UPC-A, UPC-E, I-2/5 (ITF), CODABAR	
Width	Large	
vviatri	Small	
Under# (characters printed below bar code)	On	
	Off	
	Off	
C.Digit (check digit)	On (only available for the CODE39, I-2/5 and CODABAR protocols)	

Entering Bar Code Data

Press the " key to display the Setup menu, select "Bar Code Input" using the ▲ or ▼ keys, and then press the ⊚ or ↓ key.

The Bar Code Input screen is displayed.

(Bar Code Input) CODE39 ►*<u>*</u>◀



- Up to five bar codes can be entered in a label.
- Pressing ** key while holding down key will also allow you to go to "Bar Code Input".

 
2 Type in the bar code data.

Special characters can be entered in the bar code when using the CODE39, CODABAR, CODE128 or EAN128 protocols. When not using special characters, go to step 5.



Press the ♠★®¬ key.

A list of characters available for the current protocol is displayed.



4 Select a character using the ▲ or ▼ keys, then press the ⊚ or ☐ key to insert the character in the bar code data.



















Press the ⊚ or ☐ key to insert the bar code in the label.

Two bar code marks are displayed on the text entry screen.

(<u>HEL 444</u> 130mm ()abc**|||||**

 \circ

• Press the low key to return to the previous step.

• Refer to the Special Characters List table for a list of all available settings.

Special Character List

CODE39 CODABAR

Code	Special Character	Code	Special Character
0	-	0	-
1		1	\$
2	(SPACE)	2	:
3	\$	3	/
4	/	4	
5	+	5	+
6	%		

CODE128, EAN128

Code	Special Character	Code	Special Character	Code	Special Character
0	(SPACE)	24	\	48	DC3
1	!	25]	49	DC4
2	"	26	^	50	NAK
3	#	27	-	51	SYN
4	\$	28	NUL	52	ETB
5	%	29	•	53	CAN
6	&	30	SOH	54	EM
7	•	31	STX	55	SUB
8	(32	ETX	56	ESC
9)	33	EOT	57	{
10	*	34	ENQ	58	FS
11	+	35	ACK	59	
12	,	36	BEL	60	GS
13	-	37	BS	61	}
14	-	38	HT	62	RS
15	/	39	LF	63	~
16	:	40	VT	64	US

Code	Special Character	Code	Special Character	Code	Special Character
17	;	41	FF	65	DEL
18	<	42	CR	66	FNC3
19	=	43	SO	67	FNC2
20	>	44	SI	68	FNC4
21	?	45	DLE	69	FNC1
22	a	46	DC1		
23	[47	DC2		

Editing and Deleting a Bar Code

- To edit the bar code data position the cursor beneath either of the bar code marks on the data entry screen and then open the Bar Code Input screen. Refer to "Entering Bar Code Data" on page 55.
- To edit the "Width" and "Under#" settings on a bar code already placed on the screen, position the cursor beneath either of the bar code marks on the data entry screen and then open the Bar Code Setup screen. Refer to "Setting Bar Code Parameters" on page 54.
- To delete a bar code from a label, position the cursor to right of the bar code marks on the data entry screen and press the a key.

















LABEL PRINTING

Label Preview

Using the Preview function you can check the layout of the label before printing it onto the label.



1 Press the key.

An image of the label is displayed on the screen. The length of the label is shown in the lower-right

corner of the screen.



Press the ◀ or ▶ keys to scroll the preview to the left or right. Press the ▲ or ▼ keys to change the magnification of the preview.



- Press the lakey to return to the text entry screen. (You can also return to the text entry screen by pressing (a), \(\) or \(\) key.)
- To scroll the preview to the left or right end, hold down the \(\bar\) key and press the \(\delta\) or \(\bar\) keys.
- To print the label directly from the preview screen, press the κey or open the print options screen and select a print option. Refer to "Printing a Label" below for details.
- The print preview is a generated image of the label, and may differ from the actual label when printed.

Printing a Label

After entering the text and formatting the label, you are ready to print your label. In addition to printing a single copy of a label, your P-touch has several printing features that allow you to print multiple copies of a label, sequentially numbered labels and mirror-printed labels.



- Do not pull the label coming out of the tape exit slot. Doing so will cause the ink ribbon to be discharged with the tape.
- Do not block the tape exit slot during printing or when feeding tape. Doing so will cause the tape to jam.
- Be sure to check that there is enough tape remaining when printing several labels continuously. If tape is running low, set fewer copies or print labels one at a time.
- Striped tape indicates the end of the tape cassette. If this appears during printing, press the key to turn the P-touch off. Continuing printing may cause damage.

Printing a Single Copy

- Make sure that the appropriate tape cassette is inserted and ready for printing.
- 2 Press the key. The message shown on the right is displayed while the label is being printed.

 
Printing... 1/1 Copies

- To stop printing, press the key to turn off the P-touch.
- There are several other messages that may appear when you press the key. Refer to "Error Messages" on page 75 and check the meaning of any messages that appear.

Printing Multiple Copies

Using this function you can print up to 99 copies of the same label.

- 1 Make sure that the appropriate tape cassette is inserted and ready for printing.
- 2 Hold down the key and press the key to display the print options screen, and then select "Copies" using the ▲ or ▼ keys.



3 Press the o or key to display the Copies screen, and then select the number of copies to be printed using the ▲ or ▼ keys, or type the number using the number keys.



Hold down the ▲ or ▼ keys to change the number of

copies faster.

Press the \bigcirc or \bigcirc key. The message shown on the right is displayed while the labels are being printed.

Printing... 2/5 Copies

- Press the key to return to the previous step.
 - Unless set otherwise, the tape is automatically cut after each copy is printed. Refer to "Tape Cutting Options" on page 62 to change this setting.
 - The figures shown on the screen during printing indicate the "count / number of copies set".
 - key to reset the number of copies to the default value of 1. Press the





 





Auto-numbering Labels

Using the numbering function you can create a set of sequentially numbered labels from a single label format.

- 1 Make sure that the appropriate tape cassette is inserted and ready for printing.
- Place 2 Hold down the ⊕ key and press the ★ key to display the print options screen, and then select "Numbering" using the ★ or ▼ keys.




 - Press the o or key.
 The numbering start point screen is displayed.
 - To apply auto-numbering to a bar code, select the bar code here. After selecting the bar code you will be prompted to enter the number of labels to be printed (step 6).



Move the cursor to the first character to be incremented in the numbering sequence and press the o or key.

 The numbering end point screen is displayed.




Move the cursor to the last character to be incremented in the numbering sequence and press the o r key.

The number of labels to be printed is displayed.

‡ 011	(Numb	ering)
	10 -	10

 Select the number of labels to be printed using the ▲ or ▼ keys, or type the number using the number keys.



Hold down the ▲ or ▼ keys to change the number of labels faster.

Press the or key.

The labels are printed.

As each label is printed the number of copies

As each label is printed the number of copies printed is shown.

Printing... 2/5

71

- Press the 🕲 key to return to the previous step.
- Unless set otherwise, the tape is automatically cut after each copy is printed. Refer to "Tape Cutting Options" on page 62 to change this setting.
- The figures shown on the screen during printing indicate the "count / number of copies".
- key to reset the number of copies to the default value of 1. Press the
- Auto-numbering can also be applied to bar codes. When a bar code contains an autonumbering sequence, no other fields in the label can contain an auto-numbering sequence.
- The auto-number portion of the label is incremented after each label is printed.
- Only one auto-numbering sequence can be used in a label.
- Any symbols or other non-alphanumeric characters in the auto-numbering sequence are ignored.
- An auto-numbering sequence can only contain a maximum of five characters.

Letters and numbers increase as shown below:

```
0
Α
         ...Z → A
         ...z 🕇 a
a
A0 → A1 ...A9 → B0 →
```

Spaces (shown as underlines " " in the example below) can be used to adjust the spacing between characters or to control the number of digits that are printed.

Mirror Printing

Using the mirror printing function you can create labels with the text printed in reverse so that they can be read from the opposite side when attached to glass or other transparent material.

1 Make sure that the appropriate tape cassette is inserted and ready for printing.

2 Hold down the key and press the key to display the print options screen, and then select "Mirror" using the ▲ or ▼ key.



3 Press the \bigcirc or \square key. The message "Mirror Print?" is displayed



















LABEL PRINTING

Press the or key.
The message shown on the right is displayed while the label is being printed.

Printing... 1/1 Copies

 


- Press the law key to return to the previous step.
- Text should be printed on clear tape when using the mirror printing function.
- The copy and auto-numbering functions cannot be used together with the mirror printing function.


Tape Cutting Options

The tape cutting options allow you to specify how the tape is fed and cut when printing labels. In particular, the "Chain" and "No Cut" options greatly reduce the amount of wasted tape by using smaller margins and eliminating blank sections cut between labels.

1 Press the E key to display the Label menu.



 2 Select "Cut Option" using the ▲ or ▼ keys, and then set the value by using the ◀ or ▶ keys.



- **3** Press the o or key to apply the settings.
 - New settings are NOT applied if you do not press the or key.
- Press the skey to return to the previous step.
 - Refer to the Tape Cutting table for a list of all available settings.

Tape Cutting

Setting	Description	Example
Large Margin	Automatically cuts the tape after each label is printed. The labels have a 24 mm margin on the left and right ends.	ABC ABC 24 mm
Small Margin	 When printing labels one at a time: It automatically cuts a piece of blank tape before printing the label, and then cuts the tape after the label is printed. When printing several labels continuously: It automatically cuts a piece of blank tape before printing the first label, and then cuts the tape after each label is printed. The labels have a 4 mm margin on the left and right ends. 	23 mm ABC ABC ABC
Chain	 When printing labels one at a time: It automatically cuts a piece of blank tape before printing the label, and then does not cut the tape after the label is printed. When printing several labels continuously: It automatically cuts a piece of blank tape before printing the first label, and then cuts the tape after each label is printed. The labels have a 4 mm margin on the left and right ends. The tape is not fed and cut after the last label is printed. 	23 mm ABC ABC 4 mm 4 mm
No Cut	Use this setting to print a strip of labels with no cuts in between. Pressing the while holding down key will feed and cut the last label printed.	ABC ABC 27 mm 8 mm



• When using Fabric Tapes or Strong Adhesive Tapes, refer to "Manual Cutting" on page 64 to apply the appropriate setting.

• The tape is not cut after the last label is printed when "Chain" or "No Cut" is set. Hold down the \bigcirc key and press the \bigcirc key to feed and cut the tape automatically, or cut the tape manually if you are using Fabric Tapes or Strong Adhesive Tapes.



















 
Manual Cutting

When using Fabric Tapes or Strong Adhesive Tapes, set "On" for Manual Cutting before printing. After printing, remove the tape cassette from the machine and use scissors to cut the tape.

Press the ☐ key to display the setup menu, select "Special Tape" using the ▲ or ▼ keys, and then press the ⊚ or ☐ key.



2 Select the value by using the \blacktriangle or \blacktriangledown keys.



- **3** Press the o or key to apply the setting.
- Press the key to return to the previous step.
 Press the key to set the value to its default setting ("Off").

Adjusting the Label Length Accuracy

You can adjust the accuracy of the printed label length in increment of -5 to +5.

Press the key. The current settings are displayed.

(†Frame	>Off
i i ame	
Length	: Auto
i congen	
Cut	: Large
Option	Margin
(i obcour	11101 3111

2 Select "Adjust Length." by using the ▲ or ▼ keys, and then set the value by using the ◀ or ▶ keys.

Tab	: 50mm
Length Adjust Length	≯ ‡1

3 Press the or key to apply the setting.



- Press the key to return to the previous step.
- Press the key to set the value to default setting.
- Approximately 1% of the total label length will be adjusted by 1 level.

Attaching Labels

- 1 If necessary, trim the printed label to the desired shape and length using scissors, etc.
- 2 Peel the backing from the label.
- Position the label and then press firmly from top to bottom with your finger to attach the label.
- Q
- The backing of some types of tapes may be pre-cut to make it easier to peel the backing.
- Labels may be difficult to attach to surfaces that are wet, dirty, or uneven. The labels may peel
 off easily from these surfaces.
- Be sure to read the instructions provided with Fabric Iron-On Tapes, Extra Strength Adhesive Tapes or other special tapes and observe all precautions noted in the instructions.

















USING THE FILE MEMORY

 
You can store up to 99 of your most frequently used labels in the file memory. Each label is stored as a file, allowing you to quickly and easily recall your label when needed again.




- When the file memory is full, each time you save a file you will need to overwrite one of your stored files.
- You will lose your stored files if the AC adaptor is disconnected and the batteries are removed for more than two minutes.

Storing a Label into Memory

After entering the text and formatting the label, press the key to display the File screen.



2 Select "Save" using the ▲ or ▼ keys.

 

Press the o or key.
A file number is displayed.

A label text is also displayed if a label is already stored in that file number.



4 Select a file number using the ▲ or ▼ key, and then press the ⊚ or ☐ key to save the label under the selected file number.

The file is saved and the screen returns to the text entry screen.



When there is already a stored file in the selected number, the data will be overwritten by the file you try to save.



 
- Press the 🕲 key to return to the previous step.
- Up to 280 characters can be saved in one file, depending on the number of lines. Total 2800 characters can be saved in 99 files. Text and layout formatting data is also saved in the file.
- To store a label created by using the Auto-Format Layouts, refer to "Using Auto-Format Layouts" on page 38.

Opening a Stored Label File

1 Press the key to display the File screen.

Print Save Open Delete


2 Select "Open" using the ▲ or ▼ keys.



Press the or lakey.
The file number of a stored label is displayed.
The label text is also displayed to identify the label.



 4 Select a file number using the ▲ or ▼ key, and then press the ⊚ or ☐ key to open the selected file. The file is opened and displayed on the text entry screen.



Q

Press the less key to return to the previous step.

- 1
- 2
- 3
- 4)
- <u>5</u>
- (1)
- 8
- 9

Printing a Stored Label File

Press the key to display the File screen.

Save
Open
Delete

2 Select "Print" using the ▲ or ▼ keys.



Press the on which was pressed as the file number of a stored label is displayed. The label text is also displayed to identify the label.



Select a file number using the ▲ or ▼ key, and then press the 📳, ⊚ or 🕽 key to print the selected label. The label is printed from the machine.



• Press the 🕲 key to return to the previous step.

• The message "No Text!" is displayed when you try to print a file with no text.

Deleting a Stored Label File

1 Press the key to display the File screen.

Print Save Open Delete

2 Select "Delete" using the ▲ or ▼ keys.

Print Save Open Delete

Press the ⊚ or ☐ key.
The file number of a stored label is displayed.
The label text is also displayed to identify the label.



Select a file number using the ▲ or ▼ key, and then press the ⊚ or ☐ key.
The message "Delete?" is displayed.



- Press the or key to delete the file.
 The file is deleted and the screen returns to the text entry screen.
- Press the key to cancel deleting the file and return to the previous screen.

















MAINTAINING YOUR P-touch

Resetting the P-touch

You can reset the internal memory of your P-touch when you want to clear all saved label files, or in the event the P-touch is not working properly.

Turn off the machine and then while holding down and R, press to turn the machine back on. Finally, release and R.

The P-touch turns on with the internal memory reset.

 $\begin{tabular}{ll} \end{tabular} Release the <math>\begin{tabular}{ll} \end{tabular} \begin{tabular}{ll} \end{tabular} keys before releasing the other keys. \end{tabular}$

All text, format settings, option settings and stored label files are cleared when you reset the P-touch. Language, unit, and clock settings will also be cleared.

Maintenance

Your P-touch should be cleaned on a regular basis to maintain its performance and life span.

Always remove the batteries and disconnect the AC adaptor before cleaning the P-touch.

Cleaning the Main Unit

Wipe any dust and marks from the main unit using a soft, dry cloth. Use a slightly dampened cloth on difficult to remove marks.


Do not use paint thinner, benzene, alcohol or any other organic solvent. These may deform the case or damage the appearance of your P-touch.

Cleaning the Print Head

Streaks or poor quality characters on printed labels generally indicates that the print head is dirty. Clean the print head using a cotton swab or optional print head cleaning cassette (TZ-CL4).

• Do not touch the print head directly with your bare hands.

 Refer to the instructions provided with the print head cleaning cassette for directions on how to use it.

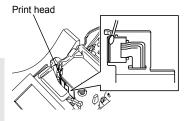


Cleaning the Tape Cutter

Tape adhesive can build up on the cutter blade after repeated use, taking the edge off the blade which may result in the tape jamming in the cutter.



 - About once every year, wipe the cutter blade using a cotton swab moistened with alcohol.
- Do not touch the cutter blade directly with your bare hands.

















What to do when...

Problem	Cause	Solution
The screen 'locks', or the P-touch does not respond properly.	Refer to "Resetting the P-touch" on page 70 and reset the internal memory to the initial settings. If resetting the P-touch does not solve the problem, disconnect the AC adaptor and remove the batteries for more than 10 minutes.	
The display remains blank after turning on the power.	Is the AC adaptor connected correctly?	Check that the AC adaptor designed exclusively for your P-touch is connected correctly.
	Are you using the correct AC adaptor?	Make sure that you are using the AC adaptor designed exclusively for your P-touch (included in package).
	Are the batteries fitted correctly?	Remove and re-install the batteries.
The LCD messages are displayed in foreign language.	Is the language set properly?	Refer to "Setting Language and Unit" on page 23 and select the desired language for the LCD messages.
The label is not printed after pressing	Has text been entered?	A label will not be printed if there is no text entered.
the E key.	Is the tape cassette installed correctly, and is there enough tape remaining?	Check that the tape cassette is installed correctly, and that there is enough tape remaining.
	Is the end of the tape bent?	If bent, cut the bent section of tape with scissors and thread the tape through the tape exit slot correctly.
	Is the tape jammed?	If jammed, remove the tape cassette, carefully pull out the jammed tape, and then cut the tape with scissors. Check that the end of the tape passes through the tape guide, and reinstall the tape cassette.

Problem	Cause	Solution
The label is not printed correctly.	Is the tape cassette installed correctly?	When installing a cassette, press firmly until it clicks into place.
	Is the print head clean?	If not, clean the print head using a cotton swab or optional print head cleaning cassette (TZ-CL4).
	Is Cut Option set to Chain or No Cut?	When these options are set, the tape is not fed after printing the label. Check the Cut Option setting, or hold down the help key and press the help key to feed and cut the tape.
The ink ribbon is separated from the ink roller.	Is the ink ribbon in the tape cassette loose, or did you pull on the label coming out of the tape exit slot?	If the ink ribbon is broken replace the tape cassette. If not, leave the tape uncut and remove the tape cassette, then wind the loose ink ribbon onto the spool as shown in the figure.
The P-touch stops while printing a label.	Is there enough tape remaining in the tape cassette?	The striped tape indicates you have reached the end of the tape. Replace the tape cassette when the striped tape appears.
	Are the batteries weak and is the AC adaptor disconnected?	Replace all batteries or connect the AC adaptor directly to the P-touch.

















Problem	Cause	Solution
The label is not cut automatically.	Is Cut Option set to Chain or No Cut?	When these options are set, the tape is not fed after printing the label. Check the Cut Option setting, or hold down the key and press the key to feed and cut the tape.
Label files saved previously are now empty.	Have the batteries and AC adaptor been disconnected?	All files stored in the internal memory are lost if the batteries and AC adaptor are disconnected for longer than two minutes.
	Is there enough power remaining in the batteries?	All data stored in the internal memory is lost if the batteries become empty.
	Have you used the Reset function?	The reset function clears all data stored in the internal memory, including label files.

Error Messages

When an error message appears on the display, follow the directions provided below.

Ç

Press any key to clear the error message.

Message	Cause/Remedy
Battery Weak!	The installed batteries are getting weak.
Check Battery!	The batteries are installed with the negative and positive end in the wrong position, or other type batteries are mixed with alkaline batteries. Install eight AA-size alkaline batteries (LR6) in the correct position. The installed batteries are about to run out. Replace with new batteries or connect the AC adaptor before continuing.
Wrong Type Of Adapter Connected!	An incompatible AC adaptor is connected. Use only the AC adaptor designed exclusively for your P-touch.
① Cutter Error!	The tape cutter is closed when you try to print or feed tape. Turn the P-touch off and then on again before continuing. When tape is tangled in the cutter, remove the tape.
No Text!	There is no text, symbols or bar code data entered when you try to print or preview a label. Enter data before continuing.
(1) Insert Tape Cassette!	There is no tape cassette installed when you try to print or preview a label, or feed tape. Install a tape cassette before continuing.
Tape Cassette Changed!	The tape cassette was changed while printing, etc. Make sure the correct tape cassette is inserted before printing.
Line Limit! Max 7 Lines	There are already seven lines of text when you press the [] key. Limit the number of lines to seven.
Tape Width Limit! Max 5 Lines	There are more than five lines of text when you press the of text when you press the limit of the lines of text when you press the limit of the lines to five, or change the tape cassette for one with a larger tape cassette.

Message	Cause/Remedy
Tape Width Limit! Max 3 Lines	There are more than three lines of text when you press the sing or we key while using 12 mm tape. Limit the number of lines to three, or change the tape cassette for one with a larger tape cassette.
Tape Width Limit! Max 2 Lines	There are more than two lines of text when you press the sum or 6 mm tape. Limit the number of lines to two, or change the tape cassette for one with a larger tape cassette.
Tape Width Limit! Max 1 Line	There is more than one line of text when you press the or key while using 3.5mm tape. Limit the number of lines to one, or change the tape cassette for one with a larger tape cassette.
Block Limit! Max 5 Blocks	There are already five blocks of text. Limit the number of blocks to five.
Text Full!	The maximum number of characters have already been entered. Edit the text and use fewer characters.
Length Limit!	The length of the label to be printed using the text entered is longer than 1 m. Edit the text so that the length of the label is less than 1 m.
Insert 24mm Tape Cassette!	An 24mm (1") tape cassette is not installed when an Auto- Format for 24mm (1") tape is selected. Install an 24mm (1") tape cassette.
Insert 1" Tape Cassettel	
Insert 18mm Tape Cassettel	An 18mm (3/4") tape cassette is not installed when an Auto-Format for 18mm (3/4") tape is selected. Install an 18mm (3/4") tape cassette.
Insert 3/4" Tape Cassettel	

Message	Cause/Remedy
Insert 12mm Tape Cassette!	A 12mm (1/2") tape cassette is not installed when an Auto-Format for 12mm (1/2") tape is selected. Install a 12mm (1/2") tape cassette.
Insert 1/2" Tape Cassettel	
Insert 9mm Tape Cassette!	A 9 mm (3/8") tape cassette is not installed when an Auto-Format for 9 mm (3/8") tape is selected. Install a 9 mm (3/8") tape cassette.
Insert 3/8" Tape Cassettel	
Insert 6mm Tape Cassettel	A 6 mm (1/4") tape cassette is not installed when an Auto-Format for 6 mm (1/4") tape is selected. Install a 6 mm (1/4") tape cassette.
Insert 1/4" Tape Cassettel	
Insert 3.5mm Tape Cassette!	A 3.5 mm (4/96") tape cassette is not installed when an Auto-Format for 3.5 mm (4/96") tape is selected. Install an 3.5 mm (4/96") tape cassette.
Insert 9/64" Tape Cassettel	
Too Much Text For This Layout!	The maximum number of characters for the selected layout have already been entered. Edit the text to use fewer characters or use a different layout.
(1) Incorrect Value!	The value entered for setting the tape length, tab length, multiple copies, numbering function, or clock setting is invalid. Enter a valid value for the setting.
Select Other Cut Option!	The tape length is shorter than the total margin length set in the "Large Margin" cutting option.
Text Too Long!	The length of the label to be printed using the text entered is longer than the length setting. Edit the text to fit within the set length or change the length setting.

9

4 5

Message	Cause/Remedy
Text Too High!	The text size is too large. Select a different size option.
Memory Full!	There is not enough internal memory available when you try to save a label file. Delete any unnecessary files to make more memory available for the new label file.
Check # of Digits Entered!	The number of digits entered in the bar code data does not match the number of digits set in the bar code parameters. Enter the correct number of digits.
nput A,B,C or D At Start&End	The bar code data entered does not have the required start/ stop code (A, B, C, or D required at the beginning and end of the bar code data for the CODABAR protocol). Enter the bar code data correctly.
Maximum Of 5 Bar Codes Per Labe!	There are already 5 bar codes entered in the text data when you try to enter a new bar code. You can only use up to five bar codes in each label.







Specifications

Main Unit

	Item	Specification
Inp	out Device (Keyboard)	67-key, QWERTY layout keyboard
Dis	splay	
	Display device	Dot matrix LCD
	Character display	16 characters x 3 lines (128 dot x 48 dot)
	Back light display	Yes
Pri	nting	
	Print method	Thermal printer
	Print head	128 dot / 180 dpi
	Print height	15,8 mm max. (when using 18 mm tape)
	Print speed	Approx. 0,39" (10 mm) / sec.
	Tape cassette	Standard TZ tape cassette (3.5, 6, 9, 12, 18, 24 mm widths)
	Tape cutter	Built-in automatic cutter
	No. of lines	24mm tape : 1-7 lines; 18 mm tape : 1 - 5 lines; 12 mm tape : 1 - 3 lines; 9 mm tape : 1 - 2 lines; 6 mm tape : 1 - 2 lines; 3.5mm tape : 1 line
	Print direction	Horizontal, Vertical
	Continuous printing	1 ~ 99 labels
	Print preview	Yes
	Cut and feed	Large Margin, Small Margin, Chain, No Cut
Ch	Characters	
	Internal character set:	Total of 329 characters (62 alphanumeric, 120 symbols, 147 accented characters, note that one character appears in both symbols and accented characters)
	Text buffer	2800 characters max.
	Fonts	Helsinki, Brussels, Florida, Belgium, USA, San Diego, Los Angeles, Calgary
	Character size	Auto, 48pt, 42pt, 36pt, 24pt, 18pt, 12pt, 9pt, 6pt
	Character style	Off, Bold, Outline, Shadow, Solid, Italic, Italic Bold, Italic Outline, Italic Shadow, Italic Solid, Vertical
	Character width	2, 3/2, 1, 2/3, 1/2
	Text alignment	Left, Center, Right, Justify

	Item	Specification	
Me	Memory		
	Memory size	Maximum 459 characters	
	File storage	Maximum 99 files	
Otl	her Features		
	Frame	Total of 20 frame patterns	
	Auto-Format	Templates: 10 Block layouts: 24mm (1"): 8, 18mm (3/4"): 8, 12mm (1/2"): 4, 9mm (3/8"): 3, 6mm (1/4"): 1	
	Screen contrast	5 levels (+2, +1, 0, -1, -2)	
Power Supply			
	Power supply	AC adaptor (AD-24ES), Eight AA-size alkaline batteries (LR6).	
	Auto Power-off	Battery: 5 min.*, AC adaptor: 8 hours *When using P-touch only. When connected to a PC, 1 hour.	
Siz	Size		
	Dimensions	179,5mm (W) x 247,9mm (D) x 71,8mm (H)	
	Weight	850g (without tape cassette and batteries)	
Other			
	Operating temperature / humidity	10 ~ 35°C / 20 ~ 80% humidity (without condensation) Maximum wet bulb temperature: 27°C	







Operating Environment: Windows®

Item	Specification
OS	Microsoft® Windows® 98SE/Me/2000 Professional/XP
CPU	32bit Pentium compatible (using 32 bit operating system)
Memory	Windows [®] 98SE, Me: 64MB or more required Windows [®] 2000 Pro, XP: 128MB or more required
Hard disk	70MB or more required
Monitor	SVGA High colour graphics support or higher
Interface	USB Port (USB specification 1.1 or 2.0 protocol)
Other	CD-ROM drive for installation

Operating Environment: Macintosh®

Operating Environment. Macintosii		
Item	Specification	
OS	Mac OS X 10.1 - 10.4.4 Mac OS® 9.1 - 9.x* (For Mac OS® 9.1 - 9.x, visit our web site http://solutions.brother.com for software and driver download.)	
Memory	32MB or more required	
Hard disk	100MB or more required	
Monitor	More than 256 colour	
Interface	USB Port (USB specification 1.1 or 2.0 protocol)	
Other	CD-ROM drive for installation	

Accessories

Brother recommends the use of genuine Brother accessories (tape cassettes, AC adaptor, etc.) with your P-touch. The use of other products may effect the print quality or may damage your P-touch. Availability of accessories subject to change without notice.

Tape Cassettes

Tape supply may differ by country.



Do not use tapes that do not have the **Tz** mark.

■ Laminated tapes (length: 8 m)

The surface of laminated tapes is protected by a transparent film. This prevents characters from smudging or being erased if the label becomes wet.

Stock No.	Description
24 mm	
TZ-151	Black characters on clear tape
TZ-M51	Black characters on clear (mat) tape
TZ-152	Red characters on clear tape
TZ-153	Blue characters on clear tape
TZ-155	White characters on clear tape
TZ-251	Black characters on white tape
TZ-252	Red characters on white tape
TZ-253	Blue characters on white tape
TZ-354	Gold characters on black tape
TZ-355	White characters on black tape
TZ-451	Black characters on red tape
TZ-455	White characters on red tape
TZ-551	Black characters on blue tape
TZ-555	White characters on blue tape
TZ-651	Black characters on yellow tape
TZ-655	White characters on orange tape
TZ-751	Black characters on green tape
TZ-755	White characters on green tape
TZ-951	Black characters on silver tape
TZ-M951	Black characters on silver (mat) tape
TZ-A51	Black characters on grey tape
TZ-B51	Black characters on fluorescent orange tape



















Ota ala Nia	Dog anim Air an
Stock No.	Description Description
TZ-C51 TZ-D51	Black characters on fluorescent yellow tape
	Black characters on fluorescent green tape
18 mm	To
TZ-141	Black characters on clear tape
TZ-241	Black characters on white tape
TZ-242	Red characters on white tape
TZ-243	Blue characters on white tape
TZ-344	Gold characters on black tape
TZ-145	White characters on clear tape
TZ-345	White characters on black tape
TZ-441	Black characters on red tape
TZ-541	Black characters on blue tape
TZ-641	Black characters on yellow tape
TZ-741	Black characters on green tape
12 mm	
TZ-131	Black characters on clear tape
TZ-132	Red characters on clear tape
TZ-133	Blue characters on clear tape
TZ-135	White characters on clear tape
TZ-231	Black characters on white tape
TZ-232	Red characters on white tape
TZ-233	Blue characters on white tape
TZ-334	Gold characters on black tape
TZ-335	White characters on black tape
TZ-431	Black characters on red tape
TZ-435	White characters on red tape
TZ-531	Black characters on blue tape
TZ-535	White characters on blue tape
TZ-631	Black characters on yellow tape
TZ-635	White characters on orange tape
TZ-731	Black characters on green tape
TZ-735	White characters on green tape
TZ-931	Black characters on silver tape
TZ-M931	Black characters on silver (mat) tape
TZ-A31	Black characters on grey tape
TZ-B31	Black characters on fluorescent orange tape (length: 5 m)

Stock No.	Description
TZ-C31	Black characters on fluorescent yellow tape (length: 5 m)
TZ-D31	Black characters on fluorescent green tape (length: 5 m)
TZ-M31	Black characters on clear (mat) tape
9 mm	
TZ-121	Black characters on clear tape
TZ-122	Red characters on clear tape
TZ-123	Blue characters on clear tape
TZ-221	Black characters on white tape
TZ-222	Red characters on white tape
TZ-223	Blue characters on white tape
TZ-324	Gold characters on black tape
TZ-325	White characters on black tape
TZ-421	Black characters on red tape
TZ-521	Black characters on blue tape
TZ-621	Black characters on yellow tape
TZ-721	Black characters on green tape
TZ-A25	White characters on grey tape
TZ-M21	Black characters on clear (mat) tape
6 mm	
TZ-111	Black characters on clear tape
TZ-211	Black characters on white tape
TZ-315	White characters on black tape
TZ-611	Black characters on yellow tape















■ Non-laminated tapes (length: 8 m)

Stock No.	Description
24 mm	
TZ-N251	Black characters on white tape
18 mm	
TZ-N241	Black characters on white tape
TZ-N242	Red characters on white tape
TZ-N243	Blue characters on white tape
TZ-N541	Black characters on blue tape
TZ-N641	Black characters on yellow tape
TZ-N741	Black characters on green tape
TZ-NF41	Black characters on purple tape
TZ-PH41	Black characters on tape with a heart design (length: 4 m)
TZ-PF41	Black characters on tape with a fruit design (length: 4 m)
TZ-PM41	Black characters on tape with a marine design (length: 4 m)
12 mm	
TZ-N231	Black characters on white tape
TZ-N232	Red characters on white tape
TZ-N233	Blue characters on white tape
TZ-N531	Black characters on blue tape
TZ-N631	Black characters on yellow tape
TZ-N731	Black characters on green tape
TZ-NF31	Black characters on purple tape
9 mm	
TZ-N221	Black characters on white tape
6 mm	
TZ-N211	Black characters on white tape
3.5 mm	
TZ-N201	Black characters on white tape

■ Strong adhesive tapes (length: 8 m)

Laminated tapes with stronger adhesive, ideal for rough surfaces or harsh environments.

Stock No.	Description
24 mm	
TZ-S151	Black characters on clear tape
TZ-S251	Black characters on white tape

Stock No.	Description
TZ-S651	Black characters on yellow tape
18 mm	
TZ-S141	Black characters on clear tape
TZ-S241	Black characters on white tape
TZ-S641	Black characters on yellow tape
12 mm	
TZ-S131	Black characters on clear tape
TZ-S231	Black characters on white tape
TZ-S631	Black characters on yellow tape
9 mm	
TZ-S121	Black characters on clear tape
TZ-S221	Black characters on white tape
TZ-S621	Black characters on yellow tape
6 mm	
TZ-S111	Black characters on clear tape
TZ-S211	Black characters on white tape
TZ-S611	Black characters on yellow tape

■ Flexible ID tapes (length: 8 m)

Flexible laminated tapes ideal for labelling network cables, electrical wires, etc.

Stock No.	Description
24 mm	
TZ-FX151	Black characters on clear tape
TZ-FX251	Black characters on white tape
TZ-FX651	Black characters on yellow tape
18 mm	
TZ-FX141	Black characters on clear tape
TZ-FX241	Black characters on white tape
TZ-FX641	Black characters on yellow tape
12 mm	
TZ-FX131	Black characters on clear tape
TZ-FX231	Black characters on white tape
TZ-FX631	Black characters on yellow tape
9 mm	
TZ-FX121	Black characters on clear tape
TZ-FX221	Black characters on white tape

















Stock No.	Description
TZ-FX621	Black characters on yellow tape
6 mm	
TZ-FX111	Black characters on clear tape
TZ-FX211	Black characters on white tape
TZ-FX611	Black characters on yellow tape

■ Security tape (length: 8 m)

This tape leaves a checkered pattern when removed.

Stock No.	Description
18 mm	
TZ-SE4	Black characters on white tape

■ Fabric tape (length: 3 m)

These fabric labels can be affixed to other fabric using an iron.

Stock No.	Description
12 mm	
TZ-FA3	Blue characters on white tape

■ Print head cleaning cassette

Cassette tape for cleaning the print head of your P-touch.

Stock No.	Description
18 mm	
TZ-CL4	Print head cleaning cassette (cleans approx. 100 times)

AC Adaptor

Stock No.	Description
AD-24ES	

INDEX

A	
Accented Character List	29 31
В	
Battery charger	10
С	
Caps mode	21
D	
deleting text and formatting text only	
E	
entering	
symbols textuppercase letter	24
F	
Feed & Cut functionfonts	
formatting character attributes label attributes	
K	
Keyboard	10
L	
lengthlineLine number	31
М	
Manual Cutting	61

N
new line24
P
Power Supply13
R
Return mark10
S
size31
style31
Symbol List28
symbols26
т
tape cassettes15
tape length10
entering and editing24
lines24
U
uppercase letter24
W
width31



















Printed in China LW4583001

