

brother

QL-1050/1060N

Introduction

STEP
1

Label Printer

User's Guide

Getting started

STEP
2



Label Overview

STEP
3

Reference

Be sure to read and understand this guide before using the machine. We recommend that you keep this guide nearby for future reference.

Thank you for purchasing the Brother QL-1050/1060N.

We strongly recommend that you read this guide carefully before using the Brother QL-1050/1060N, and then keep it nearby for future reference.

**We provide service & support for users who register their products on our website.
We recommend that you take this opportunity to register with us by visiting us at:**

**Online Support Page
support.brother.com**

NOTE: It is also possible to access the above sites from the online user registration page displayed at the end of the software installation. We look forward to your registration.

**Declaration of Conformity
(Europe/Turkey only)**

We, Brother Industries, Ltd.
 15-1, Naeshiro-cho, Mizuho-ku,
 Nagoya 467-8561 Japan

declare that this product is in conformity with the essential requirements of all relevant directives and regulations applied within the European Community.

The Declaration of Conformity (DoC) can be downloaded from our website. Visit support.brother.com and:

- select "Europe"
- select your country
- select "Manuals"
- select your model
- select "Declaration of Conformity"
- click "Download"

Your Declaration will be downloaded as a PDF file.

Contents

Introduction 1

| | |
|---------------------------|---|
| Contents | 1 |
| General Information | 2 |
| Safety Precautions | 3 |
| General Precautions | 5 |

STEP 1 Getting started 7

| | |
|-------------------------------------|----|
| 1 Unpacking the QL-1050/1060N | 8 |
| 2 Parts Description..... | 9 |
| Main Printing Unit..... | 9 |
| 3 Setting the DK Roll | 9 |
| 4 Connecting the Power Supply..... | 10 |
| 5 Installing the Label Tray | 10 |
| 6 Using Interface Cable..... | 11 |

STEP 2 Label Overview 13

| | |
|----------------------|----|
| 1 Label Variety..... | 14 |
|----------------------|----|

STEP 3 Reference..... 15

| | |
|-----------------------------|----|
| 1 LED Lamp..... | 16 |
| 2 Maintenance | 17 |
| 3 Troubleshooting | 18 |
| 4 Main Specifications | 21 |

General Information

■Compilation and Publication Notice

Under the supervision of Brother Industries Ltd., this guide has been compiled and published, covering the latest product's descriptions and specifications.

The contents of this guide and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

The screen images in this guide can be differed depending on your OS or printer.

© 2016 Brother Industries Ltd.

■Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

© 2016 Brother Industries, Ltd. All rights reserved.

Microsoft, Windows Vista, Windows Server and Windows are either registered trademarks or trademarks of Microsoft Corp. in the United States and/or other countries. Apple, Macintosh and Mac OS are trademarks of Apple Inc., registered in the United States and other countries.

The names of other software or products used in this document are trademarks or registered trademarks of the respective companies that developed them.

Each company whose software title is mentioned in this guide has a Software Licence Agreement specific to its proprietary programs.

All other brand and product names mentioned in this User's Guide and the Software Installation Guide are registered trademarks of their respective companies.

■Symbols Used in this Guide

The symbols used throughout this guide are as follows:

-  This symbol shows information or directions that should be followed. If ignored, the result may be injury, damage, or failed operations.
-  This symbol shows information or directions that can help you better understand and use the machine more efficiently.

Safety Precautions

Read and understand all of these instructions and save them for later reference. Follow all warnings and instructions marked on the product.

| | |
|---|--|
|  Warning | Tells you what to do to avoid the risk of injury. |
|  Caution | Tells you about procedures you must follow to prevent damage to the machine. |

The symbols used in this guide are as follows:

| | |
|--|--|
|  Action NOT allowed |  DO NOT disassemble the product. |
|  DO NOT splash the product with or immerse the product in water. |  DO NOT touch a given portion of the product. |
|  Mandatory action |  Unplugging |
|  Alerts to the possibility of electrical shock | |

■ To use the machine safely

Warning

Follow these guidelines to avoid fire, electric shock, or other damage.

■ The Machine

-  Do not drop, hit or otherwise bang the machine.
-  Do not hold and lift the machine by the DK Roll cover. The cover could come off and the machine could fall and become damaged.
-  Do not allow the machine to get wet in any way.
-  Do not use the machine with foreign objects in it. If water or any foreign objects should enter the machine, unplug the power cord from the electric outlet and remove the foreign object. If necessary, contact the retail outlet where the machine was purchased or your local authorized service centre.
-  Do not hold the machine with only one hand. The machine may slip out of your hand.
-  Unplug the power cord immediately and stop using the machine during an electrical storm. There may be a remote risk of electric shock from lightning.
-  Do not touch any metal parts near the print head. The print head becomes very hot during use and remains very hot immediately after use. Do not touch it directly with your hands.
-  Dispose of plastic bags correctly and keep away from babies and children. Do not wear or play with plastic bags.
-  Unplug the power cord immediately and stop using the machine if you notice any abnormal odour, heat, discolouration, deformation or anything unusual whilst the machine is in use or storage.
-  Do not disassemble the machine. For inspection, adjustment and repair of the machine contact the retail outlet where the machine was purchased or your local authorized service centre.

⚠ Warning

Follow these guidelines to avoid fire, electric shock, or other damage.

■ Power Cord

- 🚫 Use only the authorized power source (220V-240V AC) for the machine.
- 🚫 Use only the power cord included with the machine.
- 🚫 Do not handle the power cord or plug if your hands are wet.
- 🚫 Do not overload the electrical outlet sockets with too many appliances or plug the power cord into a damaged electrical outlet.
- 🚫 Do not cut, damage, alter or place heavy objects on the power cord.
- 🚫 Do not use the power cord if it is damaged.
- ❗ Ensure the power cord is correctly inserted into the electrical outlet.
- ❗ If the machine will not be used for an extended period, remove the power cord from the electrical outlet.

⚠ Caution

Follow these guidelines to avoid fire, electric shock, or other damage.

■ The Machine

- ❗ The electrical outlet should be close to the machine and be easily accessible.

■ Power Cord

- ❗ Always hold the power cord when unplugging the power cord from or plugging it into the electrical outlet. Pulling on the power cord could cause problems.

■ Cutter

- 🚫 Do not touch the blade of the cutter.
- 🚫 Do not open the top cover when the cutter is operating.

■ Installation/Storage

- ❗ Put the machine on a flat, stable surface such as a desk.
- 🚫 Do not put any heavy objects on top of the machine.

■ DK Roll (DK Label, DK Tape)

- ❗ Be careful not to drop the DK Roll.
- ❗ DK Rolls use thermal paper and thermal film. Both the label and print will fade with sunlight and heat. Do not use DK Rolls for outdoor use that requires durability.
- ❗ Depending on the area, material, and environmental conditions, the label may unpeel or become irremovable, the colour of the label may change or be transferred to other objects. Before applying the label, check the environmental condition and the material. Test the label by affixing a small piece of it to an inconspicuous area of the intended surface.

General Precautions

■ The Machine

- Never disassemble the machine or allow it to get wet to avoid possible fire or electrical shock. Do not unplug the power cord from or plug it into the electrical outlet with wet hands. Doing so could cause an electrical shock or fire.
- Do not touch the cutter. Personal injury could result.
- The machine is a precision machine. Do not drop, hit or otherwise bang the machine.
- Do not lift the machine by the DK Roll compartment cover. The cover could come off and the machine could fall and become damaged.
- The machine may malfunction if left near a television, radio, etc. Do not use the machine near any machine that can cause electromagnetic interference.
- Do not expose the machine to direct sunlight or near heaters or other hot appliances, in any area exposed to extremely high or low temperatures, high humidity or dusty areas. Doing so could cause the machine to malfunction.
- Do not use paint thinner, benzene, alcohol or any other organic solvents to clean the machine. Doing so may cause damage to the surface finish. Use a soft, dry cloth to clean the machine.
- Do not put any heavy objects or objects containing water on top of the machine. If water or any foreign object enters the machine, contact the retail outlet where the machine was purchased or your local authorized service center. If you continue to use the machine with water or a foreign object in the machine, the machine may be damaged or personal injury could result.
- Do not insert any objects into or block the label output slot, USB port, Serial port or LAN port.
- Do not put any metal parts near the print head. The print head becomes very hot during use and remains very hot immediately after use. Do not touch it directly with your hands.
- Use only the interface cable (USB cable) included with the machine.
- Do not attempt to print labels while the DK Roll cover is open.

■ Power Cord

- Use only the power cord included with the machine.
- If the machine will not be used for an extended period, unplug the power cord from the electrical outlet.
- Always hold the power cord when unplugging the power cord from or plugging it into electrical outlet. Do not pull on the power cord. The wire in the electrical cord may become damaged.
- You should put the machine near an easily accessible, standard electrical socket.

■ DK Roll (DK Label and DK Tape)

- Use only genuine Brother accessories and supplies (with   marks). Do not use any unauthorized accessories or supplies.
- If the label is attached to a wet, dirty, or oily surface, it may peel off easily. Before applying the label, clean the surface to which the label will be applied.
- DK Rolls use thermal paper or film that can fade in colour or peel off surfaces if exposed to ultraviolet light, wind or rain.
- Do not expose the DK Rolls to direct sunlight, high temperatures, high humidity, or dust. Store in a cool, dark place. Use the DK Rolls soon after opening the package.
- Scratching the printed surface of the label with your finger nails or metal objects, or touching the printed surface with hands dampened by water, sweat, or medicated cream, etc., can cause the colour to change or fade.
- Do not apply labels to any persons, animals, or plants.

- As the end of the DK Roll is designed to not adhere to the label spool, the last label may not be cut properly. If this happens, remove the remaining labels, insert a new DK Roll, and reprint the last label.

Note: To account for this, the number of DK Labels included on each DK Roll may be more than indicated on the package.

- If a label is removed after being applied to a surface, some portion of the label may remain. Remove the remaining portion before attaching a new label.
- Some DK Rolls use permanent adhesive for their labels. These labels cannot be easily peeled off once attached.
- Prior to using CD/DVD labels, be sure to follow the instructions in your CD/DVD player's instruction guide regarding applying CD/DVD labels.
- Do not use CD/DVD labels in a slot loading CD/DVD player, for example a CD player in a car where the CD is slid into a slot in the CD player.
- Do not peel off the CD/DVD label once it is applied to the CD/DVD, a thin surface layer may come off, resulting in damage to the disk.
- Do not apply CD/DVD labels to CD/DVD disks designed for use with ink jet printers. Labels peel off these disks easily and using disks with peeled labels can result in loss or damage of data.
- When applying CD/DVD labels, use the applicator included with the CD/DVD label rolls. Failure to do so could cause damage to the CD/DVD player.
- User's shall take full responsibility for applying CD/DVD labels. Brother accepts no responsibility for any loss or damage of data caused by the inappropriate use of CD/DVD labels.

■ CD-ROM and Software

- Do not scratch or subject the CD-ROM to high or low temperatures.
- Do not put heavy objects on the CD-ROM or apply force to the CD-ROM.
- The software contained on the CD-ROM is meant for use with the machine only. See the Licence on the CD for details. This software may be installed on multiple computers for use in an office, etc.

STEP 1

Getting started

1 Unpacking the QL-1050/1060N

Page 8

2 Parts Description

Page 9

3 Setting the DK Roll

Page 9

4 Connecting the Power Supply

Page 10

5 Installing the Label Tray

Page 10


6 Using Interface Cable

Page 11


1 Unpacking the QL-1050/1060N

Check that the package contains the following before using the QL-1050/1060N. If any item is missing or damaged, contact your Brother dealer.

QL-1050/1060N

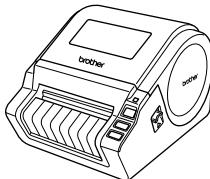

USB cable

 

CD-ROM

 


AC Power cord



The plug may differ by countries.


DK Roll (Starter roll)




The QL-1050/1060N includes two starter rolls of :

- One starter roll of DK Die-cut 102 mm X 152 mm Labels
- One starter roll of DK Continuous Paper Tape 62 mm


User's Guide

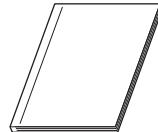

Software Installation Guide

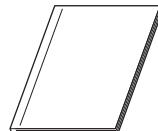

DK Label & Tape Guide

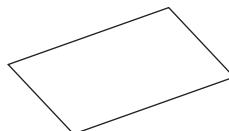


Label tray




2 Parts Description

Main Printing Unit

■Front

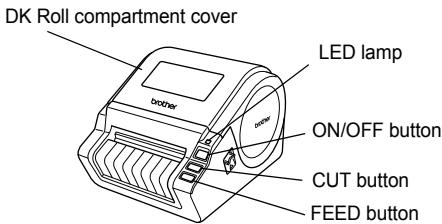

■Rear

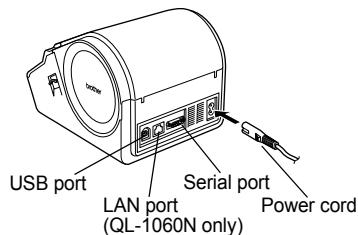


STEP 1

Getting started

3 Setting the DK Roll

- 1** Press and hold the ON/OFF button to turn the QL-1050/1060N off. Pull up the left and right levers on the machine under the top cover, and open the cover.

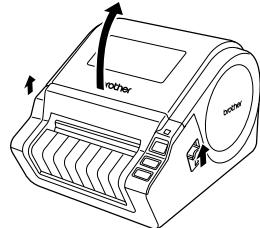


STEP 2

Label Overview

- 2** Put the spool into the spool guides in the DK Roll compartment.

- ! • Make sure that the spool arms are inserted firmly in the spool guides on the left and right.
- Insert the spool with the DK Roll located on the right hand side of the QL-1050/1060N.

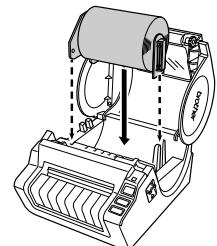


STEP 3

Reference


- 3** Thread the end of the DK Roll into the slot until it aligns with the roller.

- ! When unable to thread the end of the DK Roll into the slot, thread it as far as possible, and then close the cover. Press the ON/OFF button to turn the QL-1050/1060N on, and then press the FEED button to set the roll.

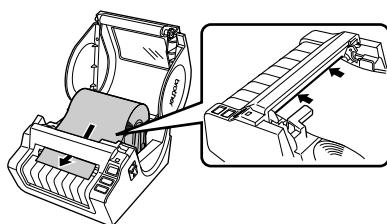

4


Close the DK Roll compartment cover until it clicks on both sides.

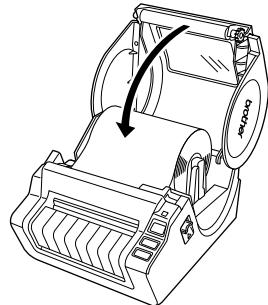

4 Connecting the Power Supply

Connect the power cord to the QL-1050/1060N and then plug the power cord into a electrical outlet.

- ! • Check that the electrical outlet is 220V-240V AC before plugging the power cord.
- Unplug the power cord from the electrical outlet after you have finished using the QL-1050/1060N.
- Do not pull the power cord when unplugging it from the electrical outlet. The wire in the power cord may become damaged.
- Do not connect the QL-1050/1060N to the computer until directed to do so when installing the printer driver.

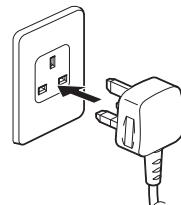


The plug may differ by countries.

5 Installing the Label Tray

The machine contains a label tray which can hold up to 10 individual label sheets.

As shown right, install the label tray to the front face of the machine.

- ! • When printing more than 10 labels continuously using the auto cut function, remove the paper guide to prevent a paper jam.

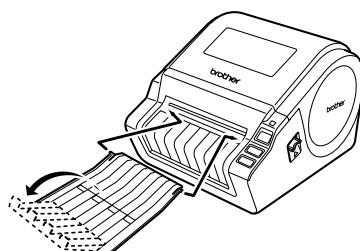

6 Using Interface Cable

RS-232C cable and Network cable are not standard accessories.
Choose the appropriate cable for your interface.

- **USB cable**

Use the enclosed interface cable.

- **RS-232C cable**

The pin assignments for the serial cables (RS-232C cables) which can be used with this machine are shown in the table below. You can purchase the cables at an electronics store. Do not use an interface cable that is longer than 2 metres.

Brother QL side

D-sub female, lock screw #4-40 (UNC).

PC side
(D-Sub9P female)

| Signal Name | Pin Number | Pin Assignments | Pin Number | Signal Name |
|-------------|------------|-----------------|------------|-------------|
| DCD | 1 | | 1 | DCD |
| RXD | 2 | | 2 | RXD |
| TXD | 3 | | 3 | TXD |
| DTR | 4 | | 4 | DTR |
| GND | 5 | | 5 | GND |
| DSR | 6 | | 6 | DSR |
| RTS | 7 | | 7 | RTS |
| CTS | 8 | | 8 | CTS |
| RI | 9 | | 9 | RI |

- (!) • It is not possible to connect a RS-232C cable and USB cable to the printer at the same time.
 • The RS-232C serial connector part of this equipment is not Limited Power Source.
 • Network cable (QL-1060N only)
 Use a straight-through Category5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.

Important

For USB interface, the included USB interface cable should be used to ensure compliance with the limits for EMC (Electromagnetic compatibility).

For serial and network interfaces, a shielded interface cable should be used to ensure compliance with the limits for EMC.

Changes or modifications not expressly approved by Brother Industries, Ltd. may affect the performance and print quality, and damage may not be covered under the limited warranty.

- (!) • Caution for LAN connections (QL-1060N only)
Connect this product to a LAN connection that is not subjected to overvoltages.
- Caution for RS-232C connection
The RS-232C serial connector part of this equipment is not Limited Power Source.

STEP 2

Label Overview

1 Label Variety

Page 14

Introduction

STEP
1

Getting started

STEP
2

Label Overview

STEP
3

Reference

1 Label Variety

Here are the sample labels that you can create with the Brother QL-1050/1060N. There is a variety of labels to choose from.

Choose the type of label you want to create.

Meeting Minutes Project Alpha

Mr Michael Smith
LBI Group
100, Clean View Ave..
Oxford, Oxon. OX14 3RT

Visitor



Laura Johnson

DATE: 05/09/2008

TIME: 14:15



Family Trip

New York



TO:

Ms. Donna Lewis
LBI Corporation
100 Somerset Corp Blvd
Bridgewater, NJ 08807-0911



Mr. Michael Smith
LBI Group
100, Clean View Ave..
Oxford, Oxon. OX14 3RT

Mr. Robert Goodman
15, Meadow Road,
Aberdeen AB8 3GR



M. Smith



Emergency Exit

Mr. Walter Freeman
4555 Cumberland Pkwy.
Dallas TX 95053

06/05/2008
No. 10023
M 34



| | |
|------------|----------------|
| Department | Planning Dept. |
| Serial No. | 0011154 |
| Device No. | E6200-A4C |



Laura Johnson



Best Hit Songs
Jan. - Aug.

Best Hit Songs Jan. - Aug.

IP Address:

192.168. 1. 1



Mary

Pat

Chris

John

USB Cable

CB-001



LB746001

AC Adapter

AC-123



22222-001

STEP 3

Reference

- 1 LED Lamp Page 16
- 2 Maintenance Page 17
- 3 Troubleshooting Page 18
- 4 Main Specifications Page 21

Introduction

STEP 1

Getting started

STEP 2

Label Overview

STEP 3

Reference

1 LED Lamp

■Definition of LED Lamp

The LED lamp on the Brother QL printer indicates the current operating condition.

| Lamp | Condition |
|-----------------------------|--|
| Not lit | Power is OFF. |
| Green lamp is lit | Power is ON. |
| Green lamp is flashing | Receiving data from the PC. (For QL-1060N only) |
| Orange lamp is lit | The roll cover is opened. Close the roll cover correctly. |
| Orange lamp is flashing | Cooling (Wait for the temperature of the print head to lower) |
| Red lamp is lit | The machine is booting. |
| Red lamp is flashing | Indicates one of the following errors. • Label sensor error (End of DK Roll or label jam) • Incorrect DK Roll installed • Transmission error |

2 Maintenance

Maintenance of the machine may be carried out as required. However, some environments require that maintenance must be done more frequently (e.g. in dusty conditions).

■ Print head maintenance



The DK Roll (thermal printing paper type) used with the machine is designed to clean the print head automatically. When the DK Roll passes the print head during printing and label feeding, the print head is cleaned. If the print head is not cleaned thoroughly use a cotton swab and wipe the head.

■ Roller maintenance

Cut the DK label and remove the backing paper of the label. Then, put the adhesive side of the label against the roller and remove the dirt.

■ Label outlet maintenance

If glue accumulates on the label outlet and the machine becomes jammed, disconnect the power plug from the machine and clean the label outlet with a cloth dipped in isopropyl alcohol.

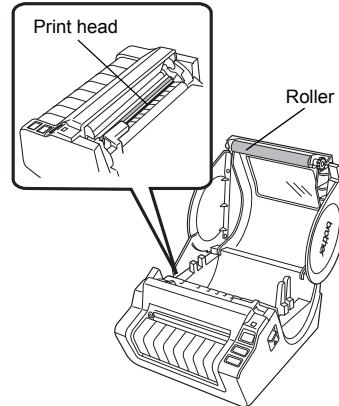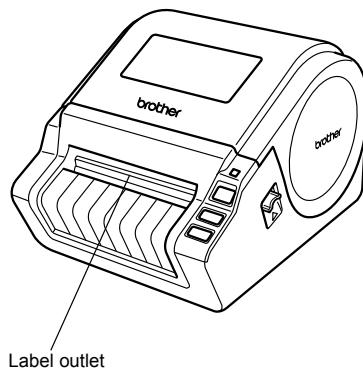
STEP
1STEP
2STEP
3


3 Troubleshooting

If the problems occur while using this machine, the following may help you to solve the problems.

■ Potential types of problems

| Problem | Solution |
|--|---|
| The QL printer does not print, or a printing error is received. | <ul style="list-style-type: none"> Is the cable loose? Check that the cable is connected securely. Is the DK Roll installed correctly? If not, remove the DK Roll and reinstall. Is there enough roll remaining? Check that there is enough roll remaining. Is the DK Roll compartment cover open? Check that the DK Roll compartment cover is closed. Has a print error or transmission error occurred? Turn off the Brother QL printer and on again. If there is still a problem, contact your Brother dealer. |
| The power button is not lit. | <ul style="list-style-type: none"> Is the power cord inserted correctly? Check that the power cord is inserted. If inserted correctly, try plugging it into another electrical outlet. |
| The printed label contains streaks or poor quality characters, or the label is not fed correctly. | <ul style="list-style-type: none"> Is the print head or roller dirty? While the print head generally remains clean under normal use, lint or dirt from the roller may become stuck on the printer head. If this occurs, clean the roller. See → "Roller maintenance" in page 17. |
| A data transmission error appears on the personal computer. | <ul style="list-style-type: none"> Is the correct port chosen? Check that the correct port is chosen from the "Print to the following port" list in the Printer Properties dialog box. Is the QL printer in cooling mode (the LED lamp is flashing in orange)? Wait until the LED lamp stops flashing and then try printing again. Is someone printing via network? If you try to print while other users are printing large amounts of data, the printer is unable to accept your print job until the ongoing printing is finished. In such situations, execute the print job again after the other jobs are completed. |
| Labels are jammed in the cutter. | <ul style="list-style-type: none"> Contact your Brother dealer. |
| The label is not ejected properly after printing. | <ul style="list-style-type: none"> Check that the ejection path of the label is not blocked. Check that the DK Roll is set properly by removing the DK Roll and reinstalling. Ensure that the DK Roll cover is closed properly. |
| The print quality is poor. | <ul style="list-style-type: none"> Is there dirt or lint on the roller preventing it from rolling freely? Clean the roller using the cleaning sheet (separately available). For details, please see → "Roller maintenance" in page 17. |
| After replacing the Roll while the Add-In feature was activated, the layout style was not updated. | <ul style="list-style-type: none"> Close the P-touch Editor to exit the Add-In, and reactivate the Add-In. |
| The P-touch Add-In icon is not displayed on Microsoft® Word. | <ul style="list-style-type: none"> Is Microsoft® Word started up from Microsoft® Outlook®? Is Microsoft® Word chosen for the editor usually used for Microsoft® Outlook®? <p>Due to program limitations, the Microsoft® Word Add-In does not work with the above settings. Quit Microsoft® Outlook®, and restart Microsoft® Word.</p> |
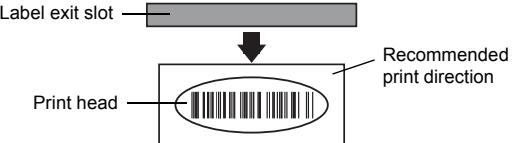
| Problem | Solution |
|--|--|
| Cutter error. | <ul style="list-style-type: none"> If a cutter error occurs, keep the DK roll compartment cover closed and press ON/OFF button. The cutter moves back to the normal position and turns the machine OFF automatically. After the machine is OFF, inspect the cutter unit and remove the paper jam. |
| The printed bar code cannot be read. | <ul style="list-style-type: none"> Set the label vertical to the print head as shown below.  <p>The diagram illustrates the recommended orientation for printing a barcode. A horizontal grey bar labeled "Label exit slot" is at the top. Below it is a white rectangular area representing a label. Inside this label, there is a barcode. An oval labeled "Print head" is positioned directly beneath the barcode. A large downward-pointing arrow is positioned between the label exit slot and the print head, indicating the direction the label should travel. A line points from the text "Recommended print direction" to the arrow.</p> <ul style="list-style-type: none"> Some types of scanner are not able to read the bar code. Try using another scanner. We recommend printing the Bar code with Print Quality options set to "Give priority to print quality". <p>Windows® XP: To change the Print Quality options, open the printer properties from [Control Panel] - [Printer and other hardware] - [Printer and Faxes], right-clicking the printer whose settings are to be changed, then selecting [Properties]. Then, in the [General] tab, click [Printing Preferences...].</p> <p>Windows Vista®: To change the Print Quality options, open the printer properties by going to [Control Panel] - [Hardware and Sound] - [Printers], right-clicking the printer whose settings are to be changed, then selecting [Properties]. Then, in the [General] tab, click [Printing Preferences...].</p> <p>Windows® 7: To change the Print Quality options, open the printer properties by going to  - [Devices and Printers], right-clicking the printer whose settings are to be changed, and selecting [Printer properties]. Then, in the [General] tab, click [Preferences...].</p> |
| I want to reset the printer/delete the data transferred from PC. (QL-1060N only) | <ul style="list-style-type: none"> To reset the machine, press and hold the ON/OFF button to switch the machine OFF. Then, hold down the ON/OFF button for two seconds. Continue holding down the ON/OFF button, and press the CUT button six times. The machine will then reset. All the transferred data from PC will be deleted and will reset the machine to factory settings. |
| I want to cancel the current printing job. (QL-1060N only) | <ul style="list-style-type: none"> Make sure that the printer is ON, and press the ON/OFF button. |
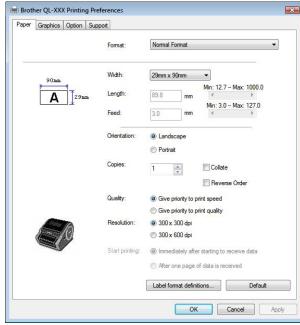
| Problem | Solution |
|---|---|
| When printing via the USB cable, the printer repeatedly pauses and then continues printing. (QL-1060N only) | <ul style="list-style-type: none">Is the printer set for sequential printing? If so, set print mode to buffered printing. (Open printer properties from [Control Panel] - [Printer and FAX] and click [Printing Preferences...] button in the [General] tab. Choose the option "After one page of data is received".)An alternative solution is to disconnect the LAN cable until USB printing is completed.  |

4 Main Specifications

■ Product specifications

| Items | | Specifications |
|--------------|----------------------|---|
| Display | | LED lamp (green, red, orange) |
| Print | Printing method | Direct thermal printing via thermal head |
| | Speed of printing | Max. 110 mm/sec, Max. 69 labels/min. (Standard Address Labels) (When connecting USB cable) |
| | Print head | 300 dpi/1296 dot |
| | Max. printing width | 98.6 mm |
| | Min. printing length | 25.4 mm |
| Cutter | | Durable automatic cutter |
| Button | | ON/OFF button (髯), FEED button, CUT button |
| Interface | | USB, RS-232C ^{*1} , 10/100BASE-TX Wired Ethernet ^{*2} |
| Power supply | | 220-240V AC 50/60 Hz 1.1A |
| Size | | 170 mm × 220 mm × 147.5 mm |
| Weight | | QL-1050: Approx. 1.69 kg (without DK Rolls) QL-1060N: Approx. 1.73 kg (without DK Rolls) |

*1 Windows® only.

*2 QL-1060N only.

■ Operating environment

| Items | | Specifications |
|-----------------------|--|-----------------------------------|
| Operating temperature | | 10°C to 35°C |
| Operating humidity | | 20% to 80% (without condensation) |

brother