

- 4** Close the [Printer List] / [Print & Fax] window.  
The printer driver has been uninstalled.