



Creating & Printing  
Commonly Used Labels

General

Sales Out Reports  
Regions 1 - 4

- Press **Label Type** – until Normal.  
Press to select.
- Type *Text* ( for new line, or **Code** to place a block of text to the right).
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code** **D** to specify different font types. to choose. Press to enter.
  - **Code** **E** to specify different font sizes. to choose. Press to enter.
- Print**

Name  
Badge



- Press **Label Type** – until Normal.  
Press to select.
- Set label length **Code** **A** – use number pad to type length or to specify.  
Press to enter.
- Type *Name*. Press for new line.
- Type *Company*.
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code** **D** to specify different font types. to choose. Press to enter.
  - **Code** **E** to specify different font sizes. to choose. Press to enter.
- Print**

Vertical



- Press **Label Type** – until Vertical.  
Press to select.
- Type *Text*. Enter more than one line of text with **A** or **B** **Code** . Text will be added to previous text. Example by typing:  
**A) 1. 123** **B) 1. 123** **Code**   
**2. 456** Output: **2. 456** Output:  
**3. Print** **3. Print**   
(Two Column) (One Column)
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code** **D** to specify different font types. to choose. Press to enter.
  - **Code** **E** to specify different font sizes. to choose. Press to enter.
- Print**

Cable/  
Wire  
Wrap



- Press **Label Type** – until Rot-Rep.  
Press to select.
- Set the length of the label with (*BLK LEN*), use number pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option - Arrow to select, to end.
- Type *Text*.
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code** **D** to specify different font types. to choose. Press to enter.
  - **Code** **E** to specify different font sizes. to choose. Press to enter.
- Print**

Cable/  
Wire  
Flag



- Press **Label Type** – until Flag.  
Press to select.
- Set the diameter of the cable/wire (*FLAG Ø*) arrows to select, arrow to next option.
- Set the length of the label (*FLAG LEN*), use number pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option - Arrow to select frame, arrow to next option.
- Choose to have text rotated or not (*ROTATE*), arrows to select, to end.
- Type *text*.
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code** **D** to specify different font types. to choose. Press to enter.
  - **Code** **E** to specify different font sizes. to choose. Press to enter.
- Print**

Port  
Label



- Press **Label Type** – until Port.  
Press to select.
- Set the length of the label (*BLK LEN*), use pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option - Arrow to select, to end.
- Type *Text*.  
(continue to next column)

Port  
Label  
(cont.)



- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code** **D** to specify different font types. to choose. Press to enter.
  - **Code** **E** to specify different font sizes. to choose. Press to enter.
- Print**

Panel  
Label

7C-A01 7C-A02

- Press **Label Type** – until Panel.  
Press to select.
- Set the length of the label with (*BLK LEN*), use number pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option - Arrow to select, to end.
- Choose print option - front of a panel or for the reverse of a panel — arrow to select, to end.
- Type *Text*. Use **Code** to separate port information.
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code** **D** to specify different font types. to choose. Press to enter.
  - **Code** **E** to specify different font sizes. to choose. Press to enter.
- Print**

Faceplate  
Label  
(Vertical)



- Set Cut Option **Code** **Z** to 2, to 2 to choose.
- Press **Label Type** - until Rotate. Press to select.
- Set the length between the ports (*BLK LEN*), use number pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option – Arrow to select, to end.
- Type *Text* or choose *Symbol* with **Symbol**.
- Enter more than one line of text with .
- Separate port information with **Code** .
- To change text style or size per specific port, use to place cursor on line to be changed. Use
  - **Code** **D** to specify different font types. to choose. Press to enter.
  - **Code** **E** to specify different font sizes. to choose. Press to enter.
- Print**

