



# **Mobile Print/Scan Guide for Brother iPrint&Scan (Android™)**



# Before You Use Your Brother Machine

## Definitions of Notes

We use the following symbol and convention throughout this User's Guide:



Tips icons provide helpful hints and supplementary information.

## Trademarks

BROTHER is either a trademark or a registered trademark of Brother Industries, Ltd.

Wi-Fi and Wi-Fi Direct are registered trademarks of Wi-Fi Alliance.

The Bluetooth word mark is owned by the Bluetooth SIG, Inc. and any use of such marks by Brother Industries, Ltd. is under license.

Google, Android, Gmail, Google Play and Google Cloud Print are trademarks of Google Inc. Use of these trademarks is subject to Google Permissions.

**Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.**

# Table of Contents

## Mobile Print/Scan Guide for Brother iPrint&Scan (Android™)

<b>1</b>	<b>Introduction .....</b>	<b>1</b>
	Overview.....	1
	Download Brother iPrint&Scan Using the Google Play™ Store App .....	1
	Device Connections.....	1
	Use the NFC Function .....	2
<b>2</b>	<b>Print .....</b>	<b>3</b>
	Set a Device for Print.....	3
	Change the Google Account When Using Remote Print (Google Cloud Print) .....	3
	Icons .....	3
	Print Photos Stored on Your Mobile Device .....	4
	Print Documents .....	5
	Print Using Cloud Services .....	6
	Print Web Pages.....	7
	Clear Your Browsing History .....	7
	Print Email Messages.....	8
	Print from Other Applications.....	9
	Print Photos or Documents .....	9
	Print Web Pages .....	9
<b>3</b>	<b>Scan .....</b>	<b>10</b>
	Set a Device for Scan .....	10
	Crop the Scanned Image.....	10
	Scan Directly to Your Mobile Device's Memory Card .....	11
	Open Scanned Images in Other Applications.....	12

## Overview

Brother iPrint&Scan allows you to use features of your Brother machine directly from your Android™ device.

Brother iPrint&Scan supports the following functions:

- Print
- Scan



---

If your machine does not have a printer or scanner, you cannot use the related print or scan functions of Brother iPrint&Scan.

---

## Download Brother iPrint&Scan Using the Google Play™ Store App

You can install Brother iPrint&Scan from the Google Play™ Store app. To take advantage of all the features supported by Brother iPrint&Scan, make sure you are using the latest version.

## Device Connections

Connect your mobile device to your Brother machine using one of the following connection methods:

### Wi-Fi®

To configure your Brother machine for a Wi-Fi connection, see your machine's Quick Setup Guide.

### Wi-Fi Direct®

To configure your Brother machine to a Wi-Fi Direct® network, download any one of the following guides from your model's **Manuals** page on the Brother Solutions Center at <http://support.brother.com>.

- Wi-Fi Direct Guide
- Software and Network User's Guide
- Online User's Guide

Your Brother Machine must support Wi-Fi Direct®.

### Bluetooth

To configure your Brother machine for a Bluetooth connection, see your Brother machine's User's Guide.

### NFC (Near Field Communication)

If you use NFC, you can print and scan by holding your mobile device against the NFC logo on your Brother machine. A network connection is not necessary.

### Remote Print (Google Cloud Print™)

To configure your Brother machine for printing using Google Cloud Print, download the Google Cloud Print Guide from your model's **Manuals** page on the Brother Solutions Center at

<http://support.brother.com>. Your Brother Machine must support Google Cloud Print.



---

Depending on your Brother machine and mobile device, supported connection methods may vary.

---

# Use the NFC Function

- 1 Display the **Print Preview** or the main scan screen on your mobile device.



- 2 Hold your mobile device against the NFC logo on your Brother machine.



- 3 When your mobile device connects to your Brother machine, you will hear a sound and **Touch to beam** appears on your mobile device's screen.

- 4 While holding your mobile device against the NFC logo, tap the center of your mobile device screen.



- Your mobile device must support NFC.
- Make sure you turn on the NFC function on your mobile device and your Brother machine. You can confirm your machine's NFC setting in the Network menu on the machine's control panel.
- If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.
- The screen and the message displayed may vary depending on your mobile device.

 
## Set a Device for Print

If a different machine is selected or if **No Device Selected** is displayed, follow these steps:

- 1 Tap .



- 2 Tap **Printer**.

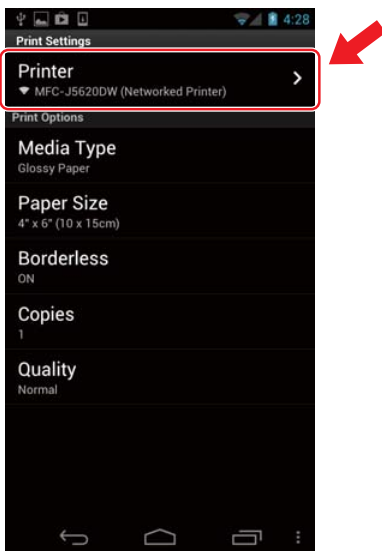

- 3 Select a device.
- 4 Set **Print Options** as needed.
- 5 Press the **Back** button to exit the **Print Settings** screen.

## Change the Google Account When Using Remote Print (Google Cloud Print)

- 1 Press the **Menu** button in the main menu.
- 2 Tap **Information**, and then tap **Account Settings**.
- 3 Select the desired account.

## Icons



Press the Menu button, and then tap this icon to select all pages.



 
Press the Menu button, and then tap this icon to deselect all pages.



Tap the screen to hide or show the operation buttons.

# Print Photos Stored on Your Mobile Device

1 Tap Photo.

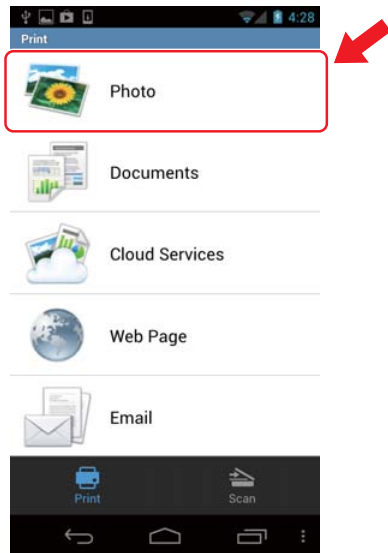

2 Tap the file you want to print.


3 Tap Print.



# Print Documents

 You can print documents saved on your mobile device's memory card.

## 1 Tap Documents.

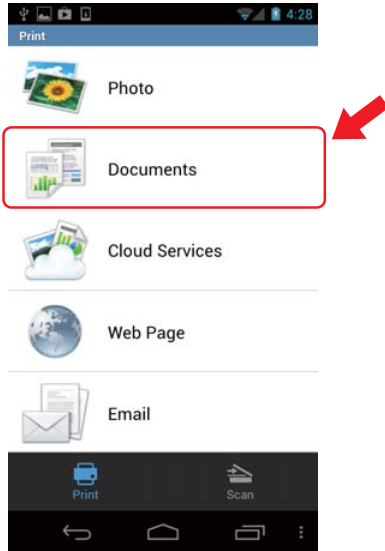

## 2 Tap the file you want to print.

## 3 Tap Print.



 
Files with the following security settings cannot be printed:

- **Security Method: Password Security**
- **Compatibility: Acrobat X and later**
- **Encryption Level: 256-bit AES**
- **Printing Allowed: None or Low Resolution (150dpi)**



# Print Using Cloud Services

**1** Tap Cloud Services.

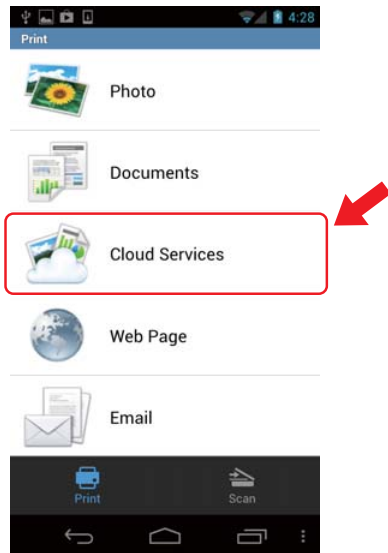

**2** Select the service you want to use.

**3** Sign in.

**4** Tap the file you want to print.


**5** Tap Print.



# Print Web Pages

 You can print web pages using the web browser included in Brother iPrint&Scan.

## 1 Tap Web Page.

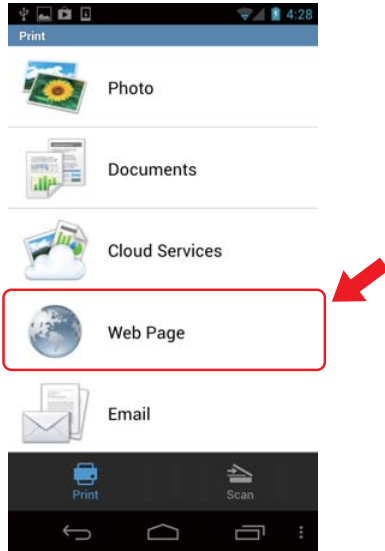

## 2 Navigate to the web page you want to print.

 
## 3 Tap Print Preview.




## 4 Tap Print.

# Clear Your Browsing History

## 1 Tap .

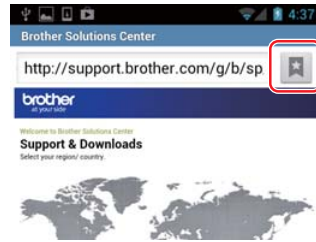

## 2 Tap History.

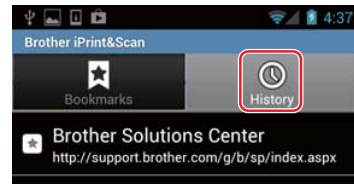 

## 3 To delete a record from your browsing history:

- Touch the record and hold it until the pop-up screen appears.

Tap **OK**.

To delete your entire browsing history:

 
- Tap **Menu**, and then tap **Clear History**.

Tap **OK**.


# Print Email Messages

You can use Brother iPrint&Scan to view and print email messages from your Gmail™ account (Google Account).

## 1 Tap Email.

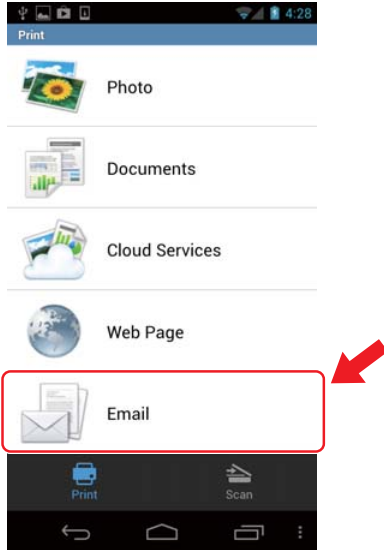

## 2 Select the email message you want to print.

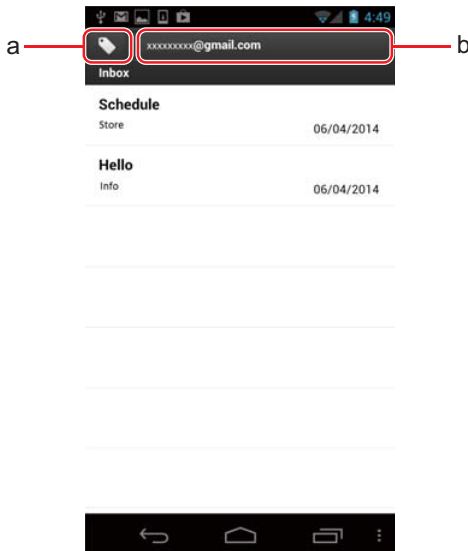 


### a. Label button

Tap  to display other messages.

### b. Account button

Tap this button to change the account.
 
## 3 Tap Print Preview.

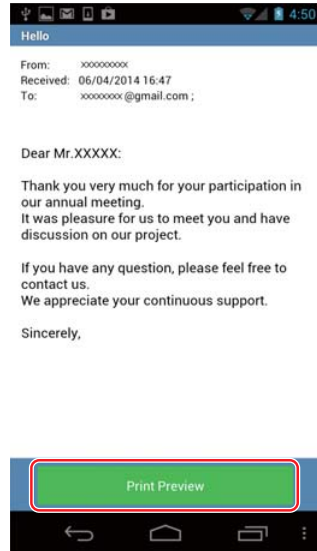

## 4 Tap Print.

# Print from Other Applications

You can also print photos, documents and web pages by sharing them with Brother iPrint&Scan.

## Print Photos or Documents

- 1 Select the file you want to print.
- 2 Share the file by selecting Brother iPrint&Scan from the list of applications.
- 3 Tap **Print**.

## Print Web Pages


- 1 Navigate to the web page you want to print.
- 2 Share the page by pressing the Menu button and select **Share page**.  
If the list of applications appears, select Brother iPrint&Scan.
- 3 Tap **Print Preview**.
- 4 Tap **Print**.

## Set a Device for Scan

 
If a different machine is selected or if **No Device Selected** is displayed, follow these steps:

- 1 Tap .



 If the **Print** screen is displayed, switch to the scan function by tapping **Scan**.

- 2 Select a device.

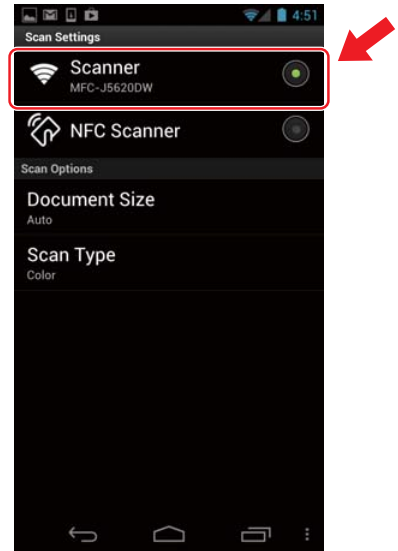

- 3 Set **Scan Options** as needed.

- 4 Press the **Back** button to exit the **Scan Settings** screen.

## Crop the Scanned Image

- 1 Tap .

 
- Touch the screen and drag to adjust the size of the box.
- Tap inside the box, and drag to move the position of the box.

- 2 Tap **Done**.

# Scan Directly to Your Mobile Device's Memory Card

1 Load the document to scan in your Brother machine.

2 Tap **Scan**.

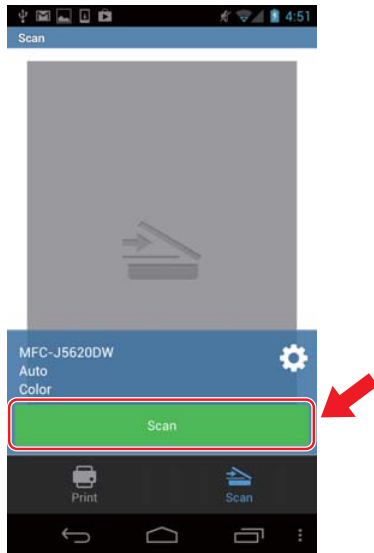

3 Tap **Save**.



4 Select the file format (JPEG or PDF).



• If you select JPEG, each page is saved as a separate file.


If you select PDF, all pages are saved in one file.


• Scanned images are saved in the following folder on the memory card:

**/sdcard/Brother/scan.**
 
# Open Scanned Images in Other Applications

- 1 Load the document to scan in your Brother machine.
- 2 Tap **Scan**.

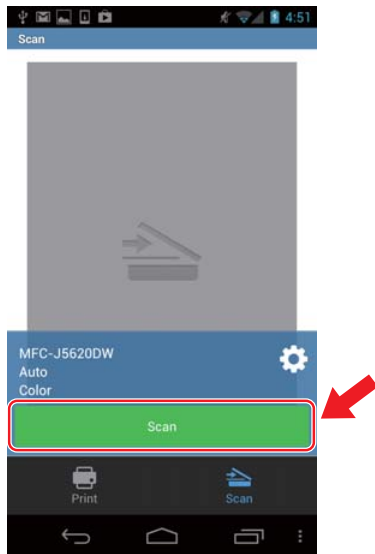

- 3 Tap .
- 4 Select the file format (JPEG or PDF).
- 5 Tap the desired application.

# brother

Visit us on the World Wide Web  
<http://www.brother.com>



ENG  
Version 0