 


Model Name: RJ-4040

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB Port1	1.5W	0.4W	0min	10min
Wi-Fi	1.9W	0.4W	0min	10min
RS-232C	1.6W	0.4W	0min	10min
All network ports activated and connected	2.0W	0.4W	0min	10min

How to enable/disable Wireless LAN

To activate the wireless function:

Press and hold the  (Power) button to turn the printer on, and then press the Wi-Fi button.

To deactivate the wireless function:

Press the Wi-Fi button again to turn the wireless function off.