

With your PT-D200/E200, you can create labels for multiple applications. Select from the many frames, character sizes and styles to design beautiful custom labels. In addition, the variety of tape cartridges available allows you to print labels with different widths and exciting colours.

Read this manual carefully before you begin and keep the manual in a handy place for future reference.

Printed in China  
LAD388001

## Safety Precautions

### ⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.

Follow these guidelines to avoid the risk of fire, burns, injury, electric shocks, rupture, overheating, abnormal odours or smoke.

- Always use the specified voltage and the recommended AC adapter (AD-24ES UK: Optional on the PT-D200) for the P-touch labeller to prevent any damage or failure.
- Do not touch the P-touch labeller during a lightning storm.
- Do not use the machine/AC adapter in places of high humidity (such as bathrooms).
- Do not overload the power cord.
- Do not place heavy objects on, or damage the power cord or plug. Do not forcibly bend or pull the power cord. Always hold the AC adapter carefully when disconnecting from the power outlet.
- Make sure that the plug is fully inserted in the power outlet. Do not use an outlet that is loose.
- Do not allow the machine/AC adapter/power plug/batteries to get wet, for example, by handling them with wet hands or spilling beverages onto them.
- Since loss of eyesight may result when leaked fluid from batteries gets into your eyes, immediately rinse your eyes with a large amount of clean water, and then seek medical attention.
- Do not disassemble or modify the P-touch labeller/AC adapter/batteries.
- Do not allow a metal object to contact both the plus and minus ends of a battery.
- Do not use sharp objects, such as tweezers or a metallic pen, to change the batteries.
- Do not throw the batteries into fire or expose to heat.
- Disconnect the AC adapter, remove batteries immediately and stop using the machine if you notice abnormal odour, heat, discoloration, deformation or anything unusual while using or storing it.
- Do not use a damaged or leaking battery as the fluid may get on your hands.
- Do not use a deformed or leaking battery or one whose label is damaged. There is a possibility of generating heat.


### ⚠ CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

Follow these guidelines to avoid personal injury, liquid leakage, burns or heat.

- When the machine is not being used, store it out of the reach of children. In addition, do not allow children to put machine parts or labels in their mouths. If any object has been swallowed, seek medical attention.
- Do not touch metal parts near the print head immediately after printing.
- Do not touch the cutter blade.
- If leaked fluid from batteries gets onto your skin or clothes, immediately rinse them with clean water.
- Remove the batteries and disconnect the AC adapter if you do not intend to use the P-touch labeller.
- Do not use a battery other than that specified. Do not use combinations of old and new batteries or combinations of different types, different charging levels, different manufacturers or different models. Do not insert a battery with its plus and minus ends reversed.
- Do not drop or hit the P-touch labeller/AC adapter.
- Do not press on the LCD display.
- Do not put your finger inside the machine when you close the back cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialized battery charger before using the batteries.

## General Precautions

- Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the colour of the label may change or be transferred to other objects. Before applying the label, check the environmental conditions and the material.
- Do not use the P-touch labeller in any way or for any purpose not described in this guide. Doing so may result in accidents or damage to the machine.
- Use only Brother TZe tapes with the P-touch labeller. Do not use tapes that do not have the  mark.

- Only use a soft, dry cloth to clean the labeller; never use alcohol or other organic solvents.
- Use a soft wipe to clean the print head; never touch the print head.
- Do not put any foreign objects into the tape exit slot or AC adapter connector or battery compartment, etc.
- Do not place the P-touch labeller/batteries/AC adapter in direct sunlight or rain, near heaters or other hot appliances, in any location exposed to extremely high or low temperatures (e.g., on the dashboard or in the back of your car) or high humidity, or in dusty locations.
- Do not apply excessive pressure to the cutter lever.
- Do not try to print if the cassette is empty; it will damage the print head.
- Do not pull the tape while printing or feeding; it will damage the tape and machine.
- Any data stored in memory will be lost due to failure or repair of the P-touch labeller, or if the battery expires.
- The P-touch labeller is not equipped with a charging feature for rechargeable batteries.
- The printed text may differ from the text that appears on the LCD.
- The length of the printed label may differ from the displayed label length.
- A protective clear plastic sticker is placed over the display during manufacturing and shipping. This sticker should be removed prior to use.
- When power is disconnected for more than three minutes, all text, format settings and any text files stored in the memory will be cleared.

## Licensed Trademarks

### Monotype™

Monotype is a trademark of Monotype Imaging Inc. registered in the United States Patent and Trademark Office and may be registered in certain other jurisdictions.

### Frutiger™

Frutiger is a trademark of Linotype Corp. registered in the U.S. Patent and Trademark Office and may be registered in certain other jurisdictions in the name of Linotype Corp. or its licensee Linotype GmbH.

 
### Palatino™

Palatino is a trademark of Linotype GmbH registered in the U.S. Patent and Trademark Office and may be registered in certain other jurisdictions.


## BASIC USAGE

### Entering Text


#### ► Switching the character for entry[English/Arabic]




#### ► Switching Upper Case/Lower Case

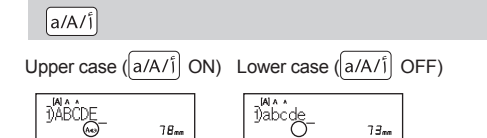

#### ► Making Two Lines of Text

Move the cursor to where the second line starts and press . Use either 9 mm or 12 mm wide tape for two line text.

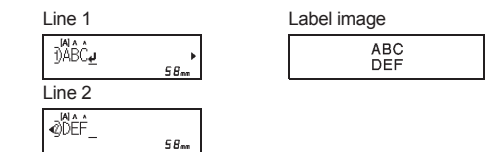



### NOTE

- The return symbol (↵) will be displayed when the Enter key is pressed.

## Printing Labels

#### ► Preview

 
You can preview the text before printing.

- The print preview is a generated image of the label, and may differ from the actual label when printed.
- When the LCD cannot display all the text at a time, press   to display the hidden text.

#### ► Feeding (Tape Feed)



#### ► Printing



- If you need only 1 copy of the label, press  without selecting the number of copies.
- The number of copies can also be specified by pressing a number key.
- To prevent damage to the tape, do not touch the cutter lever while the message "Printing..." or "Feeding..." is displayed.
- To cut off the label, push in the tape cutter lever on the upper-right corner of the machine.
- Peel the printed label from the backing and apply the label.
- You can print up to 9 copies of each label.

#### ► Using Print Options ( + )

 
##### [Numbering]

You can print many copies of the same text while incrementing a selected number by 1 after each label is printed.

**Example:** To print copies of a label containing a serial number (0123, 0124 and 0125)

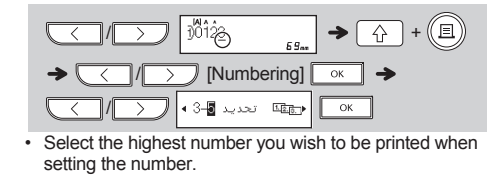


### NOTE

 - The machine automatically turns off if no keys are pressed within five minutes.
- To cancel any operation, press .


## Saving Label Files

  You can save up to 9 labels and recall them for printing at a later date. A maximum of 80 characters can be saved per file. You can also edit and overwrite stored labels.

 
#### ► Save




 
#### ► Print



#### ► Open




### NOTE

If you try to store a label when there is already a label stored to that number, a message "Overwrite?" will appear. Press  to save your new label. Press  to cancel.







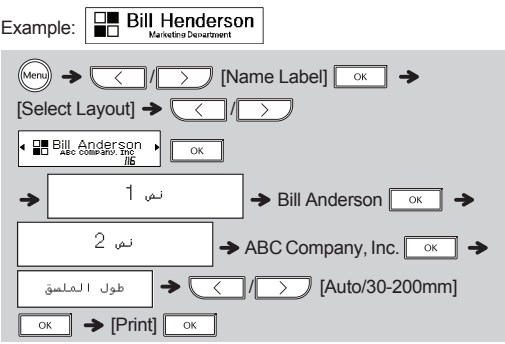










## USING TEMPLATES

### Name Label

  This function allows you to create various name labels using the built-in templates. Refer to the Name Label format table (A) on the enclosed insertion sheet.




### NOTE

- After the label is printed, cut along the printed dots (·) with scissors so that the label length matches the machine setting.
- If a specific label length has been selected,  also appears in the LCD.
- To Clear**  
By pressing , the letters will be deleted one by one. To delete all text and settings:  
 +  →   [Text&Format]   
To delete text only  
 +  →   [Text Only] 
- To clear all text, press  and , then "Clear?" appears. Press  to clear. Press  to cancel.
- When you access Decorative Mode or Name Label function, your most recently printed Decorative Mode or Name Label function text and label length will be recalled.
- Press  to return to the previous step.


 
 





## USEFUL FUNCTION KEYS

### Font Key


**1 Press  to select the settings to enter text.**





**2 Press   to select the settings.**

 
Font	 	Helsinki (Frutiger™)	ا ب ا
		Brussels (Palatino™)	ا ب ا
		Florida (Frutiger™)	ا ب ا
		Calgary (Palatino™)	ا ب ا
Size	 	Large	ا ب ا
		Medium	ا ب ا
		Small	ا ب ا
Width	 	Normal	ا ب ا
		× 2	ا ب ا
		× 1/2	ا ب ا
Style	 	Normal	ا ب ا
		Bold	ا ب ا
		Outline	ا ب ا
		Shadow	ا ب ا
		Solid	ا ب ا
		Italic	ا ب ا
		I+Bold	ا ب ا
		I+Outline	ا ب ا
		I+Shadow	ا ب ا
		Vertical	ا ب ا

### NOTE

- To cancel operations, press .
- The actual printed font size depends on the tape width, number of characters and number of input lines. Once characters reach a minimum size, the selected font will default to a custom font which is based on the Helsinki style. This allows labels to print using the smallest text possible on narrow or multi-line labels.

### Frame Key

Press   to select the frame design. Refer to the frame design table (B) on the enclosed insertion sheet.









### NOTE

To cancel operations, press .

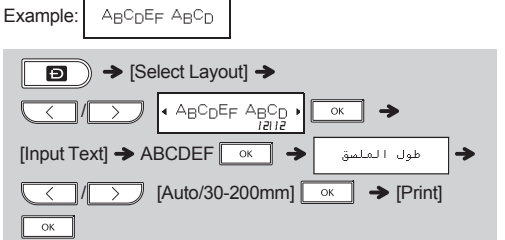

### Decorative Mode (Does not support Arabic text.)

 
This function allows you to create unique labels by using built-in templates. Refer to the Decorative mode format table (C) on the enclosed insertion sheet.




- To exit the Decorative Mode or Name Label function and return to the text input screen, do one of the following:  
a) Press .
- b) Press   to select [Cancel], and then press  when "Print" appears.
- These features are only available when using 12 mm wide tape cassettes.
- The maximum label length is 200 mm for Decorative Mode and Name Label function.
- When [Auto] is selected for "Label Length", the label will automatically adjust to the correct length for the text.
- Press  to return to the [Auto] setting for "Label Length" mode.

### Symbol Key

 Press   to select various symbols. Refer to the table of symbols (D) on the enclosed insertion sheet for a list of available symbols.



### NOTE

To cancel operations, press .

## Resetting the P-touch

You can reset the P-touch labeller when you want to initialise the settings, or in the event the P-touch labeller is not working properly.

- Turn off the P-touch labeller, hold down  and  and then press  to turn the P-touch back on.**

- Release  and .**  
The P-touch labeller turns on with the internal memory reset.

### NOTE

All text, settings and stored files are cleared.

## Specifications

<b>Dimensions:</b> (W x D x H)	Approx. 165(W) × 155(D) × 68(H)mm
<b>Weight:</b>	Approx. 490 g (without batteries and tape cassette)
<b>Power supply:</b>	Six AAA alkaline batteries (LR03) Six AAA Ni-MH batteries (HR03) AC adapter (AD-24ES UK: Optional on the PT-D200)
<b>Tape cassette:</b>	Brother TZe tape (width) 3.5 mm, 6 mm, 9 mm, 12 mm

\*1 Visit us at <http://solutions.brother.com/> for the latest information about the recommended batteries.