

Important Notice for Network Security: Model PT-E550W only


01

We strongly recommend changing the default password in order to protect your machine from unauthorized access.

To Check the Default Password

1. Make sure your printer is OFF.
2. On the printer's control panel, press and hold the **D** and **W** buttons, and then turn the printer ON.
3. The printer's default password appears on the LCD.

Example:

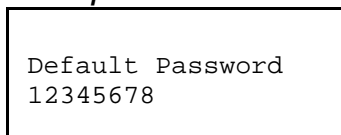

Default Password
12345678

If necessary, write down the password and store it in a secure place.

4. Turn the printer OFF.

To Change the Default Password

1. Type `http://printer_IP_address` in your web browser's address bar, where `printer_IP_address` is the printer's IP address or the print server name.

For example, if the printer's IP address is 192.168.1.2, type
`http://192.168.1.2`

2. If the machine prompts you for a password, type the default password.
3. Click the **Administrator** tab.
4. Type the password you want to use.
5. In the **Confirm New Password** field, retype the new password.
If necessary, write down the password and store it in a secure place.
6. Click **Submit**.