
 

 
 

 
 

 
 



**Model Name: PT-D460BT**

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB	0.6W	0.1W	0min	60min
Bluetooth	0.7W	0.1W	0min	60min
All network ports activated and connected	0.7W	0.1W	0min	60min

How to enable/disable Bluetooth

1. Check that the printer is on.

2.  →  → [Settings] →  /  →  → [Bluetooth] →  /   
 →  → [Bluetooth(On/Off)] →  /  →  [On/Off] →  / 