



## Information for compliance with Commission Regulation (EU) 2023/826

Model Name: QL-820NWBc

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
Ethernet	1.2W	-	3min	-
USB	1.0W	-	3min	-
Wireless LAN	1.3W	-	3min	-
Bluetooth	1.0W	-	3min	-
All network ports activated and connected	1.3W	-	3min	-




 

 

### Technical characteristics of the product model of the external power supply

Input : 100V-240Vac, 1.5A, 50-60Hz

 
 
 
 
 
 
Output : 25Vdc, 3.6A

### How to enable/disable Wireless LAN

#### To activate the wireless function:



 
 
 
 
 
1. Press and hold the  (Power) button to turn the Label Printer on.
2. Press the Menu button.
3. Press the  or  button to select the [WLAN] menu, and then press the [OK] button.
4. Press the  or  button to select [WLAN (On/Off)], and then press the [OK] button.
5. Press the  or  button to select [On], and then press the [OK] button.

#### To deactivate the wireless function:

 
 
 
 

 
1. Press the Menu button.
2. Press the  or  button to select the [WLAN] menu, and then press the [OK] button.
3. Press the  or  button to select [WLAN (On/Off)], and then press the [OK] button.
4. Press the  or  button to select [Off], and then press the [OK] button.

### How to enable/disable Bluetooth

#### To activate the Bluetooth function:

1. Press and hold the  (Power) button to turn the Label Printer on.
2. Press the Menu button.
3. Press the  or  button to select the [Bluetooth] menu, and then press the [OK] button.
4. Press the  or  button to select [Bluetooth (On/Off)], and then press the [OK] button.
5. Press the  or  button to select [On], and then press the [OK] button.

#### To deactivate the Bluetooth function:

1. Press the Menu button.
2. Press the  or  button to select the [Bluetooth] menu, and then press the [OK] button.
3. Press the  or  button to select [Bluetooth (On/Off)], and then press the [OK] button.
4. Press the  or  button to select [Off], and then press the [OK] button.

### Power consumption

Your Label Printer has a powersaving function that automatically turns it off if no key is pressed within a certain time, under certain operating conditions. When this function is deactivated, power consumption shall increase.