


brother®

BASIC USER'S GUIDE

MFC-J625DW

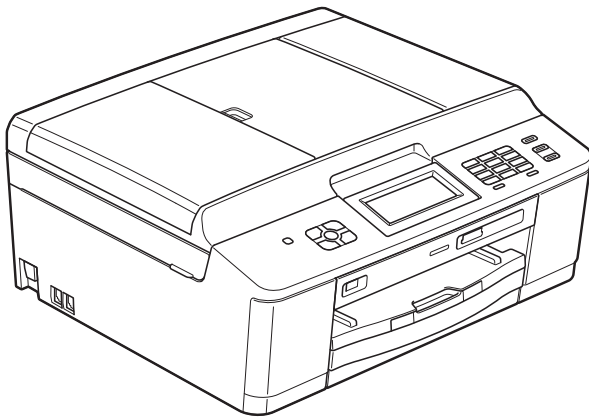

Version A
ARL/ASA/NZ

If you need to call Customer Service

Please complete the following information for future reference:

Model Number: MFC-J625DW

Serial Number: ¹ _____

Date of Purchase: _____

Place of Purchase: _____

¹ **The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.**

Register your product on-line at

<http://www.brother.com/registration/>

User's Guides and where do I find it?

Which manual?	What's in it?	Where is it?
Product Safety Guide	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
Quick Setup Guide	Follow the instructions for setting up your machine and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
Basic User's Guide	Learn the basic Fax, Copy, Scan and PhotoCapture Center™ operations and how to replace consumables. See troubleshooting tips.	Printed / In the box
Advanced User's Guide	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / CD-ROM
Software User's Guide	Follow these instructions for Printing, Scanning, Network Scanning, PhotoCapture Center™, Remote Setup, PC-Fax, Web Services (Scan), and using the Brother ControlCenter utility.	PDF file / CD-ROM
Network Glossary	This Guide provides basic information about advanced network features of Brother machines along with explanations about general networking and common terms.	PDF file / CD-ROM
Network User's Guide	This Guide provides useful information about wireless network settings and security settings using the Brother machine. You can also find supported protocol information for your machine and detailed troubleshooting tips.	PDF file / CD-ROM
Mobile Print/Scan Guide	This Guide provides useful information about printing data from your mobile phone and transmitting scanned data from the Brother machine to your mobile phone.	PDF file / Brother Solutions Center ¹

¹ Visit us at <http://solutions.brother.com/>.

Table of Contents

(BASIC USER'S GUIDE)

1	General information	1
	Using the documentation	1
	Symbols and conventions used in the documentation	1
	Accessing the Advanced User's Guide, Software User's Guide, Network User's Guide, and Network Glossary	2
	Viewing Documentation	2
	Accessing Brother Support (Windows®)	4
	Accessing Brother Support (Macintosh)	5
	Control panel overview	6
	LCD screen indications	8
	Status LED	9
	Basic Operations	9
	Favourite Settings	10
	Registering Favourite Settings	10
	Changing Favourite Settings	11
	Deleting Favourite Settings	11
	Recalling Favourite Settings	11
	Volume Settings	12
	Ring Volume	12
	Beeper Volume	12
	Speaker Volume	12
	LCD display	13
	Setting the backlight brightness	13
2	Loading paper	14
	Loading paper and other print media	14
	Loading envelopes and postcards	17
	Loading photo paper	19
	Printable area	22
	Paper settings	23
	Paper Type	23
	Paper Size	23
	Acceptable paper and other print media	24
	Recommended print media	24
	Handling and using print media	25
	Choosing the right print media	26
3	Loading documents	28
	How to load documents	28
	Using the ADF	28
	Using the scanner glass	29
	Unscannable area	30

4	Sending a fax	31
	How to send a fax	31
	Stop faxing	32
	Setting scanner glass size for faxing	32
	Colour fax transmission	32
	Cancelling a fax in progress	32
	Transmission Verification Report.....	33
5	Receiving a fax	34
	Receive Modes	34
	Choose the Receive Mode	34
	Using Receive Modes	36
	Fax Only	36
	Fax/Tel.....	36
	Manual.....	36
	External TAD	36
	Receive Mode settings	37
	Ring Delay	37
	F/T Ring Time (Fax/Tel mode only).....	37
	Fax Detect	38
6	Telephone and external devices	39
	Voice operations	39
	Tone or pulse (Not Available for New Zealand).....	39
	Fax/Tel mode.....	39
	Telephone Service for Australia.....	39
	Distinctive Ring.....	39
	Caller ID.....	41
	How Does the Caller ID Work?.....	41
	The Caller ID is Stored in Your Machine Memory	41
	Telephone Service for New Zealand	42
	FaxAbility	42
	Caller ID.....	43
	How Does the Caller ID Work?.....	44
	Telephone Service for Some Countries.....	44
	Distinctive Ring (For Singapore and Hong Kong).....	44
	Caller ID (For Singapore and Hong Kong)	45
	Connecting an external TAD (telephone answering device).....	46
	Connections settings	46
	Recording an outgoing message (OGM) on an external TAD	47
	Multi-line connections (PABX).....	47
	External and extension telephones.....	47
	Connecting an external or extension telephone	47
	Operation from external and extension telephones	48
	Using a cordless external telephone	48
	Using remote codes.....	48

7	Dialling and storing numbers	50
	How to dial	50
	Manual dialling.....	50
	Speed Dialling	50
	Fax Redial	50
	Additional Dialling Operations.....	51
	Outgoing Call history	51
	Caller ID history	51
	Storing numbers	52
	Storing a pause	52
	Storing Speed Dial numbers.....	52
	Changing Speed Dial names or numbers.....	53
8	Making copies	54
	How to copy	54
	Stop copying	54
	Copy settings.....	54
	Paper Options.....	55
9	Printing photos from a memory card or USB Flash memory drive	56
	PhotoCapture Center™ operations (PHOTO mode)	56
	Using a memory card or USB Flash memory drive	56
	Getting started	57
	Print Images.....	59
	View Photos.....	59
	PhotoCapture Center™ print settings.....	59
	How to scan to a memory card or USB Flash memory drive	60
10	How to print from a computer	61
	Printing a document.....	61
11	How to scan to a computer	62
	Scanning a document.....	62
	Scanning using the SCAN key.....	62
	Scanning using a scanner driver	63
	Scanning using the ControlCenter.....	63

A	Routine maintenance	64
	Replacing the ink cartridges	64
	Cleaning and checking the machine	67
	Cleaning the scanner glass	67
	Cleaning the print head	68
	Checking the print quality	68
	Checking the print alignment	69
B	Troubleshooting	70
	Error and Maintenance messages	70
	Error animations display	78
	Transferring your faxes or Fax Journal report	78
	Document jam	79
	Printer jam or paper jam	80
	Troubleshooting	86
	If you are having difficulty with your machine	86
	Dial Tone detection	93
	Telephone line interference / VoIP	93
	Machine Information	94
	Checking the serial number	94
	Reset functions	94
	How to reset the machine	94
C	Menu and features	95
	On-screen programming	95
	Menu table	96
	Entering Text	117
	Inserting spaces	117
	Making corrections	117
	Repeating letters	117
D	Specifications	118
	General	118
	Print media	120
	Fax	121
	Copy	122
	PhotoCapture Center™	123
	PictBridge	124
	Scanner	125
	Printer	126
	Interfaces	127
	Computer requirements	128
	Consumable items	129
	Network (LAN)	130
E	Index	131

Table of Contents

(ADVANCED USER'S GUIDE)

The Advanced User's Guide explains the following features and operations.

You can view the Advanced User's Guide on the CD-ROM.

1 General setup

IMPORTANT NOTE

Memory storage
Setting Daylight Saving Time
(MFC models only)
Sleep Mode
Auto Power Down (DCP models only)
LCD display
Mode Timer (MFC models only)

2 Security features **(MFC models only)**

TX Lock

3 Sending a fax **(MFC models only)**

Additional sending options
Additional sending operations
Polling overview

4 Receiving a fax **(MFC models only)**

Memory Receive (Monochrome only)
Remote Retrieval
Additional receiving operations
Polling overview

5 Dialling and storing numbers **(MFC models only)**

Additional dialling operations
Additional ways to store numbers

6 Printing reports

Fax reports (MFC models only)
Reports

7 Making copies

Copy settings

8 Printing photos from a **memory card or USB Flash** **memory drive (MFC-J625DW** **and DCP-J725DW only)**

PhotoCapture Center™ operations
Print Images
PhotoCapture Center™ print settings
Scan to a memory card or USB Flash
memory drive

9 Printing photos from a **camera (MFC-J625DW and** **DCP-J725DW only)**

Printing photos directly from a
PictBridge camera
Printing photos directly from a digital
camera (without PictBridge)

A Routine maintenance

Cleaning and checking the machine
Packing and shipping the machine

B Glossary

C Index

Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

Bold	Bold typeface identifies specific buttons on the machine's control panel, or on the computer screen.
<i>Italics</i>	Italicized typeface emphasizes an important point or refers you to a related topic.
Courier New	Text in the Courier New font identifies messages on the LCD of the machine.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

IMPORTANT

IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.



Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.



Electrical Hazard icons alert you to possible electrical shocks.

Accessing the Advanced User's Guide, Software User's Guide, Network User's Guide, and Network Glossary

This Basic User's Guide does not contain all the information about the machine, such as how to use the advanced features of the Fax, Copy, PhotoCapture Center™, Printer, Scanner, PC-Fax, and Network. When you are ready to learn detailed information about these operations, you can read the **Advanced User's Guide**, **Software User's Guide**, **Network User's Guide**, and **Network Glossary** that are on the CD-ROM.

Viewing Documentation

Viewing Documentation (Windows®)

To view the documentation, from the **Start** menu, select **Brother, MFC-XXXX** (where XXXX is your model name) from the programs list, and then choose **User's Guides**.


If you have not installed the software, you can find the documentation on the CD-ROM by following the instructions below:

- 1 Turn on your PC. Insert the Brother CD-ROM into your CD-ROM drive.

Note

If the Brother screen does not appear automatically, go to **My Computer (Computer)**, double-click the CD-ROM icon, and then double-click **start.exe**.

- 2 If the model name screen appears, click your model name.
- 3 If the language screen appears, click your language. The CD-ROM Top Menu will appear.

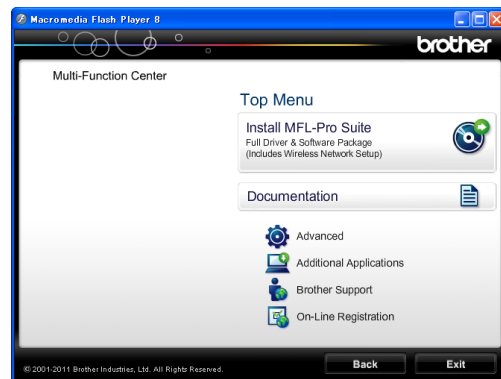

- 4 Click **Documentation**.
- 5 Click **PDF documents**. If the country screen appears, choose your country. After the list of User's Guides appears, choose the guide you want to read.

Viewing Documentation (Macintosh)

- 1 Turn on your Macintosh. Insert the Brother CD-ROM into your CD-ROM drive. The following window will appear.



- 2 Double-click the **Documentation** icon.
- 3 Double-click your language folder.
- 4 Double-click **top.pdf**. If the country screen appears, choose your country.
- 5 After the list of User's Guides appears, choose the guide you want to read.

How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software User's Guide

- *Scanning*
- *ControlCenter*
- *Network Scanning*

ScanSoft™ PaperPort™ 12SE with OCR How-to-Guides

(Windows® users)

(Not available in Hong Kong and Taiwan)

- The complete ScanSoft™ PaperPort™ 12SE with OCR How-to-Guides can be viewed from the Help section in the ScanSoft™ PaperPort™ 12SE application.

Presto! PageManager User's Guide

(Windows® users)

(Hong Kong and Taiwan users only)

- Instructions for scanning directly from Presto! PageManager. The complete Presto! PageManager User's Guide can be viewed from the Help selection in the Presto! PageManager application.

Presto! PageManager User's Guide

(Macintosh users)



Note

Presto! PageManager must be downloaded and installed before use. See *Accessing Brother Support (Macintosh)* >> page 5 for further instructions.

- The complete Presto! PageManager User's Guide can be viewed from the Help section in the Presto! PageManager application.

How to find Network setup instructions

Your machine can be connected to a wireless network.

Basic setup instructions

➤➤ Quick Setup Guide

If your wireless access point or router supports Wi-Fi Protected Setup or AOSS™


➤➤ Quick Setup Guide

Network setup ➤➤ Network User's Guide

Accessing Brother Support (Windows®)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the CD-ROM.

- Click **Brother Support** on the **Top Menu**. The following screen will appear:

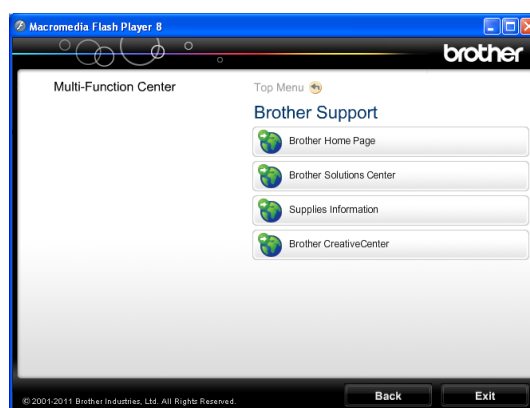


- To access our website (<http://www.brother.com/>), click **Brother Home Page**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.
- To access the Brother CreativeCenter (<http://www.brother.com/creativecenter/>) for FREE photo projects and printable downloads, click **Brother CreativeCenter**.
- To return to the top menu, click **Back** or if you have finished, click **Exit**.

Accessing Brother Support (Macintosh)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the CD-ROM.

- Double-click the **Brother Support** icon. The following screen will appear:

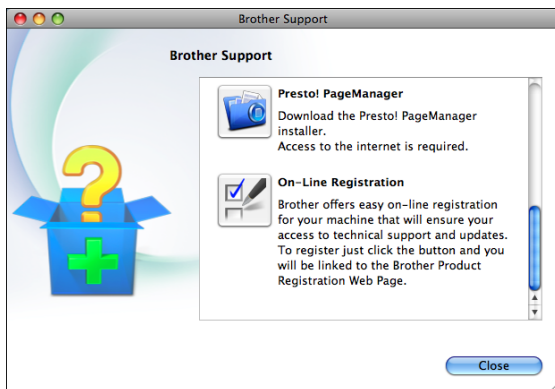






- To download and install Presto! PageManager, click **Presto! PageManager**.
- To register your machine from the Brother Product Registration Page (<http://www.brother.com/registration/>), click **On-Line Registration**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.

Control panel overview



1 Mode keys:

-  **FAX**
Lets you access the FAX mode.
-  **SCAN**
Lets you access the SCAN mode.
-  **COPY**
Lets you access the COPY mode.
-  **PHOTO**
Lets you access the PHOTO mode.
-  **Home**
Lets you return to the Ready mode.

2 Telephone keys:



- **Redial/Pause**
Redials one of the last 30 numbers called.
It also inserts a pause when dialling.

■ Hook

Press before dialling if you want to make sure a fax machine will answer, and then press **Mono Start** or **Colour Start**.

Also, press this key after picking up the handset of an external telephone during the F/T pseudo/double-ring.

3 Start keys:

-  **Mono Start**
Lets you start sending faxes or making copies in monochrome. Also lets you start a scanning operation (in colour or mono depending on the scan setting in the ControlCenter software).
-  **Colour Start**
Lets you start sending faxes or making copies in full colour. Also lets you start a scanning operation (in colour or mono, depending on the scan setting in the ControlCenter software).



4 Stop/Exit

Stops an operation or exits the menu.

5 **Dial Pad**

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.


6 **LCD (Liquid Crystal Display)**


This is a Touchscreen LCD. You can access the menus and options by pressing buttons displayed on the screen.


Also, you can adjust the angle of the screen by lifting it.

7

You can turn the machine on and off.


Press  to turn the machine on.

Press and hold down  to turn the machine off. The LCD will show *Shutting Down* and will stay on for a few seconds before going off. If you have connected an external telephone or TAD, it is always available.

If you turn the machine off using the  button, it will still periodically clean the print head to maintain print quality. To prolong print head life, provide the best ink cartridge economy, and maintain print quality, you should keep your machine connected to the power at all times.

LCD screen indications

The LCD shows the current machine status when the machine is idle.

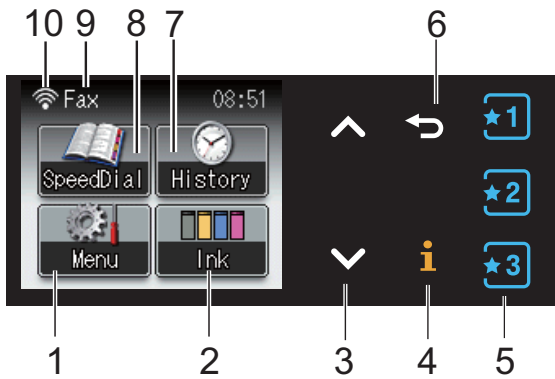

1 Menu

Lets you access the main menu.

2 Ink

Lets you see the available ink volume.
Also, lets you access the *Ink* menu.

3 ^ or v

Press to display the previous or next page. The Up and Down arrow buttons do not light up when there is only one page.

4 i

If the Information button lights up, you can press it to view information about machine functions or error messages.

5 *1 *2 *3

Press to recall present Favourite settings. These buttons are always lit, even when you have not registered your Favourite settings. Press a Favourite button to display instructions about how to set up a Favourite.

6 ↶

Press to go back to the previous menu level.

7 History

Lets you view a list of outgoing calls and the Caller ID history.
Also, lets you send a fax to the number you have chosen from the lists.

8 SpeedDial

Lets you set up Speed Dial and Group numbers.

Also, you can search for the number you want to dial.

9 Current Receive Mode

Lets you see the current Receive Mode.

- Fax (Fax Only)
- F/T (Fax/Tel)
- TAD (External TAD)
- Mnl (Manual)



Note


(For Australia, Singapore and Hong Kong)
When the Distinctive Ring feature is turned on, the LCD shows D/R. For details, see *Distinctive Ring* >> page 39 and 44 for your relevant country.

(For New Zealand)
When the FaxAbility feature is turned on, the LCD shows D/R. For details, see *FaxAbility* >> page 42.

10 Wireless Status

A four level indicator shows the current wireless signal strength if you are using a wireless connection.




The warning icon  appears when there is an error or maintenance message. For details, see *Error and Maintenance messages* >> page 70.

Status LED

When you turn the machine on, the status LED lights up.

When the memory card or USB Flash memory drive is being read or written to, the status LED blinks.

When the machine is in Sleep Mode, the status LED will be off.

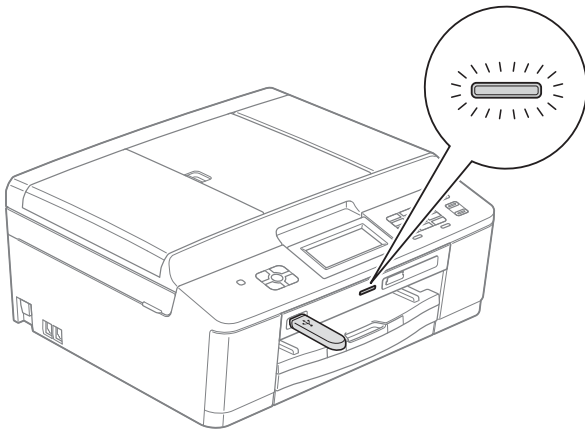

Basic Operations

To operate the Touchscreen, use your finger to press the **Menu** or option button directly on the Touchscreen. To display and access all the screen menus or options in a setting, press **▲** or **▼** to scroll through them.

The following steps show how to change a setting in the machine. In this example the Receive mode setting is changed from **Fax Only** to **Fax/Tel**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Initial Setup**.



- 3 Press **Initial Setup**.

- 4 Press **▲** or **▼** to display **Receive Mode**.



- 5 Press **Receive Mode**.

- 6 Press **▲** or **▼** to display **Fax/Tel**.

- 7 Press **Fax/Tel**.



Note

Press **↶** to go back to the previous level.

- 8 Press **Stop/Exit**.

Favourite Settings

You can register the fax, copy and scan settings you use most often by setting them as your Favourite Settings. Later you can recall and apply those settings quickly and easily. You can register three Favourites.

The following settings can be included in a fax, copy or scan Favourite:

Copy

- Quality
- Paper Type
- Paper Size
- Enlarge/Reduce
- Density
- Stack/Sort
- Page Layout
- Duplex Copy

Fax

- Address
- Fax Resolution
- Contrast
- Batch TX
- Real Time TX
- Overseas Mode
- Glass ScanSize

Scan (Scan to Media)

- Quality
- File Type
- File Name

Registering Favourite Settings

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Favorite Settings**. Press **Favorite Settings**.
- 3 Press a Favourite displayed as **"-Blank-"**.



Note

Each Favourite button will show the word **"-Blank-"** next to it before you register it.

- 4 Press **Next** to display the modes **Copy**, **Fax** and **Scan**.
- 5 Press **Copy**, **Fax** or **Scan** for the mode you want to register.
- 6 Press **▲** or **▼** to display the available settings for the mode you chose in step 5, and then press the setting you want to store.
- 7 Press **▲** or **▼** to display the available options for the setting, and then press the option you want. Repeat steps 6 and 7 until you have chosen all the settings for this Favourite.
- 8 When you finish, press **OK**.
- 9 Press the buttons on the Touchscreen to enter a name for the Favourite. (To help you enter letters, see *Entering Text* >> page 117.) Press **OK**.
- 10 To finish and register the settings for this Favourite, press **Yes**.
- 11 Press **OK** to confirm.
- 12 Press **Stop/Exit**.

Changing Favourite Settings

You can change the settings registered to a Favourite.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display Favorite Settings.
Press **Favorite Settings**.
- 3 Press the Favourite (1, 2, or 3) you want to change.
- 4 Press **Change**, and then **Yes** to confirm.
- 5 Press **▲** or **▼** to display the available settings, and then press the setting you want to change.
- 6 Press **▲** or **▼** to display the available options, and then choose your new option.

Repeat steps 5 and 6 to change other settings as needed.
- 7 Press **OK** when you are finished changing settings.
- 8 To edit the name, hold down **ⓧ** to delete the current name, and then enter a new name by pressing the buttons on the Touchscreen. (To help you enter letters, see *Entering Text* >> page 117.)
Press **OK**.
- 9 To finish and register the settings for this Favourite, press **Yes**.
- 10 Press **OK** to confirm.
- 11 Press **Stop/Exit**.

Deleting Favourite Settings

You can delete a Favourite.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display Favorite Settings.
Press **Favorite Settings**.
- 3 Press the Favourite (1, 2, or 3) that you want to delete.
- 4 Press **Delete** to delete the Favourite that you chose in step 3.
Press **Yes** to confirm.
- 5 Press **Stop/Exit**.

Recalling Favourite Settings



Buttons for each Favourite are always displayed on the screen. To recall a Favourite, simply press its button.

Volume Settings

Ring Volume

You can choose a range of ring volume levels, from **High** to **Off**. The machine will keep your new default setting until you change it.

Setting the Ring Volume from the menu

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Volume**.
- 5 Press **Volume**.
- 6 Press **▲** or **▼** to display **Ring**.
- 7 Press **Ring**.
- 8 Press **Low**, **Med**, **High** or **Off**.
- 9 Press **Stop/Exit**.

Beeper Volume

When the beeper is on, the machine will beep when you press a key, make a mistake, or after you send or receive a fax.

You can choose a range of beeper volume levels, from **High** to **Off**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Volume**.
- 5 Press **Volume**.
- 6 Press **▲** or **▼** to display **Beeper**.
- 7 Press **Beeper**.
- 8 Press **Low**, **Med**, **High** or **Off**.
- 9 Press **Stop/Exit**.

Speaker Volume

You can choose a range of speaker volume levels, from **High** to **Off**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Volume**.
- 5 Press **Volume**.
- 6 Press **▲** or **▼** to display **Speaker**.
- 7 Press **Speaker**.
- 8 Press **Low**, **Med**, **High** or **Off**.
- 9 Press **Stop/Exit**.

LCD display

Setting the backlight brightness

If you are having difficulty reading the LCD, try changing the brightness setting.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **LCD Settings**.
- 5 Press **LCD Settings**.
- 6 Press **▲** or **▼** to display **Backlight**.
- 7 Press **Backlight**.
- 8 Press **Light**, **Med** or **Dark**.
- 9 Press **Stop/Exit**.

2

Loading paper


Loading paper and other print media

Note


To print on Photo (10 × 15 cm) or Photo L (89 × 127 mm) paper, you must use the photo paper tray. (See *Loading photo paper* >> page 19.)

Load only one size of paper and one type of paper in the paper tray at any one time.

- 1 Pull the paper tray completely out of the machine.

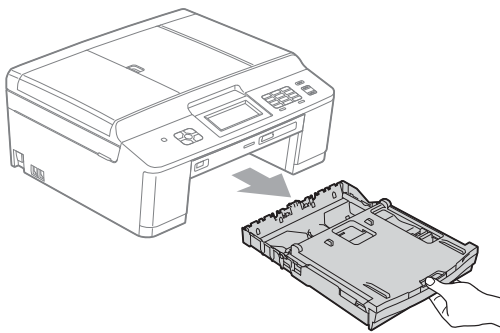



- 2 Lift the output paper tray cover (1).

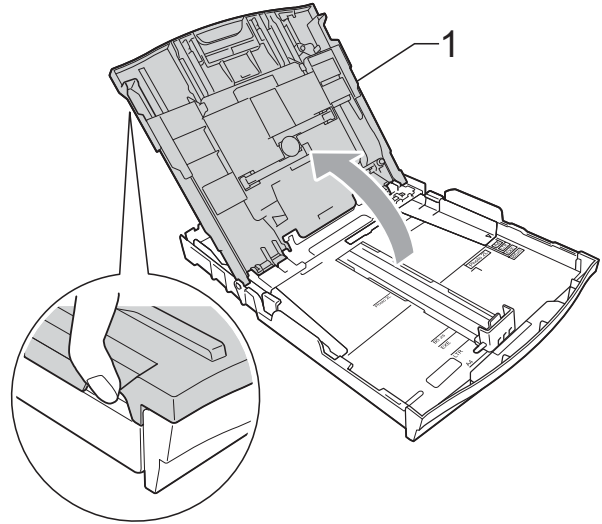

- 3 With both hands, gently press and slide the paper side guides (1) and then the paper length guide (2) to fit the paper size. Make sure that the triangular marks (3) on the paper side guides (1) and paper length guide (2) line up with the marks for the paper size you are using.


Note

If the paper support flap (1) is open, close it, and then close the paper support (2).

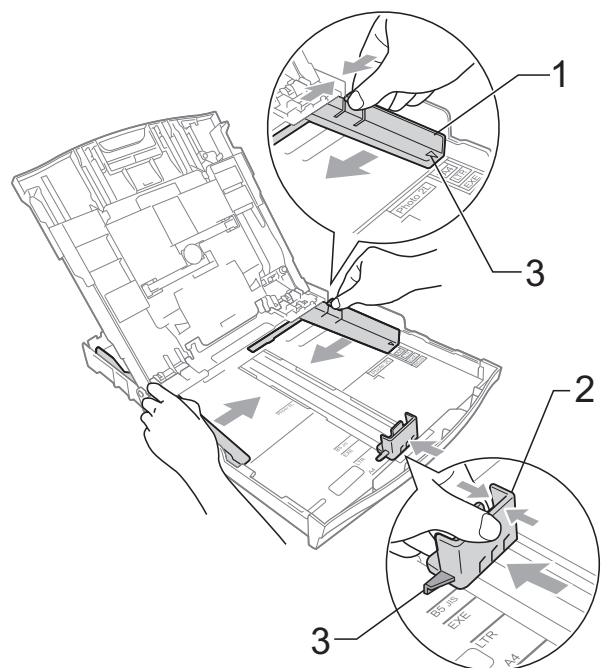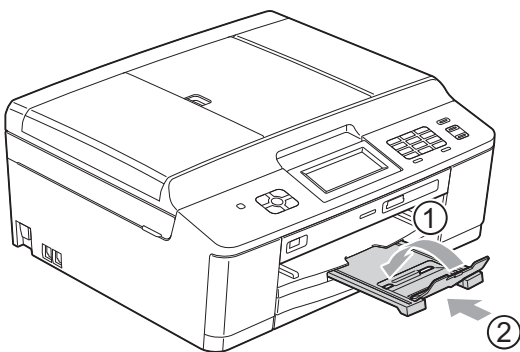


**Note**

When you are using Legal size paper, press and hold the universal guide release button (1) as you slide out the front of the paper tray. (Only available for some countries.)

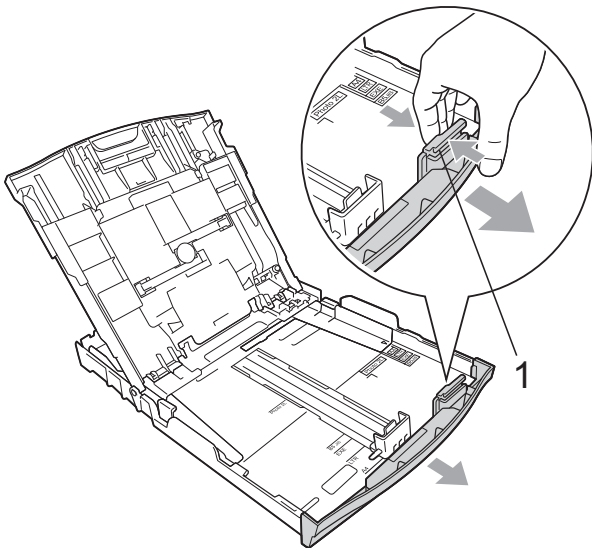


- 4 Fan the stack of paper well to avoid paper jams and misfeeds.

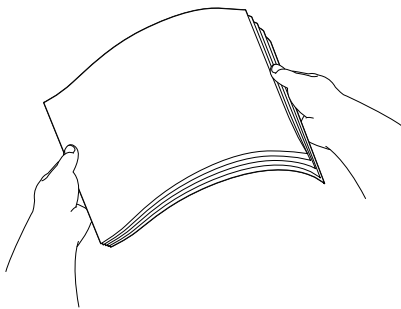**Note**

Always make sure that the paper is not curled or wrinkled.

5

- Gently put the paper into the paper tray print side down and top edge in first. Check that the paper is flat in the tray.

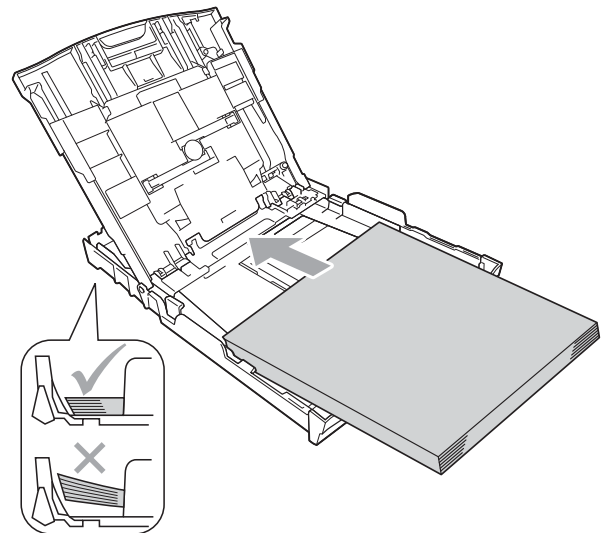
**IMPORTANT**

Be careful not to push the paper in too far; it may lift at the back of the tray and cause paper feed problems.


**Note**

When there are only a few sheets of paper left in the paper tray, the machine may start to misfeed. Load at least 10 sheets of paper into the paper tray.


- 6 Gently adjust the paper side guides (1) to fit the paper using both hands. Make sure the paper side guides touch the sides of the paper.

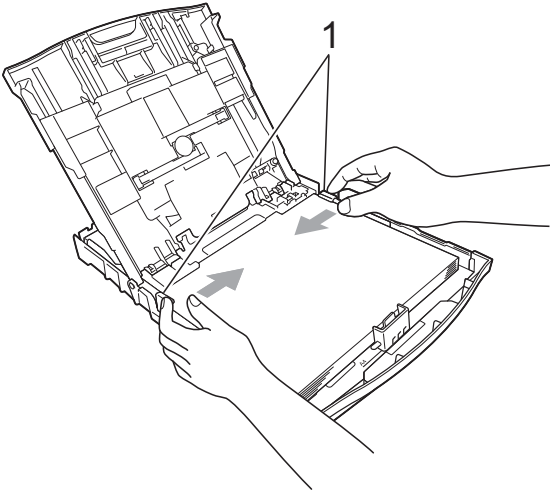


- 7 Close the output paper tray cover.

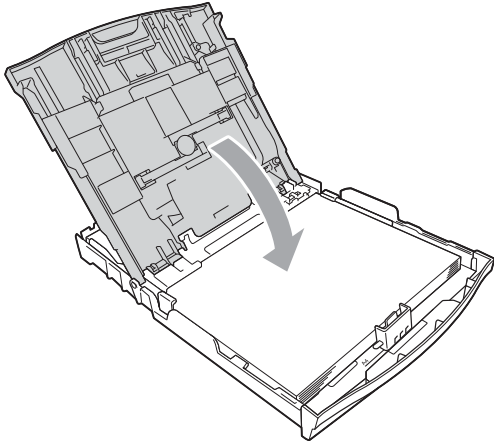

- 8 Slowly push the paper tray completely into the machine.

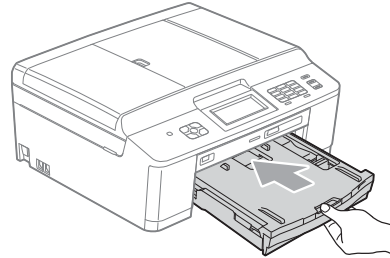

- 9 While holding the paper tray in place, pull out the paper support (1) until it clicks, and then unfold the paper support flap (2).

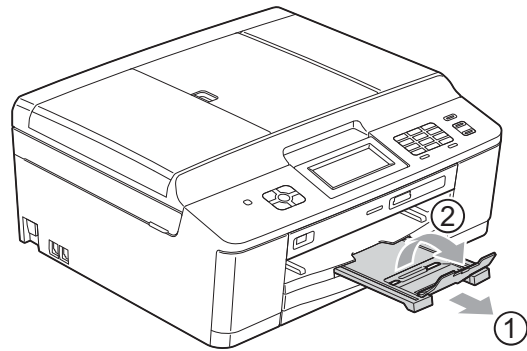

! IMPORTANT

DO NOT use the paper support flap for Legal size paper. (Only available for some countries.)

Loading envelopes and postcards



About envelopes

- Use envelopes that weigh between 80 to 95 gsm.
- Some envelopes need margin settings to be set in the application. Make sure you do a test print first before printing many envelopes.

! IMPORTANT

DO NOT use any of the following types of envelopes, as they will cause paper feed problems:

- That are of a baggy construction.
- That have windows.
- That are embossed (have raised writing on them).
- That have clasps or staples.
- That are pre-printed on the inside.

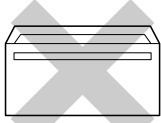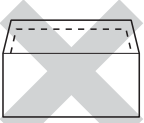Glue	Double flaps
	




Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

Loading envelopes and postcards


- 1 Before loading, press the corners and sides of envelopes or postcards to make them as flat as possible.

! IMPORTANT

If envelopes or postcards are “double-feeding”, put one envelope or postcard in the paper tray at a time.

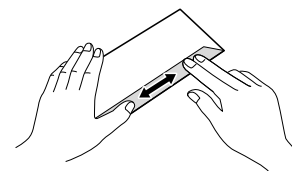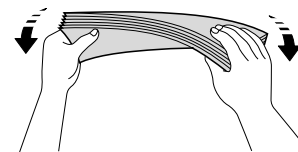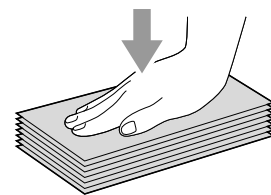


- 2 Put envelopes or postcards in the paper tray with the address side down and the leading edge (top of the envelopes) in first as shown in the illustration. Using both hands, gently press and slide the paper side guides (1) and paper length guide (2) to fit the size of the envelopes or postcards.

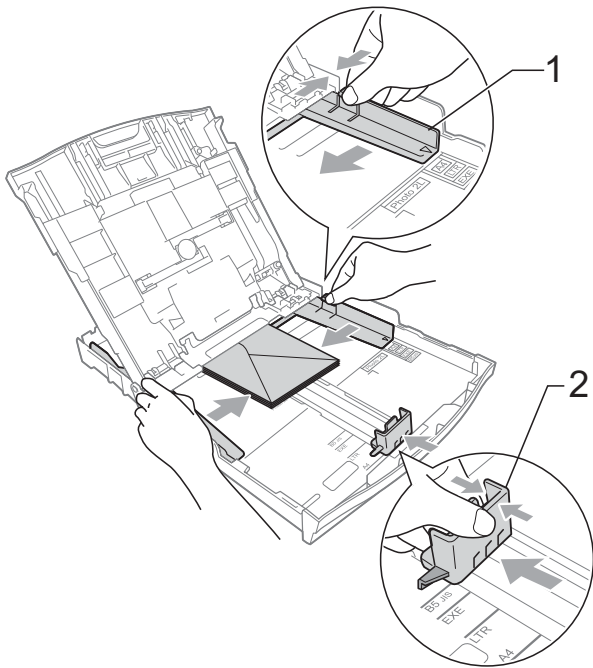

If you have problems printing on envelopes with the flap on the short edge, try the following:

- 1 Open the envelope flap.
- 2 Put the envelope into the paper tray with the address side down and the flap positioned as shown in the illustration.

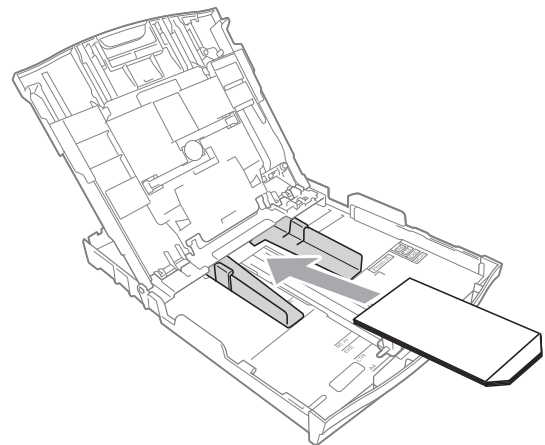


- 3 Select **Reverse Print** in the printer driver's dialogue box and then adjust the size and margin in your application.
➤➤Software User's Guide: *Printing* (Windows®)
➤➤Software User's Guide: *Printing and Faxing* (Macintosh)


Loading photo paper

Use the photo paper tray which has been assembled on the top of the output paper tray cover, to print on Photo (10 × 15 cm) and Photo L (89 × 127 mm) size paper. When you use the photo paper tray, you do not have to take out the paper that is in the tray beneath it. (For the maximum number of photo cards you can load, see *Paper weight, thickness and capacity* >> page 27.)

- 1 Squeeze the blue photo paper tray release button (1) using your right index finger and thumb and push the photo paper tray forward until it clicks into the photo printing position (2).

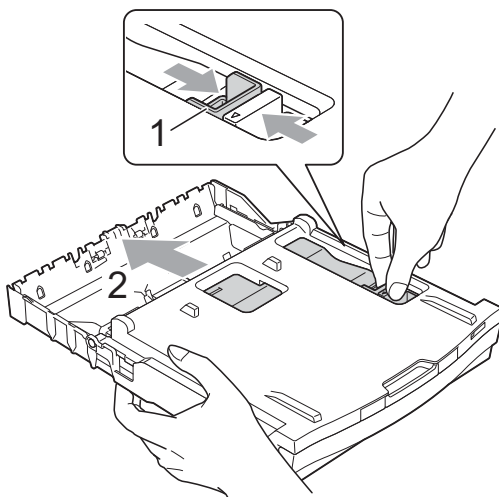


- 2 Press and slide the paper side guides (1) and paper length guide (2) to fit the paper size.

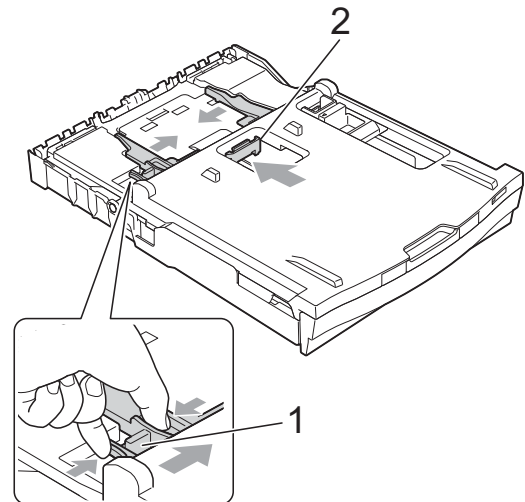

- 3 Put the photo paper into the photo paper tray and gently adjust the paper side guides to the paper. Make sure the paper side guides touch the sides of the paper. Check that the paper is flat in the tray.


 **Note**

- Always make sure that the paper is not curled or wrinkled.
- The Photo indicator confirms that the photo paper tray is in the *Photo* printing position. The A4/LTR indicator confirms that the photo paper tray is in the *Normal* printing position.

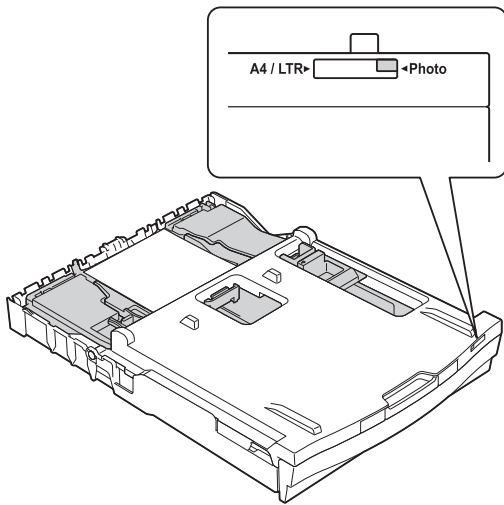

- 4 When you have finished printing photos return the photo paper tray to the *Normal* printing position. If you do not, you will get a *No Paper Fed* error when using A4 sized paper.

Squeeze the blue photo paper tray release button (1) using your right index finger and thumb and pull the photo paper tray back until it clicks (2).

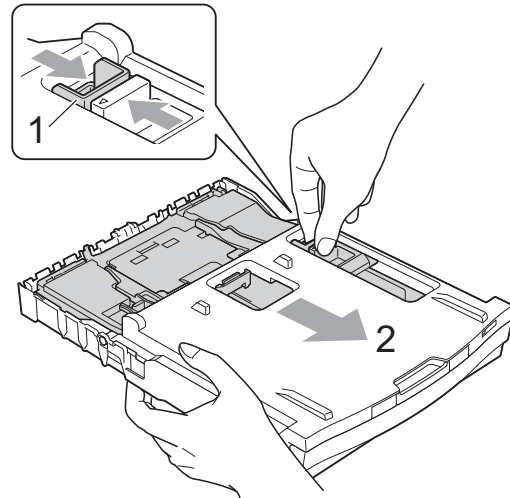

! IMPORTANT

If you do not return the photo paper tray to the *Normal* printing position after printing photos, you will get a *No Paper Fed* error when you use cut sheet paper.

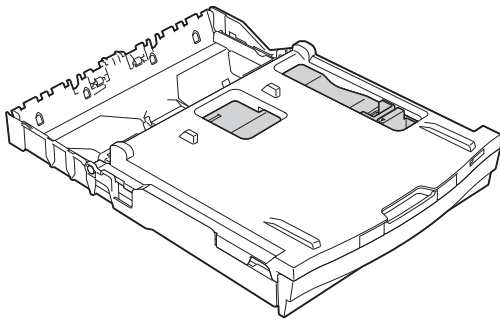


Photo paper tray in the normal printing position

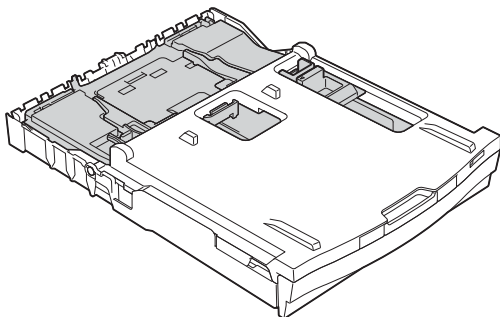


Photo paper tray in the photo printing position


Printable area

The printable area depends on the settings in the application you are using. The figures below show the unprintable areas on cut sheet paper and envelopes. The machine can print in the shaded areas of cut sheet paper when the Borderless print feature is available and turned on.


➤➤ Software User's Guide: *Printing* (Windows®)

➤➤ Software User's Guide: *Printing and Faxing* (Macintosh)

Cut Sheet Paper

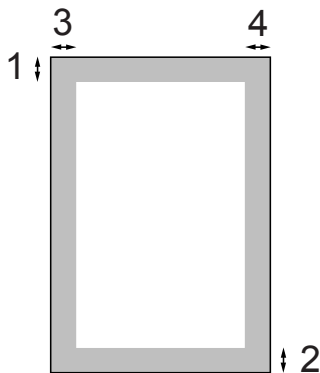

Envelopes

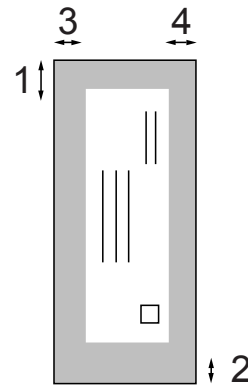

	Top (1)	Bottom (2)	Left (3)	Right (4)
Cut Sheet	3 mm	3 mm	3 mm	3 mm
Envelopes	22 mm	22 mm	3 mm	3 mm



Note

The Borderless feature is not available for envelopes and duplex printing.

Paper settings

Paper Type

To get the best print quality, set the machine for the type of paper you are using.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Paper Type**.
- 5 Press **Paper Type**.
- 6 Press **▲** or **▼** to display **Plain Paper**, **Inkjet Paper**, **Brother BP71**, **Brother BP61**, **Other Glossy** or **Transparency**, and then press the option you want to set.
- 7 Press **Stop/Exit**.



Note

The machine ejects paper with printed surfaces face up onto the paper tray at the front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.

Paper Size

You can use five sizes of paper for printing copies: A4, A5, Letter, Legal ¹ and 10 × 15 cm and three sizes for printing faxes: A4, Letter and Legal ¹. When you change the size of paper you load in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **General Setup**.
- 3 Press **General Setup**.
- 4 Press **▲** or **▼** to display **Paper Size**.
- 5 Press **Paper Size**.
- 6 Press **▲** or **▼** to display **A4**, **A5**, **10x15cm**, **Letter** or **Legal** ¹ and then press the option you want to set.
- 7 Press **Stop/Exit**.

¹ Only available for some countries.

Acceptable paper and other print media

The print quality can be affected by the type of paper you use in the machine.

To get the best print quality for the settings you have chosen, always set the Paper Type to match the type of paper that is loaded in the tray.

You can use plain paper, inkjet paper (coated paper), glossy paper, transparencies and envelopes.

We recommend testing various paper types before buying large quantities.

For best results, use Brother paper.

- When you print on inkjet paper (coated paper), transparencies and glossy paper, be sure to choose the correct print media in the “**Basic**” tab of the printer driver or in the Paper Type setting of the menu. (See *Paper Type* >> page 23.)
- When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
- When printing on to transparencies, load one extra sheet in the paper tray.
- When you use transparencies or photo paper, remove each sheet at once to prevent smudging or paper jams.
- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

Recommended print media

To get the best print quality, we suggest using Brother paper. (See the table below.)

If Brother paper is not available in your country, we recommend testing various papers before purchasing large quantities.

We recommend using “3M Transparency Film” when you print on transparencies.

Brother paper

Paper Type	Item
A4 Plain	BP60PA
A4 Glossy Photo	BP71GA4
A4 Inkjet (Matte)	BP60MA
10 × 15 cm Glossy Photo	BP71GP


Handling and using print media

- Store paper in its original packaging and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- Avoid touching the shiny (coated) side of photo paper. Load photo paper with the shiny side facing down.
- Avoid touching either side of transparencies because they absorb water and perspiration easily, and this may cause decreased output quality. Transparencies designed for laser printers/copiers may stain your next document. Use only transparencies recommended for inkjet printing.

! IMPORTANT

DO NOT use the following kinds of paper:

- Damaged, curled, wrinkled, or irregularly shaped paper

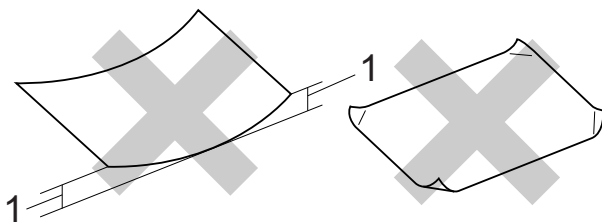

1 2 mm or greater curl may cause jams to occur.

- Extremely shiny or highly textured paper
- Paper that cannot be arranged uniformly when stacked
- Short grain paper

Paper capacity of the output paper tray cover

Up to 50 sheets of 80 gsm A4 paper.

- Transparencies and photo paper must be picked up from the output paper tray cover one page at a time to avoid smudging.

Choosing the right print media

Paper type and size for each operation

Paper Type	Paper Size		Usage			
			Fax	Copy	Photo Capture	Printer
Cut Sheet	A4	210 × 297 mm (8.3 × 11.7 in.)	Yes	Yes	Yes	Yes
	Letter	215.9 × 279.4 mm (8 1/2 × 11 in.)	Yes	Yes	Yes	Yes
	Legal ¹	215.9 × 355.6 mm (8 1/2 × 14 in.)	Yes	Yes	–	Yes
	Executive	184 × 267 mm (7 1/4 × 10 1/2 in.)	–	–	–	Yes
	JIS B5	182 × 257 mm (7.2 × 10.1 in.)	–	–	–	User Defined
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes
	A6	105 × 148 mm (4.1 × 5.8 in.)	–	–	–	Yes
Cards		10 × 15 cm (4 × 6 in.)	–	Yes	Yes	Yes
		89 × 127 mm (3 1/2 × 5 in.)	–	–	–	Yes
		13 × 18 cm (5 × 7 in.)	–	–	Yes	Yes
		127 × 203 mm (5 × 8 in.)	–	–	–	Yes
	Postcard 1	100 × 148 mm (3.9 × 5.8 in.)	–	–	–	User Defined
	Postcard 2 (Double)	148 × 200 mm (5.8 × 7.9 in.)	–	–	–	User Defined
Envelopes	C5 Envelope	162 × 229 mm (6.4 × 9 in.)	–	–	–	Yes
	DL Envelope	110 × 220 mm (4.3 × 8.7 in.)	–	–	–	Yes
	COM-10	105 × 241 mm (4 1/8 × 9 1/2 in.)	–	–	–	Yes
	Monarch	98 × 191 mm (3 7/8 × 7 1/2 in.)	–	–	–	Yes
	Y4 Envelope	105 × 235 mm (4.1 × 9.3 in.)	–	–	–	User Defined
Transparencies	A4	210 × 297 mm (8.3 × 11.7 in.)	–	Yes	–	Yes
	Letter	215.9 × 279.4 mm (8 1/2 × 11 in.)	–	Yes	–	Yes
	Legal ¹	215.9 × 355.6 mm (8 1/2 × 14 in.)	–	Yes	–	Yes
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes

¹ Only available for some countries.

Paper weight, thickness and capacity

Paper Type		Weight	Thickness	No. of sheets
Cut Sheet	Plain Paper	64 to 120 gsm	0.08 to 0.15 mm	100 ¹
	Inkjet Paper	64 to 200 gsm	0.08 to 0.25 mm	20
	Glossy Paper	Up to 220 gsm	Up to 0.25 mm	20 ^{2 3}
Cards	Photo Card	Up to 220 gsm	Up to 0.25 mm	20 ^{2 3}
	Index Card	Up to 120 gsm	Up to 0.15 mm	30
	Postcard	Up to 200 gsm	Up to 0.25 mm	30
Envelopes		75 to 95 gsm	Up to 0.52 mm	10
Transparencies		–	–	10

¹ Up to 100 sheets of 80 gsm paper.

² For Photo 10 × 15 cm paper and Photo L 89 × 127 mm paper, use the photo paper tray. (See *Loading photo paper* >> page 19.)

³ BP71 (260 gsm) paper is especially designed for Brother inkjet machines.

3

Loading documents

How to load documents

You can send a fax, make copies, and scan from the ADF (automatic document feeder) and from the scanner glass.

Using the ADF

The ADF can hold up to 15 pages ¹ and feeds each sheet individually. Use 90 gsm paper and always fan the edges of the pages before placing them in the ADF.

- ¹ The ADF can hold up to 20 pages, if you stagger the pages and meet the following conditions:
Temperature: 20 - 26 °C
Humidity: 40 - 50% without condensation
Paper: XEROX4200 75 gsm

Document Sizes and Weights

Length:	148 to 355.6 mm
Width:	148 to 215.9 mm
Weight:	64 to 90 gsm


How to load documents

! IMPORTANT

- DO NOT pull on the document while it is feeding.
- DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped.
- DO NOT use cardboard, newspaper or fabric with the ADF. Instead use the scanner glass.

Make sure documents written with ink or modified with correction fluid are completely dry.


- 1 Unfold the ADF Document Support (1) and the ADF Document Support Flap (2).

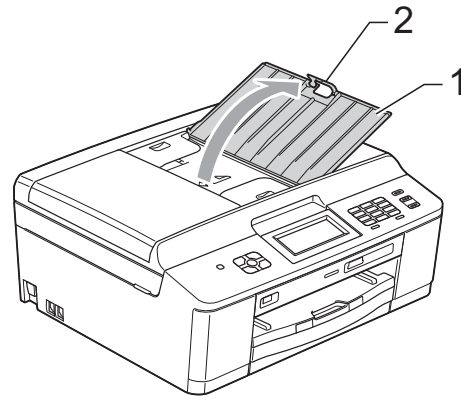

Note

DO NOT use the ADF Document Support Flap for Legal size paper. (Only available for some countries.)


- 2 Fan the pages well.
- 3 Adjust the paper guides (1) to fit the width of your documents. Stagger the pages of the documents and place them **face down, top edge first** in the ADF underneath the guides until you feel them touch the feed rollers. The screen will display ADF Ready.

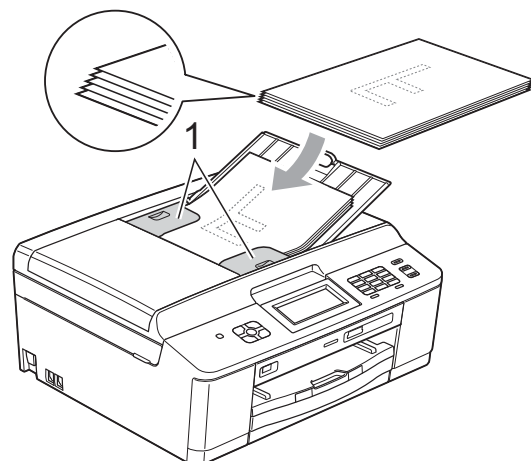

! IMPORTANT

DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.

- 4 After using the ADF, fold down the ADF Document Support Flap and then close the ADF Document Support. Then push down on the upper-left portion of the ADF Document Support to close it completely.

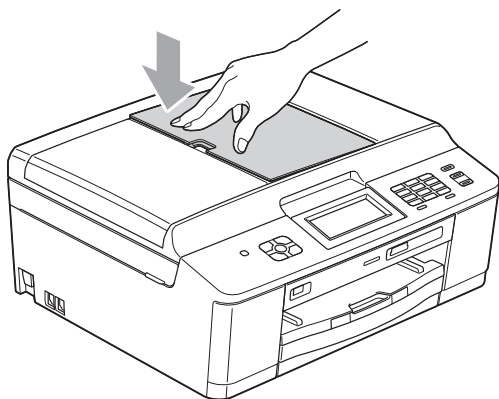**Using the scanner glass**

You can use the scanner glass to fax, copy or scan pages of a book or one page at a time.



Document Sizes Supported

Length:	Up to 297 mm
Width:	Up to 215.9 mm
Weight:	Up to 2 kg

How to load documents**Note**

To use the scanner glass, the ADF must be empty.

- 1 Lift the document cover.
- 2 Using the document guidelines on the left and top, place the document **face down** in the upper left corner of the scanner glass.

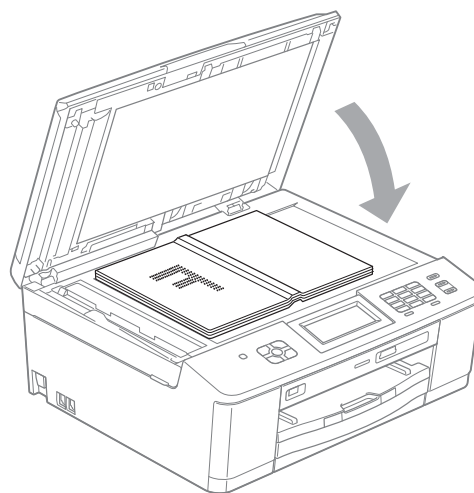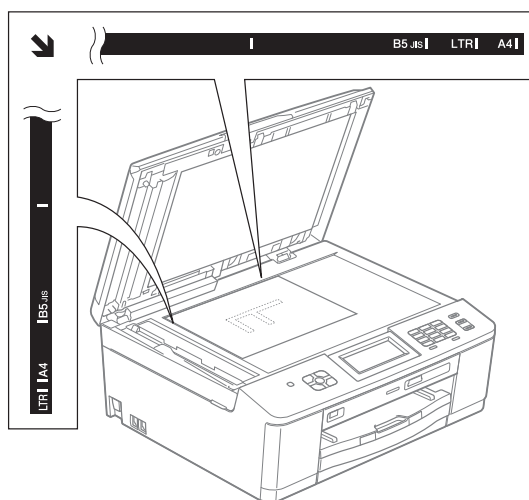


- 3 Close the document cover.

! IMPORTANT

If you are scanning a book or thick document, DO NOT slam the cover down or press on it.

Unscannable area

The scannable area depends on the settings in the application you are using. The figures below show unscannable areas.

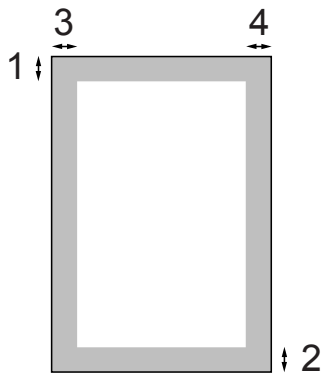


Usage	Document Size	Top (1) Bottom (2)	Left (3) Right (4)
Fax	A4	3 mm	3 mm ¹
	Letter		4 mm
	Legal		
Copy	All paper sizes		3 mm
Scan			

¹ The unscannable area is 1 mm when you use the ADF.

How to send a fax

The following steps show how to send a fax.

- 1 When you want to send a fax or change the settings for sending or receiving faxes, press the  (**FAX**).



- The LCD shows:



- 2 Do one of the following to load your document:
 - Place the document *face down* in the ADF. (See *Using the ADF* >> page 28.)
 - Load your document *face down* on the scanner glass. (See *Using the scanner glass* >> page 29.)



Note

- To send colour faxes with multiple pages use the ADF.
- If you send a mono fax from the ADF when the memory is full, it will be sent in real time.
- You can use the scanner glass to fax pages of a book one at a time. The documents can be up to A4 or Letter size.
- Since you can only scan one page at a time, it is easier to use the ADF if you are sending a multiple-page document.

- 3 You can change the following fax sending settings. Press **FAX** and then press **Options**. Press **^** or **v** to scroll through the fax settings. When the setting you want is displayed, press it and choose your option.

(Basic User's Guide)

For details about changing the following fax sending settings, see pages 32 to 33.

- Glass ScanSize
- Colour Fax Transmission
- Transmission Verification Report (Setup)

(Advanced User's Guide)

For more advanced fax sending operations and settings

>>> *Advanced User's Guide: Sending a fax (MFC models only)*

- Contrast
- Fax Resolution
- Set New Defaults
- Factory Reset
- Faxing at End of Call
- Broadcasting
- Real Time Transmission
- Overseas Mode
- Delayed Fax
- Batch Transmission
- Cancelling Waiting Jobs
- Polled Transmit

- 4 Enter the fax number.

Using the dial pad

Using Speed Dial

- SpeedDial

Using call history

- Outgoing
- Incoming

- 5 Press `Mono Start` or `Colour Start`.

Faxing from the ADF

- The machine starts scanning the document to be sent.

Faxing from the scanner glass

- If you pressed `Mono Start`, the machine starts scanning the first page. Go to step 6.
- If you pressed `Colour Start`, the LCD asks if you want to send a colour fax. Press `Yes (ColorFax)` to confirm. The machine starts scanning and sending the document.

- 6 When the LCD asks you `Next Page?`, do one of the following:

- To send a single page, press `No (Send)` (or press **Mono Start** again).

The machine starts sending the document.

- To send more than one page, press `Yes` and go to step 7.


- 7 Place the next page on the scanner glass.
Press `OK`.
The machine starts scanning the page. (Repeat steps 6 and 7 for each additional page.)

Stop faxing

To stop faxing, press **Stop/Exit**.

Setting scanner glass size for faxing

When documents are Letter size, you need to set `Scan Size` to `Letter`. If you do not, the side portion of the faxes will be missing.

- 1 Press  (**FAX**).
- 2 Press `Options`.
- 3 Press `^` or `v` to display `Glass ScanSize`.
- 4 Press `Glass ScanSize`.
- 5 Press `A4` or `Letter`.



Note

- You can save the setting you use most often by setting it as the default. (►►Advanced User's Guide: *Setting your changes as a new default*)
- This setting is only available for sending documents from the scanner glass.

Colour fax transmission

Your machine can send a colour fax to machines that support this feature.

Colour faxes cannot be stored in the memory. When you send a colour fax, the machine will send it in real time (even if `Real Time TX` is set to `Off`).

Cancelling a fax in progress

If you want to cancel a fax while the machine is scanning, dialling or sending, press **Stop/Exit**.

Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the sender's name or fax number, the time and date of transmission, duration of transmission, number of pages sent, and whether or not the transmission was successful.

There are several settings available for the Transmission Verification Report:

- **On:** Prints a report after every fax you send.
- **On+Image:** Prints a report after every fax you send. A portion of the fax's first page appears on the report.
- **Off:** Prints a report if your fax is unsuccessful due to a transmission error. `Off` is the default setting.
- **Off+Image:** Prints a report if your fax is unsuccessful due to a transmission error. A portion of the fax's first page appears on the report.

- 1 Press `Menu`.
- 2 Press `▲` or `▼` to display `Fax`.
- 3 Press `Fax`.
- 4 Press `▲` or `▼` to display `Report Setting`.
- 5 Press `Report Setting`.
- 6 Press `Transmission`.
- 7 Press `▲` or `▼` to display `On`, `On+Image`, `Off` or `Off+Image`, and then press the option you want to set.
- 8 Press **Stop/Exit**.



Note

- If you choose `On+Image` or `Off+Image` the image will only appear on the Transmission Verification Report if Real Time Transmission is set to `Off`. (►►Advanced User's Guide: *Real Time Transmission*)
- If your transmission is successful, "OK" will appear next to "RESULT" on the Transmission Verification Report. If the transmission is not successful, "ERROR" will appear next to "RESULT".

5

Receiving a fax


Receive Modes

You must choose a receive mode depending on the external devices and telephone services you have on your line.

Choose the Receive Mode

By default, your machine will automatically receive any faxes that are sent to it. The diagram below will help you choose the correct mode.

For more detailed information on the receive modes, see *Using Receive Modes* >> page 36.

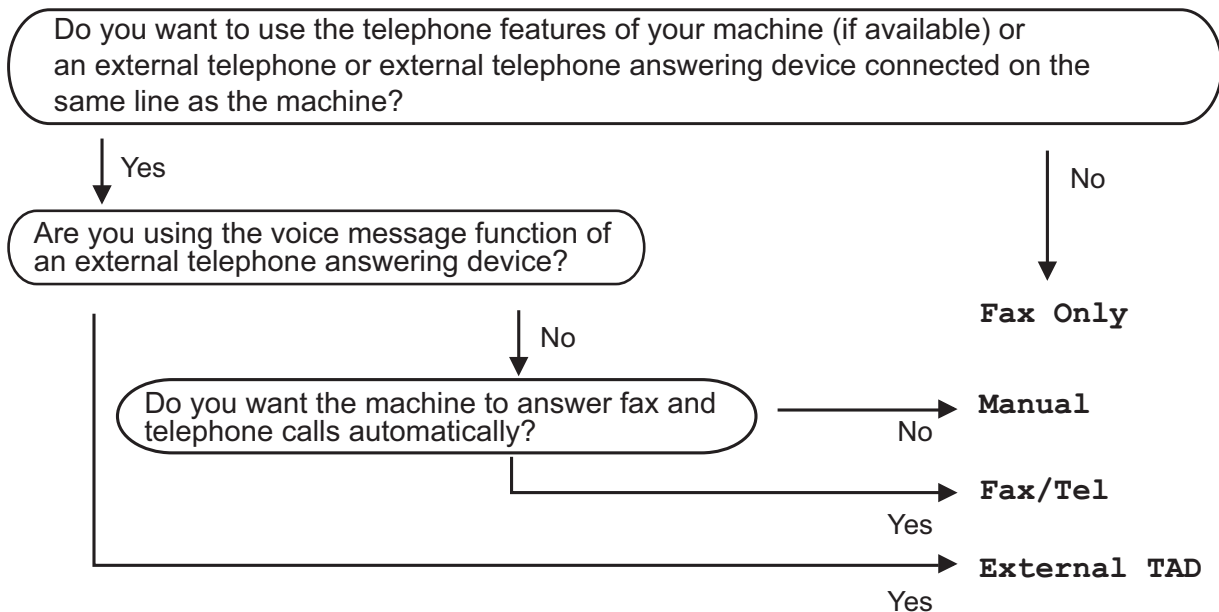

To set a receive mode follow the instructions below:

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Initial Setup**.
- 3 Press **Initial Setup**.
- 4 Press **▲** or **▼** to display **Receive Mode**.

- 5 Press **Receive Mode**.

**Note**

(For Australia, Singapore and Hong Kong)

If you cannot change the Receive Mode, make sure the Distinctive Ring feature is set to **Off**.
(See *Turning off Distinctive Ring* >> page 40 and 45 for your relevant country.)

(For New Zealand)

If you cannot change the Receive Mode, make sure the FaxAbility feature is set to **Off**.
(See *How to Turn FaxAbility OFF or ON* >> page 43.)

- 6 Press **▲** or **▼** to display **Fax Only**, **Fax/Tel**, **External TAD** or **Manual**, and then press the option you want to set.
- 7 Press **Stop/Exit**.
The LCD will display the current receive mode.

Using Receive Modes

Some receive modes answer automatically (**Fax Only** and **Fax/Tel**). You may want to change the ring delay before using these modes. (See *Ring Delay* >> page 37.)

Fax Only

Fax Only mode will automatically answer every call as a fax call.

Fax/Tel

Fax/Tel mode helps you automatically manage incoming calls, by recognising whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the F/T Ring to tell you to pick up the line. The F/T Ring is a fast double-ring made by your machine.

(See *F/T Ring Time (Fax/Tel mode only)* >> page 37 and *Ring Delay* >> page 37.)

Manual

To receive a fax in Manual mode lift the handset of an external telephone. When you hear fax tones (short repeating beeps), press **Mono Start** or **Colour Start** and choose **Receive**. You can also use the Fax Detect feature to receive faxes by lifting a handset on the same line as the machine.

(See *Fax Detect* >> page 38.)

External TAD

External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in one of the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.

(For more information see *Connecting an external TAD (telephone answering device)* >> page 46.)

Receive Mode settings

Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in **Fax Only** or **Fax/Tel** mode. If you have external or extension telephones on the same line as the machine choose the maximum number of rings.

(See *Operation from external and extension telephones* >> page 48 and *Fax Detect* >> page 38.)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Ring Delay**.
- 7 Press **Ring Delay**.
- 8 Press **▲** or **▼** to display the options, and then press the number of times the machine will ring before it answers (2-10 for Australia, 1-10 for New Zealand, 0-2 for Taiwan, 0-10 for some countries).
Because the restriction of Taiwan's Telecommunication law, the products sold in this area cannot be set to more than 3 cycle rings.
If you choose 0, the machine will answer immediately and the line will not ring at all.
- 9 Press **Stop/Exit**.

F/T Ring Time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring. The number of rings is set by the ring delay setting.

If the call is a fax, then your machine will receive it; however, if it is a voice call the machine will sound the F/T Ring (a fast double-ring) for the time you have set in the F/T Ring Time setting. If you hear the F/T Ring it means that you have a voice caller on the line.

Because the F/T Ring is made by the machine, extension and external telephones will *not* ring; however, you can still answer the call on any telephone by using a remote code. (For more information see *Using remote codes* >> page 48.)

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.
- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **F/T Ring Time**.
- 7 Press **F/T Ring Time**.
- 8 Press **▲** or **▼** to display the options, and then press how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds for Australia and some countries, 20, 30, 40 or 55 seconds for New Zealand).
- 9 Press **Stop/Exit**.

**Note**

Even if the caller hangs up during the fast double-ring, the machine will continue to ring for the set time.

Fax Detect

If Fax Detect is On:

Fax Detect is turned **On** as default.

The machine receives a fax call automatically, even if you answer the call. When you see **Receiving** on the LCD or when you hear “chirps” through the handset you are using, just replace the handset. Your machine will do the rest.

If Fax Detect is Off:

If you are at the machine and answer a fax call by lifting the handset, press **Mono Start** or **Colour Start**, then press **Receive** to receive the fax.

If you answered at an extension or external telephone, press * **5 1** (* **9 1** for New Zealand). (See *Operation from external and extension telephones* >> page 48.)

**Note**

- If this feature is set to **On**, but your machine does not connect a fax call when you lift an extension or external telephone handset, press the remote activation code * **5 1** (* **9 1** for New Zealand).
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set Fax Detect to **Off**.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Setup Receive**.

- 5 Press **Setup Receive**.
- 6 Press **▲** or **▼** to display **Fax Detect**.
- 7 Press **Fax Detect**.
- 8 Press **On (or Off)**.
- 9 Press **Stop/Exit**.

Voice operations

Tone or pulse (Not Available for New Zealand)

If you have a Pulse dialling service, but need to send tone signals (for example, for telephone banking), follow the instructions below:

- 1 Press **Hook**.
- 2 Press **#** on the machine's control panel. Any digits dialled after this will send tone signals.

When you are finished with the call, the machine will return to the Pulse dialling service.

Fax/Tel mode

When the machine is in Fax/Tel mode, it will use the F/T Ring (fast double-ring) to alert you to pick up a voice call.

If you are at an external telephone, lift the handset of the external telephone, and then press **Hook** to answer.

If you are at an extension telephone, you'll need to lift the handset during the F/T Ring Time and then press **# 5 1** (**# 9 1** for New Zealand) between the fast double-rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing *** 5 1** (*** 9 1** for New Zealand).

Telephone Service for Australia

Distinctive Ring

Distinctive Ring ¹ is a function of your Brother machine that allows a person with one line to receive fax and voice calls through two different phone numbers on that one line.

Brother uses the term "Distinctive Ring", but telephone companies market the service under a variety of names. This service establishes a second telephone number on the same line as your existing telephone number, and each number has its own ring pattern. Typically, the original number rings with the standard ring pattern and is used for receiving voice calls, and the second number rings with a different ring pattern and is used for receiving faxes. Only one call can be answered (or made) at any one time and while this call is in progress, incoming calls to either number will be presented with a busy tone.



Note


- ¹ Contact your Telephone Service Provider to determine availability and any other related details.

After you have set the Distinctive Ring feature to **On**, the receive mode is set to **Manual** automatically. Your Distinctive Ring Number does not allow Voice calls - only Faxes. You can not change the receive mode from **Manual** mode while the Distinctive Ring is set to on.

How does your telephone company's "Distinctive Ring" service work?

Using "Distinctive Ring" service of your telephone company is the most efficient way to receive both fax and telephone calls on the same line. When the voice call comes in, all phones (extension and external) and the fax machine will ring to alert you to pick it up. If a fax call comes in, the fax machine will answer automatically without ringing, whereas the extension and external phones will ring twice with a Distinctive Ring pattern. It is also a more efficient way of operating a Fax machine with an extension phone as you do not have to use the remote activation codes. It gives you two independent numbers without the higher cost of a second line.

Flowchart Sequence of Incoming call

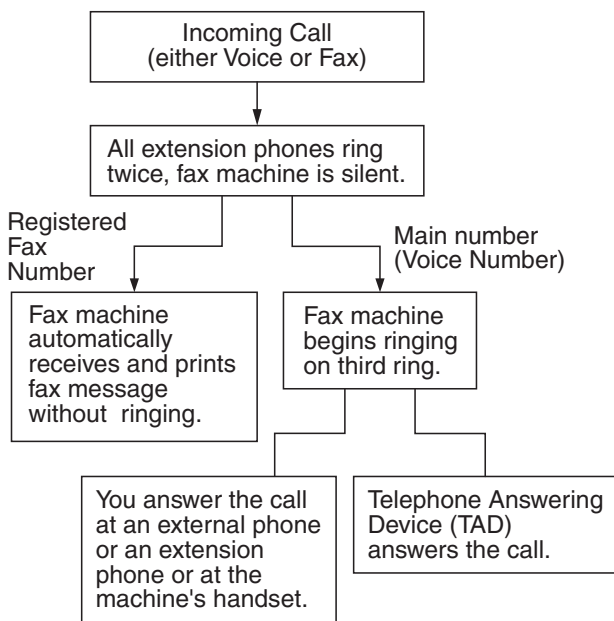

What does Brother's "Distinctive Ring" do?

The Brother machine has a Distinctive Ring feature that allows you to use your machine to take full advantage of the telephone company's Distinctive Ring service. The new telephone number on your line can just receive faxes.

Turning on Distinctive Ring

Very Important!

After you have set the Distinctive Ring feature to on, the receive mode is set to `Manual` automatically. Your Distinctive Ring Number does not allow Voice calls - only Faxes. You cannot change the receive mode to another mode while the Distinctive Ring is set to on. When Distinctive Ring is on, the LCD will show `D/R` as the Receive Mode.

- 1 Press `Menu`.
- 2 Press `▲` or `▼` to display `Fax`.
- 3 Press `Fax`.
- 4 Press `▲` or `▼` to display `Miscellaneous`.
- 5 Press `Miscellaneous`.
- 6 Press `Distinctive`.
- 7 Press `On`.
- 8 Press **Stop/Exit**.
Distinctive Ring is now set to on.

Turning off Distinctive Ring

- 1 Press `Menu`.
- 2 Press `▲` or `▼` to display `Fax`.
- 3 Press `Fax`.
- 4 Press `▲` or `▼` to display `Miscellaneous`.
- 5 Press `Miscellaneous`.
- 6 Press `Distinctive`.
- 7 Press `Off`.
- 8 Press **Stop/Exit**.

**Note**

If you turn off Distinctive Ring, the machine will stay in **Manual** receive mode. You will need to set the Receive Mode again. (See *Choose the Receive Mode* >> page 34.)

Caller ID

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number or name as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.

**Note**

To get the Caller ID Service: apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if the name has been stored as Speed Dial. Once you answer the call, the caller's ID disappears.

**Note**

- If **ID Unknown** appears on the display, it means that the call came from outside your caller ID service area or a public phone.¹
- If **ID Withheld** appears on the display, it means the caller intentionally blocked the transmission of his/her ID.¹

¹ Depends on network function.

The Caller ID is Stored in Your Machine Memory

The machine can store a maximum of the last 30 incoming caller IDs in the memory, along with the time and date of reception. The 31st call will cause the oldest ID to be erased.

The Caller ID information stored in the memory can be used for the following.

■ Printing the Caller ID List.

You can review calls you received by checking the Caller IDs in memory. This report will list the Date, Time, Phone Number (Caller ID) name, and type of Call (Comment) if available.

>>Advanced User's Guide: *How to print a report*

Telephone Service for New Zealand

FaxAbility

FaxAbility is a service offered by Telecom that allows you to have an additional number on one phone line, with its own distinctive ring pattern. This way, when you get an incoming call, you can identify the number being called by its ring.

How Will the Fax Machine Treat All Other Numbers?


FaxAbility mode ensures that the machine will answer calls to the FaxAbility (secondary) number. When a call comes in to your main number, all the phones will ring. You can set an external answering device (TAD) to answer calls on the other number(s). (See the chart in this page.)

What is the Advantage of Using the FaxAbility Function?

Using FaxAbility is the most efficient way to receive both fax and telephone calls on the same line. It is much easier for your callers who dial manually. The fax machine will answer with receiving tones so they will not have to press an activation code. And the people who call to talk on your main number will not have to talk to your fax machine. Basically, it gives you two independent numbers without the higher cost of a second line.

How Does FaxAbility Work?

Your telephone number will have the standard ring pattern of long, long tone, while the new number will have a ring pattern of long, silence, long, etc. When FaxAbility is On, you will not hear the first ring of all incoming calls on the fax machine. Extension phones will ring as usual. If the fax machine recognizes the ring pattern, all ringing will stop and the fax machine will answer and automatically receive the fax message. Otherwise, you will hear the extension phones and the fax machine continue to ring. The fax machine always listens to the ring pattern before it answers, so do not pick up the phone during that time. You will quickly learn to recognize the ring pattern for faxes, so you will not be tempted to answer that number. Either you or a telephone answering device can answer the main number(s).

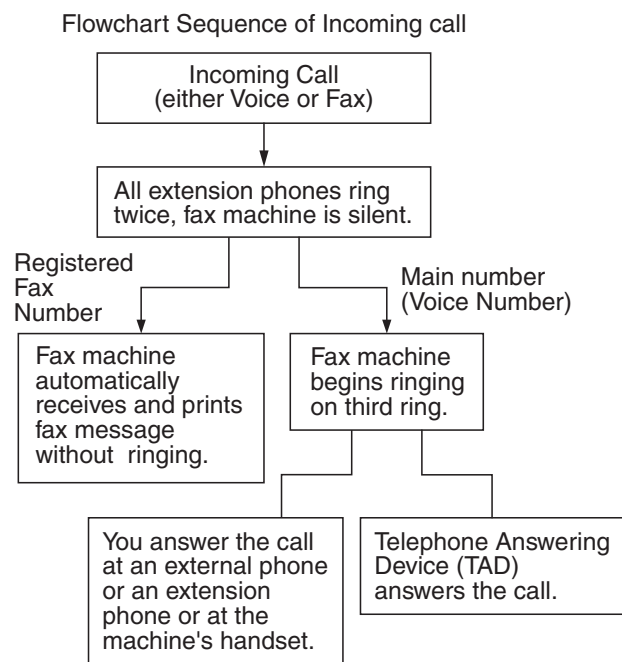

**Note**

After you have set the FaxAbility feature to **On**, the receive mode is set to **Manual** automatically. Unless you have a TAD or Voice Mail set up on the FaxAbility number, Manual mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the FaxAbility is set to on. When FaxAbility is on, the LCD will show **D/R** as the Receive Mode.

How to Turn FaxAbility OFF or ON

The FaxAbility function is designed to accommodate the FaxAbility service provided by Telecom. To change the setting, repeat steps ①-⑩; Step ⑦ is where you can choose either **On** or **Off**.

Call Waiting beeps caused by incoming calls on your main number can affect fax transmissions. If you have FaxAbility Service but don't have Call Waiting, you need do nothing at this stage. If you do have Call Waiting as well as FaxAbility, set the Call Waiting menu option to **On**. See below.

- ① Press **Menu**.
- ② Press **▲** or **▼** to display **Fax**.
- ③ Press **Fax**.
- ④ Press **▲** or **▼** to display **Miscellaneous**.
- ⑤ Press **Miscellaneous**.
- ⑥ Press **FaxAbility**.
- ⑦ Press **On** (or **Off**) to set FaxAbility. If you have FaxAbility service, press **On**.
- ⑧ Press **▲** or **▼** to display **Call Waiting**.
- ⑨ Press **Call Waiting**.

⑩

Press **On** to set Call Waiting.

If you have Call Waiting service, press **On** to avoid the trouble caused by Call Waiting.

⑪

Press **Stop/Exit**.**Caller ID**

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number and name if available as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.

**Note**

To get the Caller ID Service, apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID**For Business**

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if available. Once you answer the call, the caller's ID disappears. You can print a list of the Caller ID information received by your machine.

➤➤ *Advanced User's Guide: How to print a report*



Note

- If `ID Unknown` appears on the display, it means that the call came from outside your caller ID service area. ¹
- If `ID Withheld` appears on the display, it means the caller intentionally blocked the transmission of his/her ID. ¹

¹ Depends on network function.

Telephone Service for Some Countries

Distinctive Ring (For Singapore and Hong Kong)

This machine feature lets you use the Distinctive Ring subscriber service offered by some telephone companies, which allows you to have several telephone numbers on one phone line. Each phone number has its own Distinctive Ring pattern, so you will know which phone number is ringing. This is one way you can have a separate phone number for your machine.

Your machine has a Distinctive Ring function, allowing you to dedicate one phone number just for receiving faxes. You will need to set Distinctive Ring to `On`.



Note

You can switch it off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function.

- The machine will answer only calls to the Distinctive Ring number.

Turning on Distinctive Ring

Very Important!

After you have set the Distinctive Ring feature to on, the receive mode is set to `Manual` automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, `Manual` mode means you must answer all the calls yourself. You cannot change the receive mode to another mode while the Distinctive Ring is set to on. When Distinctive Ring is on, the LCD will show `D/R` as the Receive Mode.

- 1 Press `Menu`.
- 2 Press `^` or `v` to display `Fax`.

- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Miscellaneous**.
- 5 Press **Miscellaneous**.
- 6 Press **Distinctive**.
- 7 Press **On**.
- 8 Press **Stop/Exit**.
Distinctive Ring is now set to on.

Turning off Distinctive Ring

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Fax**.
- 3 Press **Fax**.
- 4 Press **▲** or **▼** to display **Miscellaneous**.
- 5 Press **Miscellaneous**.
- 6 Press **Distinctive**.
- 7 Press **Off**.
- 8 Press **Stop/Exit**.



Note

If you turn off Distinctive Ring, the machine will stay in **Manual receive** mode. You will need to set the **Receive Mode** again. (See *Choose the Receive Mode* >> page 34.)

Caller ID (For Singapore and Hong Kong)

The Caller ID feature of this machine lets you use the Caller ID subscriber service offered by many local phone companies. Call your telephone company for details. This service provides you, by means of the screen display, the telephone number (or name) of your caller as the line rings.

After a few rings, the screen displays the telephone number of your caller (or name, if available). Once you answer the call, the Caller ID information disappears from the screen, but the call information remains stored in the Caller ID memory.

- **ID Unknown** display means call originates outside your Caller ID service area.
- **ID Withheld** display means the caller has intentionally blocked transmission of information.



Note

You can print a list of Caller ID information received by your machine.

>> *Advanced User's Guide: How to print a report*

Caller ID service varies with different carriers. Call your local phone company to determine the kind of service available in your area.

Connecting an external TAD (telephone answering device)


You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine “listens” for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave you a voice message.

The TAD must answer within two rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax “handshake”. Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.



Note

If you do not receive all your faxes, shorten the Ring Delay setting on your external TAD.

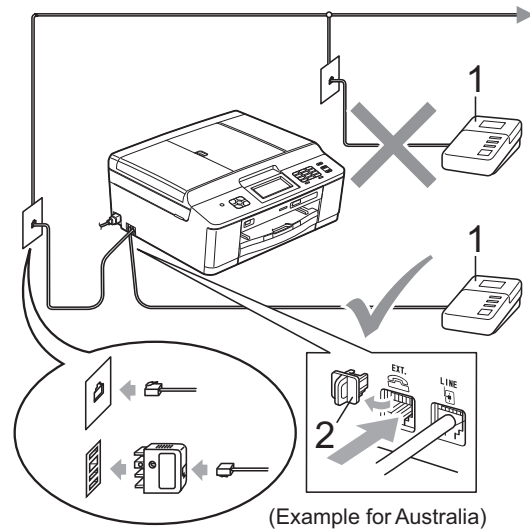

- 1 TAD
- 2 Protective Cap

When the TAD answers a call, the screen shows *Telephone*.

! IMPORTANT

DO NOT connect a TAD elsewhere on the same telephone line.

Connections settings

The external TAD must be connected as shown in the previous illustration.

- 1 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 2 Record the outgoing message on your external TAD.
- 3 Set the TAD to answer calls.
- 4 Set the Receive Mode to *External TAD*. (See *Choose the Receive Mode* >> page 34.)

Recording an outgoing message (OGM) on an external TAD

Timing is important in recording this message.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.



Note

We recommend beginning your OGM with an initial 5-second silence because the machine cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

Multi-line connections (PABX)

Most offices use a central telephone system.

Brother recommends that all our machines be connected to a discreet (dedicated) line. Although a particular PABX may appear to work with a particular model of fax machine, we cannot guarantee that the unit will operate correctly.


While it is often relatively simple to connect a fax machine to a PABX, (Private Automatic Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the fax machine for you.

Brother does not recommend the use of a PABX line. PABX limitations in general can cause some functions of the fax machine not to work correctly.

External and extension telephones

Connecting an external or extension telephone

You can connect a separate telephone to your machine as shown in the diagram below.

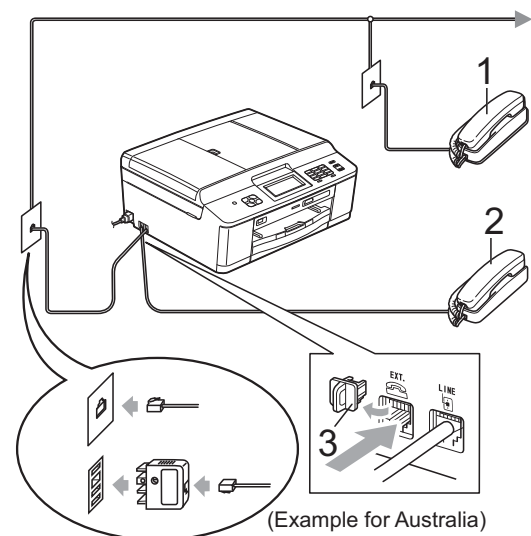

- 1 Extension telephone
- 2 External telephone
- 3 Protective Cap

When you are using a telephone on the same phone line, the LCD shows `Telephone`.

Operation from external and extension telephones

If you answer a fax call on an extension or an external telephone, you can make your machine take the call by using the Remote Activation Code. When you press the Remote Activation Code * 5 1 (* 9 1 for New Zealand), the machine starts to receive the fax.

If the machine answers a voice call and fast double-rings for you to take over, use the Remote Deactivation Code # 5 1 (# 9 1 for New Zealand) to take the call at an extension telephone. (See *F/T Ring Time (Fax/Tel mode only)* >> page 37.)

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press * 5 1 (* 9 1 for New Zealand) and wait for the chirp or until the LCD shows *Receiving*, and then hang up.



Note

You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect* >> page 38.)

Using a cordless external telephone

Once the base unit of the cordless telephone has been connected to the same telephone line as the machine (see *External and extension telephones* >> page 47), it is easier to answer calls during the Ring Delay if you carry the cordless handset around with you.

If you let the machine answer first, you will have to go to the machine and press **Hook** to send the call to the cordless handset.

Using remote codes

Remote Activation code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by dialling the Remote Activation Code * 5 1 (* 9 1 for New Zealand). Wait for the chirping sounds then replace the handset. (See *Fax Detect* >> page 38.)

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing **Mono Start** and choose *Receive*.

Remote Deactivation Code

If you receive a voice call and the machine is in Fax/Tel mode, it will start to sound the F/T Ring (fast double-ring), after the initial ring delay. If you pick up the call on an extension telephone you can turn the F/T Ring off by pressing # 5 1 (# 9 1 for New Zealand) (make sure you press this *between* the rings).

If the machine answers a voice call and fast double-rings for you to take over, you can take the call at the external telephone by pressing **Hook**.

Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes. The preset Remote Activation Code is * 5 1 (* 9 1 for New Zealand). The preset Remote Deactivation Code is # 5 1 (# 9 1 for New Zealand). If you want to, you can replace them with your own codes.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display *Fax*.
- 3 Press *Fax*.
- 4 Press **▲** or **▼** to display *Setup Receive*.
- 5 Press *Setup Receive*.

- 6 Press **▲** or **▼** to display Remote Codes.
- 7 Press Remote Codes.
- 8 Press On.
- 9 Do one of the following:
 - If you want to change the Remote Activation Code, enter the new code.
Press **OK**, go to step 10.
 - If you do not want to change the Remote Activation Code, press **OK**, go to step 10.
- 10 Do one of the following:
 - If you want to change the Remote Deactivation Code, enter the new code.
Press **OK**, go to step 11.
 - If you do not want to change the Remote Deactivation Code, press **OK**, go to step 11.
- 11 Press **Stop/Exit**.

**Note**

- If you are always disconnected when accessing your external TAD remotely, try changing the Remote Activation Code and Remote Deactivation Code to another three-digit code using the numbers **0-9**, *****, **#**.
- Remote Codes might not work with some telephone systems.

7

Dialling and storing numbers


How to dial

Manual dialling

Press all of the digits of the fax or telephone number.



Speed Dialling

- 1 Press **SpeedDial**.
You can also choose **SpeedDial** by pressing  (**FAX**).
- 2 Do one of the following:
 - Press **Alphabetical** or **Numerical**, and then press the number you want to dial.
 - Press the 2-digit **Speed Dial** number using the dial pad.

Note

If the LCD shows **Not Registered** when you enter or search a **Speed Dial** number that has not been stored at this location.

- 3 To send a fax, press **Send a fax** and go to step 4.
- 4 Press **Mono Start** or **Colour Start**. The machine scans and sends the fax.

Fax Redial

If you are sending a fax manually and the line is busy, press **Hook**, **Redial/Pause**, and then press **Mono Start** or **Colour Start** to try again.

Redial/Pause only works if you dialled from the control panel. *If you are sending a fax automatically* and the line is busy, the machine will automatically redial up to three times at five minute intervals.

- 1 Press **Redial/Pause**.
- 2 Press the number you want to redial.
- 3 Press **Send a fax**.
- 4 Press **Mono Start** or **Colour Start**.

Note

In **Real Time Transmission** the automatic redial feature does not work when using the scanner glass.

Additional Dialling Operations

Outgoing Call history

The last 30 numbers you sent a fax to will be stored in the outgoing call history. You can choose one of these numbers to fax to, add to Speed Dial, or delete from the history.

- 1 Press **Redial/Pause**.
You can also press **History**.
- 2 Press the number you want.
- 3 Do one of the following:
 - To send a fax, press **Send a fax**.
Press **Mono Start** or **Colour Start**.
 - If you want to store the number, press **More** and then press **Add Speed Dial**.
(>>>Advanced User's Guide: *Storing Speed Dial numbers from Outgoing Calls*)
 - If you want to delete the number from the Outgoing Call history list, press **More** and then press **Delete**.
Press **Yes** to confirm.
Press **Stop/Exit**.

Caller ID history


This feature requires the Caller ID subscriber service offered by many local telephone companies. (See *Caller ID* >>> page 41, 43 and 45 for your relevant country.)

The numbers, or names if available, from the last 30 faxes and telephone calls you received will be stored in the Caller ID history. You can view the list or choose one of these numbers to fax to, add to Speed Dial, or delete from the history. When the thirty-first call comes into the machine, it replaces information about the first call.



Note

If you are not a Caller ID subscriber, you can still view call dates from the Caller ID history, and delete entries from the list.

- 1 Press **Redial/Pause**.
You can also press **History**.
- 2 Press .
- 3 Press the number or the name you want.
- 4 Do one of the following:
 - To send a fax, press **Send a fax**.
Press **Mono Start** or **Colour Start**.
 - If you want to store the number, press **More** and then press **Add Speed Dial**.
(>>>Advanced User's Guide: *Storing Speed Dial numbers from the Caller ID history*)
 - If you want to delete the number from the Caller ID history list, press **More** and then press **Delete**.
Press **Yes** to confirm.
Press **Stop/Exit**.



Note

You can print the Caller ID list.
(>>>Advanced User's Guide: *How to print a report*)

Storing numbers

You can set up your machine to do the following types of easy dialling: Speed Dial and Groups for broadcasting faxes. When you dial a Quick Dial number, the LCD shows the number.



Note If you lose electrical power, the Quick Dial numbers that are in the memory will not be lost.

Storing a pause

When you are storing Speed Dial numbers, you can insert one or more 3.5 second pauses by pressing the **PAUSE** button on the Touchscreen.

Storing Speed Dial numbers

You can store up to 100 names and numbers in two-digit Speed Dial locations. You can store two numbers to each name. When you dial you will only have to press a few buttons on the screen (for example: press **SpeedDial**, the number you want to call and **Send a fax**).

- 1 Press **SpeedDial**.
- 2 If Speed Dial numbers have already been stored, press **Alphabetical** or **Numerical**. Press **More**.
- 3 Press **Set Speed Dial**.
- 4 Do one of the following:
 - Enter the name (up to 16 characters) by pressing the buttons on the screen.
Press **OK**.
(To help you enter letters, see *Entering Text* >> page 117.)
 - To store the number without a name, press **OK**.

- 5 Enter the first fax or telephone number (**□□1** :) by pressing the buttons on the Touchscreen (up to 20 digits). Press **OK**.
- 6 Do one of the following:
 - Enter the second fax or telephone number (**□□2** :) by pressing the buttons on the Touchscreen (up to 20 digits).
Press **OK**.
 - If you do not want to store a second number, press **OK**.
- 7 To choose where the number will be stored, do one of the following:
 - To accept the displayed next available Speed Dial location, press **OK**.
 - To enter a different Speed Dial location, press **⏏** and a 2-digit number using the buttons on the Touchscreen.
Press **OK**.



Note If the 2-digit Speed Dial location you choose is already taken, the **OK** button on the LCD will not work. Choose a different location.

- 8 When the LCD displays your settings, press **OK** to confirm.
- 9 Do one of the following:
 - To store another Speed Dial number, repeat steps 2 to 8.
 - To finish storing numbers, press **Stop/Exit**.

Changing Speed Dial names or numbers

You can change a Speed Dial name or number that has already been stored.

- 1 Press **SpeedDial**.
- 2 Press **Alphabetical** or **Numerical**.
- 3 Press **More**.
- 4 Do one of the following:
 - Press **Change** to edit the names or numbers.
 - Press **Delete** to delete all information in a Speed Dial location. Press the number you want to delete. Press **OK**. Press **Yes** to confirm. Go to step 9.
- 5 Press **▲** or **▼** to display the number you want to change.
- 6 Press the number you want to change.

- 7 Do one of the following:
 - If you want to change the name, press **Name**. Enter the new name (up to 16 characters) by pressing the buttons on the Touchscreen. (See *Entering Text* >> page 117.) Press **OK**.
 - If you want to change the first fax or telephone number, press **☐☐1** : . Enter the new fax or telephone number (up to 20 digits) by pressing the buttons on the Touchscreen. Press **OK**.
 - If you want to change the second Fax/Tel number, press **☐☐2** : . Enter the new fax or telephone number (up to 20 digits) by pressing the buttons on the Touchscreen. Press **OK**.



Note

How to change the stored name or number:

If you want to change a character, press **◀** or **▶** to position the cursor under the character you want to change, and then press **☒**. Re-enter the character.

If you want to change a stored number, press **☒** repeatedly to delete the number. Re-enter the new number.

- 8 The LCD will display your settings. Do one of the following:
 - Press **OK** to finish. To change another Speed Dial location, repeat steps 3 to 7.
 - To change more details, go to 7.
- 9 Press **Stop/Exit**.


8

Making copies

How to copy

The following steps show the basic copy operation.

- 1 Make sure you are in copy mode, press

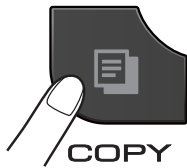

- The LCD shows:



1 No. of Copies

You can enter the number of copies by pressing - or + on the screen (as shown above).



Note

The default setting is FAX mode. You can change the amount of time that the machine stays in COPY mode after the last copy operation.

(>>>Advanced User's Guide: *Mode Timer (MFC models only)*)

- 2 Do one of the following to load your document:

- Place the document *face down* in the ADF.

(See *Using the ADF* >>> page 28.)

- Place the document *face down* on the scanner glass.

(See *Using the scanner glass* >>> page 29.)

- 3 If you want more than one copy, enter the number (up to 99).

- 4 Press **Mono Start** or **Colour Start**.

Stop copying

To stop copying, press **Stop/Exit**.

Copy settings

You can change the following copy settings. Press **COPY** and then press **Options**. Press **^** or **v** to scroll through the copy settings. When the setting you want is displayed, press it and choose your option.

(Basic User's Guide)

For details about changing the following copy settings >>> page 55.

- Paper Type
- Paper Size

(Advanced User's Guide)

For details about changing the following copy settings

>>>Advanced User's Guide: *Copy settings*

- Quality
- Enlarge/Reduce
- Page Layout
- 2in1 (ID)
- Stack/Sort
- Density
- Duplex Copy
- Set New Default
- Factory Reset




Note

If you want to sort copies, use the ADF.

Paper Options


Paper Type

If you are copying on a special type of paper, set the machine for the type of paper you are using to get the best print quality.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** to display **Paper Type**.
- 6 Press **Paper Type**.
- 7 Press **^** or **v** to display **Plain Paper**, **Inkjet Paper**, **Brother BP71**, **Brother BP61**, **Other Glossy** or **Transparency**, and then press the option you want to set.
- 8 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

Paper Size

If you are copying on paper other than A4 size, you will need to change the Paper Size setting. You can copy only on A4, A5, Photo 10 × 15 cm, Letter or Legal ¹ paper.

- 1 Press  (**COPY**).
- 2 Load your document.
- 3 Enter the number of copies you want.
- 4 Press **Options**.
- 5 Press **^** or **v** to display **Paper Size**.
- 6 Press **Paper Size**.
- 7 Press **^** or **v** to display **A4**, **A5**, **10x15cm**, **Letter** or **Legal** ¹ and then press the option you want to set.
- 8 If you do not want to change additional settings, press **Mono Start** or **Colour Start**.

¹ Only available for some countries.

PhotoCapture Center™ operations (PHOTO mode)

Even if your machine is *not* connected to your computer, you can print photos directly from digital camera media or a USB Flash memory drive. (See *Print Images* >> page 59.)

You can scan documents and save them directly to a memory card or USB Flash memory drive. (See *How to scan to a memory card or USB Flash memory drive* >> page 60.)

If your machine is connected to a computer, you can access a memory card or USB Flash memory drive that is inserted in the front of the machine from your computer.

>>Software User's Guide: *PhotoCapture Center*™ (Windows®)

>>Software User's Guide: *Remote Setup & PhotoCapture Center*™ (Macintosh)


Using a memory card or USB Flash memory drive

Your Brother machine has media drives (slots) for use with the following popular digital camera media: Memory Stick™, Memory Stick PRO™, Memory Stick Duo™, Memory Stick PRO Duo™, SD Memory Card, SDHC Memory Card, SDXC Memory Card, MultiMedia Card, MultiMedia Card plus and USB Flash memory drives.


The PhotoCapture Center™ feature lets you print digital photos from your digital camera at high resolution to get photo quality printing.

Getting started

Firmly put a memory card or USB Flash memory drive into the correct slot.

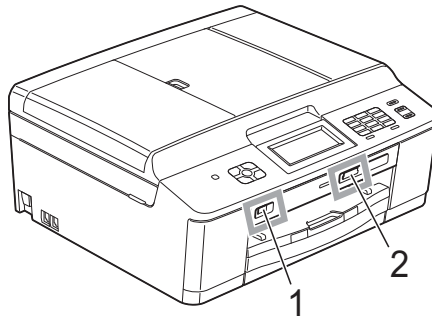




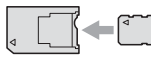
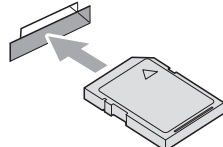

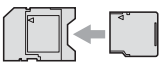
1 USB Flash memory drive



! IMPORTANT

The USB direct interface supports only a USB Flash memory drive, a PictBridge-compatible camera, or a digital camera that uses the USB mass storage as standard. Any other USB devices are not supported.

2 Memory card slot

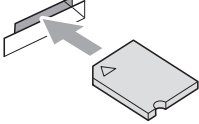
Slot	Compatible memory cards	
Upper slot 		Memory Stick™ Memory Stick PRO™
		Memory Stick Duo™ Memory Stick PRO Duo™
		Memory Stick Micro™ (Adapter required)
Lower slot 		SD Memory Card SDHC Memory Card SDXC Memory Card MultiMedia Card MultiMedia Card plus
		mini SD (Adapter required) mini SDHC (Adapter required) micro SD (Adapter required) micro SDHC (Adapter required) MultiMedia Card mobile (Adapter required)

! IMPORTANT

DO NOT insert a Memory Stick Duo™ into the lower SD slot, this may cause damage to the machine.

Status LED

When the memory card or USB Flash memory drive is being read or written to, the status LED blinks.

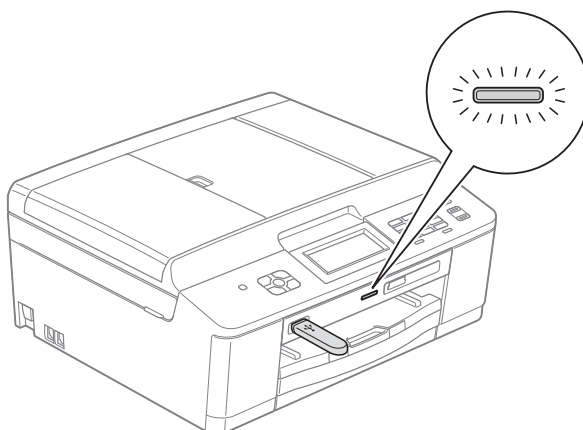

! IMPORTANT


DO NOT unplug the power cord or remove the memory card or USB Flash memory drive from the media drive (slot) or USB direct interface while the machine is reading or writing to the memory card or USB Flash memory drive (the status LED is blinking). **You will lose your data or damage the card.**

The machine can only read one device at a time.

Print Images

View Photos

You can preview your photos on the LCD before you print them. If your photos are large files there may be a delay before each photo is displayed on the LCD.

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.
Press  (**PHOTO**).
- 2 Press **View Photos**.
- 3 Press **▲** or **▼** to display the photo you want to print.
- 4 Press **+** or **-** to select the number of copies you want to print.
- 5 Repeat step 3 and 4 until you have chosen all the photos that you want to print.
Press **OK**.
- 6 You now have the following options.
 - If you want to change the print settings, press **Options**.
(▶▶Advanced User's Guide: *PhotoCapture Center™ print settings*)
 - If you do not want to change any settings, go to step 7.
- 7 Press **Colour Start** to print.

PhotoCapture Center™ print settings

You can change the print settings temporarily for the next print.

The machine returns to its default settings after 3 minutes, or if the Mode Timer returns the machine to Fax mode.

(▶▶Advanced User's Guide: *Mode Timer (MFC models only)*)



Note

You can save the print settings you use most often by setting them as the default.
(▶▶Advanced User's Guide: *Setting your changes as a new default*)



How to scan to a memory card or USB Flash memory drive


You can scan monochrome and colour documents onto a memory card or USB Flash memory drive. Monochrome documents will be stored in PDF (*.PDF) or TIFF (*.TIF) file formats. Colour documents may be stored in PDF (*.PDF) or JPEG (*.JPG) file formats. The factory setting is Color 200 dpi and the default file format is PDF. The machine automatically creates file names based on the current date. (▶▶Quick Setup Guide) For example, the fifth image scanned on July 1, 2011 would be named 01071105.PDF. You can change the colour and quality.

Quality	Selectable File Format
Color 100 dpi	JPEG / PDF
Color 200 dpi	JPEG / PDF
Color 300 dpi	JPEG / PDF
Color 600 dpi	JPEG / PDF
B/W 100 dpi	TIFF / PDF
B/W 200 dpi	TIFF / PDF
B/W 300 dpi	TIFF / PDF

- 1 Make sure you have put the memory card or USB Flash memory drive in the correct slot.

! IMPORTANT

DO NOT take out the memory card or USB Flash memory drive while the status LED is blinking to avoid damaging the card, USB Flash memory drive or data stored on them.

- 2 Load your document.
- 3 Press  (SCAN).
- 4 Press Scan to Media.

- 5 Press Options.
Do one of the following:

- To change the quality, press **^** or **v** to display **Quality**. Press **Quality** and choose Color 100 dpi, Color 200 dpi, Color 300 dpi, Color 600 dpi, B/W 100 dpi, B/W 200 dpi or B/W 300 dpi.
- To change the file type, press **^** or **v** to display **File Type**. Press **File Type** and choose PDF, JPEG or TIFF.
- If you want to change the file name, press **^** or **v** to display **File Name**. Press **File Name** and enter the file name.

You can only change the first 6 characters.

Press OK.

- To start scanning without changing additional settings, go to step 6.



Note

- If you chose colour in the resolution setting, you cannot choose the file type TIFF.
- If you chose monochrome in the resolution setting, you cannot choose the file type JPEG.

- 6 Press **Mono Start** or **Colour Start**.

Printing a document

The machine can receive data from your computer and print it. To print from a computer, you must install the printer driver.

➤➤Software User's Guide: *Printing*

(Windows®)

➤➤Software User's Guide: *Printing and Faxing* (Macintosh)

- 1 Install the Brother printer driver from the CD-ROM. (➤➤Quick Setup Guide)
- 2 From your application, choose the Print command.
- 3 Choose the name of your machine in the **Print** dialog box and click **Preferences**.
- 4 Choose the settings you want to change in the Properties dialog box.
 - **Media Type**
 - **Print Quality**
 - **Paper Size**
 - **Orientation**
 - **Colour/Greyscale**
 - **Ink Save Mode**
 - **Scaling**
- 5 Click **OK**.
- 6 Click **Print** to begin printing.

Scanning a document


There are several ways to scan documents. You can use the **SCAN** key on the machine or the scanner drivers on your computer.

- 1 To use the machine as a scanner, you must install a scanner driver. If the machine is on a Network, configure it with a TCP/IP address.
 - Install the scanner drivers from the CD-ROM. (▶▶ Quick Setup Guide)
 - Configure the machine with a TCP/IP address if network scanning does not work.
 - ▶▶ Software User's Guide: *Configuring Network Scanning for Windows®*
 - ▶▶ Software User's Guide: *Configuring network scanning for Macintosh*
- 2 Load your document. (See *How to load documents* ▶▶ page 28.)
 - Use the ADF to scan multiple pages of documents. It feeds each sheet automatically.
 - Use the scanner glass to scan a page of a book or one sheet at a time.
- 3 Do one of the following:
 - To scan using the **SCAN** key, go to *Scanning using the SCAN key*.
 - To scan using a scanner driver at your computer, go to *Scanning using a scanner driver*.

Scanning using the SCAN key

For more information

▶▶ Software User's Guide: *Using the Scan key*

- 1 Press  (**SCAN**).
 - 2 Press **^** or **v** to display the available scan modes, and then press the scan mode you want to use.
 - Scan to File
 - Scan to Media
 - Scan to email
 - Scan to OCR¹
 - Scan to Image
 - Web Service²
(Web Services Scan)
- ¹ (Macintosh users)
Presto! PageManager must be downloaded and installed before use. See *Accessing Brother Support (Macintosh)* ▶▶ page 5 for further instructions.
- ² (Windows® users only)
(▶▶ Software User's Guide: *Using Web Services for scanning on your network (Windows Vista® SP2 or later and Windows® 7)*)
- 3 (For network users)
Choose the computer you want to send the data to.
 - 4 Press **Start** to begin scanning.

Scanning using a scanner driver

- Software User's Guide: *Scanning a document using the TWAIN driver* (Windows®)
 - Software User's Guide: *Scanning a document using the WIA driver* (Windows®)
 - Software User's Guide: *Scanning a document using the TWAIN driver* (Macintosh)
 - Software User's Guide: *Scanning a document using the ICA driver* (Mac OS X 10.6.x)
- 1 Start a scanning application and click the **Scan** button.
 - 2 Adjust the settings such as **Resolution**, **Brightness** and **Scan Type** in the **Scanner Setup** dialog box.
 - 3 Click **Start** or **Scan** to begin scanning.

Scanning using the ControlCenter

- Software User's Guide: *ControlCenter4* (Windows®)
- Software User's Guide: *ControlCenter2* (Macintosh)

A

Routine maintenance

Replacing the ink cartridges

Your machine is equipped with an ink dot counter. The ink dot counter automatically monitors the level of ink in each of the four cartridges. When the machine detects an ink cartridge is running out of ink, the machine will display a message on the LCD.



Note

For example, when one of the ink cartridges is nearly empty, the LCD will display `Ink low` (name of colour).

You should purchase a replacement cartridge in preparation for when the machine indicates the colour is completely empty.

When one of the ink cartridges is empty, the LCD will display `Cannot Print` or `B&W Print Only`.

You should only replace the actual ink cartridge when this message `Cannot Print` or `B&W Print Only` appears on the LCD.

The LCD will show which ink cartridge is low or needs replacing. Be sure to follow the LCD prompts to replace the ink cartridges in the correct order.

Even though the machine tells you to replace an ink cartridge, there will be a small amount of ink left in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from drying out and damaging the print head assembly.

CAUTION



If ink gets in your eyes, wash it out with water at once and call a doctor if you are concerned.

IMPORTANT

Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance and reliability when used with Brother Original ink cartridges. Brother cannot guarantee this optimum performance and reliability if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using incompatible products with this machine, any repairs required as a result may not be covered by the warranty.




- 1 Open the ink cartridge cover. If one or more of the ink cartridges have reached the end of their life, the LCD shows `B&W Print Only` or `Cannot Print`.

- 2 Press the lock release lever as shown to release the cartridge indicated on the LCD. Remove the cartridge from the machine.

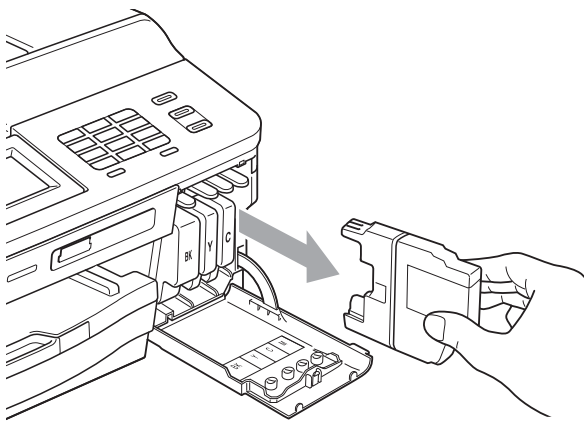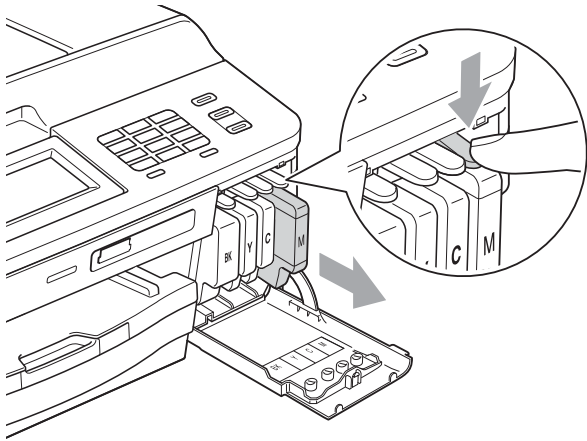


- 3 Open the new ink cartridge bag for the colour shown on the screen, and then take out the ink cartridge.


- 4 Turn the green release lever on the orange protective packing (1) clockwise until it clicks to release the vacuum seal. Then remove the orange protective packing as shown.

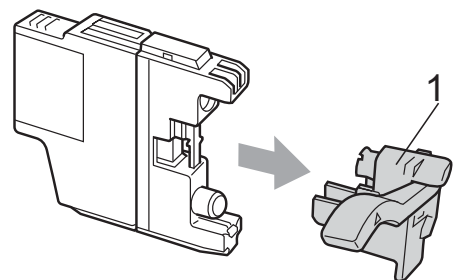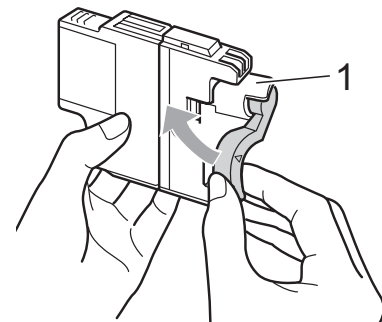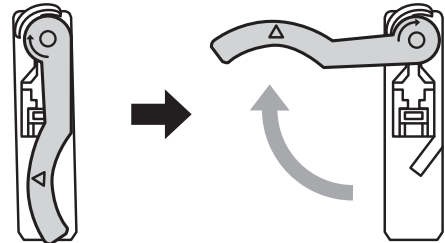

- 5 Each colour has its own correct position. Insert the ink cartridge in the direction of the arrow on the label.

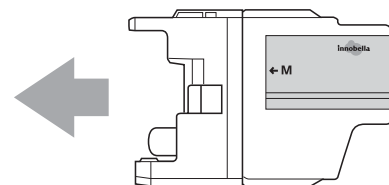

- 6 Gently push the back of the ink cartridge marked "PUSH" until it clicks, and then close the ink cartridge cover.

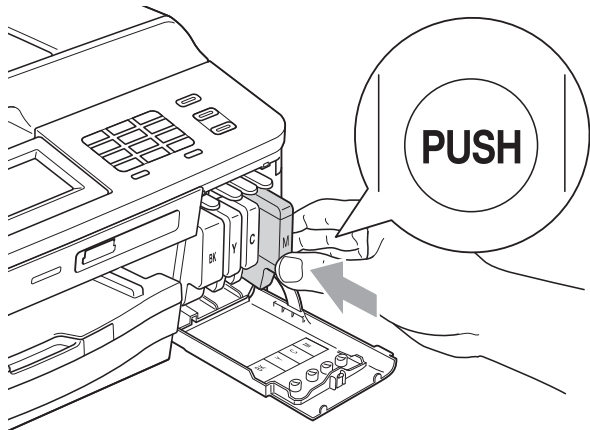

- 7 The machine will automatically reset the ink dot counter.

 **Note**

- If you replaced an ink cartridge, for example Black, the LCD may ask you to verify that it was a brand new one (for example, Did You Change **BK** Black). For each new cartridge you installed, press **Yes** to automatically reset the ink dot counter for that colour. If the ink cartridge you installed is not a brand new one, be sure to press **No**.
- If the LCD shows **No Ink Cartridge** or **Cannot Detect** after you install the ink cartridges, check that the ink cartridges are brand new Original Brother and that they are installed correctly.


 **IMPORTANT**

- DO NOT take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.
- DO NOT touch the cartridge insertion slots. If you do so, the ink may stain your skin.
- If ink gets on your skin or clothing immediately wash it off with soap or detergent.
- If you mix the colours by installing an ink cartridge in the wrong position, clean the print head several times after correcting the cartridge installation.
- Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- DO NOT dismantle or tamper with the ink cartridge; this can cause the ink to leak out of the cartridge.


Cleaning and checking the machine

Cleaning the scanner glass

- 1 Unplug the machine from the electrical socket.
- 2 Lift the document cover (1). Clean the scanner glass (2) and the white plastic (3) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

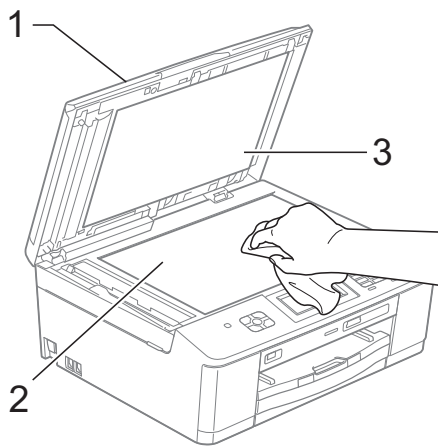

- 3 In the ADF unit, clean the white bar (1) and the glass strip (2) with a lint-free cloth moistened with a non-flammable glass cleaner.

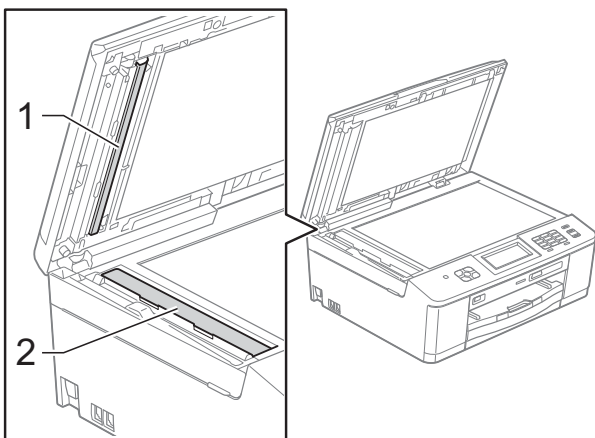

Note

In addition to cleaning the glass strip with a non-flammable glass cleaner, run your finger tip over the glass strip to see if you can feel anything on it. If you feel dirt or debris, clean the glass strip again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning attempt.



When there is a spot of dirt or correction fluid on the glass strip the printed sample shows a vertical line.



After the glass strip is cleaned the vertical line is gone.

Cleaning the print head


To maintain good print quality, the machine will automatically clean the print head when needed. You can start the cleaning process manually if there is a print quality problem.

Clean the print head if you get a horizontal line in the text or graphics, or blank text on your printed pages. You can clean Black only, three colours at a time (Yellow/Cyan/Magenta), or all four colours at once.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.

! IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.


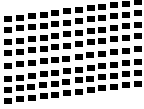
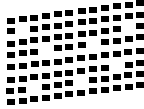
- 1 Press  (Ink).
- 2 Press **Cleaning**.
- 3 Press **▲** or **▼** to display **Black**, **Color** or **All**, and then press the option you want to clean.
The machine cleans the print head. When cleaning is finished, the machine will go back to the Ready mode automatically.

Note

If you clean the print head at least five times and the print has not improved, try installing a new Brother Original Innobella™ ink cartridge for each problem colour. Try cleaning the print head again up to five more times. If the print has not improved call your Brother dealer.

Checking the print quality

If faded or streaked colours and text appear on your printouts, some of the print head nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.

- 1 Press  (Ink).
 - 2 Press **Test Print**.
 - 3 Press **Print Quality**.
 - 4 Press **Start**.
The machine begins printing the Print Quality Check Sheet.
 - 5 Check the quality of the four colour blocks on the sheet.
 - 6 The LCD asks you if the print quality is OK.
Do one of the following:
 - If all lines are clear and visible, press **Yes** to finish the Print Quality check and go to step 10.
 - If you can see missing short lines as shown below, press **No**.
- | | |
|--|---|
| OK | Poor |
|  |  |
- 7 The LCD asks you if the print quality is OK for black and then the three colours. Press **Yes** or **No**.
 - 8 The LCD asks you if you want to start cleaning. Press **Yes**.
The machine starts cleaning the print head.

- 9 After the cleaning procedure is finished, press **Start**.

The machine starts printing the Print Quality Check Sheet again and repeat the procedure from step 5.

- 10 Press **Stop/Exit**.

If you repeat this procedure at least five times and the print quality is still poor, replace the ink cartridge for the clogged colour.

After replacing the ink cartridge, check the print quality. If the problem still exists, repeat the cleaning and test print procedures at least five times for the new ink cartridge. If ink is still missing, call your Brother dealer.

! IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

Note




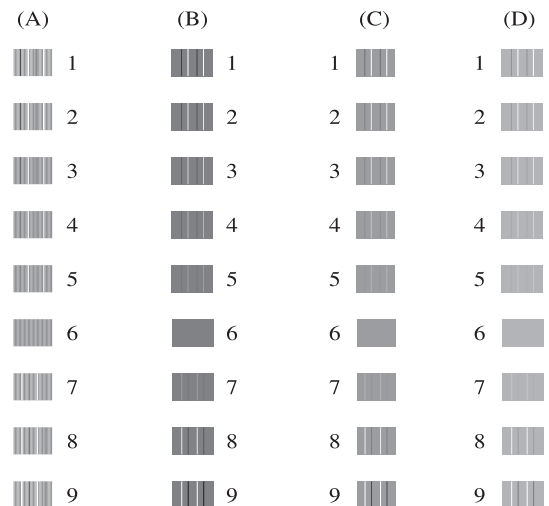
When a print head nozzle is clogged the printed sample looks like this.

After the print head nozzle is cleaned, the horizontal lines are gone.

Checking the print alignment

You may need to adjust the print alignment after transporting the machine, if your printed text becomes blurred or images become faded.

- 1 Press  (Ink).
- 2 Press **Test Print**.
- 3 Press **Alignment**.
- 4 Press **Start**.
The machine starts printing the Alignment Check Sheet.



- 5 For the "A" pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 6 For the "B" pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 7 For the "C" pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 8 For the "D" pattern, press the number of the test print that has the least visible vertical stripes (1-9).
- 9 Press **Stop/Exit**.

A

B

Troubleshooting

Error and Maintenance messages


As with any sophisticated office product, errors may occur and consumable items may need to be replaced. If this happens, your machine identifies the error and shows an error message. The most common error and maintenance messages are shown below.

You can correct most errors and routine maintenance by yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.




Note

The information button () lights up when an error message appears on the screen. Press to display the error message screen.

Error Message	Cause	Action
<p>B&W Print Only Replace Ink</p>	<p>One or more of the colour ink cartridges have reached the end of their life.</p> <p>You can use the machine in monochrome mode for approximately four weeks depending on the number of pages you print.</p> <p>While this message appears on the LCD, each operation works in the following way:</p> <ul style="list-style-type: none"> ■ Printing If you choose Greyscale in the Advanced tab of the printer driver you can use the machine as a monochrome printer. Duplex print is not available when this message appears. ■ Copying If the paper type is set to Plain Paper you can make copies in monochrome. Duplex copy is not available when this message appears. ■ Faxing If the paper type is set to Plain Paper or Inkjet Paper, the machine will receive and print the faxes in monochrome. If a sending machine has a colour fax, the machine's "handshake" will ask that the fax be sent as monochrome. If the paper type is set to Other Glossy, Brother BP71 or Brother BP61 the machine will stop all print operations. 	<p>Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> ➤➤ page 64.)</p> <p><i>If you unplug the machine or take out the ink cartridge, you cannot use the machine until you change to a new ink cartridge.</i></p>
<p>Cannot Detect</p>	<p>You installed a new ink cartridge too quickly and the machine did not detect it.</p> <p>If you are using non Brother Original ink the machine may not detect the ink cartridge.</p> <p>An ink cartridge is not installed correctly.</p>	<p>Take out the new ink cartridge and re-install it slowly until it clicks.</p> <p>Replace the cartridge with a Brother Original ink cartridge. If the error message remains, contact your Brother dealer.</p> <p>Take out the new ink cartridge and re-install it slowly until it clicks. (See <i>Replacing the ink cartridges</i> ➤➤ page 64.)</p>



Error Message	Cause	Action
Cannot Print Replace Ink	One or more of the ink cartridges have reached the end of their life. The machine will stop all print operations. While memory is available, monochrome faxes will be stored in the memory. If a sending machine has a colour fax, the machine's "handshake" will ask that the fax be sent as monochrome.	Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> >> page 64.)
Comm.Error	Poor telephone line quality caused a communication error.	If the problem continues, call the telephone company and ask them to check your telephone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cover is Open	The scanner cover is not completely closed.	Lift the scanner cover and then close it again.
	The ink cartridge cover is not completely closed.	Firmly close the ink cartridge cover until it clicks.
Data Remaining	Print data is left in the machine's memory.	Press Stop/Exit . The machine will cancel the job and clear it from the memory. Try to print again.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again. If calls are stopped repeatedly and you are using a VoIP (Voice over IP) system, try changing the Compatibility to Basic (for VoIP). (See <i>Telephone line interference / VoIP</i> >> page 93.)
Document Jam	The document was not inserted or fed correctly, or the document scanned from the ADF was too long.	(See <i>Using the ADF</i> >> page 28.) (See <i>Document jam</i> >> page 79.)
DR Mode in Use (For Australia, Singapore and Hong Kong) FaxAbility On (For New Zealand)	(For Australia, Singapore and Hong Kong) The machine is in Distinctive Ring mode. You cannot change the Receive Mode from Manual to another mode. (For New Zealand) The machine is in FaxAbility mode. You cannot change the Receive Mode from Manual to another mode.	(For Australia, Singapore and Hong Kong) Set Distinctive Ring to Off. (See <i>Turning off Distinctive Ring</i> >> page 40 and 45) (For New Zealand) Set FaxAbility to Off. (See <i>How to Turn FaxAbility OFF or ON</i> >> page 43)
High Temperature	The print head is too warm.	Allow the machine to cool down.
Hub is Unusable.	A Hub or USB Flash memory drive with Hub has been connected to the USB direct interface.	Hubs, including USB Flash memory drives that have a hub built-in, are not supported. Unplug the device from the USB direct interface.


Error Message	Cause	Action
Ink Absorber Full	<p>The ink absorber box or flushing box is full. These components are periodic maintenance items that may require replacement after a period of time to ensure optimum performance from your Brother machine. Because these components are periodic maintenance items, the replacement is not covered under the warranty. The need to replace these items and the time period before replacement is dependent on the number of purges and flushes required to clean the ink system. These boxes acquire amounts of ink during the different purging and flushing operations. The number of times a machine purges and flushes for cleaning varies depending on different situations. For example, frequently powering the machine on and off will cause numerous cleaning cycles since the machine automatically cleans upon power up. The use of non-Brother ink may cause frequent cleanings because non-Brother ink could cause poor print quality which is resolved by cleaning. The more cleaning the machine requires the faster these boxes will fill up.</p> <p> Note</p> <p><i>Repairs resulting from the use of non-Brother supplies may not be covered under the stated product warranty.</i></p>	<p>The ink absorber box or flushing box will need to be replaced. Contact Brother Customer Service or your local Brother Authorised Service Centre to have your machine serviced.</p> <p>Other reasons for cleaning are:</p> <ol style="list-style-type: none"> 1 After a paper jam has been cleared, the machine automatically cleans itself before the next received fax is printed. 2 The machine automatically cleans itself after sitting idle for more than 30 days (infrequent use). 3 The machine automatically cleans itself after the ink cartridges have been replaced 12 times.
InkAbsorberNearFull	The ink absorber box or flushing box is near full.	Call Brother Customer Service / your Brother dealer.
Ink low	One or more of the ink cartridges are near the end of their life. If a sending machine has a colour fax to send, your machine's "handshake" will ask that the fax be sent as monochrome. If the sending machine has the ability to convert it, the colour fax will be printed at your machine as a monochrome fax.	Order a new ink cartridge. You can continue printing until the LCD shows <i>Cannot Print</i> . (See <i>Replacing the ink cartridges</i> >> page 64.)
Low Temperature	The print head is too cold.	Allow the machine to warm up.

Error Message	Cause	Action
Media Error	The memory card is either corrupted, incorrectly formatted, or there is a problem with the memory card.	Put the card firmly into the slot again to make sure it is in the correct position. If the error remains, check the media drive (slot) of the machine by putting in another memory card that you know is working.
Media is Full.	The memory card or USB Flash memory drive you are using has no available space or already contains 999 files.	Your machine can only save to your memory card or USB Flash memory drive if it contains less than 999 files. Delete unused files to free some space and try again.
No Caller ID	There is no incoming call history. You did not receive calls or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature call your telephone company. (See <i>Caller ID</i> >> page 41, 43 and 45 for your relevant country.)
No File	The memory card or USB Flash memory drive in the media drive does not contain a .JPG file.	Put the correct memory card or USB Flash memory drive into the slot again.
No Ink Cartridge	An ink cartridge is not installed correctly.	Take out the new ink cartridge and re-install it slowly until it clicks. (See <i>Replacing the ink cartridges</i> >> page 64.)

Error Message	Cause	Action
No Paper Fed	The Photo Paper Tray is in the <i>Photo</i> printing position.	Verify that the Photo Paper Tray is in the <i>Normal</i> printing position. (See step 4 and the Important note in <i>Loading photo paper</i> >> page 19.)
	The machine is out of paper or paper is not correctly loaded in the paper tray.	Do one of the following: <ul style="list-style-type: none"> ■ Refill the paper in the paper tray, and then press Mono Start or Colour Start. ■ Remove the paper and load it again, and then press Mono Start or Colour Start. (See <i>Loading paper and other print media</i> >> page 14.)
	The paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> >> page 80. If this error occurs often during duplex copying or duplex printing, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (>>Advanced User's Guide: <i>Cleaning the paper feed rollers</i>)
	Paper dust has accumulated on the surface of the paper pick-up rollers.	Clean the paper pick-up rollers. (>>Advanced User's Guide: <i>Cleaning the paper pick-up rollers</i>)
	The Jam Clear Cover is not closed correctly.	Check the Jam Clear Cover is closed evenly at both ends. (See <i>Printer jam or paper jam</i> >> page 80.)
No Response/Busy	The number you dialled has not answered or is busy.	Verify the number and try again.
Not Registered	You tried to access a Speed Dial number that is not programmed.	Set up the Speed Dial number. (See <i>Storing Speed Dial numbers</i> >> page 52.)
Out of Fax Memory	The fax memory is full.	Do one of the following: <ul style="list-style-type: none"> ■ Clear the data in the memory. To gain extra memory, you can turn off Memory Receive. (>>Advanced User's Guide: <i>Turning off Memory Receive operations</i>) ■ Print the faxes that are in the memory. (>>Advanced User's Guide: <i>Printing a fax from the memory</i>)



Error Message	Cause	Action
Out of Memory	The machine's memory is full.	If a copy operation is in process Press Stop/Exit and wait until the other operations that are in progress finish, and then try again.
	The memory card or USB Flash memory drive you are using does not have enough free space to scan the documents.	Press Stop/Exit . Delete unused files from your memory card or USB Flash memory drive to make some free space and then try again.
Paper Jam [Front]	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the front of the machine</i> ➤➤ page 80. Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper. (The extendable tray is only available for some countries.)
PaperJam Front,Rear	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the front and back of the machine</i> ➤➤ page 83. Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper. (The extendable tray is only available for some countries.)
Paper Jam [Rear]	Paper is jammed in the machine.	Remove the jammed paper by following the steps in <i>Paper is jammed at the back of the machine</i> ➤➤ page 82. Make sure the paper length guide is set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper. (The extendable tray is only available for some countries.)
	Paper dust has accumulated on the surface of the paper pick-up rollers.	Clean the paper pick-up rollers. (➤➤Advanced User's Guide: <i>Cleaning the paper pick-up rollers</i>)

Error Message	Cause	Action
Screen init. Fail	The Touchscreen was pressed before the power on initialization was completed.	Make sure that nothing is touching or resting on the Touchscreen.
	Debris may be stuck between the lower part of the touchscreen and its frame.	Insert a piece of stiff paper between the lower part of the touchscreen and its frame and slide it back and forth to push out the debris.
Unable to CleanXX Unable to Init.XX Unable to PrintXX Unable to ScanXX	The machine has a mechanical problem. —OR— A foreign object such as a paper clip or ripped paper is in the machine.	Open the scanner cover and remove any foreign objects and paper scraps from inside the machine. If the error message continues, see <i>Transferring your faxes or Fax Journal report</i> >> page 78 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power for several minutes and reconnect it.
Unusable Device Disconnect device from front connector & turn machine off & then on	A broken device has been connected to the USB direct interface.	Unplug the device from the USB direct interface. Press Stop/Exit to return to Ready mode. Then press  to turn the machine off and then on again.
Unusable Device Please Disconnect USB Device.	A USB device or USB Flash memory drive that is not supported has been connected to the USB direct interface. For more information, visit us at http://solutions.brother.com/ .	Unplug the device from the USB direct interface. Turn the machine off and then on again.
Wrong Ink Colour	A colour ink cartridge has been installed in the Black ink cartridge position.	Check which ink cartridges are not matched by colour to their ink cartridge positions and move them to their correct positions.
Wrong Paper Size	The Paper Size setting does not match the size of paper in the tray. Or, you did not set the paper guides in the tray to the indicators for the paper size you are using.	<ol style="list-style-type: none"> 1 Check that the paper size you choose matches the size of paper in the tray. 2 Make sure you loaded the paper in a Portrait position, by setting the paper guides at the indicators for your paper size. 3 After you have checked the paper size and the paper position, press Mono Start or Colour Start.

Error animations display

Error animations display step-by-step instructions when paper gets jammed. You can read the steps at your own pace by pressing **▼** to see the next step and **▲** to go back a step.

Transferring your faxes or Fax Journal report

If the LCD shows:

- Unable to CleanXX
- Unable to Init.XX
- Unable to PrintXX
- Unable to ScanXX

We recommend transferring your faxes to another fax machine or to your PC. (See *Transferring faxes to another fax machine* >> page 78 or *Transferring faxes to your PC* >> page 78.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring the Fax Journal report to another fax machine* >> page 79.)

Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode.

(>>Quick Setup Guide: *Enter personal information (Station ID)*)

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Press **Menu**.
- 3 Press **▲** or **▼** to display **Service**.
- 4 Press **Service**.
- 5 Press **Data Transfer**.
- 6 Press **Fax Transfer**.

- 7 Do one of the following:
 - If the LCD shows **No Data**, there are no faxes left in the machine's memory.
Press **Stop/Exit**.
 - Enter the fax number to which faxes will be forwarded.
- 8 Press **Mono Start**.

Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Make sure you have installed **MFL-Pro Suite** on your PC, and then turn on **PC FAX Receiving** on the PC. (>>Software User's Guide: *PC-FAX receiving*)
- 3 Make sure you have set **PC-Fax Receive** on the machine. (>>Advanced User's Guide: *PC-Fax Receive (Windows® only)*)
If faxes are in the machine's memory when you set up **PC-Fax Receive**, the LCD will ask if you want to transfer the faxes to your PC.
- 4 Do one of the following:
 - To transfer all faxes to your PC, press **Yes**. You will be asked if you want to also turn on the backup print option.
 - To exit and leave the faxes in the memory, press **No**.
- 5 Press **Stop/Exit**.

Transferring the Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode.

(▶▶ Quick Setup Guide: *Enter personal information (Station ID)*)


- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Press **Menu**.
- 3 Press **▲** or **▼** to display **Service**.
- 4 Press **Service**.
- 5 Press **Data Transfer**.
- 6 Press **Report Trans.**
- 7 Enter the fax number to which the Fax Journal report will be forwarded.
- 8 Press **Mono Start**.

Document jam

Documents can jam in the ADF unit if they are not inserted or fed correctly, or if they are too long. Follow the steps below to clear a document jam.

Document is jammed in the top of the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- 2 Open the ADF cover.
- 3 Remove the jammed document by pulling it upward.

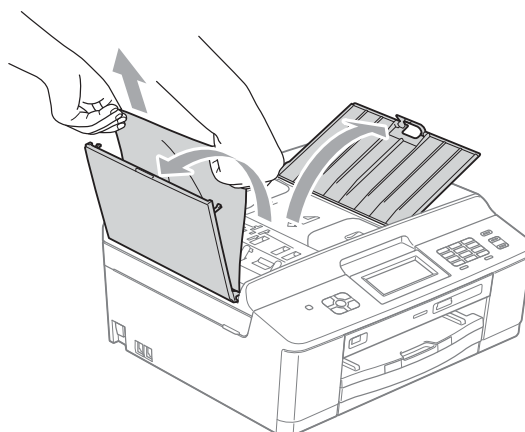


- 4 Close the ADF cover.
- 5 Press **Stop/Exit**.

! IMPORTANT

To avoid document jams close the ADF cover correctly by pushing it gently in the middle.

Document is jammed inside the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- 2 Lift the document cover.
- 3 Pull the jammed document out to the left.

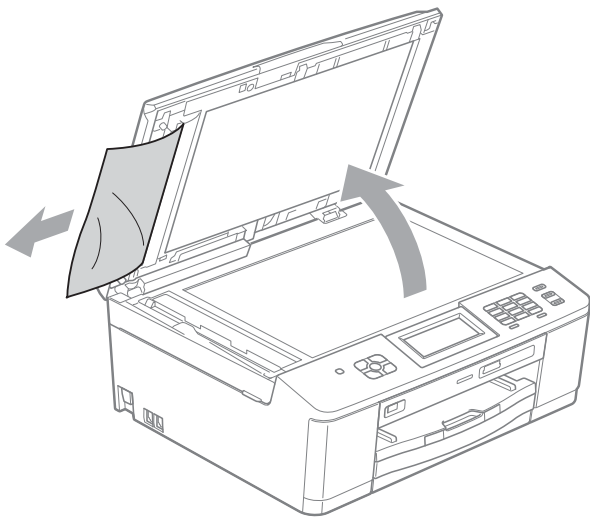

- 4 Close the document cover.
- 5 Press **Stop/Exit**.

Printer jam or paper jam

Take out the jammed paper depending on where it is jammed in the machine.

Paper is jammed at the front of the machine


If the LCD shows *Paper Jam [Front]*, follow these steps:

- 1 Unplug the machine from the electrical socket.


! IMPORTANT

Before you unplug the machine from the power source, you can transfer your faxes that are stored in the memory to your PC or another fax machine so you will not lose any important messages. (See *Transferring your faxes or Fax Journal report* >> page 78.)


- 2 If the paper support flap is open, close it, and then close the paper support. Pull the paper tray completely out of the machine.

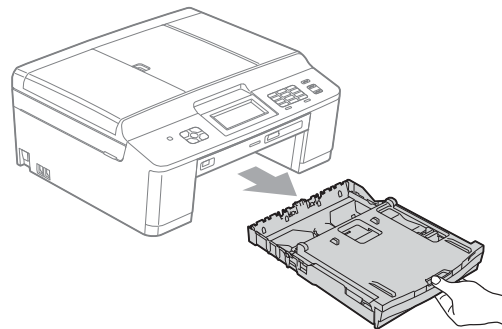


- 3 Pull the two green levers inside the machine to release the jammed paper.

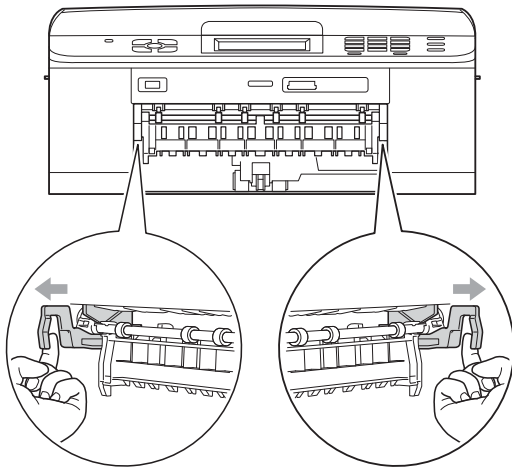


- 4 Pull out the jammed paper (1).

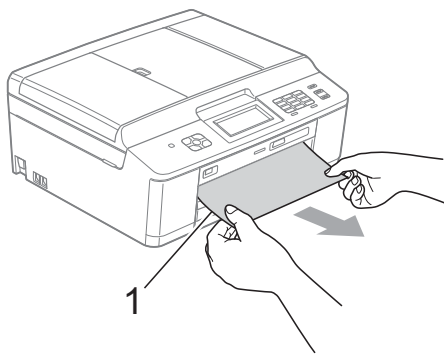

- 5 Lift the Jam Clear Flap, and remove the jammed paper.

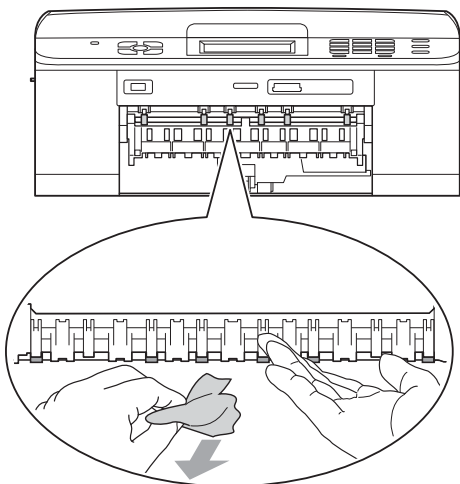

- 6 Push the two green levers back to the original positions.

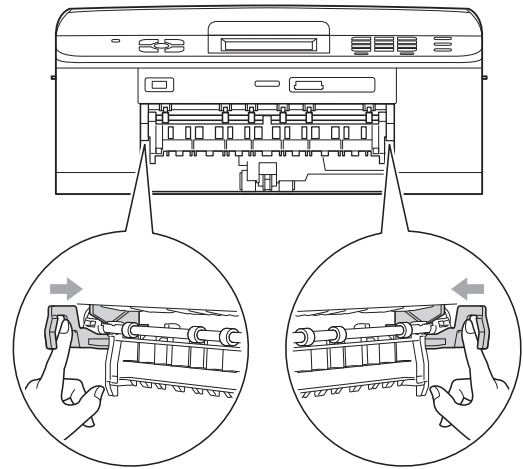

- 7 Push the paper tray firmly back into the machine.

- 8 While holding the paper tray in place, pull out the paper support until it clicks, and then unfold the paper support flap. Make sure you pull out the paper support until it clicks.

! IMPORTANT

DO NOT use the paper support flap for Legal size paper. (Only available for some countries.)

- 9 Re-connect the power cord.

Paper is jammed at the back of the machine


If the LCD shows *Paper Jam [Rear]*, follow these steps:

- 1 Unplug the machine from the electrical socket.


! IMPORTANT

Before you unplug the machine from the power source, you can transfer your faxes that are stored in the memory to your PC or another fax machine so you will not lose any important messages. (See *Transferring your faxes or Fax Journal report* >> page 78.)


- 2 Open the Jam Clear Cover (1) at the back of the machine.

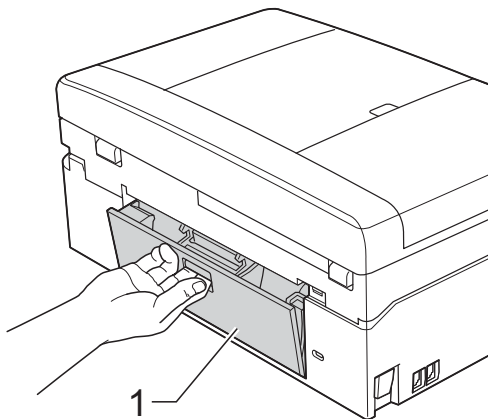

- 3 Pull the jammed paper out of the machine.

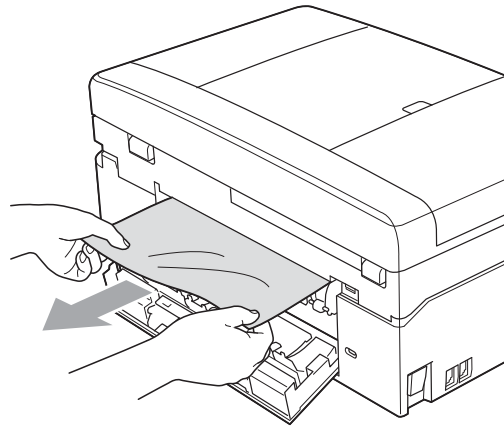

- 4 Close the Jam Clear Cover. Make sure the cover is closed correctly.

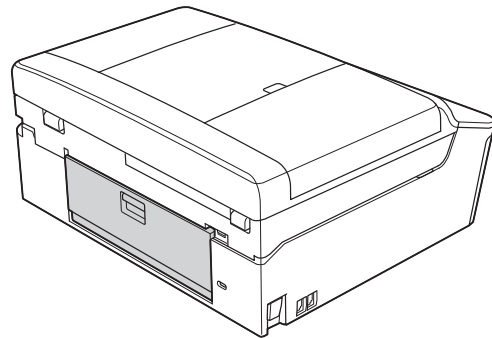

- 5 Re-connect the power cord.

Paper is jammed at the front and back of the machine


If the LCD shows *PaperJam Front, Rear*, follow these steps:

- 1 Unplug the machine from the electrical socket.


! IMPORTANT

Before you unplug the machine from the power source, you can transfer your faxes that are stored in the memory to your PC or another fax machine so you will not lose any important messages. (See *Transferring your faxes or Fax Journal report* >> page 78.)


- 2 If the paper support flap is open, close it, and then close the paper support. Pull the paper tray completely out of the machine.

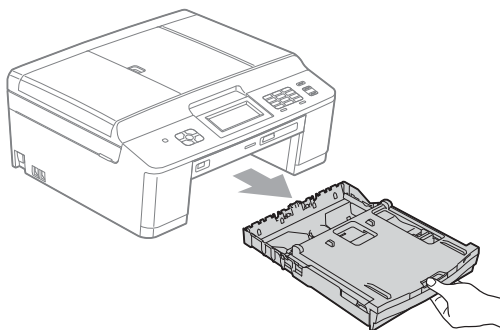


- 3 Pull the two green levers inside the machine to release the jammed paper.

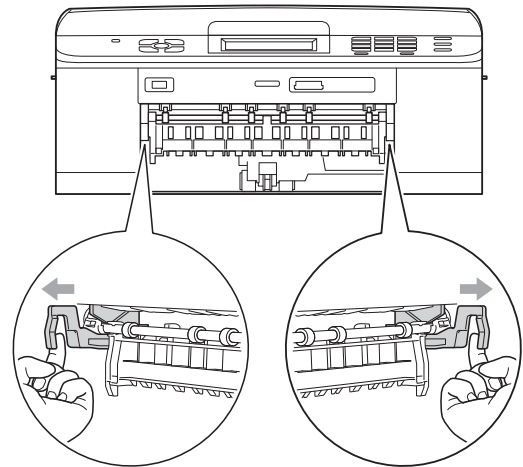


- 4 Pull out the jammed paper (1).

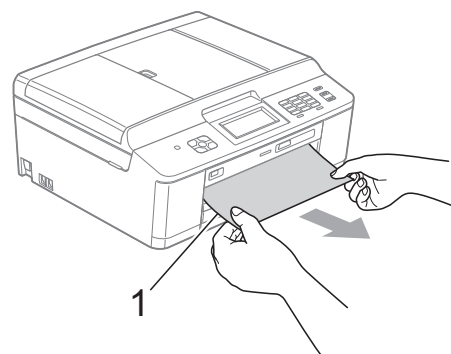


- 5 Lift the Jam Clear Flap, and remove the jammed paper.

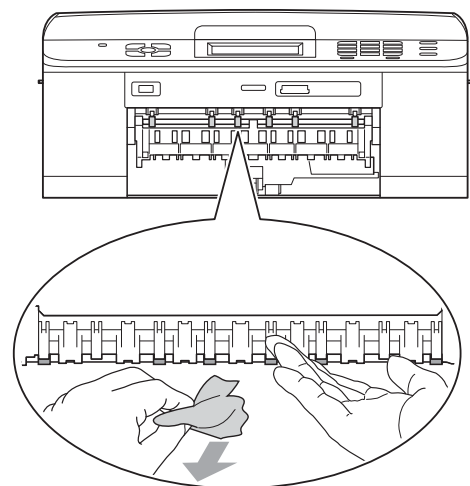


- 6 Open the Jam Clear Cover (1) at the back of the machine.

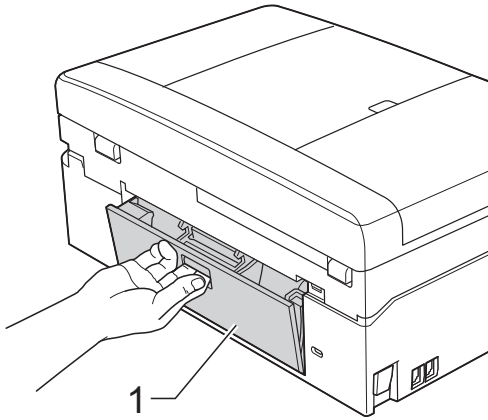


- 7 Pull the jammed paper out of the machine.

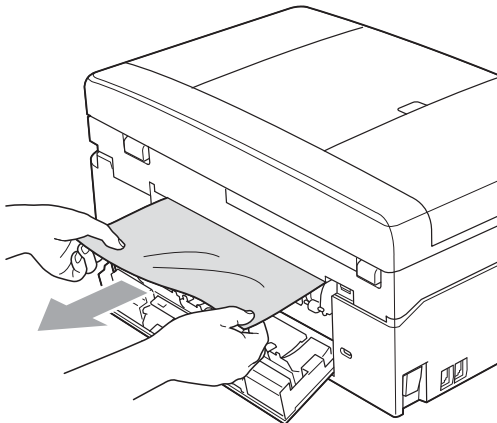

- 8 Close the Jam Clear Cover. Make sure the cover is closed correctly.

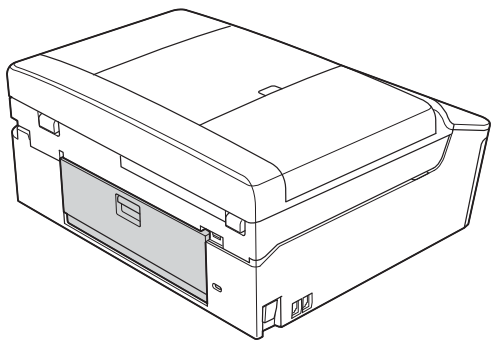


- 9 Using both hands, use the plastic tabs on both sides of the machine to lift the scanner cover (1) to the open position.

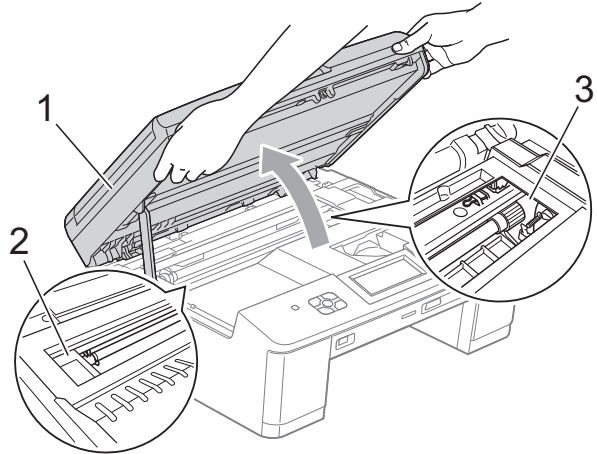

Move the print head (if necessary) to take out any paper remaining in this area. Make sure that jammed paper is not left in the corners of the machine (2) and (3).


! IMPORTANT

- If the paper is jammed under the print head, unplug the machine from the power source, and then move the print head to take out the paper.
- If the print head is in the right corner as shown in the illustration, you cannot move it. Re-connect the power cord. Hold down **Stop/Exit** until the print head moves to the centre. Then unplug the machine from the power source and take out the paper.

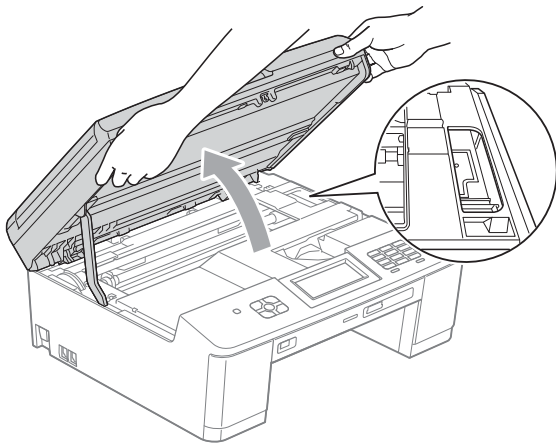


- If ink gets onto your skin, immediately wash with soap and plenty of water.

- 10 Using both hands, grasp the plastic tabs on both sides of the machine and gently close the scanner cover.

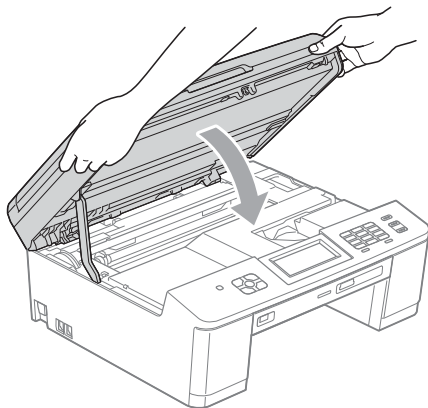

- 11 Push the two green levers back to the original positions.

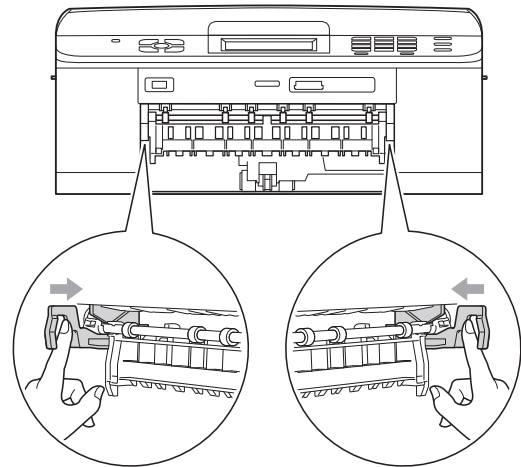

- 12 Push the paper tray firmly back into the machine.

- 13 While holding the paper tray in place, pull out the paper support until it clicks, and then unfold the paper support flap. Make sure you pull out the paper support until it clicks.

! IMPORTANT

DO NOT use the paper support flap for Legal size paper. (Only available for some countries.)

- 14 Re-connect the power cord.

Troubleshooting


If you think there is a problem with your machine, check the chart below and follow the troubleshooting tips.

Most problems can be easily resolved by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.

If you are having difficulty with your machine

Printing

Difficulty	Suggestions
No printout.	Check the interface cable or wireless connection on both the machine and your computer. (▶▶Quick Setup Guide)
	Check that the machine is plugged in and that the  key is on.
	One or more ink cartridges have reached the end of their life. (See <i>Replacing the ink cartridges</i> ▶▶ page 64.)
	Check to see if the LCD is showing an error message. (See <i>Error and Maintenance messages</i> ▶▶ page 70.)
	If the LCD shows <i>Cannot Print and Replace Ink</i> , see <i>Replacing the ink cartridges</i> ▶▶ page 64.
	Check that the correct printer driver has been installed and chosen.
	(Windows® users only) Make sure that the machine is online. Click Start and then Printers and Faxes . Right-click and choose Brother MFC-XXXXX (where XXXXX is your model name), and make sure that Use Printer Offline is unchecked.
Poor print quality.	Check the print quality. (See <i>Checking the print quality</i> ▶▶ page 68.)
	Make sure that the Media Type setting in the printer driver or the <i>Paper Type</i> setting in the machine's menu matches the type of paper you are using. See <i>Paper Type</i> ▶▶ page 23. ▶▶Software User's Guide: <i>Printing</i> (Windows®) ▶▶Software User's Guide: <i>Printing and Faxing</i> (Macintosh)
	Make sure that your ink cartridges are fresh. The following may cause ink to clog: <ul style="list-style-type: none"> ■ The expiration date written on the cartridge package has passed. (Brother Original cartridges stay usable for up to two years if kept in their original packaging.) ■ The ink cartridge has been in your machine for over six months. ■ The ink cartridge may not have been stored correctly before use.
	Make sure you are using Brother Original Innobella™ ink. Brother does not recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources.
	Try using the recommended types of paper. (See <i>Acceptable paper and other print media</i> ▶▶ page 24.)
	The recommended environment for your machine is between 20 °C to 33 °C.

Printing (continued)

Difficulty	Suggestions
White horizontal lines appear in text or graphics.	Clean the print head. (See <i>Cleaning the print head</i> >> page 68.)
	Make sure you are using Brother Original Innobella™ ink.
	Try using the recommended types of paper. (See <i>Acceptable paper and other print media</i> >> page 24.)
The machine prints blank pages.	Clean the print head. (See <i>Cleaning the print head</i> >> page 68.)
	Make sure you are using Brother Original Innobella™ ink.
Characters and lines are blurred.	Check the printing alignment. (See <i>Checking the print alignment</i> >> page 69.)
Printed text or images are skewed.	Make sure the paper is loaded correctly in the paper tray and the paper side guides are adjusted correctly. (See <i>Loading paper and other print media</i> >> page 14.)
	Make sure the Jam Clear Cover is closed correctly.
Smudge or stain at the top centre of the printed page.	Make sure the paper is not too thick or curled. (See <i>Acceptable paper and other print media</i> >> page 24.)
Printing appears dirty or ink seems to run.	Make sure you are using the recommended types of paper. (See <i>Acceptable paper and other print media</i> >> page 24.) Don't handle the paper until the ink is dry.
	Make sure you are using Brother Original Innobella™ ink.
	If you are using photo paper, make sure that you have set the correct paper type. If you are printing a photo from your PC, set the Media Type of the printer driver.
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (>>Advanced User's Guide: <i>Cleaning the machine's printer platen</i>)
	Make sure you are using Brother Original Innobella™ ink.
	Make sure you are using the paper support flap. (See <i>Loading paper and other print media</i> >> page 14.)
	Make sure the paper feed rollers are not dirty with ink. (>>Advanced User's Guide: <i>Cleaning the paper feed rollers</i>)
The machine prints dense lines on the page.	Check Reverse Order in the Basic tab of the printer driver.
The printouts are wrinkled.	(Windows® users) In the printer driver Advanced tab, click Colour Settings , and uncheck Bi-Directional Printing .
	(Macintosh users) In the printer driver, choose Print Settings , click Advanced , choose Other Print Options , and uncheck Bi-Directional Printing .
	Make sure you are using Brother Original Innobella™ ink.
Cannot perform "Page Layout" printing.	Check that the paper size setting in the application and in the printer driver are the same.
Print speed is too slow.	Try changing the printer driver setting. The highest resolution needs longer data processing, sending and printing time. Try the other quality settings in the printer driver Advanced tab (Windows®) or Print Settings (Macintosh). Also, click Colour Settings , and make sure you uncheck Colour Enhancement .
	Turn the borderless feature off. Borderless printing is slower than normal printing. >>>Software User's Guide: <i>Printing</i> (Windows®) >>>Software User's Guide: <i>Printing and Faxing</i> (Macintosh)



Printing (continued)

Difficulty	Suggestions
Colour Enhancement is not working correctly.	If the image data is not full colour in your application (such as 256 colour), Colour Enhancement will not work. Use at least 24 bit colour data with the Colour Enhancement feature.
Photo paper does not feed correctly.	When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
	Clean the paper pick-up rollers. (►►Advanced User's Guide: <i>Cleaning the paper pick-up rollers</i>)
Machine feeds multiple pages.	Make sure the paper is loaded correctly in the paper tray. (See <i>Loading paper and other print media</i> ►► page 14.)
There is a paper jam.	Make sure the paper length guide is set to the correct paper size. Do not extend the paper tray when you load A5 or smaller size paper. (The extendable tray is only available for some countries.) (See <i>Printer jam or paper jam</i> ►► page 80.)
The paper jams when you use duplex copy or duplex print.	Use one of the jam prevention settings, Duplex1 or Duplex2. For copying ►►Advanced User's Guide: <i>Duplex (2-sided) copying (MFC-J625DW and DCP-J725DW only)</i> For printing ►►Software User's Guide: <i>Duplex / Booklet (Windows®)</i> ►►Software User's Guide: <i>Duplex Printing (Macintosh)</i>
	If paper jams often when using duplex copy or duplex print, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (►►Advanced User's Guide: <i>Cleaning the paper feed rollers</i>)
Printed pages are not stacked neatly.	Make sure you are using the paper support flap. (See <i>Loading paper and other print media</i> ►► page 14.)
Machine does not print from Adobe® Illustrator®.	Try to reduce the print resolution. ►►Software User's Guide: <i>Printing (Windows®)</i> ►►Software User's Guide: <i>Printing and Faxing (Macintosh)</i>
Ink is smudged or running when using glossy photo paper.	Make sure to check the front and back of the paper. Place the glossy surface (printing surface) face down. (See <i>Paper Type</i> ►► page 23.)
	If you use glossy photo paper, make sure that the paper type setting is correct.

Printing Received Faxes

Difficulty	Suggestions
Condensed print and white streaks across the page or the top and bottom of sentences are cut off.	You probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Received colour fax prints only in black and white.	Replace the colour ink cartridges that have reached the end of their life, and then ask the other person to send the colour fax again. (See <i>Replacing the ink cartridges</i> ►► page 64.)
Left and Right margins are cut off or a single page is printed on two pages.	Turn on Auto Reduction. (►►Advanced User's Guide: <i>Printing a reduced incoming fax</i>)

Telephone Line or Connections

Difficulty	Suggestions
Dialling does not work. (No dial tone)	Make sure the machine is plugged in and turned on.
	Check the line cord connections.
	(Not available in New Zealand) Change the Tone/Pulse setting. (▶▶Quick Setup Guide)
	Lift the external telephone's handset and listen for a dial tone. If there is no dial tone, ask your telephone company to check the line and/or socket.
The machine does not answer when called.	Make sure the machine is in the correct Receive Mode for your setup. (See <i>Choose the Receive Mode</i> ▶▶ page 34.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.

Sending Faxes

Difficulty	Suggestions
Cannot send a fax.	Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall socket and the LINE socket of the machine.
	Ask the other party to check that the receiving machine has paper.
	Print the Transmission Verification Report and check for an error. (▶▶Advanced User's Guide: <i>Reports</i>)
Transmission Verification Report says "RESULT:ERROR".	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get "RESULT:ERROR" on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Memory Receive (▶▶Advanced User's Guide: <i>Turning off Memory Receive operations</i>), print fax messages from the machine's memory (▶▶Advanced User's Guide: <i>Printing a fax from the memory</i>) or cancel a Delayed Fax or Polling Job. (See <i>Cancelling a fax in progress</i> ▶▶ page 32.) (▶▶Advanced User's Guide: <i>Checking and cancelling waiting jobs</i>) If the problem continues, ask the telephone company to check your telephone line.
	If you often get transmission errors due to possible interference on the telephone line, try changing the menu setting of Compatibility to <code>Basic</code> (for VoIP). (See <i>Telephone line interference / VoIP</i> ▶▶ page 93.)
Poor fax send quality.	Try changing your resolution to <code>Fine</code> or <code>S.Fine</code> . Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See <i>Cleaning the scanner glass</i> ▶▶ page 67.)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass</i> ▶▶ page 67.)



Handling Incoming Calls

Difficulty	Suggestions
The machine "hears" a voice as a CNG Tone.	If Fax Detect is set to On, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing Stop/Exit . Try avoiding this problem by turning Fax Detect to Off. (See <i>Fax Detect</i> >> page 38.)
Sending a fax call to the machine.	If you answered on an extension or external telephone, press your Remote Activation Code (the factory default is * 5 1 (* 9 1 for New Zealand)). If you answered on an external telephone, press Start to receive the fax. When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes. For example: If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. Brother's ECM (Error Correction Mode) feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate telephone line with no custom features is recommended.

Copying Difficulties

Difficulty	Suggestions
Poor copy results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> >> page 29.)
Vertical black lines or streaks appear in copies.	Vertical black lines or streaks on copies are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass</i> >> page 67.)
Fit to Page does not work correctly.	Make sure your source document is not skewed. Reposition the document and try again.

Scanning Difficulties

Difficulty	Suggestions
TWAIN or WIA errors appear when starting to scan. (Windows®)	(Not available in Hong Kong and Taiwan) Make sure the Brother TWAIN or WIA driver is chosen as the primary source in your scanning application. For example, in PaperPort™ 12SE with OCR, click Scan Settings, Select to choose the Brother TWAIN/WIA driver.
	(Hong Kong and Taiwan users only) Make sure the Brother TWAIN/WIA driver is chosen as the primary source. In Presto! PageManager with OCR, click File, Select Source and choose the Brother TWAIN/WIA driver.
TWAIN or ICA errors appear when starting to scan. (Macintosh)	Make sure the Brother TWAIN driver is chosen as the primary source. In PageManager, click File, Select Source and choose the Brother TWAIN driver. Mac OS X 10.6.x users can also scan documents using the ICA Scanner Driver. >>Software User's Guide: <i>Scanning a document using the ICA driver (Mac OS X 10.6.x)</i>
Poor scanning results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> >> page 29.)

Scanning Difficulties (continued)

Difficulty	Suggestions
OCR does not work.	<p>Try increasing the scanner resolution.</p> <p>(Macintosh users)</p> <p>Presto! PageManager must be downloaded and installed before use. See <i>Accessing Brother Support (Macintosh)</i> >> page 5 for further instructions.</p>

Software Difficulties

Difficulty	Suggestions
Cannot install software or print.	<p>(Windows® users only)</p> <p>Run the Repair MFL-Pro Suite program on the CD-ROM. This program will repair and reinstall the software.</p>
“Device Busy”	<p>Make sure the machine is not showing an error message on the LCD.</p>
Cannot print images from FaceFilter Studio.	<p>To use FaceFilter Studio, you must install the FaceFilter Studio application from the CD-ROM supplied with your machine. (>>Quick Setup Guide)</p> <p>Also, before you start FaceFilter Studio for the first time, you must make sure your Brother machine is turned on and connected to your computer. This will allow you to access all the functions of FaceFilter Studio.</p>

PhotoCapture Center™ Difficulties

Difficulty	Suggestions
Removable Disk does not work correctly.	<ol style="list-style-type: none"> 1 Take out the memory card or USB Flash memory drive and put it back in again. 2 If you have tried “Eject” from within Windows®, take out the memory card or USB Flash memory drive before you continue. 3 If an error message appears when you try to eject the memory card or USB Flash memory drive, it means the card is being accessed. Wait a while and then try again. 4 If all of the above do not work, turn off your PC and machine, and then turn them on again.
Cannot access Removable Disk from Desktop icon.	<p>Make sure that you have correctly inserted the memory card or USB Flash memory drive.</p>
Part of my photo is missing when printed.	<p>Make sure that Borderless printing and Cropping are turned off. (>>Advanced User’s Guide: <i>Borderless printing and Cropping</i>)</p>

Network Difficulties

Difficulty	Suggestions
Cannot print over the network.	<p>Make sure that your machine is powered on and is online and in the Ready mode. Print a Network Configuration Report (>>Advanced User’s Guide: <i>Reports</i>) and check the current Network settings printed in this list.</p> <p>If you are using a wireless connection or are having Network problems >>Network User’s Guide: <i>Troubleshooting</i></p>

Network Difficulties (continued)

Difficulty	Suggestions
The network scanning feature does not work.	<p>(Windows® users)</p> <p>It is necessary to configure the third-party Security/Firewall Software to allow Network scanning. To add port 54925 for Network scanning, enter the information below:</p> <p>In Name: Enter any description, for example Brother NetScan.</p> <p>In Port number: Enter 54925.</p> <p>In Protocol: UDP is selected.</p> <p>Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.</p> <p>(Macintosh users)</p> <p>Re-select your machine in the Device Selector application located in Macintosh HD/Library/Printers/Brother/Utilities/DeviceSelector or from the model list in ControlCenter2.</p>
The network PC-Fax Receive feature does not work.	<p>(Windows® users only)</p> <p>It is necessary to set the third-party Security/Firewall Software to allow PC-FAX Rx. To add port 54926 for Network PC-FAX Rx, enter the information below:</p> <p>In Name: Enter any description, for example Brother PC-FAX Rx.</p> <p>In Port number: Enter 54926.</p> <p>In Protocol: UDP is selected.</p> <p>Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.</p>
The Brother software cannot be installed.	<p>(Windows® users)</p> <p>Allow network access to the following programs if your security software displays an alert message during MFL-Pro Suite installation.</p> <p>(Macintosh users)</p> <p>If you are using a firewall function of anti-spyware or antivirus security software, temporarily disable it and then install the Brother software.</p>
Cannot connect to wireless network.	<p>Investigate the problem using the <code>WLAN Report</code>.</p> <p>Press <code>Menu</code>, and then press <code>▲</code> or <code>▼</code> to display <code>Print Reports</code>. Press <code>Print Reports</code>. Press <code>▲</code> or <code>▼</code> to display <code>WLAN Report</code>, and then press <code>WLAN Report</code>.</p> <p>(▶▶Network User's Guide)</p>
Reset the network settings.	<p>Press <code>Menu</code>, and then press <code>▲</code> or <code>▼</code> to display <code>Network</code>. Press <code>Network</code>. Press <code>▲</code> or <code>▼</code> to display <code>Network Reset</code>, and then press <code>Network Reset</code>.</p> <p>(▶▶Network User's Guide)</p>

Difficulties when entering data

Difficulty	Suggestions
The dial pad does not work when entering numbers or characters.	Use the Touchscreen buttons to enter information.

Dial Tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to `Detection` you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems when dialling, you should change it back to the `No Detection` setting.

- 1 Press `Menu`.
- 2 Press `▲` or `▼` to display `Initial Setup`.
- 3 Press `Initial Setup`.
- 4 Press `▲` or `▼` to display `Dial Tone`.
- 5 Press `Dial Tone`.
- 6 Press `Detection` or `No Detection`.
- 7 Press **Stop/Exit**.

Telephone line interference / VoIP

If you are having problems sending or receiving a fax due to possible interference on the telephone line, you can change the compatibility setting, which reduces the modem speed to minimise errors.

- 1 Press `Menu`.
- 2 Press `▲` or `▼` to display `Initial Setup`.
- 3 Press `Initial Setup`.
- 4 Press `▲` or `▼` to display `Compatibility`.
- 5 Press `Compatibility`.
- 6 Press `Normal` or `Basic (for VoIP)`.
 - `Basic (for VoIP)` cuts the modem speed to 9,600 bps and turns off colour fax receiving and ECM, except for colour fax sending. Unless interference is a recurring problem on your telephone line, you may prefer to use it only when needed.

To improve compatibility with most VoIP services, Brother recommends changing the compatibility setting to `Basic (for VoIP)`.

 - `Normal` sets the modem speed at 14,400 bps.
- 7 Press **Stop/Exit**.



Note

- VoIP (Voice over IP) is a type of phone system that uses an internet connection, rather than a traditional phone line.
- Brother does not recommend the use of a VoIP line. VoIP limitations in general can cause some functions of the fax machine not to work correctly.

Machine Information

Checking the serial number

You can see the machine's serial number on the LCD.

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Machine Info**.
- 3 Press **Machine Info**.
- 4 Press **Serial No.**
- 5 Press **Stop/Exit**.

Reset functions

The following reset functions are available:

1 Network

You can reset the print server back to its default factory settings, such as the password and IP address information.

2 Speed Dial&Fax

Speed Dial & Fax resets the following settings:

- Speed Dial
(Speed-Dial and Setup Groups)
- Programmed fax jobs in the memory
(Polled Transmit, Delayed Fax and Delayed Batch Transmission)
- Station ID
(Name and Number)
- Remote Fax Options
(Fax Forwarding)
- Report settings
(Transmission Verification Report, Quick Dial List and Fax Journal)
- History
(Caller ID history and Outgoing Call)
- Faxes in memory

3 All Settings

You can restore all settings to their factory defaults.

Brother strongly recommends performing this procedure before handing over or disposing of the machine.

How to reset the machine

- 1 Press **Menu**.
- 2 Press **▲** or **▼** to display **Initial Setup**.
- 3 Press **Initial Setup**.
- 4 Press **▲** or **▼** to display **Reset**.
- 5 Press **Reset**.
- 6 Press **▲** or **▼** to display the **Reset options** **Network**, **Speed Dial&Fax** or **All Settings**.
- 7 Press the option you want to reset.
- 8 Press **Yes** to confirm.
- 9 Press **Yes** for 2 seconds to reboot the machine.

On-screen programming


Your machine is designed to be easy to operate with LCD on-screen programming using the menu buttons on the Touchscreen. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.


Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

The menu table will help you understand the menu selections and options that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.

Menu


Level1	Level2	Level3	Options	Descriptions	Page
Favorite Settings	1/2/3	Copy	Quality Paper Type Paper Size Enlarge/Reduce Density Stack/Sort Page Layout Duplex Copy	Lets you quickly and easily recall and apply your previously registered preferred settings.	10
		Fax	Address Fax Resolution Contrast Batch TX Real Time TX Overseas Mode Glass ScanSize		
		Scan	(Scan to Media) Quality File Type File Name		
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
General Setup	Ink	Test Print	Print Quality Alignment	Lets you check the print quality or alignment.	68
		Cleaning	Black Color All	Lets you clean the print head.	68
		Ink Volume	—	Lets you check the available ink volume.	See  .
	Mode Timer	—	Off 0Sec 30Secs 1Min 2Mins* 5Mins	Sets the amount of time before the machine returns to FAX mode.	
	Paper Type	—	Plain Paper* Inkjet Paper Brother BP71 Brother BP61 Other Glossy Transparency	Sets the type of paper in the paper tray.	23
	Paper Size	—	A4* A5 10x15cm Letter Legal	Sets the size of paper in the paper tray. (Legal is only available for some countries.)	23
	Volume	Ring	Off Low Med* High	Adjusts the ring volume.	12
		Beeper	Off Low* Med High	Adjusts the beeper volume.	12
		Speaker	Off Low Med* High	Adjusts the speaker volume.	12

 Advanced User's Guide




The factory settings are shown in Bold with an asterisk.

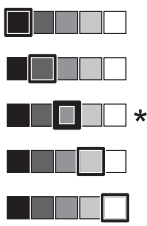Level1	Level2	Level3	Options	Descriptions	Page
General Setup (Continued)	Daylight Save	—	On* Off	Manually changes for Daylight Savings Time.	See ◆ .
	LCD Settings	LCD Contrast		Adjust the contrast of the LCD.	
		Backlight	Light* Med Dark	You can adjust the brightness of the LCD backlight.	13
	Dim Timer	Off 10Secs 20Secs 30Secs*	You can set how long the LCD backlight stays on for after the last key press.	See ◆ .	
	Sleep Mode	—	1Min 2Mins 3Mins 5Mins* 10Mins 30Mins 60Mins	You can choose how long the machine will remain idle before it goes into Sleep mode.	
Fax	Setup Receive	Ring Delay	2 - 10 (2*) (Example for Australia)	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	37
		F/T Ring Time	20Secs 30Secs* 40Secs 70Secs (For New Zealand) 20Secs 30Secs* 40Secs 55Secs	Sets the length of the fast double-ring time in Fax/Tel mode.	37

◆ Advanced User's Guide



The factory settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page	
Fax (Continued)	Setup Receive (Continued)	Fax Detect	On* Off	Receives fax messages automatically when you answer a call and hear fax tones.	38	
		Remote Codes	On* (*51, #51) (*91, #91 for New Zealand) Off	Allows you to answer all calls at an extension or external telephone and use codes to turn the machine on or off. You can personalize these codes.	48	
		Auto Reduction	On* Off	Cuts the size of incoming faxes to fit the paper size.	See ◆.	
		Memory Receive	Off* Fax Forward Fax Storage PC Fax Receive	You can set the machine to either forward fax messages, store incoming faxes in the memory (so you can retrieve them while you are away from your machine), or send faxes to your PC. If you choose Fax Forward or PC-Fax Receive, you can turn on the safety feature Backup Print.		
	Setup Speed Dial	Set Speed Dial	Add Number	Add Number from History	Stores Speed Dial numbers, so you can dial by pressing only a few buttons on the screen (and Start).	52
						See ◆.
		Setup Groups	—	You can set up Group numbers for Broadcasting.		
		Change	—	You can change Speed Dial numbers.	53	
		Delete	—	You can delete Speed Dial numbers.		
	◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.						

Level1	Level2	Level3	Options	Descriptions	Page	
Fax (Continued)	Report Setting	Transmission	On On+Image Off* Off+Image	Choose the initial setup for Transmission Verification Report.	33	
		Journal Period	Off Every 50 Faxes* Every 6 Hours Every 12 Hours Every 24 Hours Every 2 Days Every 7 Days	Sets the interval for the automatic printing of the Fax Journal. If you have chosen any other option than Off and Every 50 Faxes, you can set the time for the chosen option. If you have chosen Every 7 Days, you can set the day of the week.	See ◆ .	
	Print Document	—	—	Prints incoming faxes stored in the memory.		
	Remote Access	—	---*	Set your own code for Remote Retrieval.		
	Remaining Jobs	—	—	Check which jobs are in the memory and cancel chosen jobs.		
	Miscellaneous	TX Lock	—	—	Prohibits most functions except receiving faxes.	
		Distinctive (Not available in New Zealand and Taiwan)	On Off*	—	Use with phone company distinctive ringing service allows you to have a voice number and fax number on the one phone line.	39 44
		FaxAbility (For New Zealand only)	On Off*	—	If you have FaxAbility from Telecom, you can use this function to store the ringing pattern of your fax number. And if you set in to On, you should use the registered number only.	42
		Call Waiting (For New Zealand only)	On Off*	—	If you have Call Waiting as well as FaxAbility, set the Call Waiting to On.	43

◆ Advanced User's Guide



The factory settings are shown in Bold with an asterisk.

Network menu

Level1	Level2	Level3	Options	Descriptions	Page
Network	TCP/IP	BOOT Method	Auto* Static RARP BOOTP DHCP	Chooses the BOOT method that best suits your needs.	See + .
		IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
		Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	
		Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	
		Node Name	BRWXXXXXXXXXXXXX	Enter the Node name.	
		WINS Config	Auto* Static	Chooses the WINS configuration mode.	
		WINS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary WINS server.	
		DNS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary DNS server.	
		APIPA	On* Off	Automatically allocates the IP address from the link-local address range.	
		Setup Wizard	—	—	You can manually configure your print server for a wireless network.
	WPS/AOSS	—	—	You can easily configure your wireless network settings using the one-button push method.	

+ Network User's Guide



The factory settings are shown in Bold with an asterisk.


Level1	Level2	Level3	Options	Descriptions	Page
Network (Continued)	WPS w/PIN Code	—	—	You can easily configure your wireless network settings using WPS with a PIN code.	See +.
	WLAN Status	Status	—	You can see the current wireless network status.	
		Signal	—	You can see the current wireless network signal strength.	
		SSID	—	You can see the current SSID.	
		Comm. Mode	—	You can see the current Communication Mode.	
	MAC Address	—	—	You can see your machine's MAC address from the control panel.	
	WLAN Enable	—	On Off*	Lets you use the wireless network connection.	
Network Reset	—	—	Restore all network settings to factory default.		


+ Network User's Guide






The factory settings are shown in Bold with an asterisk.

Menu (continued)

Level1	Level2	Level3	Options	Descriptions	Page
Print Reports	XMIT Verify	—	—	Prints these lists and reports.	See ◆.
	Quick Dial	—	Alphabetical Order Numerical Order		
	Fax Journal	—	—		
	User Settings	—	—		
	Network Config	—	—		
	WLAN Report	—	—		
	Caller ID hist.	—	—		
Machine Info.	Serial No.	—	—	Lets you check the serial number of your machine.	94
Initial Setup	Receive Mode	—	Fax Only* Fax/Tel External TAD Manual	Choose the receive mode that best suits your needs.	34
	Date&Time	—	—	Sets the date and time on the screen and in headings of faxes you send.	See ‡.
	Station ID	—	Fax: Name:	Enter your name and fax number to appear on each page you fax.	
	Tone/Pulse (Not available in New Zealand)	—	Tone* Pulse	Choose the dialling mode.	
	Dial Tone	—	Detection No Detection*	Turns Dial Tone Detection on or off.	93
	Compatibility	—	Normal* Basic(for VoIP)	Adjusts the modem speed to help resolve transmission problems.	93
◆ Advanced User's Guide					
‡ Quick Setup Guide					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Initial Setup (Continued)	Reset	Network	—	Resets the print server back to its factory default settings, such as the password and IP address information.	94
		Speed Dial&Fax	—	Deletes all stored Speed Dial numbers and faxes, restores the Station ID, Quick Dial List, Transmission Verification Report and Fax Journal back to the factory default settings.	
		All Settings	—	Resets all the machine's settings back to the factory default.	
	Local Language (Not available in Australia and New Zealand)	—	English* Spanish (For Hong Kong and Taiwan) Chinese* English	Always you to change the LCD language for your country.	See ◆ .
◆ Advanced User's Guide					
‡ Quick Setup Guide					
 The factory settings are shown in Bold with an asterisk.					

FAX


Level1	Level2	Level3	Options	Descriptions	Page
History	Outgoing	Send a fax	—	You can choose a number from the Outgoing Call history and then send a fax to it, add it to Speed Dial, or delete it.	51
		More	Add Speed Dial		
	Incoming	Send a fax	—		
		More	Add Speed Dial		
SpeedDial	—	Send a fax	—	You can dial by pressing only a few keys (and Start).	50
		More	Set Speed Dial	Stores Speed Dial numbers, so you can dial by pressing only a few buttons on the Touchscreen (and Start).	52
			Setup Groups	You can set up Group numbers for Broadcasting.	See  .
			Change	You can change Speed Dial numbers.	53
			Delete	You can delete Speed Dial numbers.	
		Mono Start	—	—	Lets you send a monochrome fax.
Colour Start	—	—	Lets you send a colour fax.		
Options	Fax Resolution	—	Standard* Fine S.Fine Photo	Sets the resolution for outgoing faxes.	See  .
	Contrast	—	Auto* Light Dark	Changes the lightness or darkness of faxes you send.	
	Broadcasting	Add number from SpeedDial	—	You can send the same fax message to more than one fax number.	
	Delayed Fax	—	On Off*	Sets the time of day in 24-hour format that the delayed faxes will be sent.	
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page	
Options (Continued)	Batch TX	—	On Off*	Combines delayed faxes to the same fax number at the same time of day into one transmission.	See ◆.	
	Real Time TX	—	On Off*	You can send a fax without using the memory.		
	Polled TX	—	Standard Secure Off*	Sets up the document on your machine to be retrieved by another fax machine.		
	Polling RX	—	Standard Secure Timer Off*	Sets up your machine to poll another fax machine.		
	Overseas Mode	—	On Off*	If you are having difficulty sending faxes overseas, set this to On.		
	Glass ScanSize	—	Letter A4*	Sets the glass scan size for faxes.	32	
	History	Outgoing	Send a fax	More (Add Speed Dial/Delete)	You can choose a number from the Outgoing Call history and then make a telephone call to it, send a fax to it, add it to Speed Dial, or delete it.	51
			Incoming			
	Speed Dial	Send a fax	—		You can dial by pressing only a few keys (and Start).	50
			More	Set Speed Dial	Stores Speed Dial numbers, so you can dial by pressing only a few buttons on the Touchscreen (and Start).	52
			Setup Groups	You can set up Group numbers for Broadcasting.	See ◆.	
			Change	You can change Speed Dial numbers.	53	
			Delete	You can delete Speed Dial numbers.		


◆ Advanced User's Guide




The factory settings are shown in Bold with an asterisk.




Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	Set New Default	—	Fax Resolution Contrast Real Time TX Glass ScanSize	You can save your fax settings.	See ◆.
	Factory Reset	—	—	You can restore all settings back to the factory default.	
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					

SCAN ()

Level1	Option1	Option2	Option3	Descriptions	Page
Scan to File	—	—	—	You can scan a monochrome or a colour document into your computer.	See □.
Scan to Media (when a memory card or USB Flash memory drive is inserted)	Start	—	—	Lets you scan directly to a memory card or USB Flash memory drive.	60
	Options	Quality	Color 100 dpi	You can choose the scan resolution and file format for your document.	60
			Color 200 dpi*		
			Color 300 dpi		
		Color 600 dpi			
		B/W 100 dpi			
		B/W 200 dpi			
File Type	(If you choose Colour option in Quality setting)	PDF*			
		JPEG			
	(If you choose Mono option in Quality setting)	TIFF			
	PDF*				
File Name	—	You can rename the file.			
Set New Default	Quality File Type	You can save your scan settings as the default settings.	See ◆.		
Factory Reset	—	You can restore all settings back to the original factory default settings.			
<input type="checkbox"/> Software User's Guide <input checked="" type="checkbox"/> Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					

Level1	Option1	Option2	Option3	Descriptions	Page
Scan to email	—	—	—	You can scan a monochrome or a colour document into your E-mail application.	See <input type="checkbox"/> .
Scan to OCR (Available after Presto! PageManager is downloaded for Macintosh users. See <i>Accessing Brother Support (Macintosh)</i> >> page 5.)	—	—	—	You can have your text document converted to an editable text file.	
Scan to Image	—	—	—	You can scan a colour picture into your graphics application.	
Web Service (Appears when you install a Web Services Scanner, which is displayed in your computer's Windows® Explorer.)	Scan	—	—	You can scan data by using the Web Services protocol.	
	Scan for E-mail	—	—		
	Scan for OCR	—	—		
	Scan for Fax	—	—		
	Scan for Print	—	—		
<input type="checkbox"/> Software User's Guide <input checked="" type="checkbox"/> Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					

COPY ()

Level1	Level2	Level3	Options	Descriptions	Page	
Mono Start	—	—	—	Lets you make a monochrome copy.	54	
Colour Start	—	—	—	Lets you make a colour copy.		
Options	Quality	—	Fast Normal* Best	Choose the Copy resolution for the next copy.	See  .	
	Paper Type	—	Plain Paper* Inkjet Paper Brother BP71 Brother BP61 Other Glossy Transparency	Choose the paper type that matches the paper in the tray.	55	
	Paper Size	—	A4* A5 10x15cm Letter Legal	Choose the paper size that matches the paper in the tray. (Legal is only available for some countries.)	55	
	Enlarge/Reduce	100%*	—	—	—	See  .
			Enlarge	198% 10x15cm→A4 186% 10x15cm→LTR 141% A5→A4	You can choose the enlargement ratio for the next copy.	
			Reduce	97% LTR→A4 93% A4→LTR 83% LGL→A4 69% A4→A5 47% A4→10x15cm	You can choose the reduction ratio for the next copy.	
Fit to Page			—	Your machine will adjust the size automatically to the paper size you set.		
	Custom (25-400%)	—	You can choose the enlargement or reduction ratio for your type of document.			
◆ Advanced User's Guide						
 The factory settings are shown in Bold with an asterisk.						





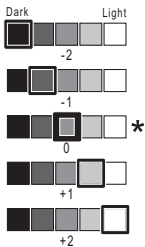
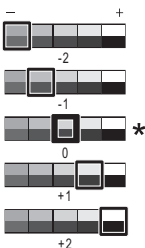

Level1	Level2	Level3	Options	Descriptions	Page	
Options (Continued)	Density	—		Adjusts the density of copies.	See ◆ .	
	Stack/Sort	—	Stack* Sort	You can choose to stack or sort multiple copies.		
	Page Layout	—	Off (1in1)* 2in1 (P) 2in1 (L) 2in1 (ID) 4in1 (P) 4in1 (L) Poster (2x1) Poster (2x2) Poster (3x3)	You can make N in 1, 2 in 1 ID, or Poster copies.		
	Duplex Copy	Off*	—	—	You can choose the duplex print settings.	
			Portrait LongEdgeFlip	—		
			Landscape LongEdgeFlip	—		
			Portrait ShortEdgeFlip	—		
			Landscape ShortEdgeFlip	—		
Advanced	Normal* Duplex1 Duplex2					
Set New Default	—	Quality Enlarge/Reduce Density Page Layout Duplex Copy	You can save your copy settings.			
Factory Reset	—	—	You can restore all the settings to factory default.			
◆ Advanced User's Guide						
 The factory settings are shown in Bold with an asterisk.						

PHOTO ()

Level1	Level2	Level3	Options	Descriptions	Page
View Photos	OK	Start	—	You can print your chosen photos.	59
		Options	For details, see the <i>Options</i> in the following table.	You can adjust your photos with the options.	See  .
Print All	Start	—	—	You can print all photos in your memory card or USB Flash memory drive.	
	Options	—	For details, see the <i>Options</i> in the following table.	You can adjust your photos with the options.	
Index Print	Index Sheet	6 IMGs/Line 5 IMGs/Line	For details, see <i>Options (for Index Sheet)</i> >> page 115	You can print a thumbnail page.	
	Print Photos	Start	—	You can print an individual image.	
		Options	For details, see the <i>Options</i> in the following table.	You can adjust your photos with the options.	
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					

Options (for PHOTO)

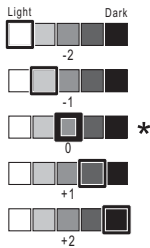
Option1	Option2	Option3	Option4	Descriptions	Page
Print Quality (Not available for DPOF printing.)	Normal Photo*	—	—	Choose the print quality.	See ◆.
Paper Type	Plain Paper Inkjet Paper Brother BP71 Brother BP61 Other Glossy*	—	—	Choose the paper type.	
Paper Size	10x15cm* 13x18cm A4 Letter	(When A4 or Letter is chosen) 8x10cm 9x13cm 10x15cm 13x18cm 15x20cm Max. Size*	—	Choose the paper and print size.	
Brightness		—	—	Adjusts the brightness.	
Contrast		—	—	Adjusts the contrast.	
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					

Option1	Option2	Option3	Option4	Descriptions	Page
Color Enhance	On Off*	White Balance		Adjusts the hue of the white areas.	See ◆ .
		Sharpness		Enhances the detail of the image.	
		Color Density		Adjusts the total amount of colour in the image.	
Cropping	On* Off	—	—	Crops the image around the margin to fit the paper size or print size. Turn this feature off if you want to print whole images or prevent unwanted cropping.	
Borderless	On* Off	—	—	Expands the printable area to fit the edges of the paper.	
Date Print (Not available for DPOF printing.)	On Off*	—	—	Prints the date on your photo.	
Set New Default	Print Quality Paper Type Paper Size Brightness Contrast Color Enhance Cropping Borderless Date Print	—	—	You can save your print settings as the default settings.	


◆ Advanced User's Guide




The factory settings are shown in Bold with an asterisk.

Option1	Option2	Option3	Option4	Descriptions	Page
Factory Reset	—	—	—	You can restore all the settings to the factory default.	See ◆ .
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					


Options (for Index Sheet)

Level1	Level2	Level3	Options	Descriptions	Page
Paper Type	Plain Paper*	—	—	Choose the paper type.	See ◆ .
	Inkjet Paper Brother BP71 Brother BP61 Other Glossy				
Paper Size	Letter	—	—	Choose the paper size.	
	A4*				
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					


SpeedDial

Level1	Level2	Level3	Options	Descriptions	Page
SpeedDial	Send a fax	—	—	You can dial by pressing only a few keys (and Start).	50
	More	Set Speed Dial	—	Stores Speed Dial numbers, so you can dial by pressing only a few buttons on the Touchscreen (and Start).	52
		Setup Groups	—	Sets up Group numbers for Broadcasting.	See ◆ .
		Change	—	You can change Speed Dial numbers.	53
		Delete	—	You can delete Speed Dial numbers.	
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					

History


Level1	Level2	Level3	Options	Descriptions	Page
History	Outgoing	Send a fax	—	You can choose a number from the Outgoing Call history and then send a fax to it, add it to Speed Dial, or delete it.	51
		More	Add Speed Dial		
	Incoming	Send a fax	—		
		More	Add Speed Dial		
			Delete		
 The factory settings are shown in Bold with an asterisk.					

Ink

Level1	Level2	Level3	Options	Descriptions	Page
Ink	Test Print	—	Print Quality Alignment	Lets you check the print quality or alignment.	68
	Cleaning	—	Black Color All	Lets you clean the print head.	68
	Ink Volume	—	—	Lets you check the available ink volume.	See ◆ .
◆ Advanced User's Guide					
 The factory settings are shown in Bold with an asterisk.					





Entering Text

When you are setting certain menu selections, you may need to enter text into the machine.

Press  to cycle between letters, numbers and special characters. Up to four letters are assigned to each letter button on the LCD. By pressing the correct button repeatedly, you can access the character you want.





Inserting spaces

To enter a space, press  to choose special characters, then press the space button  or . Or, you can press the  twice to move the cursor.

Note


The characters available may differ depending on your country.

Making corrections

If you entered an incorrect character and want to change it, press  to move the cursor under the incorrect character. Then press . Enter the correct character. You can also insert letters by moving the cursor and entering a character.

If the screen does not show a  button, press  repeatedly until you have erased the incorrect character. Enter the correct characters.

Repeating letters

If you need to enter a character that is on the same button as the letter before it, press  to move the cursor to the right before you press the same button again.

General



Note


This chapter provides a summary of the machines' specifications. For additional specifications visit <http://www.brother.com/> for details.

Printer Type	Inkjet
Print Head	Mono: Piezo with 210 nozzles × 1 Colour: Piezo with 210 nozzles × 3
Memory Capacity	64 MB
LCD (Liquid Crystal Display)	Touchscreen 1.9 in. (49.0 mm) STN Colour LCD
Power Source	(Taiwan) AC 100 to 120 V 50/60 Hz (Other Countries) AC 220 to 240 V 50/60 Hz
Power Consumption ¹	(Taiwan) Copying Mode: Approx. 19 W ² Ready Mode: Approx. 5.5 W Sleep Mode: Approx. 2 W Off: Approx. 0.2 W (India and Indonesia) Copying Mode: Approx. 20 W ² Ready Mode: Approx. 6 W Sleep Mode: Approx. 2.5 W Off: Approx. 0.45 W (Other Countries) Copying Mode: Approx. 19 W ² Ready Mode: Approx. 6 W Sleep Mode: Approx. 2 W Off: Approx. 0.15 W

¹ Measured when the machine is connected to the USB interface.

² When using ADF, single-side printing, resolution: standard / document: ISO/IEC 24712 printed pattern.

Dimension

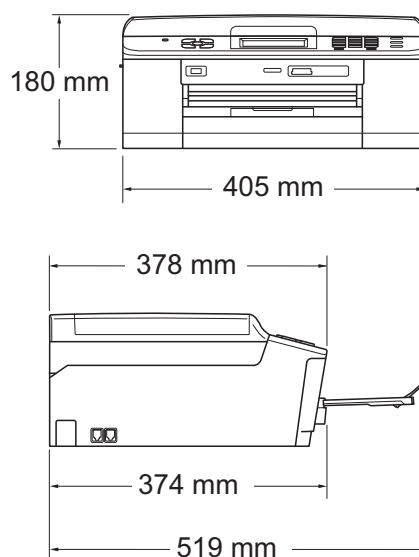

Weight	9 kg
Noise	Operating: 50 dB or less ¹
Temperature	Operating: 10 to 35 °C Best Print Quality: 20 to 33 °C
Humidity	Operating: 20 to 80% (without condensation) Best Print Quality: 20 to 80% (without condensation)
ADF (automatic document feeder)	Up to 15 pages ² (Paper: 90 gsm A4 or Letter size) Up to 20 pages with conditions ³
Document Size	ADF Width: 148 mm to 215.9 mm ADF Length: 148 mm to 355.6 mm Scanner Glass Width: Max. 215.9 mm Scanner Glass Length: Max. 297 mm

¹ Noise depends on printing conditions.

² Using standard 64 to 90 gsm paper.

³ Using XEROX4200 75 gsm paper, temperature 20 - 26 °C, humidity 40 - 50% without condensation.

Print media

Paper Input

Paper Tray

- Paper type:
Plain paper, inkjet paper (coated paper),
glossy paper¹ and transparency^{1 2}
- Paper size³:
A4, Legal⁴, Executive, Letter, A5, A6, Envelopes (commercial No.10,
DL, C5, Monarch), Photo 10 × 15 cm, Photo 2L 13 × 18 cm and
Index Card 127 × 203 mm
Width: 98 mm - 215.9 mm
Length: 148 mm - 355.6 mm
For more details, see *Paper weight, thickness and capacity*
➤➤ page 27.
- Maximum paper tray capacity:
Approx. 100 sheets of 80 gsm plain paper

Photo Paper Tray

- Paper type:
Plain Paper, Inkjet Paper (coated paper) and Glossy Paper¹
- Paper size:
Photo 10 × 15 cm and Photo L 89 × 127 mm
Width: 89 mm - 102 mm
Length: 127 mm - 152 mm
- Maximum paper tray capacity:
Approx. 20 sheets

Paper Output

Up to 50 sheets of A4 plain paper (face up print delivery to the output paper tray)¹

¹ For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

² Use only transparencies recommended for inkjet printing.

³ See *Paper type and size for each operation* ➤➤ page 26.

⁴ Only available for some countries.

Fax

Compatibility	ITU-T Group 3
Modem Speed	Automatic Fallback 14,400 bps
Scanning Width	ADF: 208 mm (A4) Scanner Glass: 204 mm (A4)
Printing Width	210 mm
Greyscale	Levels: 64 (B&W) / 256 (Colour)
Resolution	Standard 203 × 98 dpi (Mono) 203 × 196 dpi (Colour) Fine 203 × 196 dpi (Mono/Colour) Superfine 203 × 392 dpi (Mono) Photo 203 × 196 dpi (Mono)
Speed Dial	100 stations × 2 numbers
Groups	Up to 6
Broadcasting	200 (200 Speed Dial)
Automatic Redial	3 times at 5 minute intervals
Memory Transmission	Up to 400 ¹ pages
Out of Paper Reception	Up to 400 ¹ pages

¹ “Pages” refers to the “ITU-T Test Chart #1” (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Copy

Colour/Monochrome

Yes/Yes

Copy Width

Max. 210 mm

Multiple Copies

Stacks/Sorts up to 99 pages

Enlarge/Reduce

25% to 400% (in increments of 1%)

Resolution

Prints up to 1200 × 1200 dpi

Duplex (2-sided)

Yes

■ Paper type:

Plain paper

■ Paper size:

A4, Letter, A5

PhotoCapture Center™

Compatible Media ¹	<ul style="list-style-type: none"> Memory Stick™ (16 MB - 128 MB) Memory Stick PRO™ (256 MB - 32 GB) Memory Stick Duo™ (16 MB - 128 MB) Memory Stick PRO Duo™ (256 MB - 32 GB) Memory Stick Micro™ (M2™) with Adapter MultiMedia Card (32 MB - 2 GB) MultiMedia Card plus (128 MB - 4 GB) MultiMedia Card mobile with Adapter (64 MB - 1 GB) SD Memory Card (16 MB - 2 GB) miniSD with Adapter microSD with Adapter SDHC Memory Card (4 GB - 32 GB) miniSDHC with Adapter microSDHC with Adapter USB Flash memory drive ² SDXC Memory Card (48 GB - 64 GB)
Resolution	Up to 1200 × 2400 dpi
File Extension (Media Format) (Image Format)	<ul style="list-style-type: none"> DPOF (ver. 1.0, ver. 1.1), Exif DCF (up to ver. 2.1) Photo Print: JPEG ³ Scan to Media: JPEG, PDF (Colour) TIFF, PDF (Monochrome)
Number of Files	<ul style="list-style-type: none"> Up to 999 files (The folder inside memory cards or USB Flash memory drive is also counted.)
Folder	File must be stored in the 4th folder level of the memory card or USB Flash memory drive.
Borderless	A4, Letter, Photo 10 × 15 cm, Photo 2L 13 × 18 cm ⁴

¹ Memory cards, adapters and USB Flash memory drive are not included.

² USB 2.0 Standard
 USB Mass Storage standard up to 32 GB
 Support format: FAT12/FAT16/FAT32/exFAT

³ Progressive JPEG format is not supported.

⁴ See *Paper type and size for each operation* >> page 26.

PictBridge

Compatibility

Supports the Camera & Imaging Products Association PictBridge standard CIPA DC-001.

Visit <http://www.cipa.jp/pictbridge/> for more information.

Interface

USB direct interface

Scanner

Colour/Monochrome	Yes/Yes
TWAIN Compliant	Yes (Windows® XP ¹ /Windows Vista®/Windows® 7) Mac OS X 10.4.11, 10.5.x, 10.6.x ²
WIA Compliant	Yes (Windows® XP ¹ /Windows Vista®/Windows® 7)
ICA Compliant	Yes (Mac OS X 10.6.x)
Colour Depth	36 bit colour Processing (Input) 24 bit colour Processing (Output)
Resolution	Up to 19200 × 19200 dpi (interpolated) ³ Up to 1200 × 2400 dpi (optical) (Scanner Glass) Up to 1200 × 600 dpi (optical) (ADF)
Scanning Width and Length	(Scanner Glass) Width: Up to 210 mm Length: Up to 291 mm (ADF) Width: Up to 210 mm Length: Up to 349.6 mm
Greyscale	256 levels

¹ Windows® XP in this User's Guide includes Windows® XP Home Edition, Windows® XP Professional, and Windows® XP Professional x64 Edition.

² For the latest driver updates for the Mac OS X you are using, visit us at <http://solutions.brother.com/>.

³ Maximum 1200 × 1200 dpi scanning when using the WIA Driver for Windows® XP, Windows Vista® and Windows® 7 (resolution up to 19200 × 19200 dpi can be selected by using the Brother scanner utility).

Printer

Resolution

Up to 1200 × 6000 dpi

Printing Width ³

204 mm [210 mm (borderless) ¹]

Borderless ²

A4, Letter, A6, Photo 10 × 15 cm,
Index Card 127 × 203 mm,
Photo L 89 × 127 mm, Photo 2L 13 × 18 cm

Duplex (2-sided)**■ Paper type:**

Plain paper

■ Paper size:

A4, Letter, A5, A6, Executive

Print Speed ⁴

¹ When the Borderless feature is set to On.

² See *Paper type and size for each operation* ►► page 26.

³ When printing on A4 size paper.

⁴ For detailed specifications visit <http://www.brother.com/>.

Interfaces

USB^{1 2}

A USB 2.0 interface cable that is no longer than 2 m.

Wireless LAN

IEEE 802.11b/g/n (Infrastructure/Ad-hoc Mode)

¹ Your machine has a Hi-Speed USB 2.0 interface. The machine can also be connected to a computer that has a USB 1.1 interface.

² Third party USB ports are not supported.

Computer requirements

SUPPORTED OPERATING SYSTEMS AND SOFTWARE FUNCTIONS								
Computer Platform & Operating System Version		Supported PC Software Functions	PC Interface	Processor Minimum Speed	Minimum RAM	Recommended RAM	Hard Disk Space to install	
							For Drivers	For Applications
Windows® Operating System	Windows® XP Home ^{1 4} Windows® XP Professional ^{1 4}	Printing, PC Fax ³ , Scanning, Removable Disk ⁵	USB, Wireless 802.11b/g/n	Intel® Pentium® II or equivalent	128 MB	256 MB	150 MB	1 GB
	Windows® XP Professional x64 Edition ^{1 4}			64-bit (Intel® 64 or AMD64) supported CPU	256 MB	512 MB	150 MB	1 GB
	Windows Vista® ^{1 4}			Intel® Pentium® 4 or equivalent	512 MB	1 GB	500 MB	1.3 GB
	Windows® 7 ^{1 4}			64-bit (Intel® 64 or AMD64) supported CPU	1 GB (32 bit) 2 GB (64 bit)	1 GB (32 bit) 2 GB (64 bit)	650 MB	1.3 GB
	Windows Server® 2003 (print only via network)	Printing	Wireless 802.11b/g/n	Intel® Pentium® III or equivalent	256 MB	512 MB	50 MB	N/A
	Windows Server® 2003 x64 Edition (print only via network)			64-bit (Intel® 64 or AMD64) supported CPU				
	Windows Server® 2003 R2 (print only via network)			Intel® Pentium® III or equivalent	512 MB	1 GB		
	Windows Server® 2003 R2 x64 Edition (print only via network)			64-bit (Intel® 64 or AMD64) supported CPU				
	Windows Server® 2008 (print only via network)			Intel® Pentium® 4 or equivalent 64-bit (Intel® 64 or AMD64) supported CPU			2 GB	
	Windows Server® 2008 R2 (print only via network)			64-bit (Intel® 64 or AMD64) supported CPU				
Macintosh Operating System	Mac OS X 10.4.11, 10.5.x	Printing, PC Fax Send ³ , Scanning, Removable Disk ⁵	USB ² , Wireless 802.11b/g/n	PowerPC G4/G5 Intel® Processor	512 MB	1 GB	80 MB	550 MB
	Mac OS X 10.6.x			Intel® Processor	1 GB	2 GB		

Conditions:

- ¹ For WIA, 1200 × 1200 resolution. Brother Scanner Utility enables to enhance up to 19200 × 19200 dpi.
- ² Third party USB ports are not supported.
- ³ PC Fax supports black and white only.
- ⁴ PaperPort™ 12SE supports Windows® XP Home (SP3 or greater), XP Professional (SP3 or greater), XP Professional x64 Edition (SP2 or greater), Windows Vista® (SP2 or greater) and Windows® 7.
- ⁵ Removable disk is a function of PhotoCapture Center™.

For the latest driver updates, visit us at <http://solutions.brother.com/>.
All trademarks, brand and product names are the property of their respective companies.

Consumable items

Ink	The machine uses individual Black, Yellow, Cyan and Magenta ink cartridges that are separate from the print head assembly.
Service Life of Ink Cartridge	The first time you install a set of ink cartridges the machine will use an amount of ink to fill the ink delivery tubes for high quality printouts. This process will only happen once. After this process is complete the cartridges provided with your machine will have a lower yield than standard cartridges (80 % ¹). With all following ink cartridges you can print the specified number of pages.

Replacement Consumables

	(For other countries)	(For India and Indonesia)
Standard Yield Black	LC40BK	—
Standard Yield Yellow	LC40Y	—
Standard Yield Cyan	LC40C	—
Standard Yield Magenta	LC40M	—

Black, Yellow, Cyan and Magenta - Approximately 300 pages ²

	(For other countries)	(For India and Indonesia)
High Yield Black	LC73BK	LC400BK
High Yield Yellow	LC73Y	LC400Y
High Yield Cyan	LC73C	LC400C
High Yield Magenta	LC73M	LC400M

Black, Yellow, Cyan and Magenta - Approximately 600 pages ²

¹ For India and Indonesia: 65%

² Approx. cartridge yield is declared in accordance with ISO/IEC 24711.

For more information about the replacement consumables, visit us at <http://www.brother.com/pageyield/>.

What is Innobella™?

Innobella™ is a range of genuine consumables offered by Brother. The name "Innobella™" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.

When you print photo images, Brother recommends Innobella™ glossy photo paper (BP71 series) for high quality. Brilliant prints are made easier with Innobella™ Ink and paper.



Network (LAN)



Note

For more information about the Network specifications >>Network User's Guide

LAN	You can connect your machine to a network for Network Printing, Network Scanning, PC Fax Send, PC Fax Receive (Windows® only), Remote Setup, and access photos from PhotoCapture Center™ ¹ . Also included is Brother BRAdmin Light ² Network Management software.	
Wireless Network Security	SSID (32 chr), WEP 64/128 bit, WPA-PSK (TKIP/AES), WPA2-PSK (AES)	
Setup Support Utility	AOSS™	Yes
	WPS	Yes

¹ See the Computer Requirements chart on page 128.

² If you require more advanced printer management, use the latest Brother BRAdmin Professional utility version that is available as a download from <http://solutions.brother.com/>.

A

ADF (automatic document feeder)	28
Answering machine (TAD)	46
connecting	46
Apple Macintosh	
See Software User's Guide.	
Automatic	
fax receive	34
Fax Detect	38

B

Brother	
CreativeCenter	4

C

Caller ID	41, 43, 45
Caller ID history	51
Add to Speed Dial	51
Delete	51
Send a fax	51
Cleaning	
print head	68
scanner	67
Connecting	
external TAD (answering machine)	46
external telephone	47
Consumable items	129
Control panel overview	6
ControlCenter	
See Software User's Guide.	
Copy	
paper size	55
paper type	55
using scanner glass	29
Cordless telephone	48
Custom telephone features on a single line	90

D

Dialling	
a pause	52
access codes and credit card numbers	53
Caller ID history	51
manual	50
Outgoing Call	51
Speed Dial	50
Distinctive Ring	
turning off	40, 45
turning on	40, 44
Document	
loading	28, 29

E

Envelopes	17, 26, 27
Error messages on LCD	70
B&W Print Only	71
Cannot Detect	71
Cannot Print	72
Comm. Error	72
Cover is Open	72
Data Remaining	72
Document Jam	72
Ink Absorber Full	73
Ink low	73
InkAbsorberNearFull	73
No Ink Cartridge	74
No Paper Fed	75
Not Registered	50, 75
Out of Memory	76
Paper Jam	76
Unable to Clean	77
Unable to Init.	77
Unable to Print	77
Unable to Scan	77
Wrong Paper Size	77
Extension telephone, using	48
External telephone, connecting	47

F

Favourite Settings	10
changing	11
deleting	11
recalling	11
registering	10
Fax codes	
changing	48
Remote Activation Code	38, 48
Remote Deactivation Code	48
using	48
Fax Detect	38
Fax, from PC	
See Software User's Guide.	
Fax, stand-alone	
receiving	34
difficulties	88
F/T Ring Time, setting	37
Fax Detect	38
from extension telephone	48
Ring Delay, setting	37
telephone line interference / VoIP	93
sending	31
change scanner glass size	32
colour fax	32
difficulties	89
telephone line interference / VoIP	93
Transmission Verification Report	33
Fax/Tel mode	
answering at extension telephones	48
Remote Activation Code	48
Remote Deactivation Code	48
Ring Delay	37

G

Greyscale	121, 125
-----------------	----------

H

Help	
LCD messages	95
Menu Table	96

I

Ink cartridges	
ink dot counter	64
replacing	64
Innobella™	129

J

Jacks	
EXT	
External telephone	47
Jams	
document	79
paper	80

L

LCD (Liquid Crystal Display)	7, 95
Brightness	13

M

Macintosh	
See Software User's Guide.	
Maintenance, routine	
replacing ink cartridges	64
Manual	
dialling	50
receive	34
Mode, entering	
COPY	6
FAX	6
PHOTO	6
SCAN	6
Multi-line connections (PABX)	47

N

Network	
Printing	
See Network User's Guide.	
Scanning	
See Software User's Guide.	

O

On-screen programming	95
Outgoing Call	
Add to Speed Dial	51
Delete	51
Send a fax	51

P

Paper	24, 120
capacity	27
loading	14, 17
loading envelopes and postcard	17
loading photo paper	19
printable area	22
size	23
size of document	28
type	23, 26
PaperPort™ 12SE with OCR	
See Software User's Guide. Also see Help in the PaperPort™ 12SE application.	
Photo Paper Tray	19
PhotoCapture Center™	
from PC	
See Software User's Guide.	
Memory Stick PRO™	56
Memory Stick™	56
MultiMedia Card	56
Preview photos	59
Print settings	
Quality	59
Printing	
all photos	59
Scan to Media	
change file name	60
SD Memory Card	56
SDHC Memory Card	56
SDXC Memory Card	56
specifications	123
Presto! PageManager	
See Software User's Guide. Also see Help in the Presto! PageManager application.	
Print	
difficulties	86
paper jams	80
printable area	22
resolution	126
specifications	126

Printing

See Software User's Guide.

Programming your machine	95
--------------------------------	----

Q

Quick Dial

Group dial	
changing	53
Speed Dial	
changing	53
using	50

R

Receive Mode

External TAD	34
Fax Only	34
Fax/Tel	34
Manual	34

Redial/Pause	50
--------------------	----

Remote Setup

See Software User's Guide.

Resolution

copy	122
fax	121
print	126
scan	125

Ring Delay, setting	37
---------------------------	----

S

Scanning

See Software User's Guide.

Serial Number

how to find See inside front cover

Sockets

EXT	
External telephone	47

Speed Dial

changing	53
setting up	52
using	50

T

TAD (telephone answering device),	
external	34, 46
connecting	46
receive mode	34
recording OGM	47
Telephone line	
connections	46
difficulties	89
interference / VoIP	93
multi-line (PABX)	47
Text, entering	117
Transferring your faxes or	
Fax Journal report	78
Transparencies	24, 25, 27, 120
Troubleshooting	86
document jam	79
error messages on screen	70
if you are having difficulty	
copying	90
document jam	79
entering data	92
incoming calls	90
Network	91
PhotoCapture Center™	91
printing	86
printing received faxes	88
scanning	90
software	91
telephone line or connections	89
maintenance messages on LCD	70
paper jam	80

U

Unscannable area	30
------------------------	----

V

Volume, setting	
beeper	12
ring	12
speaker	12

W

Windows®	
See Software User's Guide.	
Wireless Network	
See Quick Setup Guide and Network	
User's Guide.	

For Australia Only:

Support – For technical support of your Brother Product other than what you can resolve through the User's Guide, please visit our Web Site or Solutions Web Site (see below) to find an answer to FAQs/Troubleshooting, locating Drivers & Software.

Alternatively, please contact the Product Support Centre for any customer care/technical support enquiry.

To contact Brother International (Aust) Pty Ltd for support on a Brother product please see the details listed below:

Product Support Centre: **Australia**

Brother International (Aust) Pty Ltd

Phone: 02 8875 6000

Fax: 02 9870 7223

Solutions Site: <http://solutions.brother.com/>

Web Site: www.brother.com.au

Email: To submit an e-mail enquiry, visit www.brother.com.au go to **Service and Support** area and follow the prompts.

Our Technical Support Consultants are available 5 days a week by phone during the hours of 8.30am to 5.00pm (EST/EDST) Monday to Friday.

For New Zealand Only:

To contact Brother International (NZ) Limited for support with a Brother product please use the following methods.

Phone:

Premium End User Assistance 0900 552 152

Auto Attendant Self Help 0800 652 152

Brother Recycle Assistance 0800 632 467

Fax Assistance 0800 837 822

Email Assistance Please visit www.brother.co.nz and submit a helpdesk enquiry from Online Help

Web Assistance Please visit www.brother.co.nz under Online Help for Frequently Asked Questions, Driver downloads, Warranty information and Service Centres

Our Technical Support Consultants are available 7 days a week by phone during the hours of 8.30am to 5pm Monday to Friday and 9am to 5pm Saturday and Sunday. Outside of these hours you can find assistance from our Auto Attendant Self Help and our Website www.brother.co.nz under Online Help.

brother[®]

Visit us on the World Wide Web
<http://www.brother.com/>

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.