

DCP-L3528CDW / DCP-L3568CDW / MFC-L3768CDW

Read the *Product Safety Guide* first, then read this *Quick Setup Guide* for the correct installation procedure.




Operation Videos:
www.95105369.com




Installation & Using Videos

EN


Unpack the machine and check the components

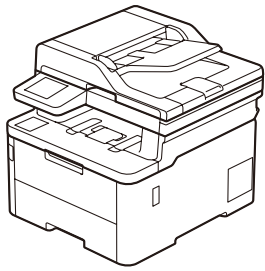


* Installed in the machine

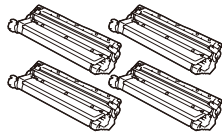

Toner Cartridge and Drum Unit Assemblies*
(Black, Cyan, Magenta, and Yellow)



Waste Toner Box*




Belt Unit*



AC Power Cord



USB Interface Cable






**Quick Setup Guide
Product Safety Guide**

NOTE:

- Use the appropriate interface cable for the connection you want to use. (Network cable is not a standard accessory.)
- **USB cable**
We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.
- **Network cable (DCP-L3568CDW / MFC-L3768CDW)**
Use a straight-through Category 5 (or greater) twisted-pair cable.
- The illustrations in this *Quick Setup Guide* show the MFC-L3768CDW.



1 Remove the packing materials and re-install the toner cartridge and drum unit assemblies

Remove all the blue packing tape.

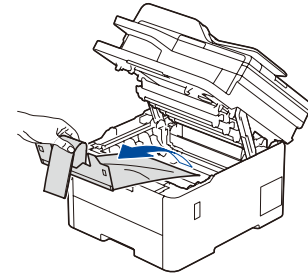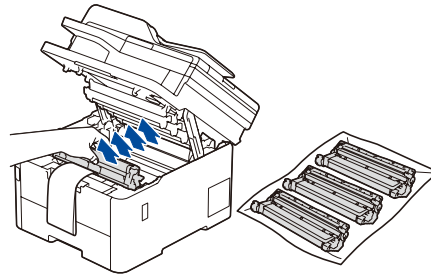
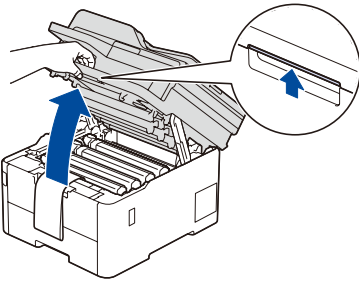


Remove the orange parts from each cartridge.




x4

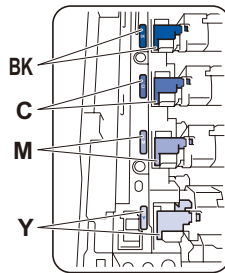



Push firmly.

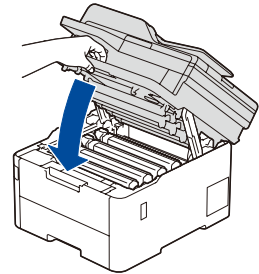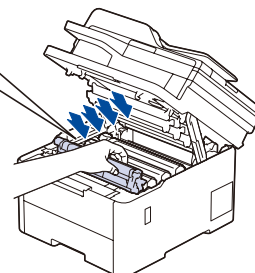


2 Load paper in the paper tray

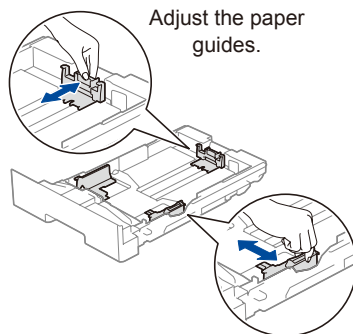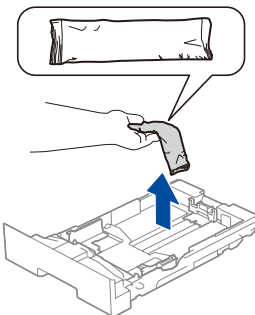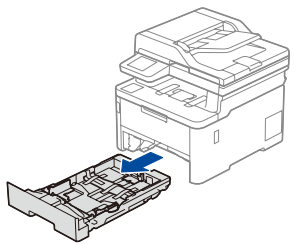

Do not exceed this mark.

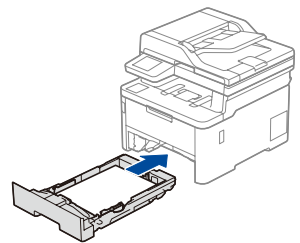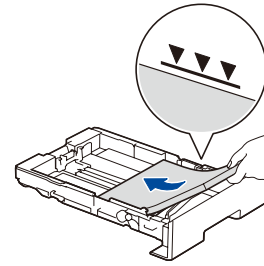


3 Connect the power cord and turn the machine on

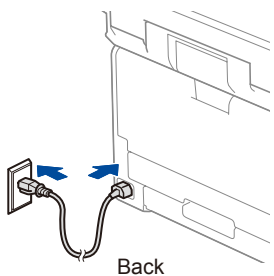

Back

Location of the power button varies depending on the model.

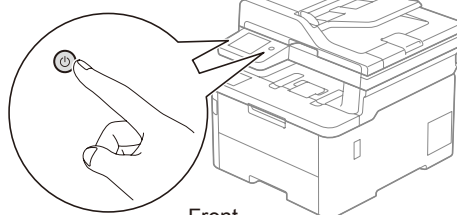


Front

4 Connect the telephone line cord (For MFC models)

If you do not plan to use the fax feature on this machine, go to step 5.

The telephone line cord is not included in the box.

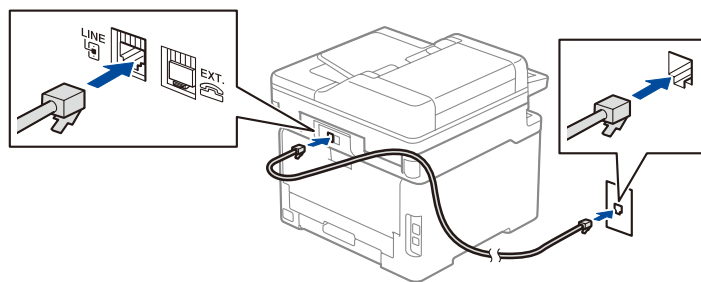

5 Connect your computer or mobile device to your machine

Follow these steps to complete the setup using one of the connection types available on your machine.

Visit setup.brother.com to download and install Brother software.


Follow the on-screen instructions and prompts.

Setup Finished


You can now print and scan using your machine. To check for the latest firmware, visit support.brother.com/up7.

Important Notice for Network Security:

The default password to manage this machine's settings is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to protect your machine from unauthorised access.

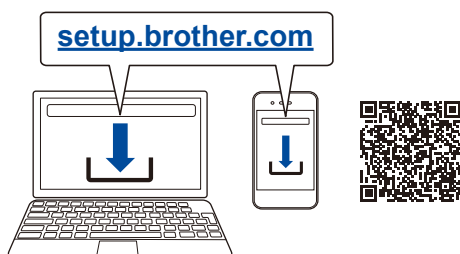

Can't Connect? Check the following:

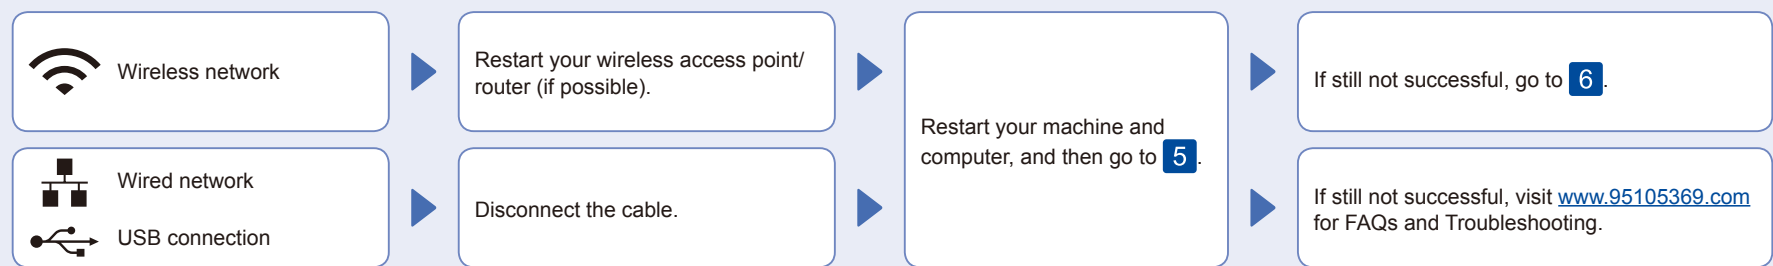


6 Manual wireless setup (Wireless models)

If the wireless setup is not successful, try to set up the connection manually.

Find your SSID (Network Name) and Network Key (Password) on your wireless access point/router and write them in the table provided below.

SSID (Network Name)	
Network Key (Password)	

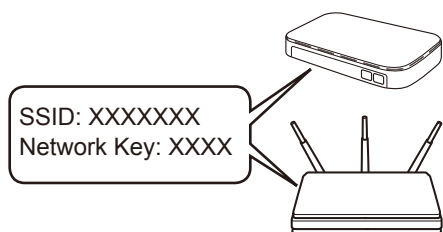


For LCD models

Press **Menu**, and then select [Network] > [WLAN (Wi-Fi)] > [Find Network]. Follow the LCD instructions.

For Touchscreen models

Press > [Find Wi-Fi Network]. Follow the Touchscreen instructions.

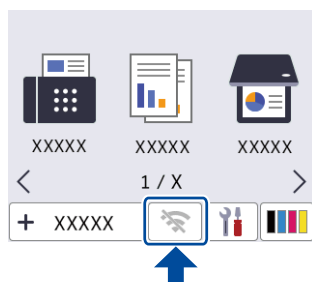

Select the SSID (Network Name) for your access point/router and enter the Network Key (Password).

For LCD models

Press and hold ▲/▼ to select one of the following characters:
0123456789abcdefghijklmnopqrstuvwxyz
Z(space)!"#\$%&'()*+,-./:;<=>@[^_`{|}~

Go to 5 to install software.

When the wireless setup is successful, the Touchscreen/LCD displays [Connected].

If setup is not successful, restart your Brother machine and your wireless access point/router, and repeat 6.

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.