



EN


AR



The latest manuals are available at the Brother support website:
<https://s.brother/cm2ab/>

1 Unpack the machine and check the components

Remove the protective tape or film covering the machine and the supplies. The components included in the box may differ depending on your country.

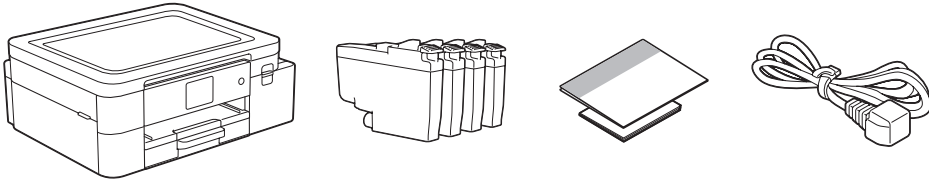

NOTE

- Save all packing materials and the box in case you must ship your machine.
- **If you use a wired connection, you must purchase the correct interface cable for the interface you want to use.**

USB Cable


Use a USB 2.0 cable (Type A/B) that is no more than 6 feet (2 meters) long.

Ethernet (Network) cable

Use a straight-through Category 5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.

2 Load plain Sublimation paper in the paper tray

For more information about paper handling and sizes, see the *Online User's Guide* at <https://s.brother/cm2ab/>.

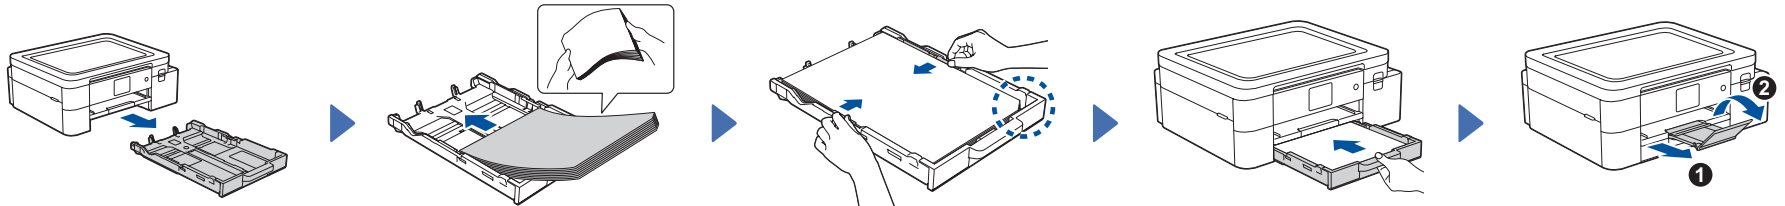

Pull the paper tray completely out of the machine.

Fan the paper well and load it in the tray.

NOTE


Place the printing surface face down. When loading Brother Sublimation Paper, make sure the paper's cut corner rests in the lower right of the tray, as shown in the illustration.

Adjust the paper guides.

Slowly push the paper tray completely into the machine.

Pull out the paper support ①, and unfold the paper support flap ② so that the printed pages do not fall.

3 Connect the power cord

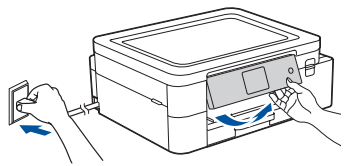


NOTE


You can adjust the control panel angle to read the LCD more easily.

To maintain print quality, keep your machine connected to a power source all the time so that the machine can clean the print head periodically.

4 Install the starter ink cartridges

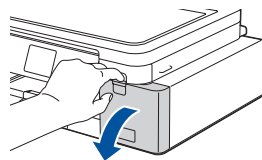

Open the ink cartridge cover.

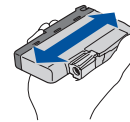

Quickly shake all of the ink cartridges horizontally 15 times as shown, before inserting it into the machine.

Follow the LCD instructions to install the ink cartridges. Close the ink cartridge cover. The machine will prepare the ink tube system for printing.

NOTE


The first time you install the ink cartridges, the machine will use extra ink to fill the ink delivery tubes. This is a one-time process that enables high-quality printing.

5 Set the date and time


Follow the LCD instructions to set the date and time.

After setting the date and time, you can set the Firmware Update defaults.

6 Check the print quality

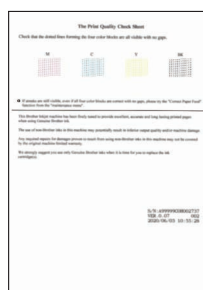

Follow the LCD instructions, and then press the [OK] or ►. The machine prints the Print Quality Check Sheet.

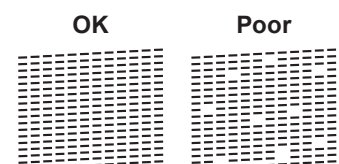



Follow the LCD instructions to check the quality of the four color blocks on the sheet, and then start the cleaning procedure.

7 Machine settings

Follow the LCD instructions to configure the machine settings.

- Check the software installation information.

Select your language (Available only for some countries.)


1. Press  [Settings] > [All Settings] > [Initial Setup] > [Local Language].
2. Press your language.
3. Press .

8 Connect your mobile device to your machine

Follow these steps to complete the setup to print from your mobile device.

Visit <https://s.brother/snjumq3331/> to download and install the Brother Artspira app.



1. Tap  in the upper right corner of the Artspira home screen.
2. Select **Creative Printer**
3. Follow the on-screen instructions to set up your machine's wireless network connection. When the connection succeeds, Artspira searches for connectible printers.
4. Select your machine's model name from the list that appears. When your mobile device and machine are connected, a check mark appears next to the printer in the list.

Setup Finished

You can now print from your mobile device.

1. Select the design you want to print from the Artspira's home screen and tap **Create**.
2. Customize the design and when finished tap **Print**.


You can also print directly from your mobile devices using AirPrint. For more information, see the *Online User's Guide* at <https://s.brother/cm2ab/>.

9 Connect your computer to your machine

Follow these steps to complete the setup to print from your computer.

Visit <https://s.brother/cs2ka/> to download and install Brother software.


<https://s.brother/cs2ka/>

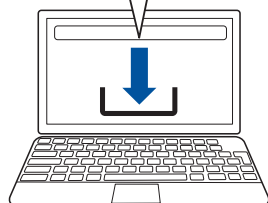

Follow the on-screen instructions and prompts.

NOTE

For Wired Network Connection and USB Connection, locate the correct port (based on the cable you are using) inside the machine as shown.

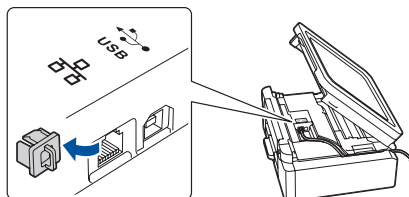

Setup Finished

You can now print from your computer. To check for the latest firmware, visit <https://s.brother/cu2ka/>.

Important Notice for Network Security:

The default password to manage this machine's settings is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to protect your machine from unauthorized access.

Can't Connect? Check the following:





10 Manual wireless setup

If the wireless setup is not successful, try to set up the connection manually.

Find your SSID (Network Name) and Network Key (Password) on your wireless access point/router and write them in the table provided on the right.

SSID (Network Name)	
Network Key (Password)	

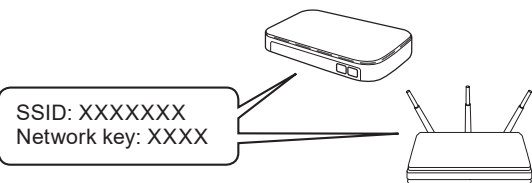

Go to your machine, and press  > [Find Wi-Fi Network] > [Yes].


Select the SSID (Network Name) for your access point/router and enter the Network Key (Password). When the wireless setup is successful, the LCD displays [Connected].

Go to **9** to install software.

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.

If setup is not successful, restart your Brother machine and your wireless access point/router, and repeat **10**.

■ Tips!

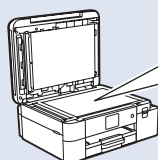

Look in this location for more tips on creating sublimation projects!

اختر لغتك
(غير متوفر إلا لبعض الدول.)

1. اضغط على [Settings] (إعدادات) < [All Settings] (كافة الإعدادات) < [Initial Setup] (الإعداد الأولي) < [Local Language] (اللغة المحلية).
2. اضغط على لغتك.
3. اضغط على [Home].

اتبع التعليمات المعروضة على شاشة LCD لتهيئة إعدادات الجهاز.

• تحقق من معلومات تثبيت البرنامج.

قم بتوصيل جهاز المحمول لديك بجهازك

اتبع هذه الخطوات لإكمال الإعداد لتتمكن من الطباعة من جهازك المحمول.

انتهاء الإعداد

يمكنك الآن الطباعة من جهازك المحمول.

1. حدد التصميم الذي تريد طباعته من الشاشة الرئيسية لتطبيق Artspira، ثم اضغط على **Create (إنشاء)**.
2. قم بتخصيص التصميم، واضغط على **Print (طباعة)** عند الانتهاء.

يمكنك أيضًا الطباعة مباشرة من الأجهزة المحمولة لديك باستخدام AirPrint. لمزيد من المعلومات، يُرجى الاطلاع على دليل المستخدم على الإنترنت (Online User's Guide) على <https://s.brother/cm2ab/>.

1. اضغط  في الركن العلوي الأيمن من الشاشة الرئيسية لتطبيق Artspira.
2. حدد **Creative Printer**.
3. اتبع التعليمات المعروضة على الشاشة لإعداد اتصال الشبكة اللاسلكية لجهازك. عند نجاح الاتصال، يبحث تطبيق Artspira عن الطابعات التي يمكن الاتصال بها.
4. حدد اسم الطراز الخاص بجهازك من القائمة الظاهرة. عند اتصال جهاز المحمول لديك بالجهاز، تظهر علامة اختيار بجوار الطباعة في القائمة.

تفضل بزيارة <https://s.brother/snjumq3331/> لتنزيل تطبيق Brother Artspira وتثبيته.



قم بتوصيل جهاز الكمبيوتر لديك بجهازك

اتبع هذه الخطوات لإكمال الإعداد لتتمكن من الطباعة من جهاز الكمبيوتر لديك.

انتهاء الإعداد

يمكنك الآن الطباعة من جهاز الكمبيوتر لديك. للتحقق من أحدث البرامج الثابتة، تفضل بزيارة <https://s.brother/cu2ka/>.


إخطار هام لأمان الشبكة:

ستجد كلمة المرور الافتراضية لإدارة إعدادات هذا الجهاز على الجزء الخلفي من الجهاز بعنوان "Pwd". ننصحك بتغييرها على الفور لحماية الجهاز من الوصول غير المصرح به.

اتبع التعليمات والمطالبات التي تظهر على الشاشة.


ملاحظة

بالنسبة لاتصال الشبكة السلكية وتوصيل USB، يُرجى تحديد المنفذ الصحيح، (على أساس الكبل الذي تستخدمه) داخل الجهاز كما هو موضح.

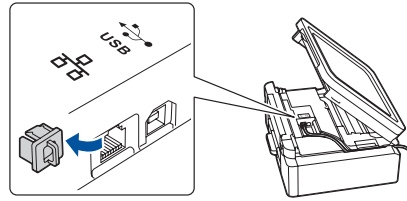

تفضل بزيارة <https://s.brother/cs2ka/> لتنزيل برنامج Brother وتثبيته.

<https://s.brother/cs2ka/>

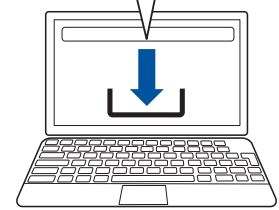

تعذر التوصيل؟ تحقق مما يلي:

شبكة لاسلكية

شبكة سلكية
توصيل USB

أعد تشغيل الموجه/نقطة الوصول اللاسلكية (إذا كان ممكنًا).

افصل الكبل.

إذا ما زالت العملية غير ناجحة، فانقل إلى **10**.

إذا ما زالت العملية غير ناجحة، تفضل بزيارة <https://s.brother/cf2ab/> للحصول على إجابات الأسئلة المتكررة واستكشاف الأخطاء وإصلاحها.

قم بإعادة تشغيل الجهاز لديك والكمبيوتر، ثم انتقل إلى **9**.

الإعداد اللاسلكي اليدوي

إذا لم يكن الإعداد اللاسلكي ناجحًا، فجرب إعداد الاتصال يدويًا.


قم بالعثور على SSID (اسم الشبكة) ومفتاح الشبكة (كلمة المرور) الموجودة على نقطة الوصول اللاسلكية/الموجه لديك وقم بكتابتها في الجدول الموجود على اليمين.

SSID (اسم الشبكة)	مفتاح الشبكة (كلمة المرور)

قم باختيار SSID (اسم الشبكة) الخاصة بنقطة الوصول/الموجه لديك وقم بإدخال مفتاح الشبكة (كلمة المرور). عند نجاح الإعداد اللاسلكي، تقوم شاشة LCD بعرض [Connected] (تم التوصيل).

انتقل إلى **9** لتثبيت البرنامج.

إذا لم ينجح الإعداد، فقم بإعادة تشغيل جهاز Brother ونقطة الوصول اللاسلكية/الموجه لديك، وكرر **10**.

انتقل إلى جهازك، واضغط على  < [Find Wi-Fi Network] < (العثور على شبكة Wi-Fi) < [Yes] (نعم).

XXXXXXXX :SSID
XXXX :مفتاح الشبكة

إذا لم تتمكن من العثور على هذه المعلومات، اتصل بمسؤول الشبكة لديك أو الجهة المصنعة لنقطة الوصول اللاسلكية/الموجه.

تلميحات!

ابحث في هذا الموقع على المزيد من التلميحات حول إنشاء مشروعات على ورق التسامي!

تتوافر أحدث الأدلة على موقع الدعم Brother:
<https://s.brother/cm2ab/>



EN

AR

1

قم بإخراج الجهاز من عبوته وتحقق من المكونات

قم بإزالة الشريط الواقي أو الغلاف من على الجهاز والملحقات. قد تختلف المكونات المرفقة في العلبة وفقاً لبلدك.

ملاحظة





- احتفظ بجميع مواد التعبئة والعلبة في حال كان يتعين عليك شحن جهازك.
- إذا كنت تستخدم اتصالاً سلكياً، فيتعين عليك شراء كبل الواجهة الصحيح للواجهة التي ترغب في استخدامها.

كبل USB

استخدم كبل USB 2.0 (من النوع A/B) لا يزيد طوله عن مترين.


كبل Ethernet (الشبكة)

استخدم كبلًا مزدوجًا مجدولاً من الفئة 5 (أو أعلى) مباشرة مع شبكة Ethernet السريعة 10BASE-T أو 100BASE-TX.

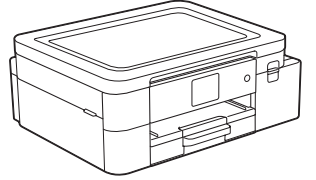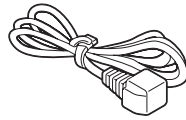


لمزيد من المعلومات حول التعامل مع الورق وأحجامه، راجع دليل المستخدم عبر الإنترنت (Online User's Guide) على <https://s.brother/cm2ab/>.


2 ضَع ورق التسامي العادي في درج الورق

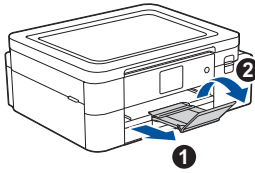


اسحب وحدة دعم الورق ①، وافتح غطاء وحدة دعم الورق ② حتى لا تسقط الصفحات المطبوعة.

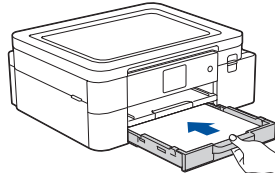


ادفع درج الورق بالكامل ببطء داخل الجهاز.

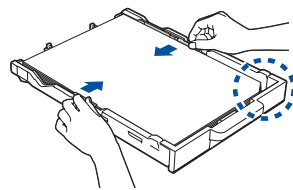

قم بتعيين موجّهات الورق.

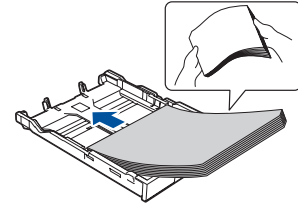

قم بتهوية الورق جيداً وضعه في الدرج.

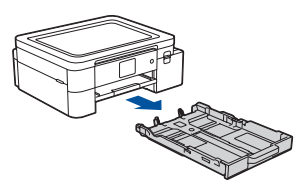

اسحب درج الورق بشكل كامل خارج الجهاز.

ملاحظة


ضع سطح الطباعة متجهًا لأسفل. عند تحميل ورق التسامي من Brother، تأكد من استقرار زاوية قص الورق في الجزء الأسفل الأيمن من الدرج، كما هو موضح في الرسم التوضيحي.

4 قم بتثبيت غُلب الحبر الأولية


اتبع التعليمات الظاهرة على شاشة LCD لتثبيت غُلب الحبر. اغلق غطاء علبة الحبر. سيعمل الجهاز على تحضير نظام أنبوب الحبر لإجراء الطباعة.

ملاحظة

عند تثبيت غُلب الحبر للمرة الأولى، سيستخدم الجهاز كمية أكبر من الحبر لملء أنابيب التوصيل. وتتم هذه العملية لمرة واحدة، مما يضمن الحصول على طباعة عالية الجودة.

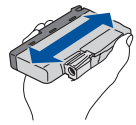


قم بهز جميع غُلب الحبر 15 مرة بشكل أفقي كما هو موضح قبل إدخالها في الجهاز.

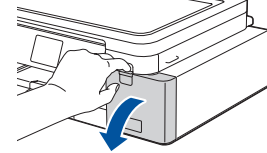

افتح غطاء علبة الحبر.

3 قم بتوصيل سلك الطاقة

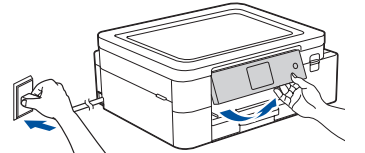


ملاحظة


يمكنك ضبط زاوية لوحة التحكم لقراءة شاشة LCD بسهولة أكبر.

للحفاظ على جودة الطباعة، حافظ على اتصال جهازك بمصدر طاقة طوال الوقت حتى يتمكن الجهاز من تنظيف رأس الطباعة دوريًا.

6 افحص جودة الطباعة

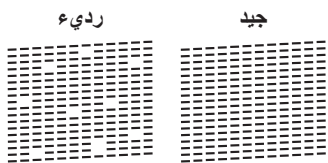

اتبع التعليمات المعروضة على شاشة LCD للتحقق من جودة كتل الألوان الأربعة على الورقة، ثم ابدأ إجراء التنظيف.

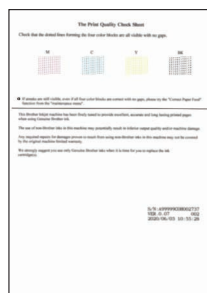

اتبع التعليمات المعروضة على شاشة LCD، ثم اضغط على [OK] (موافق) أو ▶. سيقوم الجهاز بطباعة ورقة فحص جودة الطباعة.

5 تعيين التاريخ والوقت

اتبع التعليمات المعروضة على شاشة LCD لتعيين التاريخ والوقت. بعد تعيين التاريخ والوقت، يمكنك تعيين الإعدادات الافتراضية لتحديث البرامج الثابتة.