

brother

TZe
TAPE

PT-P710BT

(English)



D018Z3001

Please read this guide, including all precautions, before using this printer. After reading this guide, keep it in a safe place.

For FAQs, Troubleshooting, and to download software and manuals, visit support.brother.com
Please note that we cannot assume any responsibility for any damage or losses arising from the use of this printer or labels created with the printer, or the disappearance or change of data due to failure, repair, loss of power, or any claim from a third party.

⚠ DANGER Failure to observe instructions and warnings will result in death or serious injuries.

Follow these guidelines to avoid the risk of heat generation, smoking, explosion, or fire.

Rechargeable Li-ion Battery

- DO NOT allow the battery to come into contact with liquids.
- DO NOT charge, use, or leave in high temperature (above 60 °C) locations.
- Use the included USB cable to charge.
- Use only for its intended purpose.
- Keep away from heat and fire.
- DO NOT connect the + and - terminals with metal objects such as wire.
- DO NOT carry or store with metal objects.
- DO NOT throw, hit or damage the battery in any way.
- DO NOT solder connections to the battery.
- DO NOT disassemble or modify the battery.
- DO NOT dispose of the battery with household waste.

⚠ WARNING Failure to observe instructions and warnings could result in death or serious injuries.

Follow these guidelines to avoid the risk of heat generation, smoking, explosion, fire, or injury.

Rechargeable Li-ion Battery

- Keep away from infants. If ingested, see a doctor immediately.
- Stop using if there are noticeable abnormalities such as smell, heat, deformities, or discoloration.
- If liquid from the battery gets into eyes, wash them immediately with clean water. See a doctor immediately.

Printer, USB Cable

- Use the included USB cable to prevent any damage.
- DO NOT use during a thunderstorm.
- DO NOT damage.
- DO NOT place heavy objects on.
- DO NOT forcibly bend or pull.
- DO NOT disassemble or modify.
- DO NOT drop or hit.
- DO NOT allow to come into contact with liquids.
- If you notice abnormalities such as smell, heat generation, discoloration, or deformation while using or storing, stop using the printer, disconnect the USB cable, and remove the battery.

⚠ CAUTION Failure to observe instructions and warnings could result in minor or moderate injuries.


Follow these guidelines to avoid injury.

Rechargeable Li-ion Battery

- If liquid from the battery gets onto skin or clothes, immediately rinse them with water.

Printer, USB Cable

- When the printer is not being used, store it out of the reach of children. In addition, DO NOT allow children to put any printer parts or labels in their mouths. If ingested, see a doctor immediately.
- Use the dedicated Li-ion battery (PA-BT-005).
- DO NOT get your fingers trapped in the printer when opening and closing the Cassette Cover.
- DO NOT insert your fingers any further than the brush inside the Tape Exit Slot.
- DO NOT touch the Print Head.
- DO NOT touch or insert your fingers into the cutter blade, otherwise you may get injured.

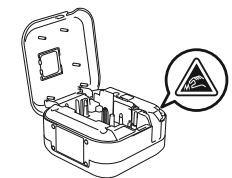

General Precautions

Printer, Tape Cassette, or USB Cable

- DO NOT use in any way or for any purpose not described in this guide. Doing so may result in accidents or damage.
- Use Brother **TZe** Tape Cassettes.
- DO NOT put any foreign objects into the Tape Exit Slot, the USB Port, or Li-ion battery compartment, etc.
- DO NOT place in any location exposed to extremely high or low temperatures, high humidity, or dusty location, such as direct sunlight, rain, near heaters, other hot appliances, on the dashboard, or in the back of your car.
- DO NOT try to print if the cassette is empty; it will damage the Print Head.
- DO NOT pull the tape while printing or feeding; it will damage the tape and the printer.
- The length of the printed label may differ from the displayed label length.
- Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the colour of the label may change or be transferred to other objects. Before applying the label, check the environmental conditions and the material.
- When printing multiple copies of a label, the printer will not detect the end of the tape cassette and will continue printing.
- Printed characters may look different than previewed, as your device's or computer's screen may have a higher resolution than the printer.
- Printed small text may not be as clear as it is displayed.
- White and Gold printed objects may not always print clearly.

Regulation

Compliance Statement of Wireless equipment (Thailand only)

This telecommunication equipment conforms to NTC technical requirement.

DD19-1039

L&M Business Planning Dept.	Decided	Checked	Designed	Date	Revision
				Part Name	PSG P710BT ENG/THA
				Part Code	D018Z3001

brother

TZe
TAPE

PT-P710BT

(ภาษาไทย)

โปรดอ่านคู่มือนี้ รวมถึงข้อควรระวังทั้งหมด ก่อนใช้เครื่องพิมพ์นี้ เมื่ออ่านคู่มือนี้จบแล้ว ให้เก็บคู่มือนี้ไว้ในที่ปลอดภัย สำหรับคำถามที่พบบ่อย การแก้ไขปัญหา การดาวน์โหลดซอฟต์แวร์และคู่มือ โปรดเยี่ยมชมที่ support.brother.com โปรดทราบว่าเราไม่สามารถรับผิดชอบต่อความเสียหายหรือการสูญเสียใด ๆ อันเกิดจากการใช้เครื่องพิมพ์หรือจลาจลที่สร้างขึ้น โดยเครื่องพิมพ์นี้ หรือการสูญหาย หรือการเปลี่ยนแปลงของข้อมูลอันเนื่องมาจากข้อผิดพลาด การซ่อมแซม การสูญเสียพลังงาน หรือการเรียกกรองสิทธิ์ใด ๆ จากบุคคลภายนอก

⚠️อันตราย การไม่ปฏิบัติตามคำแนะนำและคำเตือนจะส่งผลให้ถึงแก่ชีวิตหรือบาดเจ็บสาหัส

ทำตามแนวทางตามคู่มือเหล่านี้เพื่อหลีกเลี่ยงความเสี่ยงจากการทำให้เกิดความร้อน ครัน การระเบิด หรือไฟไหม้ แบตเตอรี่ลิเธียมไอออนแบบชาร์จได้

- ห้ามให้แบตเตอรี่สัมผัสกับของเหลว
- ห้ามชาร์จ ใช้งาน หรือทิ้งไว้ในพื้นที่ที่มีอุณหภูมิสูง (เกิน 60 °C)
- ใช้สาย USB ที่มีมาให้เพื่อชาร์จ
- ใช้เพื่อจุดประสงค์ที่กำหนดไว้เท่านั้น
- เก็บรักษาไว้ในห่างจากความร้อนและเปลวไฟ
- ห้ามเชื่อมต่อขั้ว + และ - กับวัตถุโลหะ เช่น ลวด
- ห้ามถือหรือเก็บไว้กับวัตถุโลหะ
- ห้ามโยน กระแทก หรือทำให้แบตเตอรี่เสียหายในลักษณะใดก็ตาม
- ห้ามทำการบัดกรีที่จุดเชื่อมต่อของแบตเตอรี่
- ห้ามถอดชิ้นส่วนหรือดัดแปลงแบตเตอรี่
- ห้ามทิ้งแบตเตอรี่รวมกับขยะในครัวเรือน

⚠️คำเตือน การไม่ปฏิบัติตามคำแนะนำและคำเตือนอาจส่งผลให้ถึงแก่ชีวิตหรือบาดเจ็บสาหัส

ทำตามแนวทางตามคู่มือเพื่อหลีกเลี่ยงความเสี่ยงจากการทำให้เกิดความร้อน ครัน การระเบิด ไฟไหม้ หรือการบาดเจ็บ แบตเตอรี่ลิเธียมไอออนแบบชาร์จได้

- เก็บรักษาไว้ในห่างจากเด็กทารก ถ้าเข้าสู่ร่างกาย ให้ไปพบแพทย์โดยทันที
- หยุดใช้ถ้าสังเกตเห็นความผิดปกติอย่างชัดเจน เช่น กลิ่น ความร้อน รูปร่างบิดงอ หรือการเปลี่ยนสี
- ถ้าของเหลวจากแบตเตอรี่เข้าตา ให้ล้างตาด้วยน้ำสะอาดโดยทันที ไปพบแพทย์โดยทันที

เครื่องพิมพ์ สาย USB

- ใช้สาย USB ที่มีมาให้เพื่อป้องกันความเสียหาย
- ห้ามใช้ขณะมีพายุฝน
- ห้ามทำให้เสียหาย
- ห้ามวางของหนักทับ
- ห้ามฝนต็ดหรือตั้ง
- ห้ามถอดชิ้นส่วนหรือดัดแปลง
- ห้ามทำหล่นหรือกระแทก
- ห้ามให้สัมผัสกับของเหลว
- หากคุณพบว่ามีความผิดปกติ เช่น กลิ่น การสร้างความร้อน การเปลี่ยนสี หรือสิ่งผิดปกติขณะที่ใช้หรือเก็บรักษา ให้หยุดใช้เครื่องพิมพ์ ถอดสาย USB และถอดแบตเตอรี่ออก


⚠️ข้อควรระวัง การไม่ปฏิบัติตามคำแนะนำและคำเตือนอาจก่อให้เกิดการบาดเจ็บเล็กน้อยหรือปานกลาง

ทำตามแนวทางตามคู่มือเหล่านี้เพื่อหลีกเลี่ยงการบาดเจ็บ แบตเตอรี่ลิเธียมไอออนแบบชาร์จได้

- หากมีของเหลวจากแบตเตอรี่ไปสัมผัสกับผิวหนังหรือเสื้อผ้า ให้ล้างด้วยน้ำสะอาดทันที

เครื่องพิมพ์ สาย USB

- เมื่อไม่ได้ใช้เครื่องพิมพ์ ควรเก็บให้พ้นมือเด็ก และห้ามปล่อยให้เด็กนำชิ้นส่วนเครื่องพิมพ์หรือจลาจลเข้าปาก ถ้าเข้าสู่ร่างกาย ให้ไปพบแพทย์โดยทันที
- ใช้แบตเตอรี่ลิเธียมไอออน (PA-BT-005)
- ห้ามให้นิ้วของคุณติดอยู่ในเครื่องพิมพ์เมื่อเปิดหรือปิดฝาครอบกลับเทป
- ห้ามหย่อนนิ้วของคุณลึกเข้าไปเกินจากแปรงภายในช่องทางออกของเทป
- ห้ามสัมผัสกับหัวพิมพ์
- ห้ามสัมผัสหรือหย่อนนิ้วของคุณเข้าไปในใบมีดตัด มิฉะนั้น คุณอาจได้รับบาดเจ็บ

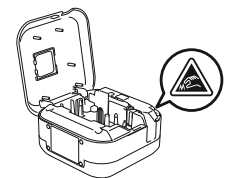

ข้อควรระวังล่วงหน้าทั่วไป

เครื่องพิมพ์ ดับเบิลเทป หรือสาย USB

- ห้ามใช้ในทางอื่นใดหรือเพื่อจุดประสงค์ที่ไม่ได้ระบุไว้ในคู่มือนี้ การทำเช่นนั้นอาจก่อให้เกิดอุบัติเหตุหรือความเสียหาย
- ใช้ดัดลับเทป TZe ของ Brother
- ห้ามใส่วัตถุแปลกปลอมใด ๆ ลงไปในช่องเทปออก พอร์ต USB หรือช่องใส่แบตเตอรี่ ฯลฯ
- ห้ามวางในสถานที่ใด ๆ ซึ่งสัมผัสกับอุณหภูมิสูงหรือต่ำจัด มีความชื้นในอากาศสูง หรือในสถานที่ที่มีฝุ่น เช่น โดมแสงอาทิตย์โดยตรง โดมฝน ใกล้เครื่องทำความร้อน เครื่องใช้ไฟฟ้าใด ๆ ที่มีความร้อน บนแผงหน้าปัดรถ หรือด้านหลังรถยนต์
- ห้ามลองพิมพ์หากเทปในดัดลับเทปหมด จะทำให้หัวพิมพ์เสียหาย
- ห้ามดึงเทปในขณะที่กำลังพิมพ์หรือป้อนเทป จะทำให้เทปและเครื่องพิมพ์เสียหาย
- ความยาวของจลาจลที่พิมพ์อาจแตกต่างจากความยาวจลาจลที่แสดงผลหน้าจอ
- จลาจลอาจไม่สามารถลอกหรือแกะออกได้ และสีของจลาจลอาจเปลี่ยนแปลงหรือไปติดอยู่กับวัสดุอื่น ทั้งนี้ขึ้นอยู่กับตำแหน่ง วัสดุ และสภาวะแวดล้อม ก่อนติดจลาจล ให้ตรวจสอบเงื่อนไขของสภาพแวดล้อมและวัสดุก่อน
- เมื่อพิมพ์จลาจลหลายสำเนา เครื่องพิมพ์จะตรวจไม่พบส่วนปลายของดัดลับเทปและจะพิมพ์ต่อไป
- ตัวอักษรที่พิมพ์อาจมีลักษณะแตกต่างจากตัวอย่างที่แสดง เนื่องจากหน้าจอของอุปกรณ์หรือคอมพิวเตอร์ของคุณอาจมีความละเอียดสูงกว่าเครื่องพิมพ์
- ข้อความขนาดเล็กที่พิมพ์อาจไม่ชัดเจนเท่ากับที่หน้าจอแสดง
- วัตถุที่พิมพ์เป็นสีขาวและสีทองอาจพิมพ์ไม่ชัดเจนเสมอไป

ข้อบังคับ

คำประกาศการปฏิบัติตามกฎหมายสำหรับอุปกรณ์ไร้สาย (ประเทศไทยเท่านั้น)

อุปกรณ์สื่อสารโทรคมนาคมนี้ทำตามข้อกำหนดทางเทคนิคของ NTC