

brother



D03C0Y001



P-touch

## PT-E720BT/PT-E920BT

### EN Product Safety Guide

Make sure you read this guide before using the label printer. Keep this guide in a safe place for future reference.

For FAQs, troubleshooting tips, and to download software and manuals, visit [support.brother.com](http://support.brother.com).

### Safety Precautions

- For servicing, adjustments, or repairs, contact Brother customer service or your local Brother dealer.
- If the product operates abnormally or any error occurs, or if any cable is damaged, turn the product off, disconnect all cables, and contact Brother customer service or your local Brother dealer.
- We assume no responsibility for damages arising from natural or man-made disasters, such as earthquakes or fires, or actions of third parties, the user's intentional or negligent operation, misuse, or operation under other special conditions.
- As long as permitted by applicable laws, we assume no responsibility for damage (such as loss of business profits, business disruptions or a lost means of communication) that may result from the use of, or inability to use, the product.
- We assume no responsibility for damages that may result from incorrect operation of the product by connecting incompatible equipment or using incompatible software.
- We assume no responsibility for any damage or lost profits arising from the use of labels created with this product, the disappearance or change of data due to failure, repair, or supplies, and we do not accept any claim from a third party.
- Brother reserves the right to make changes without notice to the information in this guide or other documentation for this product. Furthermore, Brother shall not be responsible for any damages (including consequential) caused by reliance on the product documentation, including, but not limited to, typographical and other errors. We strongly advise you to regularly check for and download the latest version of your product documentation, firmware, drivers, and applications at [support.brother.com](http://support.brother.com). The latest version of your product documentation is available from the Brother support website at [support.brother.com](http://support.brother.com).
- For more information about software and using the product on a network, see the *User's Guide*, which can be found on the Brother support website at [support.brother.com](http://support.brother.com).
- Product models, accessories, and supplies may vary depending on the country or region.
- This product is approved for use in the country or region of purchase only.

**▲ DANGER** Failure to observe instructions and warnings could result in death or serious injuries.

Follow these guidelines to avoid the risk of heat generation, smoking, explosion, or fire.

#### Rechargeable Li-ion Battery

- DO NOT expose the battery to heat and fire.
- DO NOT disassemble or modify the battery.
- DO NOT damage the battery in any way.
- DO NOT connect the + and - terminals with metal objects, such as wire.
- Store the battery out of the reach of children.
- DO NOT allow the battery to come into contact with liquids.
- DO NOT charge, use, or leave the battery in high-temperature (above 60°C) locations.
- DO NOT charge the battery using an unsupported method. For instructions on how to charge the battery, see the *User's Guide*.
- DO NOT use the battery other than for its intended purpose.
- DO NOT carry or store the battery with metal objects.
- DO NOT solder any connections to the battery.
- DO NOT dispose of the battery with household waste.

**▲WARNING** Failure to observe these guidelines and warnings could result in death or serious injuries.


Follow these guidelines to avoid the risk of heat or smoke generation, explosion, fire, or injury.

#### Product, USB Cable, Rechargeable Li-ion Battery

- To avoid damaging these products, DO NOT:
  - Place heavy objects on them.
  - Disassemble or modify them.
  - Drop or hit them.
  - Allow them to get wet, for example, by handling them with wet hands or spilling liquids on them.
- DO NOT install or use in areas where explosive or electrically conductive dust is generated.
- DO NOT operate, charge, or store these products in the following locations, otherwise, a fire, electrical shock, smoke, or damage may occur:
  - In an extremely humid or cold location (see the "Specifications" section in your model's *User's Guide*).
  - In a location where it is exposed to condensation or moisture, such as bathrooms or water heaters.
  - In an extremely dusty location.
  - In an extremely hot location, such as near open flames, heaters, or in direct sunlight.
  - In a closed car in direct sunlight.
  - At a high altitude.
  - During a thunderstorm.
- DO NOT use the label printer if water or foreign objects get inside it. Disconnect an external power source and remove the battery (if installed), and then contact your local Brother dealer.
- Stop using the label printer if there are noticeable abnormalities such as smell, heat, noise, deformities, or discoloration.
- DO NOT allow babies or children to play with the plastic bag that contained the label printer. Dispose of the bag or keep it away from babies and children to avoid the risk of suffocation.
- DO NOT use the battery if damaged or leaking.
- Keep battery away from babies and children. If ingested, seek medical attention immediately.
- DO NOT use sharp objects, such as tweezers or pens, to remove or replace the battery.
- If liquid from the battery gets into your eyes, wash them immediately with clean water. Seek medical attention immediately.
- Keep your hands and hair away from the Cutter Unit.
- DO NOT touch the Cutter Unit's blade or insert your fingers inside the Tape Exit Slot.
- DO NOT touch the Print Head or any metal parts near the Print Head as they become very hot during, and immediately after use.

PT-E720BT

PT-E920BT

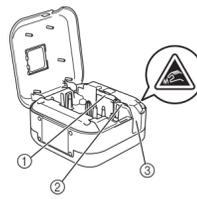

- ① Print Head
- ② Cutter Unit
- ③ Tape Exit Slot

- ① Print Head
- ② Cutter Unit
- ③ Tape Exit Slot

- When shipping the label printer, make sure to remove the battery before packing. If the label printer is shipped with the battery installed, there is a risk of fire, explosion, and damage.
- Remove the battery and disconnect an external power source if you do not intend to use the printer for an extended period of time.

### ▲CAUTION

Failure to observe instructions and warnings could result in minor or moderate injuries.

#### Product, USB Cable, Rechargeable Li-ion Battery

- If liquid from the battery gets onto skin or clothes, immediately rinse them with water.
- Use only the battery included with this product.
- DO NOT drop the label printer when removing it from the box or relocating it, otherwise you may get injured.
- Be careful when closing the Tape Cassette Compartment Cover. There is a risk of injury if your fingers get caught between the upper and lower parts of the cover.
- When you are not using the label printer or any supplies, store it out of the reach of babies and children. In addition, do not allow babies and children to put the label printer parts or labels in their mouths. If any object has been swallowed, seek medical attention immediately.
- Store the label printer on a flat, level, and stable surface.

### Regulation

<b>CAUTION</b> RISK OF EXPLOSION IF BATTERY IS REPLACED WITH AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATIONS.
--

### Compliance Statement of Wireless equipment (Thailand only)

This telecommunication equipment conforms to the standard or technical requirements of NBTC.  
**เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้เครื่องวิทยุคมนาคมที่คณะกรรมการกิจการโทรคมนาคมแห่งชาติประกาศกำหนด**

### Contact Information

Visit [global.brother/en/gateway](http://global.brother/en/gateway) for contact information on your local Brother office.

©2025 Brother Industries, Ltd. All rights reserved.

### ☑️ 제품 안전 가이드

라벨프린터를 사용하기 전에 이 설명서를 읽으십시오. 나중에 참조할 수 있도록 이 설명서를 안전한 곳에 두십시오.

**FAQ 및 문제 해결 팁을 찾아보거나 소프트웨어 및 설명서를 다운로드하려면 [support.brother.com](http://support.brother.com)을 방문하십시오.**

### 안전을 위한 주의 사항

- 정비, 조정 또는 수리에 대해서는 **Brother** 고객 서비스나 **Brother** 대리점에 문의하십시오.
- 제품이 비정상적으로 작동하거나 오류가 발생한 경우, 또는 케이블이 손상된 경우 제품 전원을 끄고 모든 케이블을 분리한 다음 **Brother** 고객 서비스나 **Brother** 대리점에 문의하십시오.
- 당사는 지진이나 화재같은 자연 재해나 인재, 또는 제3자의 행위, 사용자의 고의적이거나 부주의한 작동, 오용 또는 기타 특수 조건에서의 작동으로 인한 피해에 대해서 어떠한 책임도 지지 않습니다.
- 적용 가능한 법률에서 허용하는 한, 당사는 제품의 사용 또는 사용 불능으로 인해 발생할 수도 있는 피해(예: 영압 이익의 손실, 영업 중단 또는 통신 수단 두절)에 대해서 일체 책임을 지지 않습니다.
- 당사는 호환되지 않는 장비의 연결 또는 호환되지 않는 소프트웨어의 사용으로 인한 잘못된 제품 작동으로 인해 발생할 수 있는 피해에 대해서 어떠한 책임도 지지 않습니다.
- 당사는 이 제품으로 만든 라벨을 사용하여 발생하는 모든 손해나 이익 손실, 고장, 수리 또는 소모품으로 인한 데이터 손실이나 변경에 어떠한 책임도 지지 않으며, 제3자로부터의 어떠한 청구도 수용하지 않습니다.
- Brother**는 이 제품을 위한 설명서 또는 기타 문서의 정보를 예고 없이 변경할 권리를 보유합니다. 뿐만 아니라, **Brother**는 인쇄상의 오류 및 기타 오류를 포함하여(이에 국한되지 않음) 제품 설명서를 사용함으로써 발생한 모든 손해(결과적 손해 포함)에 대해 어떠한 책임도 지지 않습니다.
- [support.brother.com](http://support.brother.com)에서 제품 설명서, 펌웨어, 드라이버, 애플리케이션의 최신 버전을 정기적으로 확인하고 다운로드할 것을 강력히 권장합니다. 최신 버전의 제품 설명서는 **Brother** 지원 웹 사이트([support.brother.com](http://support.brother.com))에서 구할 수 있습니다.
- 소프트웨어 관련 정보 및 네트워크상에서의 제품 사용과 관련된 정보는 **Brother** 지원 웹 사이트([support.brother.com](http://support.brother.com))에서 찾을 수 있는 *사용자 설명서*를 참조하십시오.
- 제품 모델과 액세서리, 소모품은 국가 또는 지역마다 다를 수 있습니다.
- 본 제품은 구입하신 국가 또는 지역에서만 사용하도록 승인되었습니다.

**▲ 위험** 지침 및 경고를 준수하지 않으면 사망이나 심각한 부상에 이를 수 있습니다.

**발열, 연기 발생, 폭발 또는 화재의 위험을 피하려면 이 지침을 따르십시오.**

#### 리튬 이온 충전용 배터리

- 배터리를 열과 불에 노출시키지 마십시오.
- 배터리를 분해하거나 개조하지 마십시오.
- 배터리를 어떤 방식으로든 손상시키지 마십시오.
- 전선같은 금속 물체로 + 단자와 - 단자를 연결하지 마십시오.
- 배터리를 어린이들이 만지지 못하도록 보관하십시오.
- 배터리가 액체에 접촉하지 않도록 주의해 주십시오.
- 고온(60°C)의 장소에서 배터리를 충전하거나 사용하거나 방치하지 마십시오.
- 지연되지 않는 방법을 이용해서 배터리를 충전하지 마십시오. 배터리 충전 방법에 대한 지침은 *사용자 설명서*를 참조하십시오.
- 배터리는 원래 용도로만 사용하십시오.
- 배터리를 금속 물체와 함께 휴대하거나 보관하지 마십시오.
- 배터리 연결부를 납땜하지 마십시오.
- 배터리를 가정용 쓰레기와 함께 버리지 마십시오.

**▲ 경고** 지침 및 경고를 준수하지 않으면 사망이나 심각한 부상에 이를 수 있습니다.

**발열, 연기 발생, 폭발, 화재 또는 부상 위험을 피하려면 이 지침을 따르십시오.**

#### 제품, USB 케이블, 리튬 이온 충전용 배터리

- 이 제품들의 손상을 피하려면 다음 행위를 하지 마십시오.
  - 그 위에 무거운 물체를 올려놓는 행위.
  - 분해하거나 개조하는 행위.
  - 떨어뜨리거나 부딪치는 행위.
  - 젖은 손으로 취급하거나 그 위에 액체를 쏟는 등 짓게 만드는 행위.

- 폭발성 또는 전기 전도성 먼지가 발생하는 장소에서는 설치하거나 사용하지 마십시오.
- 다음 장소에서는 이 제품들을 작동, 충전 또는 보관하지 마십시오. 그럴 경우, 화재, 감전 또는 손상이 발생할 수 있습니다.
  - 매우 습하거나 추운 장소(해당 모델의 *사용자 설명서*에서 "사양" 섹션 참조).
  - 욕실이나 온수기 근처같은 갈로 또는 습기에 노출되는 장소.
  - 먼지가 매우 많은 장소.
  - 화염 근처, 히터 또는 적사광선과 같은 매우 뜨거운 장소.
  - 적사광선에 노출된 폐쇄된 자동차 내부.
  - 고도가 높은 곳.
  - 뇌우 중.
- 내부에 물이나 이물질이 들어간 상태로 라벨프린터를 사용하지 마십시오. 외부 전원을 분리하고 배터리(설치된 경우)를 제거한 다음, 해당 지역 **Brother** 대리점에 문의하십시오.
- 냄새, 열기, 소음, 변형 또는 번개와 같이 눈에 띄는 이상이 있는 경우 라벨프린터 사용을 중지하십시오.
- 유아 또는 어린이가 라벨프린터를 담았던 비닐 봉지를 가지고 놀지 못하게 하십시오. 비닐 봉지는 질식 위험을 방지하기 위해 폐기하거나 아기와 어린이의 손이 닿지 않는 곳에 두십시오.
- 배터리가 손상되거나 배터리액이 누출된 경우 사용하지 마십시오.
- 배터리를 유아 및 어린이로부터 멀리 두십시오. 삼켰을 경우, 즉시 병원을 찾으십시오.
- 배터리를 제거하거나 교체할 때 핀셋이나 펜 등 날카로운 물체를 사용하지 마십시오.
- 배터리에서 나온 액체가 눈에 들어간 경우, 즉시 깨끗한 물로 씻으십시오. 즉시 의사의 진찰을 받으십시오.
- 손과 머리카락을 커터 장치에 가까이 하지 마십시오.
- 커터 장치의 칼날을 건드리거나 테이프 출구 슬롯 앞에 손가락을 넣지 마십시오.
- 사용 중과 사용 직후에는 프린트 헤드 또는 프린트 헤드 근처의 금속부가 매우 뜨거우니 만지지 마십시오.

PT-E720BT

PT-E920BT



- ① 프린트 헤드
- ② 커터 장치
- ③ 테이프 출구 슬롯

- ① 프린트 헤드
- ② 커터 장치
- ③ 테이프 출구 슬롯

- 라벨프린터를 배송할 때는 포장하기 전에 배터리를 제거하십시오. 배터리가 설치된 상태로 라벨프린터를 배송하면 화재, 폭발 및 손상의 위험이 있습니다.
- 프린터를 장기간 사용하지 않는 경우 배터리를 제거하고 외부 전원을 분리하십시오.

#### ▲ 주의

**지침 및 경고를 준수하지 않으면 경미한 부상 또는 중증도의 부상으로 이어질 수 있습니다.**

#### 제품, USB 케이블, 리튬 이온 충전용 배터리

- 배터리에서 나온 액체가 피부나 옷에 닿은 경우 즉시 깨끗한 물로 씻어 내십시오.
- 이 제품과 함께 포함된 배터리만 사용하십시오.
- 라벨프린터를 박스에서 꺼내거나 이동할 때 떨어뜨리지 마십시오. 부상을 입을 수 있습니다.
- 테이프 카세트함 커버를 닫을 때 주의하십시오. 덮개의 뒷부분과 아랫부분 사이에 손가락이 끼이면 부상의 위험이 있습니다.
- 라벨프린터나 소모품을 사용하지 않을 때는 어린이의 손이 닿지 않는 곳에 보관하십시오. 또한 아기와 어린이가 라벨프린터 부품 또는 라벨을 입에 넣지 않도록 주의를 기울여야 합니다. 어떤 물체라도 삼킨 경우 즉시 진료를 받으십시오.
- 라벨프린터를 평평하고 수평이 맞는 안정적인 표면 위에 보관하십시오.

### 규정

<b>주의</b> 잘못된 배터리 종류로 교체하는 경우 폭발의 위험이 있습니다. 사용한 배터리는 지역 규정에 따라 폐기하십시오.
---

### 문의처 정보

해당 지역 **Brother** 지사의 문의처 정보는 [global.brother/en/gateway](http://global.brother/en/gateway)를 참조하십시오.

해당무선설비기기는 운용중 전파혼선 가능성이 있으므로 인명안전과 관련된 서비스는 할수없음.

본 기기는 통상 이용 상태의 경우 인체(머리, 몸통)와 20cm 초과하는 거리에서 사용되어야 합니다.

©2025 Brother Industries, Ltd. 모든 권리 보유.

## ZH-TW 產品安全指引

在使用標籤機之前，請務必閱讀本安全指引。請妥善保管本安全指引，以便將來可以找到。

**如需常見問題 & 故障排除提示的相關資訊以及要下載軟體和使用說明書，請造訪 [support.brother.com](http://support.brother.com)。**

## 安全預防措施

- 如需進行保養、調整或維修，請聯絡 Brother 客戶服務中心或您當地的 Brother 授權維修中心。
- 如果產品操作異常或發生任何錯誤，或者如果任何纜線損壞，請關閉產品，拔下所有纜線，並聯絡 Brother 客戶服務中心或您當地的 Brother 授權維修中心。
- 對於諸如以下自然或人為災害造成的損害，我們不承擔任何責任：地震、起火、第三方的行動、使用者故意或疏忽的操作、使用不當或在其他特殊條件下操作造成的損害。
- 只要適用法律允許，對於使用或無法使用產品而造成的損害（例如業務利潤損失、業務中斷或通訊方式中斷），我們不承擔任何責任。
- 如果連接不相容的裝置或使用不相容的軟體導致產品操作不當，由此造成的損害，我們不承擔任何責任。
- 對於使用透過本產品建立之標籤而造成的任何損害或利潤損失，或者產品發生故障、進行維修，或更換耗材導致的資料消失或變更，我們不承擔任何責任，並且我們不接受協力廠商提出的任何索賠。
- Brother 保留變更本安全指引或本產品其他文件中的資訊的權利，恕不另行通知。另外，對於倚賴產品文件（包括但不限於排版及其他錯誤）而引致之任何損害（包括衍生性損害），Brother 不承擔任何責任。強烈建議您定期造訪 [support.brother.com](http://support.brother.com)，檢查並下載最新版本的產品文件、韌體、驅動程式和應用程式。產品文件的最新版本可從 Brother 支援網站取得，網址為 [support.brother.com](http://support.brother.com)。
- 如需軟體以及在網路上使用產品的更多資訊，請參閱 *使用說明書*，可在 Brother 支援網站上找到，網址為 [support.brother.com](http://support.brother.com)。
- 產品型號、配件與耗材可能因國家或地區而異。
- 本產品僅批准在購買地所在的國家或地區使用。


**▲ 危險**
不遵守說明和警告可能會導致人員死亡或受重傷。
**請依照這些指示以避免發熱、冒煙、爆炸或起火的風險。**

- 可充電鋰電池**
- 請勿將電池放在熱源和火中。
  - 請勿拆解或改裝電池。
  - 請勿以任何方式損壞電池。
  - 請勿用電線等金屬物件連接 + 和 - 端子。
  - 將電池儲放在嬰孩接觸不到的地方。
  - 請勿讓電池接觸液體。
  - 請勿在高溫（高於 60 °C）位置為電池充電、使用電池或儲存電池。
  - 請勿使用不受支援的方式來為電池充電。如需如何為電池充電的說明，請參閱 *使用說明書*。
  - 請勿將電池用於其特定目的以外的其他用途。
  - 請勿將電池與金屬物件一起攜帶或存放。
  - 請勿將任何接頭焊接至電池。
  - 請勿將電池與家庭垃圾一起丟棄。

**▲ 警告**
不遵守這些指示和警告可能導致人員死亡或受重傷。
**請依照這些指示以避免發熱、冒煙、爆炸、起火或人員受傷的風險。**

- 產品、USB 纜線、可充電鋰電池**
- 為避免損壞這些產品，請勿：
    - 將重物置於這些物品上。
    - 拆解或改裝這些物品。
    - 讓這些物品掉到地上或敲打它們。
    - 弄濕這些物品，例如用濕手拿起或將液體灑到上面。
  - 請勿在產生易爆炸或易導電粉塵的區域安裝或使用。
  - 請勿在以下位置為這些產品充電、操作或儲存產品，否則可能導致起火、觸電、冒煙或損壞：
    - 非常潮濕或寒冷的位置（請參閱您的型號的 *使用說明書*中的「技術規格」小節）。
    - 有水氣凝結或有液體的位置，例如浴室或熱水器附近。
    - 灰塵非常大的位置。
    - 溫度很高的位置，例如明火、暖氣附近或陽光直射到的位置。

- 陽光直射處的密閉汽車內。
- 高海拔位置。
- 在雷暴雨期間使用。
- 當標籤機中進水或有異物時，請勿使用。請拔下外部電源，取出電池（若已安裝），然後聯絡當地的 Brother 授權維修中心。
- 如果出現明顯異常，例如發出異味、發熱、發出噪音、變形或變色，請停止使用標籤機。
- 請勿讓嬰孩玩包裝標籤機的塑膠袋。請將塑膠袋丟掉，或者儲放在嬰孩無法觸及的地方，以避免窒息的风险。
- 若電池受損或漏液，請勿使用。
- 讓電池遠離嬰孩。如果意外食入，請立即就醫。
- 請勿使用鑷子或筆等尖銳物品取出或更換電池。
- 如果電池中的液體滲入眼睛，請立即用清水沖洗。請立即就醫。
- 讓您的手和頭髮遠離裁刀裝置。
- 請勿觸摸裁刀裝置的刀片，也不要將手指插入到標籤帶出口槽內。
- 請勿觸摸列印頭或列印頭附近的任何金屬零件，因為在使用期間和剛剛使用後，它們會變得非常燙手。

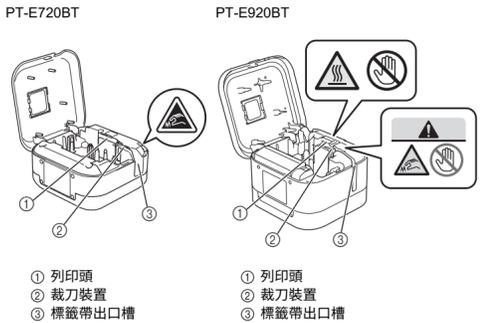

- 運輸標籤機時，請務必在包裝之前取出電池。如果在安裝了電池的情況下運輸標籤機，則存在起火、爆炸和損壞的風險。
- 如果您打算長時間不使用標籤機，請取出電池並拔下外部電源。

### ▲ 注意

**不遵守說明和警告可能造成人員輕微或中度受傷。**

- 產品、USB 纜線、可充電鋰電池**
- 如果電池漏液沾上皮膚或衣服，請立即用清水沖洗。
  - 僅可使用本產品隨附的電池。
  - 將標籤機從包裝盒中取出或搬動標籤機時，請勿讓它掉到地上，否則您可能會受傷。
  - 蓋回標籤帶匣放置槽護蓋時請小心。如果您的手指夾在護蓋上下方零件之間，則存在受傷的風險。
  - 當不使用標籤機或任何耗材時，請將它儲放在嬰孩無法觸及的地方。此外，請勿讓嬰孩將標籤機零件或標籤放入口中。如果不慎吞下任何物體，請立即就醫。
  - 將標籤機儲放在平坦、水平且穩定的表面上。

## 法規

<b>注意</b>
如果更換的電池類型不正確，可能會有爆炸的風險。請依照當地法規棄置使用過的電池。

## 聯絡資訊

請造訪 [global.brother/en/gateway](http://global.brother/en/gateway) 以取得當地 Brother 辦事處的聯絡資訊。

注意！（僅限台灣）
依據低功率射頻器材技術規範。

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前述合法通信，指依電信管理法規定作業之無線電通信。
低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

限用物質含有情況標示聲明書
我們兄弟工業株式會社
日本名古屋市 467-8561 瑞穗區苗代町 15-1 號
聲明此項產品符合台灣 RoHS 驗證規範。
您可以在我們的網站上下載 「限用物質含有情況標示聲明書」。
請瀏覽 [support.brother.com/g/d/d8m2](http://support.brother.com/g/d/d8m2)

> 選擇產品類別
> 選擇產品型號
「限用物質含有情況標示聲明書」將以 PDF 檔案格式下載至您電腦

	PT-E720BT	PT-E920BT
周圍溫度範圍		
充電	10-35 °C	0-35 °C
充電參數		
最大充電電壓	4.15 Vdc	8.2 Vdc
最大充電電流	1870 mA	1750 mA
功能規格		
標稱電壓	3.6 V	7.2 V
額定電池容量	1870 mAh	1750 mAh
重量	約 70 g	約 120 g
尺寸	74.4 × 24.9 × 22.2 mm	73.5 × 41.2 × 21.3 mm



©2025 Brother Industries, Ltd. 版權所有。