

brother



D03DH7001

Rugged Jet

RJ-3235B/RJ-3255WB/ RJ-4235B/RJ-4255WB

Product Safety Guide (English)

Make sure you read this guide and keep it in a safe place for future reference.

For product documentation, software, and support, visit your model's "Manuals", "Downloads", and "FAQs & Troubleshooting" pages at support.brother.com.

DANGER

Failure to observe instructions and warnings could result in death or serious injuries. Follow these guidelines to avoid the risk of heat generation, smoking, explosion, or fire.

Rechargeable Li-ion Battery

- DO NOT allow the battery to come into contact with liquids.
- DO NOT charge, use, or leave the battery in high-temperature (above 140°F/60°C) locations.
- DO NOT charge the battery using an unsupported method. For instructions on how to charge the battery, see the *User's Guide*.
- DO NOT use the battery other than for its intended purpose.
- DO NOT expose the battery to heat or fire.
- DO NOT connect the + and - terminals with metal objects such as wire.
- DO NOT carry or store the battery with metal objects.
- DO NOT throw, hit, or damage the battery in any way.
- DO NOT solder any connections to the battery.
- DO NOT disassemble or modify the battery.
- DO NOT dispose of the battery with household waste.

WARNING

Failure to observe these guidelines and warnings could result in death or serious injuries. Follow these guidelines to avoid the risk of heat or smoke generation, explosion, fire, or injury.

Product, AC Adapter (Optional), or Car Adapter (Optional)

- DO NOT use the product if water or foreign objects get inside it. Disconnect an external power source and remove the battery (if installed), and then contact your local Brother dealer.
 - DO NOT operate, charge, or store these products in the following locations, otherwise, a fire, electric shock, smoke, or damage may occur:
 - In an extremely humid or cold location (see the "Specifications" section in your model's *User's Guide*).
 - In a location where it is exposed to condensation or moisture, such as bathrooms or water heaters.
 - In an extremely dusty location.
 - In an extremely hot location, such as near open flames, heaters, or in direct sunlight.
 - In a closed car in direct sunlight.
 - At a high altitude.
 - During a thunderstorm.
 - DO NOT install or use in areas where explosive or electrically conductive dusts are generated.
- To avoid damaging these products, DO NOT place heavy objects on them. DO NOT drop or hit them. DO NOT allow them to get wet, for example, by handling them with wet hands or spilling liquids on them. DO NOT disassemble or modify the cable and the AC adapter. DO NOT modify the product. Disassembling could damage the product. If an individual with the knowledge, experience, and tools required to repair a product is self-servicing this product, please take precautionary measures to minimize the risks of these hazards.

Guía de seguridad del producto (español)

Sírvase leer esta guía y guárdela en un lugar seguro para futuras consultas.

Para conocer la documentación del producto, el software y soporte técnico, visite las páginas "Manuales", "Descargas" y "Preguntas frecuentes y Solución de problemas" en el sitio support.brother.com.

PELIGRO

El incumplimiento de las instrucciones y advertencias, podría resultar en la muerte o lesiones graves. Siga estas directrices para evitar situaciones de riesgo como la generación de calor, humo, una explosión o un incendio.

Batería recargable de iones de litio

- NO permita que la batería entre en contacto con líquidos.
- NO cargue ni utilice ni deje la batería en lugares con una temperatura elevada (por encima de 60 °C/140 °F).
- NO cargue la batería con un método no compatible. Para obtener instrucciones para cargar la batería, consulte la *Guía del usuario*.
- NO utilice la batería para fines distintos a los previstos.
- NO exponga la batería al calor o al fuego.
- NO conecte los terminales + y - con objetos metálicos como alambre.
- NO transporte ni almacene la batería junto con objetos metálicos.
- NO tire, golpee ni dañe la batería de forma alguna.
- NO suelde ninguna conexión a la batería.
- NO desmonte ni modifique la batería.
- NO deseche la batería junto con residuos domésticos.

ADVERTENCIA

Si no se siguen estas normas y advertencias, las consecuencias podrían ser la muerte o lesiones graves. Siga estas directrices para evitar situaciones de riesgo como la generación de calor o humo, una explosión, un incendio o una lesión.

Producto, adaptador de CA (opcional) o adaptador para vehículo (opcional)

- NO utilice el producto si el agua u objetos extraños ingresaron a él. Desconecte la fuente de alimentación externa y quite la batería (si está instalada). Contacte al distribuidor local de Brother.
 - NO utilice ni cargue ni almacene estos productos en los lugares indicados a continuación, ya que pueden producirse incendios, descargas eléctricas, humo o daños:
 - En lugares con frío o humedad extremos (para obtener más información, consulte la sección "Especificaciones" de la *Guía del usuario* de su modelo).
 - Expuestos a ambientes con condensación o humedad, como baños o calentadores de agua.
 - En lugares con mucho polvo.
 - En lugares con altas temperaturas cercanos a llamas directas o estufas, o que reciban directamente la luz del sol.
 - En un automóvil cerrado con luz directa del sol.
 - A gran altitud.
 - Durante una tormenta.
 - NO instalar ni utilizar en áreas donde se generen polvos explosivos o conductores eléctricos.
- Para evitar dañar los productos, NO coloque objetos pesados encima de estos. NO deje caer los productos ni los golpee. NO permita que se mojen, por ejemplo, si los manipula con las manos mojadas o vierte líquidos sobre ellos. NO desarme ni modifique el cable y el adaptador de CA. NO modifique este producto. Si lo desarma, puede dañar el producto. Si un técnico con el conocimiento, la experiencia y las herramientas requeridas va a reparar el producto, tome las medidas de precaución necesarias para minimizar los riesgos.
 - NO toque los puertos de conexión con las manos húmedas.
 - NO utilice aerosoles químicos o inflamables cerca de la impresora o para limpiarla. Puede provocar un incendio o una descarga eléctrica.
 - NO permita que el producto entre en contacto con disolventes orgánicos, como benceno, disolvente, quitaesmalte o desodorantes. Podrían hacer que el producto se deforme o se disuelva, lo que ocasionaría una descarga eléctrica o un incendio.
 - NO use el producto en entornos especiales, como cerca de equipos médicos. Las ondas electromagnéticas pueden causar desperfectos en los equipos médicos.
 - Use y almacene el producto, otros componentes y las bolsas de empaquetado fuera del alcance de los niños.

- DO NOT touch the connection ports with wet hands.
- DO NOT use chemical or combustible sprays near the printer or when cleaning the printer. There is a risk of fire and electric shock.
- DO NOT allow organic solvents, such as benzene, thinner, polish remover, or deodorizers, to come into contact with the product. These may cause the product to warp or dissolve, resulting in electric shock or fire.
- DO NOT use the product in special environments, such as near medical equipment. Electromagnetic waves may cause medical equipment to malfunction.
- Use and store the product, other components, and packing bags out of the reach of children.
- Remove the battery or disconnect the cord when shipping.
- Remove the batteries and disconnect an external power source if you do not intend to use the product for an extended period of time.
- If you connect the product to a computer using a USB cable when both are powered by a vehicle, make sure both the product and the computer are safely grounded. Otherwise, the current flow in the USB cable may cause it to overheat and catch fire.

Rechargeable Li-ion Battery

- Keep the battery away from infants and small children. If ingested, contact emergency services immediately.
- Stop using the battery if there are noticeable abnormalities such as smell, heat, deformities, or discoloration.
- If liquid from the battery gets into your eyes, wash them immediately with clean water. Seek medical attention immediately.

AC Adapter, Car Adapter

- Use only the AC Adapter, Power Cord, Car Adapter and USB Cable designed exclusively for your product. Failure to do so may result in an injury to yourself or others, or damage to the product or other property.
- Insert the plug firmly into the AC power outlet.
- Connect the AC Adapter to a standard AC power outlet (AC 100-240 V 50/60Hz) (and Car Adapter with DC 12 V).
- DO NOT allow metal objects to come into contact with any connectors or ports.
- DO NOT use a damaged AC Adapter or power cord set. When disconnecting the AC Adapter from the outlet or the printer itself, hold the plug or the jack and pull it out.
- DO NOT pull on the cord when disconnecting the AC Adapter cord or Car Adapter from an AC power outlet. Hold the plug to disconnect an Adapter from an AC power outlet.
- DO NOT forcibly bend or pull the AC Adapter, any cords or cables.
- DO NOT overload the AC power outlet.


CAUTION

Failure to observe instructions and warnings could result in minor or moderate injuries. Follow these guidelines to avoid injury.


Product

- DO NOT hold the product by the Media Compartment Cover or the Roll Guide. There is a risk that the cover or guide could detach or the product could fall.
- Be careful when opening or closing the Media Compartment Cover. There is a risk of injury if your fingers get caught between the top and bottom parts of the cover.
- When connecting cables and accessories, follow the applicable instructions.
- If the product is used for a long period of time, the highlighted product parts may get hot enough to cause a low-temperature burn.

RJ-3235B/RJ-3255WB

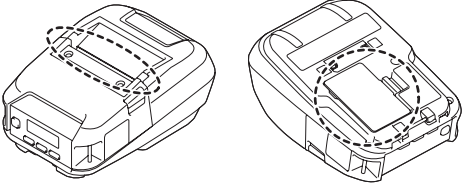

RJ-4235B/RJ-4255WB

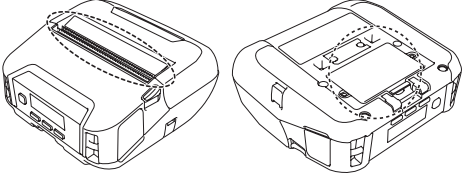

- Retire la batería o desconecte el cable durante un envío.
- Quite las baterías y desconecte la fuente de alimentación externa si no va a utilizar el producto por un periodo prolongado.
- Si conecta el producto a una computadora mediante un cable USB cuando ambos dispositivos se alimenta desde un vehículo, asegúrese de que tanto el producto como la computadora estén conectados a tierra. De lo contrario, el flujo de la corriente en el cable USB puede provocar que este se sobrecaliente e incendie.

Batería recargable de iones de litio

- Mantenga la batería alejada de bebés y niños pequeños. Si se ingiere, póngase en contacto con los servicios de emergencia de forma inmediata.
- Deje de utilizar la batería si detecta alguna anomalía como un olor, calor, deformidades o decoloración.
- Si el líquido de la batería entra en contacto con los ojos, enjuáguelos de inmediato con agua limpia. Pida atención médica de inmediato.

Adaptador de CA, adaptador para vehículo

- Use únicamente el adaptador de CA, el cable de alimentación, el adaptador para vehículo y el cable USB que se proporcionan exclusivamente con este producto. De lo contrario, puede sufrir lesiones personales o bien provocar lesiones a otros, daños en el producto o daños en otros objetos.
- Introduzca el enchufe con firmeza en el tomacorriente de CA.
- Conecte el adaptador de CA con un tomacorriente de CA estándar (de 100 a 240 V CA, 50/60 Hz) (y un adaptador para vehículo con 12 V CC).
- NO permita que objetos metálicos entren en contacto con los conectores o puertos.
- NO use un adaptador de CA o un cable de alimentación dañados. Al desconectar el adaptador de CA del tomacorriente o de la impresora sujete el enchufe o el conector y tire de él para extraerlo.
- NO tire del cable al desconectar el cable del adaptador de CA o el adaptador para vehículo de un tomacorriente de CA. Sostenga el enchufe al desconectar un adaptador de un tomacorriente de CA.
- NO doble ni tire por la fuerza del adaptador de CA ni de los cables.
- NO sobrecargue el tomacorriente de CA.


AVISO

Si no se siguen las instrucciones y advertencias, las consecuencias podrían ser lesiones leves o moderadas. Siga estas normas a fin de evitar lesiones.


Producto

- NO sostenga el producto por la cubierta del compartimento de medios ni por la guía del rollo. Existe el riesgo de que la cubierta o la guía se salgan o que el producto se caiga.
- Tenga cuidado al abrir o cerrar la cubierta del compartimento de medios. Existe el riesgo de lastimarse los dedos con las partes superior e inferior de la cubierta.
- Al conectar cables y accesorios, siga las instrucciones correspondientes.
- Si el producto se usa durante un largo período, las piezas del producto indicadas en la ilustración pueden calentarse lo suficiente como para causar quemaduras de bajo grado.

RJ-3235B/RJ-3255WB

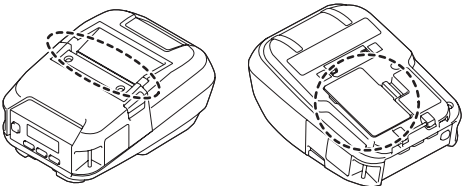


RJ-4235B/RJ-4255WB

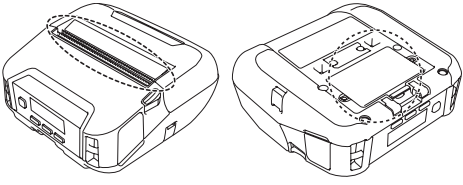


- Cuando no use el producto o cualquiera de sus piezas, guárdelos fuera del alcance de los niños. Tampoco permita que los niños se lleven a la boca las piezas o etiquetas del producto. En caso de ingestión de algún objeto, busque atención médica inmediatamente.
- NO toque la cuchilla ni el cabezal de impresión.

- When you are not using the product or any supplies, store it out of the reach of children. In addition, do not allow children to put the product parts or labels in their mouths. If any object has been swallowed, seek medical attention immediately.
- DO NOT touch the blade or the Print Head.
- DO NOT touch the Print Head or any metal parts near the Print Head as they become very hot during, and immediately after, use.

RJ-3235B/RJ-3255WB

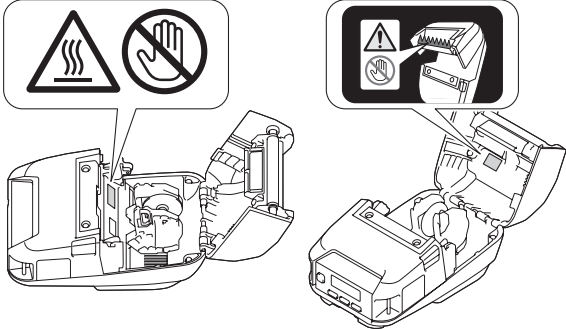

RJ-4235B/RJ-4255WB

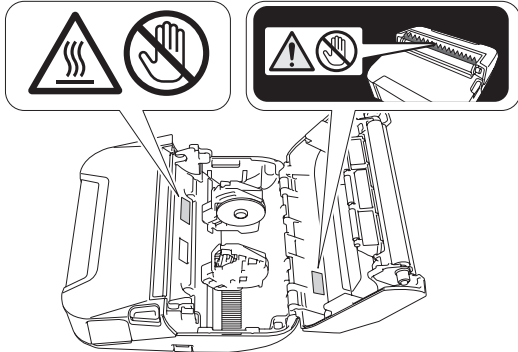

Rechargeable Li-ion Battery

If liquid from the battery gets onto skin or clothes, immediately rinse them with water.

AC Adapter, Car Adapter

Make sure you can always access the AC Adapter cord so that you can disconnect it immediately in an emergency.

Belt Clip

Make sure that the belt clip is attached securely to the product and the wearer's belt.

Safety Precautions

- For servicing, adjustments, or repairs, contact Brother Customer Service or your local Brother dealer.
- If the product operates abnormally or any error occurs, or if any cable is damaged, turn off the product, disconnect all cables, and contact Brother Customer Service or your local Brother dealer.
- We assume no responsibility for damages arising from natural or manmade disasters, such as earthquakes or fires, or actions of third parties, the user's intentional or negligent operation, misuse, or operation under other special conditions.
- As long as permitted by applicable laws, we assume no responsibility for damage (such as loss of business profits, business disruptions or a lost means of communication) that may result from the use of, or inability to use, the product.
- We assume no responsibility for damages that may result from incorrect operation of the product by connecting incompatible equipment or using incompatible software.
- We assume no responsibility for any damage or lost profits arising from the use of labels created with this product, the disappearance or change of data due to failure, repair, or supplies, and we do not accept any claim from a third party.
- Brother reserves the right to make changes without notice to the information in this guide or other documentation for this product. Furthermore, Brother shall not be responsible for any damages (including consequential) caused by reliance on the product documentation, including, but not limited to, typographical and other errors. We recommend you download the latest versions of your product documentation and to regularly check for updated versions of firmware, drivers, and software, at support.brother.com.

- For more information about software and using the product on a network, see the *User's Guide*, which can be found on the Brother support website at support.brother.com.
- Product models, accessories, and supplies may vary depending on the country or region.
- This product is approved for use in the country or region of purchase only.

Disclaimer

Brother disclaims any warranties with respect to avoidance, mitigation or non-occurrence of any breakdowns, malfunctions, system crashes, hang-ups, virus infections, damage and disappearances of data, and any other kind of errors by using this product. AS LONG AS PERMITTED BY APPLICABLE LAWS, BROTHER WILL NOT BE LIABLE FOR ANY LOST REVENUES OR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY, OR PUNITIVE DAMAGES OF THE CUSTOMERS OR ANY OTHER THIRD PARTY.

DON'T FORGET TO REGISTER!

Registering your product will provide purchase confirmation, proof of ownership and, if you choose, allow us to notify you of product enhancements and special offers! You can register online at: www.registermybrother.com.

LIMITED WARRANTY

Product warranty information can be found online at: brothermobilesolutions.com/warranty.

©2025 Brother Industries, Ltd. All rights reserved.

- Para obtener más información sobre el software y cómo utilizar el producto en una red, consulte la *Guía del usuario*, que está disponible en la Página web de soporte de Brother, en support.brother.com.
- Los modelos, las opciones y los suministros disponibles del producto pueden variar según el país o la región.
- El uso de este producto está aprobado únicamente en el país o la región de compra.

Exención de responsabilidad

Brother se exime de cualquier garantía en relación con la elusión, mitigación o no ocurrencia de cualquier avería, falla, caída del sistema, bloqueo, infección por virus, daño en los datos o desaparición de estos, así como cualquier otro tipo de error, por el uso de este producto. HASTA EL PUNTO PERMITIDO POR LA LEGISLACIÓN APLICABLE, BROTHER NO SERÁ RESPONSABLE DE NINGÚN LUCRO CESANTE NI DE NINGÚN DAÑO INDIRECTO, ESPECIAL, INCIDENTAL, CONSECUENTE, EJEMPLAR O PUNITIVO SUFRIDO POR EL CLIENTE O CUALQUIER OTRO TERCERO.

¡NO OLVIDE REGISTRARSE!

Registrar el producto le proporcionará confirmación de compra, comprobante de propiedad y, si lo desea, nos permitirá notificarle acerca de mejoras en los productos y ofertas especiales. Regístrese en línea en: www.registermybrother.com.

GARANTÍA LIMITADA

Puede encontrar la información sobre la garantía del producto en línea en: brothermobilesolutions.com/warranty.

©2025 Brother Industries, Ltd. Reservados todos los derechos.

