


MFC-215C  
MFC-425CN

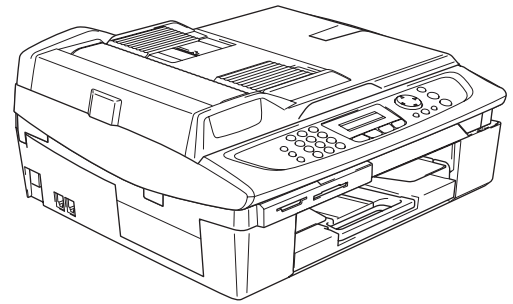

Before you can use the machine, you must set up the hardware and install the software.  
Please read this 'Quick Setup Guide' for the correct setup procedure and installation instructions.

## STEP 1

Setting Up the Machine








## STEP 2

Installing the Driver & Software

**Setup is Complete!**

Keep this 'Quick Setup Guide', the User's Guide and the supplied CD-ROM in a convenient place for quick and easy reference at all times.

## To use the machine safely

 Warning	 Caution	 User's Guide, Software User's Guide or Network User's Guide
Warnings tell you what to do to prevent possible personal injury.	Cautions specify procedures you must follow or avoid to prevent possible damage to the machine or other objects.	Indicates reference to the User's Guide, Software User's Guide or Network User's Guide which is on the CD-ROM we have supplied.
 Improper Setup	 Note	
Improper Setup icons alert you to devices and operations that are not compatible with the machine.	Notes tell you how you should respond to a situation that may arise or give tips about how the current operation works with other features.	

## Getting Started

---

Carton components .....	2
Control panel .....	3

## Setting Up the Machine

---

Removing the protective parts .....	4
Loading paper .....	4
Installing the phone line and power cord .....	5
Set Your Country (For Australia / New Zealand Customer Only) .....	6
Installing the ink cartridges .....	7
Print quality check .....	9
Setting the date and time .....	10
Setting your station ID .....	10
Choosing a Receive Mode .....	11

## Supplied CD-ROM 'MFL-Pro Suite'

---

Supplied CD-ROM 'MFL-Pro Suite' .....	12
---------------------------------------	----

## Installing the Driver & Software

---

### Windows®

For USB Interface Users (For Windows® 98/98SE/Me/2000 Professional/XP) .....	14
For Network Interface Users (MFC-425CN only) (Windows® 98/98SE/Me/2000 Professional/XP) .....	17

### Macintosh®

For USB Interface Users .....	20
For Mac OS® X 10.2.4 or greater .....	20
For Mac OS® 9.1 to 9.2 .....	23
For Network Interface Users (MFC-425CN only) .....	25
For Mac OS® X 10.2.4 or greater .....	25
For Mac OS® 9.1 to 9.2 .....	28

## For Network Users

---

Installing the BRAdmin Professional configuration utility (Windows® only) .....	30
Setting your IP address, Subnet Mask and Gateway using BRAdmin Professional (Windows® only) .....	30

## Consumables


---











Replacement consumables .....	31
Ink cartridge .....	31

## Carton components

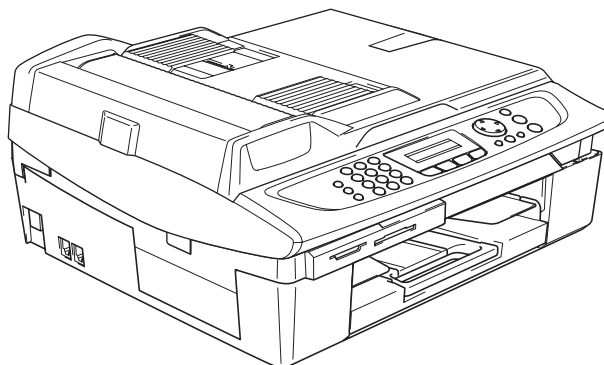Carton components may vary from one country to another.

Save all packing materials and the carton in case for any reason you must ship your machine.




 <b>Quick Setup Guide</b>	 <b>CD-ROMs For Windows® For Macintosh®</b>	 <b>User's Guide</b>	 <b>Power Cord</b>
 <b>Telephone Line Cord</b>	 <b>Telephone Line Cord Adapter (For Australia only)</b>		
 <b>Black (LC47BK)</b>	 <b>Magenta (LC47M)</b>	 <b>Yellow (LC47Y)</b>	 <b>Cyan (LC47C)</b>
<b>Ink Cartridges</b>			

If you are connecting the machine via USB:

- The interface cable is not a standard accessory. Please purchase an appropriate USB 2.0 interface cable.
- Please make sure you use a USB 2.0 cable that is no longer than 6 feet long (2 meters).
- Your MFC has a USB interface. This interface is compatible with Hi-Speed USB 2.0; however, the maximum data transfer rate will be 12 Mbits/s. The MFC can also be connected to a computer that has a USB 1.1 interface.
- DO NOT connect the interface cable at this time.  
Connecting the interface cable is done during the software installation process.

## Control panel

(For MFC-215C and MFC-425CN)

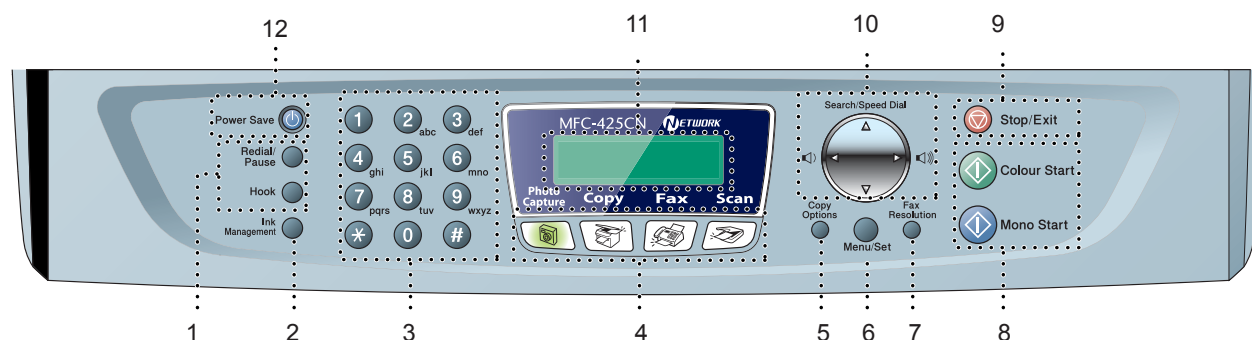

- |                          |                                 |
|--------------------------|---------------------------------|
| 1 Fax and telephone keys | 7 Fax Resolution key            |
| 2 Ink Management key     | 8 Start keys                    |
| 3 Dial Pad               | 9 Stop/Exit key                 |
| 4 Mode keys              | 10 Navigation keys              |
| 5 Copy Options key       | 11 LCD (Liquid Crystal Display) |
| 6 Menu/Set key           | 12 Power Save key               |

 For the details of the control panel, see *Control panel overview* in Chapter 1 of the User's Guide.


- Illustrations in this Quick Setup Guide are based on MFC-425CN.
- The screens for Windows® in this Quick Setup Guide are based on Windows® XP.
- The screens for Mac OS® in this Quick Setup Guide are based on Mac OS® X 10.3.

## 1 Removing the protective parts


- 1 Remove the protective tape and scanner glass protection sheet.

### ⊘ Improper Setup


**DO NOT** connect the USB cable. Connecting the USB cable is done during the software installation process.

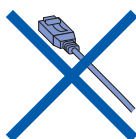


## 2 Loading paper

-  You can load up to 100 sheets of 80 g/m<sup>2</sup> (20 lb) paper.  
For details, see About paper in Chapter 1 of the User's Guide.


- 1 Pull the paper tray completely out of the machine and remove the output paper tray.

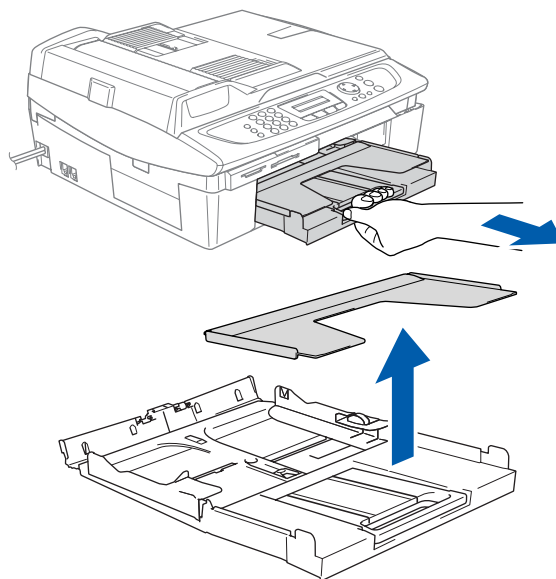

- 2 Press and slide the paper guide (1) to fit the paper width.

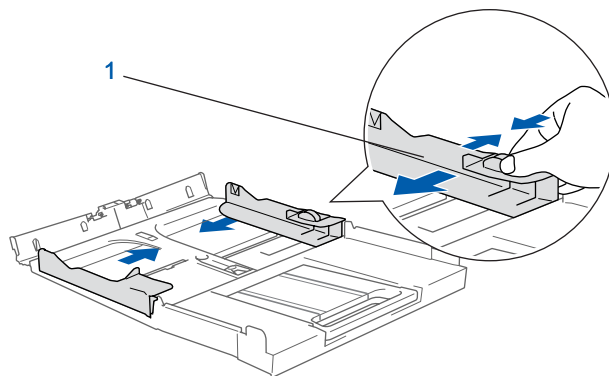


- 3 Pull out the paper support (1) and unfold the paper support flap (2).

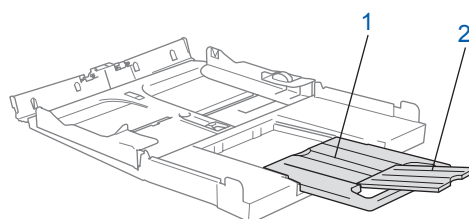



### Note

Use the paper support flap for Letter, Legal and A4 paper.

- 4** Fan the stack of paper well to avoid paper jams and misfeeds.

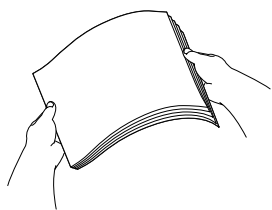


- 5** Gently put the paper into the paper tray print side down and top edge first. Check that the paper is flat in the tray and below the maximum paper mark (1).

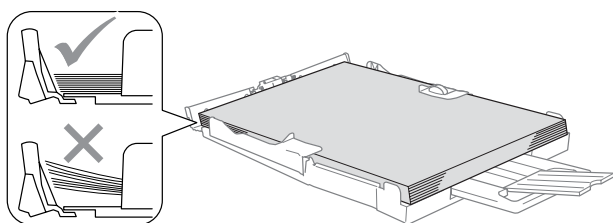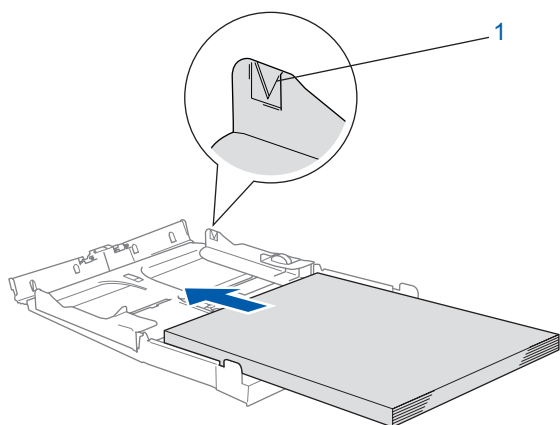

## Note


- Make sure the paper side guides touch the sides of the paper.
- Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause paper feed problems.

- 6** Put the output paper tray back on and push the paper tray firmly back into the machine.

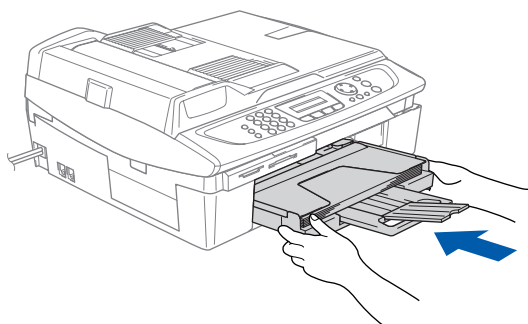


## 3 Installing the phone line and power cord

- 1** Connect the power cord.

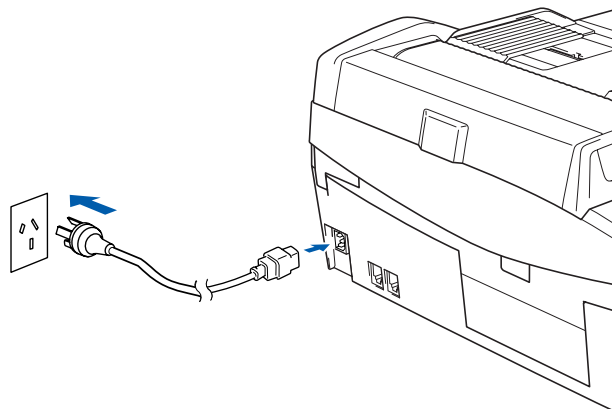

- 2** Connect the telephone line cord. Connect one end of the telephone line cord to the socket on the machine marked **LINE** and the other end to a modular wall socket.

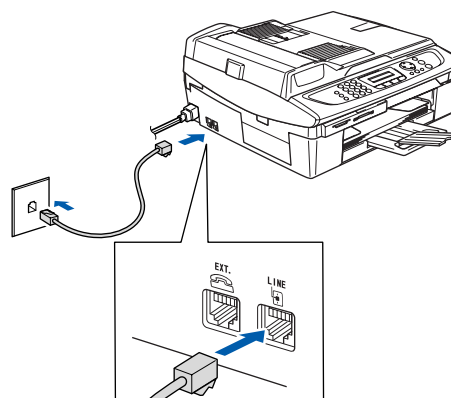

## Improper Setup


**DO NOT** connect the USB cable yet.

## Warning

- The machine must be fitted with an earthed plug.
- Since the machine is grounded through the power outlet, you can protect yourself from potentially hazardous electrical conditions on the telephone network by keeping the power cord connected to your machine when you connect it to a telephone line. Similarly, you can protect yourself when you want to move your machine by disconnecting the telephone line first and then the power cord.


## Note

If you are sharing one phone line with an external telephone, connect it as shown below.

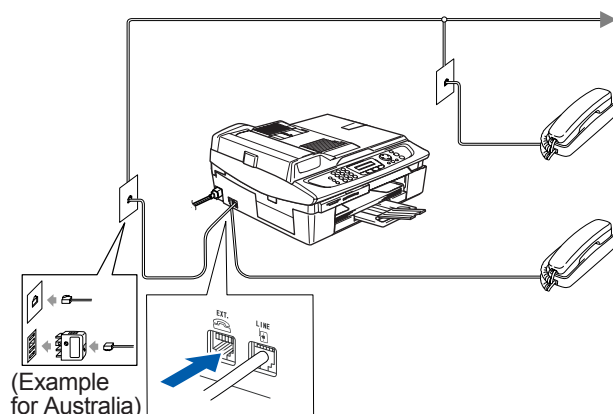

## Note

If you are sharing one phone line with an external telephone answering machine, connect it as shown below.

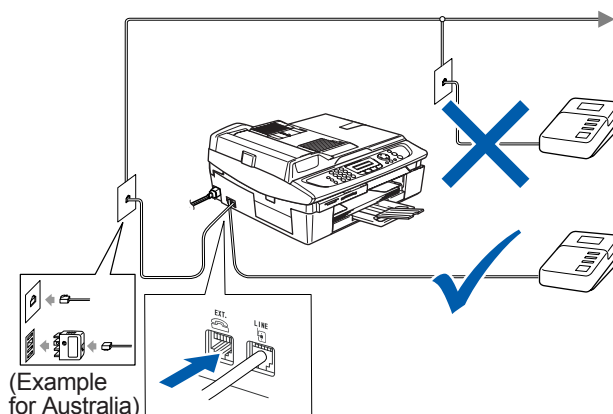

Set the receive mode to 'External TAD' if you have an external answering machine. For details, see Connecting an external device to your machine in the Appendix of the User's Guide.

## 4 Set Your Country (For Australia / New Zealand Customer Only)

## Warning

You must set your country so that the machine works correctly.

- 1 Check that the power is turned on (by plugging in the power cord)  
The LCD shows:  

Set Country

↑

Press Set Key
- 2 Press **Menu/Set**.  
The LCD shows:  

Australia

↑

Select ▲ ▼ & Set
- 3 Press ▲ or ▼ to choose the country (AUSTRALIA or NEWZEALAND).
- 4 Press **Menu/Set** when the LCD shows your country.
- 5 The LCD prompts you to make sure of the country again.  

Australia?

↑

1.Yes 2.No
- 6 Press **1** to go to step 7 or press **2** to go back to step 1 to choose the country again.
- 7 After the LCD shows Accepted for two seconds, it shows; Please Wait After about 30 seconds, the LCD shows:  

Check Cartridge
- 8 Go to step 5 "Installing the ink cartridges".

## 5 Installing the ink cartridges


### Warning

If ink gets in your eyes, wash them out with water at once, and if irritation occurs consult a doctor.


- 1 Make sure that the power is turned on.  
The LCD shows:

No Cartridge

- 2 Lift the scanner cover (1) from the right-hand side of the machine until it locks securely into the open position.

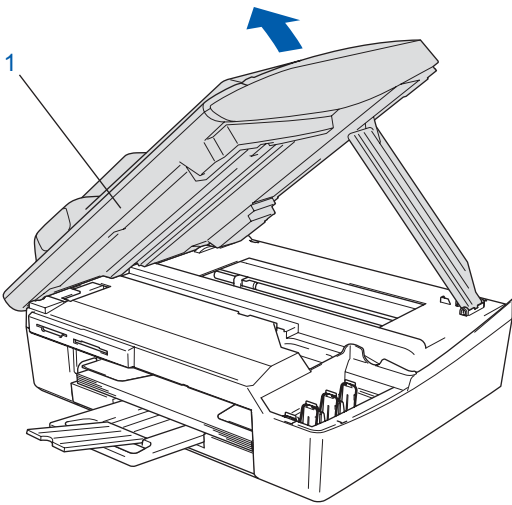


- 3 Remove the protective parts (1).

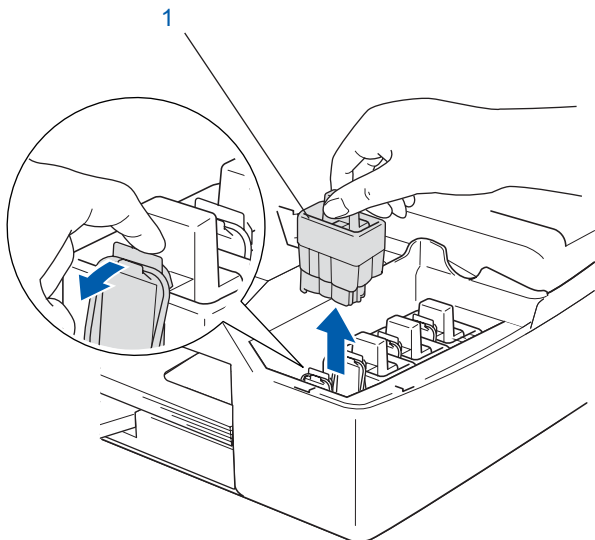


### Note

Do not throw away the protective parts. You will need them if you transport the machine.

- 4 Take out the ink cartridge.

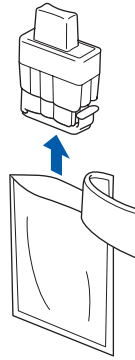


- 5 Carefully remove the protective yellow cap (1).

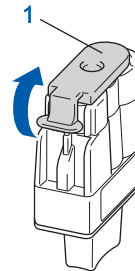

### Improper Setup


DO NOT touch the area shown in the illustration below.

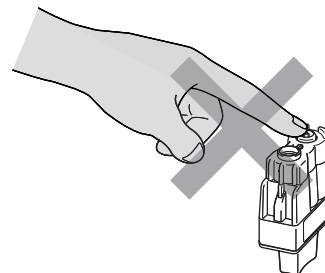



### Note

If the protective yellow cap comes off when you open the bag, the cartridge will not be damaged.

Keep the ink cartridge in an upright position when you put it into the slot.

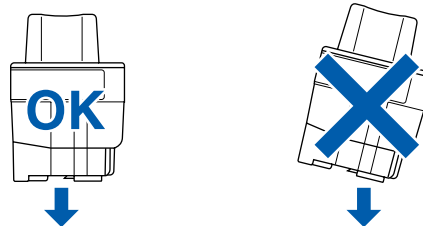

- 6** Press firmly down on the ink cartridge until the hook snaps over it, taking care to match the slot colour (1) with the cartridge colour (2), as shown in the diagram below.

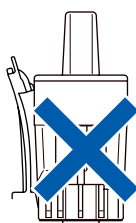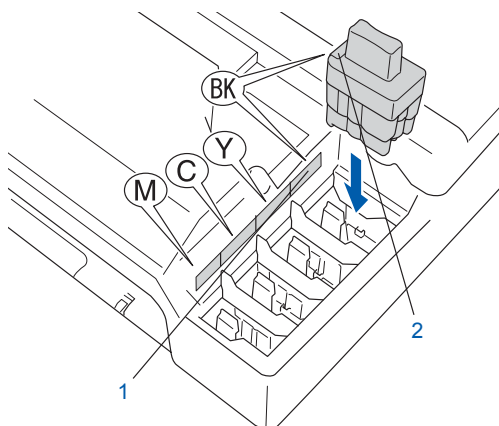


- 7** Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.




## Note

If the LCD shows *Install XXXX* after you install the ink cartridges, check that the ink cartridges are installed properly.

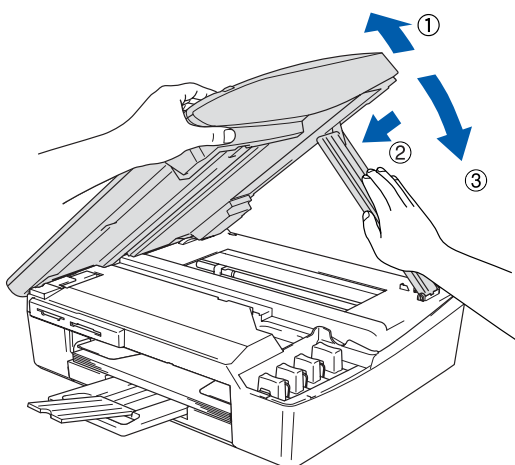

The machine will clean the ink tube system for use for the first time. This process will occur only once, the first time ink cartridges are installed. The cleaning process will last approximately four minutes. The LCD shows:

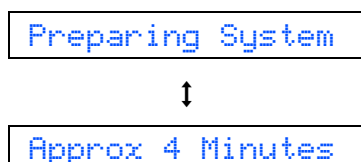

## ! Caution

- **DO NOT** take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.
- **DO NOT** shake the ink cartridges. If ink stains your skin or clothing, wash with soap or detergent at once.
- **DO NOT** repeatedly insert and remove the cartridges. If you do so, ink may seep out of the cartridge.
- If you mix the colours by installing an ink cartridge in the wrong position, clean the print head several times after correcting the cartridge installation. (See *Cleaning the print head* in chapter 11 of the *User's Guide*.)
- Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- **DO NOT** dismantle or tamper with the ink cartridge, this can cause the ink to leak out of the cartridge.
- Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance when used with genuine Brother branded ink cartridges. Brother cannot guarantee this optimum performance if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than genuine Brother branded cartridges with this machine or the refilling of empty cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using incompatible products with this machine, any repairs required as a result may not be covered by the warranty.

## 6 Print quality check

- 1 After the cleaning cycle is finished, the LCD shows:


Set Paper and



Press Start

- 2 Make sure the paper is loaded in the paper tray.  
Press **Colour Start**.  
The machine starts printing the Print Quality Check Sheet (only during initial ink cartridge installation).

- 3 Check the quality of the four colour blocks on the sheet.  
(black/ cyan/ yellow/ magenta)

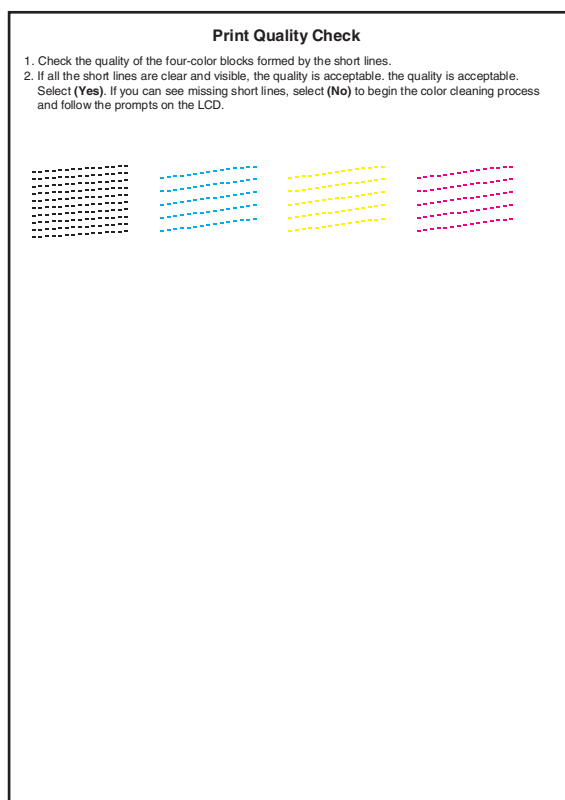

- 4 The LCD shows:

Is Quality OK?



1.Yes 2.No

- 5 Do one of the following:
  - If all lines are clear and visible, press 1 (Yes) on the dial pad to finish the quality check.
  - If you can see missing short lines, press 2 (No) on the dial pad and go to step 6.

OK

Poor



- 6 The LCD asks you if the print quality is OK for black and colour. Press 1 (Yes) or 2 (No) on the dial pad.

Black OK?



1.Yes 2.No

After pressing 1 (Yes) or 2 (No) for both black and colour, the LCD shows:

Start Cleaning?



1.Yes 2.No

- 7 Press 1 (Yes), the machine will then start cleaning the colours.

- 8 After cleaning is finished, press **Colour Start**. The machine starts printing the Print Quality Check Sheet again and goes back to step 3.

## Improper Setup

Avoid touching the printed surface of the paper immediately after printing, the surface may not be completely dry and may stain your fingers.

## 7 Setting the date and time

The machine displays the date and time, and prints it on the fax you send.

- 1 Press **Menu/Set**.
- 2 Press **0**.
- 3 Press **2**.
- 4 Enter the last two digits of the year on the dial pad, and then press **Menu/Set**.

Year: 2005

(e.g. Enter **0 5** for 2005.)

- 5 Enter the two digits for the month on the dial pad, and then press **Menu/Set**.

Month: 03

(e.g. Enter **0 3** for March.)

- 6 Enter the two digits for the day on the dial pad, and then press **Menu/Set**.

Day: 01

(e.g. Enter **0 1** for the first of the month.)

- 7 Enter the time in 24-hour format on the dial pad, and then press **Menu/Set**.

Time: 15:25

(e.g. Enter **1 5, 2 5** for 3:25 P.M.)

- 8 Press **Stop/Exit**.



To confirm the current date and time, print out the Users Settings Report. (See "Printing reports" in Chapter 7 of the User's Guide.)

## 8 Setting your station ID

You should store your name and fax number to be printed on all fax pages that you send.

- 1 Press **Menu/Set**.
- 2 Press **0**.
- 3 Press **3**.
- 4 Enter your fax number (up to 20 digits) on the dial pad, and then press **Menu/Set**.


Fax: \_

- 5 Enter your name (up to 20 characters) using the dial pad, and then press **Menu/Set**.

Name: \_



### Note

See the following chart for entering your name. If you need to enter a character that is on the same key as the last character, press  to move the cursor to the right.

Press key	One time	Two times	Three times	Four times
2	A	B	C	2
3	D	E	F	3
4	G	H	I	4
5	J	K	L	5
6	M	N	O	6
7	P	Q	R	S
8	T	U	V	8
9	W	X	Y	Z

- 6 Press **Stop/Exit**.



### Note

If you want to repeat input, press **Stop/Exit** to start from step 1.




For details, see Setting the Station ID in Chapter 2 or Entering Text in Appendix B of the User's Guide.

## 9 Choosing a Receive Mode

There are four possible receive modes: Fax Only, Fax/Tel, Manual and External TAD.

### Now go to

Go to *Supplied CD-ROM 'MFL-Pro Suite'* on the next page to install the drivers.

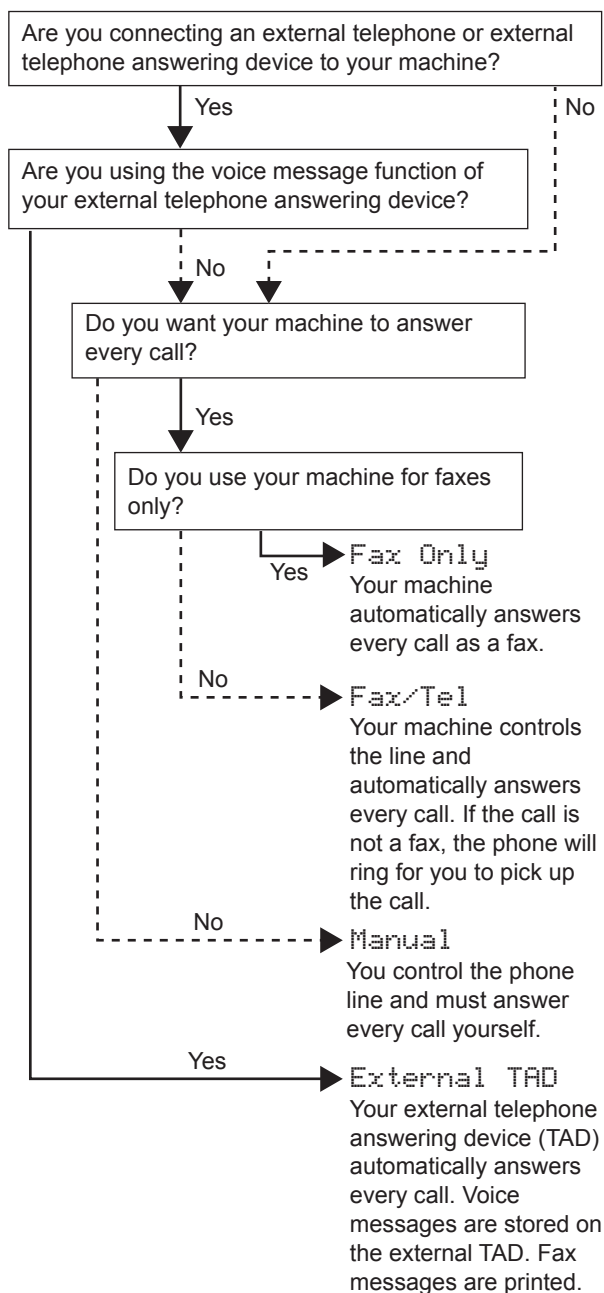


- 1** Press **Menu/Set**.
- 2** Press **0**.
- 3** Press **1**.
- 4** Press **▲** or **▼** to choose the mode.
- 5** Press **Menu/Set**.
- 6** Press **Stop/Exit**.



For details, see *Setup Receive* in Chapter 4 of the User's Guide.

## Supplied CD-ROM 'MFL-Pro Suite'

### Windows®

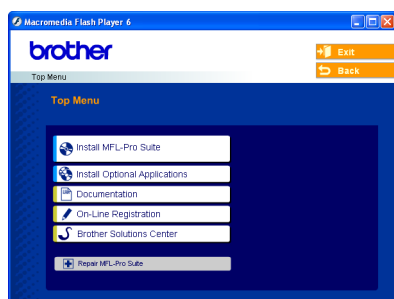

#### Install MFL-Pro Suite

You can install the MFL-Pro Suite software and multifunction drivers.



#### Install Optional Applications

You can install additional MFL-Pro Suite software utilities.



#### Documentation

View the User's Guide and other documents in PDF format (Viewer included). The User's Guide on the CD-ROM includes the Software and Network User's Guides for features available when connected to a computer (e.g. Printing and Scanning).



#### On-Line Registration

You will be pointed to the Brother Product Registration Web page for quick registration of your machine.



#### Brother Solutions Center

You can access the Brother Solutions Center which is a Web site offering information about your Brother product including FAQs, User's Guides, driver updates and tips for using your machine.



#### Repair MFL-Pro Suite (USB only)

If an error occurred during the installation of the MFL-Pro Suite, use this selection to automatically repair and re-install the MFL-Pro Suite.



#### Note

*MFL-Pro Suite includes Printer Driver, Scanner Driver, ScanSoft® PaperPort® 9.0SE, ScanSoft® OmniPage® and True Type® fonts.*

*PaperPort® 9.0SE is a document management application for viewing scanned documents.*

*ScanSoft® OmniPage®, which is integrated into PaperPort® 9.0SE, is an OCR application that converts an image into text and puts it into your default word processor.*

### Macintosh®



#### Start Here OS 9.1-9.2

You can install the printer driver, scanner driver and Presto!® PageManager® for Mac OS® 9.1-9.2.



#### Start Here OSX

You can install the MFL-Pro Suite that includes the printer driver, scanner driver and the Brother ControlCenter 2 for Mac OS® 10.2.4 or greater. You can also install Presto!® PageManager® to add OCR capability to the Brother ControlCenter2 and easily scan, share and organize photos and documents.



#### Readme.html

You can get important information and troubleshooting tips.



#### Documentation

View the User's Guide and other documents in PDF format. The User's Guide on the CD-ROM includes the Software and Network User's Guides for features available when connected to a computer (e.g. Printing and Scanning).



#### Brother Solutions Center

You can access the Brother Solutions Center which is a Web site offering information about your Brother product including FAQs, User's Guides, driver updates and tips for using your machine.



#### On-Line Registration

You will be pointed to the Brother Product Registration Web Page for quick registration of your machine.

Follow the instructions on this page for your operating system and interface cable.

For the latest drivers and documentations and to find the best solution for your problem or question, access the Brother Solutions Center directly from the driver or visit <http://solutions.brother.com>

## Windows®

<b>For USB Interface Users</b> (For Windows® 98/98SE/Me/2000 Professional/XP).....	14
---	----



<b>For Network Interface Users (MFC-425CN only)</b> (Windows® 98/98SE/Me/2000 Professional/XP) .....	17
---	----



## Macintosh®

<b>For USB Interface Users</b> .....	20
■ For Mac OS® X 10.2.4 or greater.....	20
■ For Mac OS® 9.1 to 9.2 .....	23



<b>For Network Interface Users (MFC-425CN only)</b> .....	25
■ For Mac OS® X 10.2.4 or greater.....	25
■ For Mac OS® 9.1 to 9.2 .....	28



## Windows® XP Professional x64 Edition:



Visit the Brother Solution Center (<http://solutions.brother.com>)  
for driver downloads and installation steps.

## For USB Interface Users (For Windows® 98/98SE/Me/2000 Professional/XP)


### Important

Make sure that you have finished the instructions from Step 1 *Setting Up the Machine* on page 4-11.

### Note

- Please close any applications running before installing MFL-Pro Suite.
- Make sure there are no media cards put into the media drive of the machine.

- 1 Disconnect the machine from the power socket and from your computer, if you already connected an interface cable.

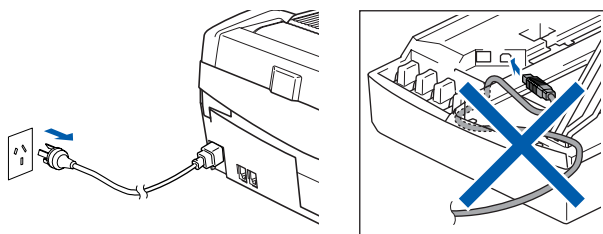

- 2 Turn on your PC.  
(For Windows® 2000 Professional/XP, you must be logged on with Administrator rights.)

- 3 Put the supplied CD-ROM into your CD-ROM drive. If the model name screen appears, choose your machine. If the language screen appears, choose your language.



- 4 The CD-ROM main menu will appear. Click **Install MFL-Pro Suite**.




### Note

- If this window does not appear, use Windows® Explorer to run the **setup.exe** program from the root folder of the Brother CD-ROM.
- If you are using Windows® 2000 Professional: To access the PhotoCapture Center™ features from your computer you may have to install a Windows® 2000 update first.

The Windows® 2000 update is included with the MFL-Pro Suite installer.

To install the update, follow the steps below:

- 1 Click **OK** to start installation of the Windows® updates.
- 2 When instructed, click **OK** to restart your computer.

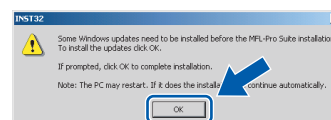


- 3 After the computer restarts, the installation of MFL-Pro Suite will automatically continue. If the installation does not continue automatically, open the main menu again by ejecting and then reinserting the CD-ROM disc or double-click the **setup.exe** program from the root folder, and continue from Step 4 to install the MFL-Pro Suite.



- 5 After reading and accepting the ScanSoft® PaperPort® 9.0SE License Agreement, click **Yes**.



- 6 The installation of PaperPort® 9.0SE will automatically start and is followed by the installation of MFL-Pro Suite.
- 7 When the Brother MFL-Pro Suite Software License Agreement window appears, click **Yes** if you agree to the Software License Agreement.

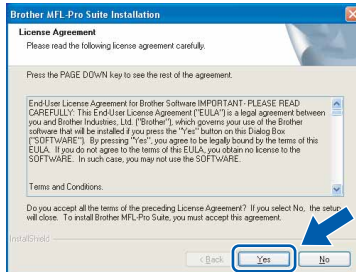


- 8 Choose **Standard** (MFC-215C) or **Local Connection** (MFC-425CN), and then click **Next**. The installation continues.

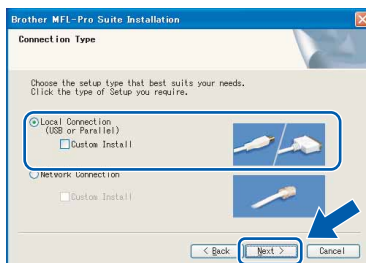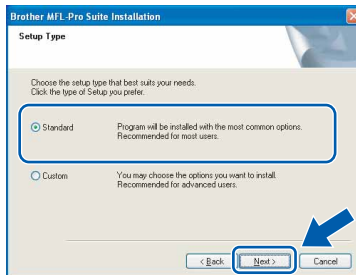


- 9 When this screen appears, go to the next step.




- 10 Lift the scanner cover to its open position.

- 11 Insert the USB cable to the USB socket marked with a  symbol. You will find the USB socket above and to the left of the ink cartridge slots, as shown below.

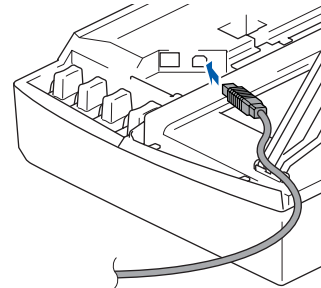

- 12 Carefully guide the USB cable into the trench as shown below, following the trench around and toward the back of the machine.

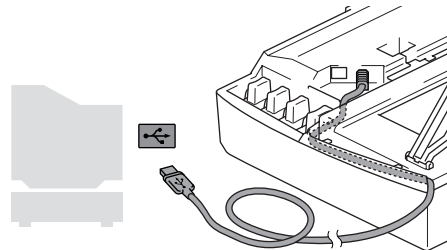


## ⚠ Improper Setup

- **DO NOT** connect the machine to a USB port on a key board or a non-powered USB hub. **Brother recommends that you connect the machine directly to your computer.**
- **Make sure that the cable does not restrict the cover from closing, or an error may occur.**

- 13 Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.

- 14** Turn on the machine by plugging in the power cord.

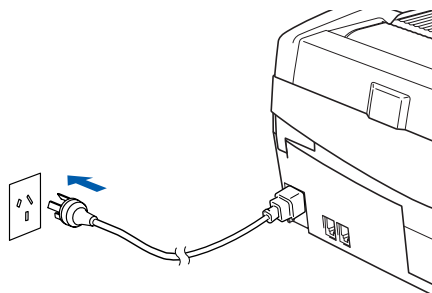

It will take a few seconds for the installation screens to appear.  
The installation of the Brother drivers will automatically start. The installation screens appear one after another. **Please wait, it will take a few seconds for all screens to appear.**




The MFL-Pro Suite (including, Printer driver and Scanner driver) has been installed and the installation is now complete.


### Improper Setup

**DO NOT** try to cancel any of the screens during this installation.

- 15** When the on-line Registration screen is displayed, make your selection and follow the on-screen instructions.

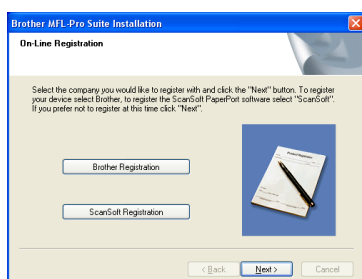

- 16** Click **Finish** to restart your computer.  
(After restarting the computer, for Windows® 2000 Professional/XP, you must be logged on with Administrator rights.)

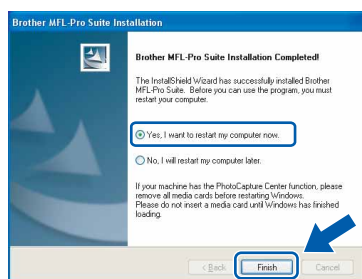


### Note


After restarting the computer, the Installation Diagnostics will run automatically. If the installation is unsuccessful, the installation results window will be shown. If the Diagnostics shows a failure, please follow the on-screen instruction or read on-line help and FAQ's in Start/All Programs/ Brother/MFL-Pro Suite MFC-XXXX.

## For Network Interface Users (MFC-425CN only) (Windows® 98/98SE/Me/2000 Professional/XP)


### Important

**Make sure that you have finished the instructions from Step 1 *Setting Up the Machine* on page 4-11.**


- 1** Disconnect the machine from the power socket.
- 2** Lift the scanner cover to its open position.
- 3** Connect the network cable to the LAN socket marked with a  symbol. You will find the LAN socket above and to the left of the ink cartridge slots, as shown below.

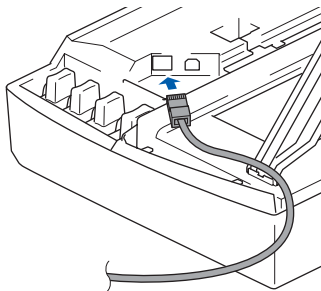

- 4** Carefully guide the network cable into the trench as shown below, following the trench around and toward the back of the machine. Then, connect the cable to your network.

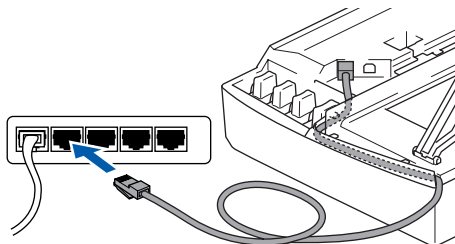

- 5** Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.
- 6** Turn on the machine by plugging in the power cord.

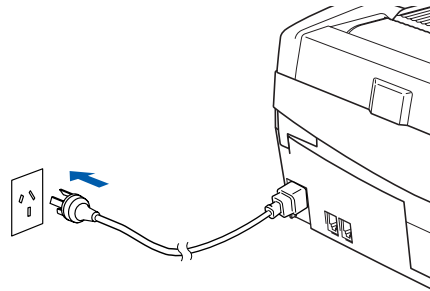

- 7** Turn on your computer.  
(For Windows® 2000 Professional/XP, you must be logged on with Administrator rights.) Close any applications running before installing the MFL-Pro Suite.

### Note

*Before installation, if you are using Personal Firewall software, disable it. Once you are sure that you can print after the installation, re-start your Personal Firewall software.*

- 8** Put the supplied CD-ROM into your CD-ROM drive. If the model name screen appears, choose your machine. If the language screen appears, choose your language.




### ⊘ Improper Setup

**Make sure that the cable does not restrict the cover from closing, or an error may occur.**

### Note

*In case of using both USB and LAN cables, guide both cables through the trench.*

- 9** The CD-ROM main menu will appear. Click **Install MFL-Pro Suite**.

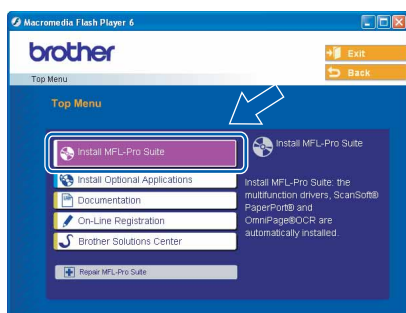


### Note

- If this window does not appear, use Windows® Explorer to run the **setup.exe** program from the root folder of the Brother CD-ROM.
- If you are using Windows® 2000 Professional: To access the PhotoCapture Center™ features from your computer you may have to install a Windows® 2000 update first.

The Windows® 2000 update is included with the MFL-Pro Suite installer.

To install the update, follow the steps below:


- 1 Click **OK** to start installation of the Windows® updates.
- 2 When instructed, click **OK** to restart your computer.

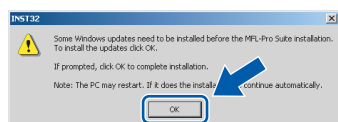

- 3 After the computer restarts, the installation of MFL-Pro Suite will automatically continue.


If the installation does not continue automatically, open the main menu again by ejecting and then reinserting the CD-ROM disc or double-click the **setup.exe** program from the root folder, and continue from Step 9 to install the MFL-Pro Suite.

- 10** After reading and accepting the ScanSoft® PaperPort® 9.0SE License Agreement, click **Yes**.

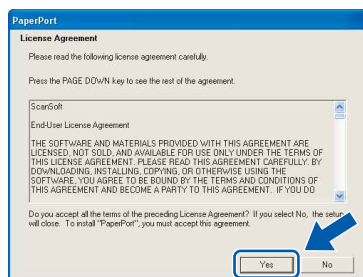


- 11** The installation of PaperPort® 9.0SE will automatically start and is followed by the installation of MFL-Pro Suite.

- 12** When the Brother MFL-Pro Suite Software License Agreement window appears, click **Yes** if you agree to the Software License Agreement.

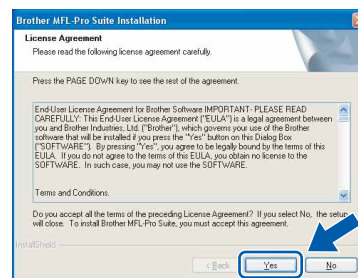

- 13** Choose **Network Connection**, and then click **Next**.

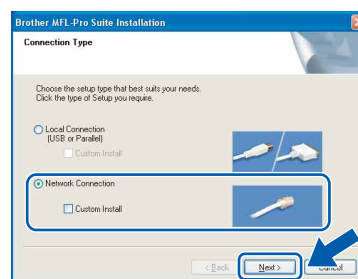


- 14** The installation of the Brother drivers will automatically start. **The installation screens appear one after another, please wait for a while.**

### Improper Setup

**DO NOT** try to cancel any of the screens during this installation.

- 15** If the machine is configured for your network, choose the machine from the list, and then click **Next**.

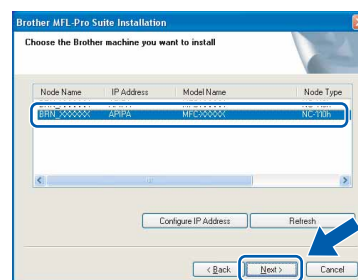

### Note

This window will not appear if there is only one machine connected on the network, it will be chosen automatically.


- 16** If the machine is not yet configured for use on your network, the following screen appears.




Click **OK**.

The **Configure IP Address** window will appear. Enter the proper IP address information for your network by following the on-screen instructions.

- 17** When the Brother and ScanSoft on-line Registration screen is displayed, make your selection and follow the on-screen instructions.

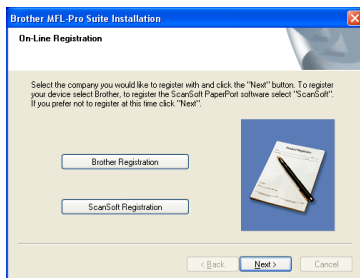

- 18** Click **Finish** to restart your computer.  
(For Windows® 2000 Professional/XP, you must be logged on with Administrator rights.)

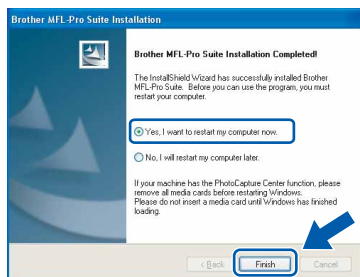

## Note

*After restarting the computer, the Installation Diagnostics will run automatically. If the installation is unsuccessful, the installation results window will be shown. If the Diagnostics shows a failure, please follow the on-screen instruction or read on-line help and FAQ's in Start/All Programs/ Brother/MFL-Pro Suite MFC-XXXX.*



**The MFL-Pro Suite (including Brother Network Printer driver, Network Scanner driver and Network PhotoCapture Center™) has been installed and the installation is now complete.**

## For USB Interface Users

## For Mac OS® X 10.2.4 or greater

**Important**


**Make sure that you have finished the instructions from Step 1 *Setting Up the Machine* on page 4-11.**

**Note**

For Mac OS® X 10.2.0 to 10.2.3 users, upgrade to Mac OS® X 10.2.4 or greater. (For the latest information for Mac OS® X, visit <http://solutions.brother.com>)

**1**

Disconnect the machine from the power socket and from your computer, if you already connected an interface cable.

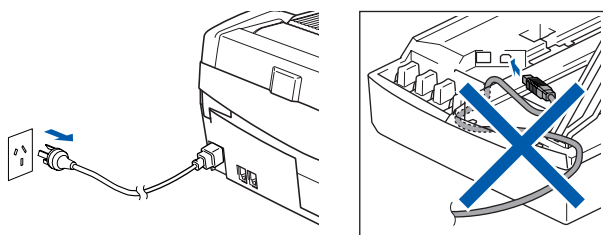**2**


Turn on your Macintosh®.

**3**


Put the supplied CD-ROM into your CD-ROM drive.

**4**

Double-click the **Start Here OSX** icon to install the drivers and MFL-Pro Suite. If the language screen appears, choose your language.

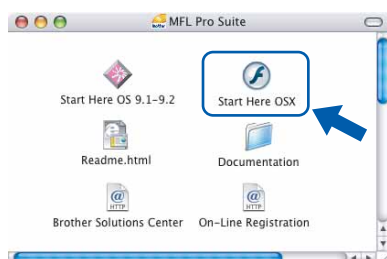**5**

Click **MFL-Pro Suite** to install.

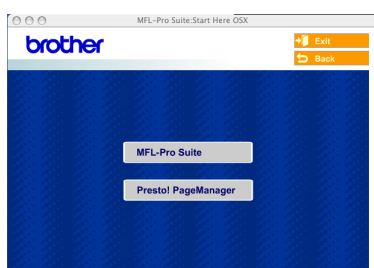**6**

Follow the on-screen instructions, and restart your Macintosh®.

**7**

Lift the scanner cover to its open position.


**8**


After the DeviceSelector window appears connect the USB interface cable to your Macintosh and then to the machine.

**Note**


The DeviceSelector window will not appear if you have connected a USB interface cable to the machine before restarting your Macintosh® or if you are overwriting a previously installed version of the Brother Software. If you encounter this problem continue with the installation but skip 13. You should choose your Brother machine from the Model pop-up menu in the main screen of ControlCenter2. For details, see the Software User's Guide on CD-ROM.

**9**

Connect the USB cable to the USB socket marked with a  symbol. You will find the USB socket above and to the left of the ink cartridge slots, as shown below.

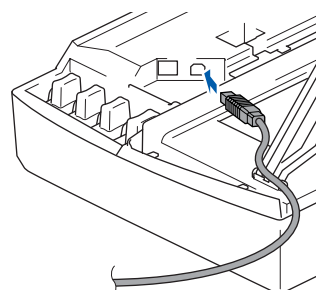

- 10** Carefully guide the USB cable into the trench as shown below, following the trench around and toward the back of the machine.

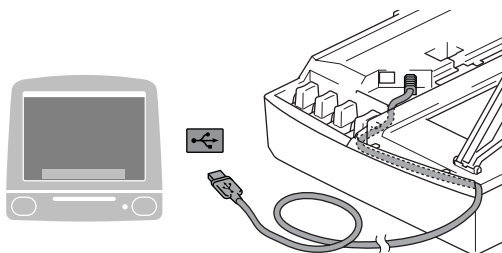


## ⚠ Improper Setup

- **DO NOT** connect the machine to a USB port on a keyboard or a non-powered USB hub. Brother recommends that you connect the machine directly to your computer.
- Make sure that the cable does not restrict the cover from closing, or an error may occur.

- 11** Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.


- 12** Turn on the machine by plugging in the power cord.

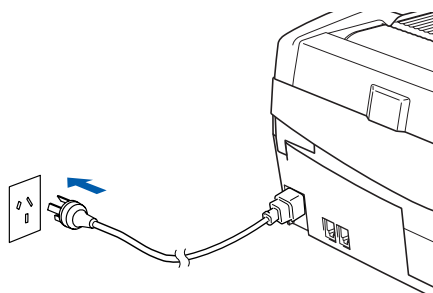


- 13** Choose **USB** and then click **OK**.



- 14** Click **GO**, then **Applications**.

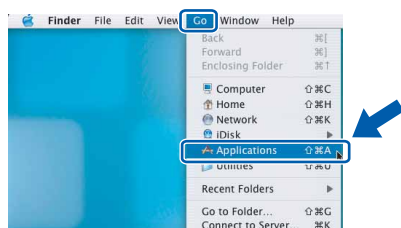

- 15** Double-click the **Utilities** folder.

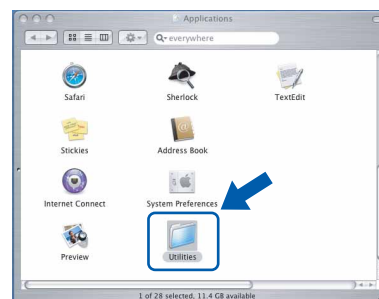


- 16** Double-click the **Printer Setup Utility** icon.




## Note

For Mac® OS X 10.2.x users, open **Print Center** icon.

- 17** Click **Add**.

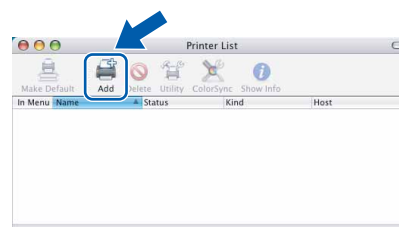


- 18** Choose **USB**.  
(For Mac OS® X 10.2.4 to 10.3 users)

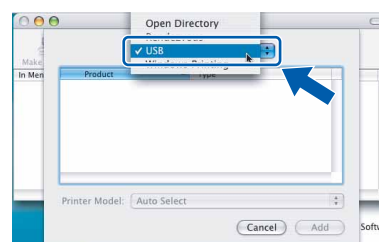


## Note

For Mac OS® X 10.4 users, go to step **19**.

- 19** Choose **MFC-XXXX** (where XXXX is your model name), and then click **Add**.

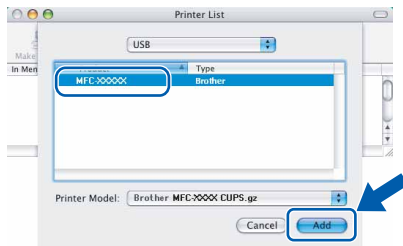


- 20** Click **Printer Setup Utility**, then **Quit Printer Setup Utility**.

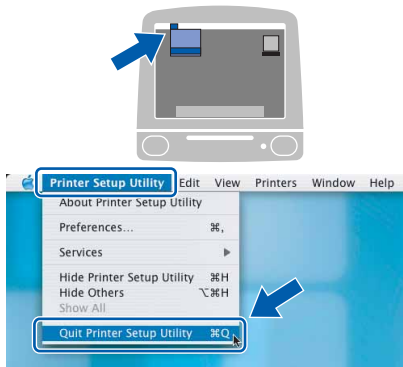

The **MFC-Pro Suite**, **Brother printer driver**, **scanner driver** and **Brother ControlCenter2** have been installed and the installation is now complete.

- 21** To install Presto!®PageManager®, click the **Presto! PageManager** icon and follow the on-screen instructions.

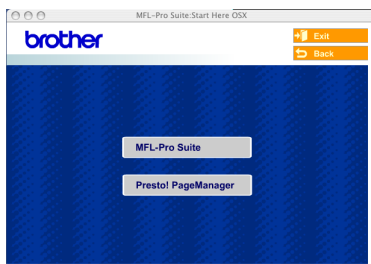

#### Note

When **Presto!®PageManager®** is installed OCR capability is added to the **Brother ControlCenter2**. You can easily scan, share and organize photos and documents using **Presto!® PageManager®**.




**Presto!® PageManager®** has been installed and the installation is now complete.

## For Mac OS® 9.1 to 9.2

### Important

Make sure that you have finished the instructions from Step 1 *Setting Up the Machine* on page 4-11.


- 1 Disconnect the machine from the power socket and from your computer, if you already connected an interface cable.

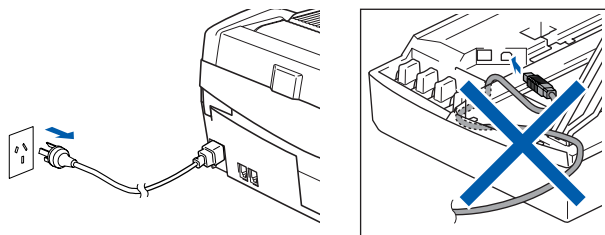

- 2 Turn on your Macintosh®.
- 3 Put the supplied CD-ROM into your CD-ROM drive.




- 4 Double-click the **Start Here OS 9.1-9.2** icon to install the printer and scanner drivers. If the language screen appears, choose your language.

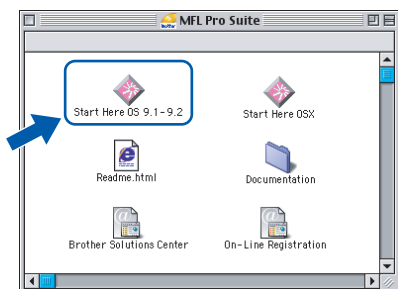


- 5 Click **MFL-Pro Suite** to install.




- 6 Follow the on-screen instructions, and restart your Macintosh®.
- 7 Lift the scanner cover to its open position.

- 8 Connect the USB cable to the USB socket marked with a  symbol. You will find the USB socket above and to the left of the ink cartridge slots, as shown below.

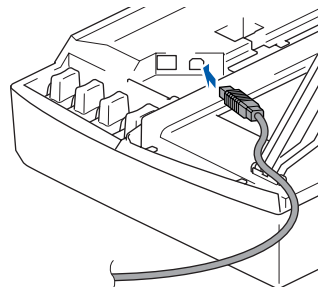

- 9 Carefully guide the USB cable into the trench as shown below, following the trench around and toward the back of the machine. Then, connect it to your Macintosh®.

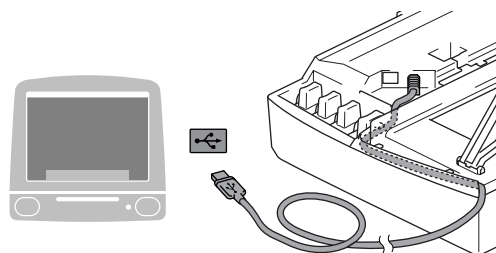


Macintosh®  
USB


### ⚠ Improper Setup

- **DO NOT** connect the machine to a USB port on a keyboard or a non-powered USB hub. Brother recommends that you connect the machine directly to your computer.
- **Make sure** that the cable does not restrict the cover from closing, or an error may occur.


- 10 Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.
- 11 Turn on the machine by plugging in the power cord.

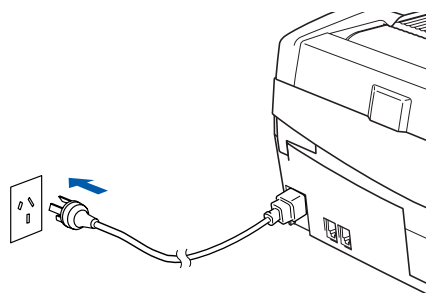

- 12** From the Apple® menu, click **Chooser**.

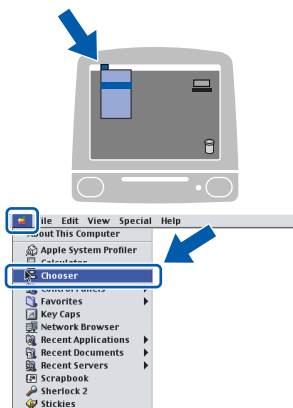

- 13** Click the **Brother Ink** icon. On the right side of the **Chooser**, choose the machine to which you want to print. Close the **Chooser**.

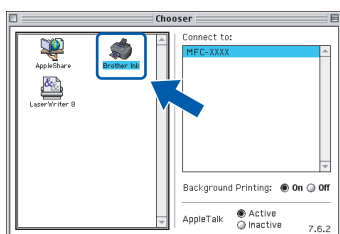

The Brother printer driver and scanner driver have been installed.



#### Note

*ControlCenter2 is not supported in Mac OS® 9.x.*

- 14** To install Presto!® PageManager®, click the **Presto! PageManager** icon and follow the on-screen instructions.



#### Note

*You can easily scan, share and organize photos and documents using Presto!® PageManager®.*



**Presto!® PageManager® has been installed and the installation is now complete.**


## For Network Interface Users (MFC-425CN only)

### For Mac OS® X 10.2.4 or greater

#### Important

Make sure that you have finished the instructions from **Step 1 Setting Up the Machine** on page 4-11.

- 1 Disconnect the machine from the power socket.

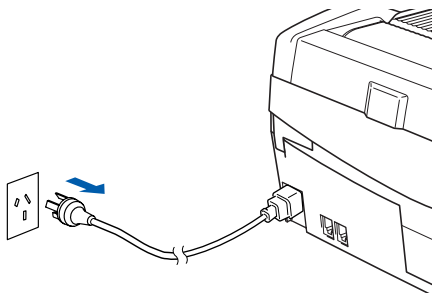

- 2 Turn on your Macintosh®.
- 3 Put the supplied CD-ROM into your CD-ROM drive.



- 4 Double-click the **Start Here OSX** icon to install the printer and scanner drivers. If the language screen appears, choose your language.



- 5 Click **MFL-Pro Suite** to install.




- 6 Follow the on-screen instructions, and restart your Macintosh®.
- 7 Lift the scanner cover to its open position.


- 8 After the DeviceSelector window appears, connect the network interface cable to your Macintosh® and then to the machine.




#### Note

The DeviceSelector window will not appear if you have connected a USB interface cable to the machine before restarting your Macintosh® or if you are overwriting a previously installed version of the Brother Software. If you encounter this problem continue but skip **13** through **16**. You should choose your Brother machine from the Model pop-up menu in the main screen of ControlCenter2. For details, see Chapter 10 in the Software User's Guide on the CD-ROM.

- 9 Connect the network cable to the LAN socket marked with a  symbol. You will find the LAN socket above and to the left of the ink cartridge slots, as shown below.

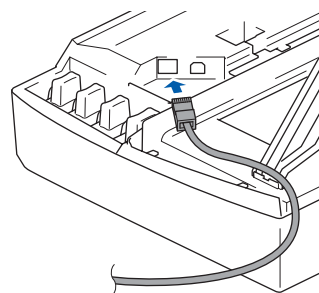

- 10 Carefully guide the network cable to the trench as shown below, following the trench around and toward the back of the machine. Then, connect the cable to your network.

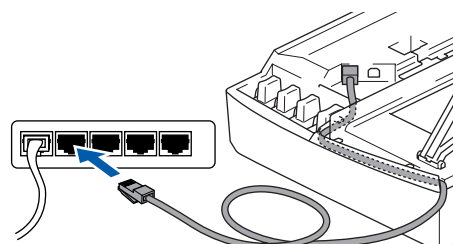

## ⚠ Improper Setup


Make sure that the cable does not restrict the cover from closing, or an error may occur.

### Note

In case of using both USB and LAN cables, route both cables through the trench.

- 11** Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.


- 12** Turn on the machine by plugging in the power cord.

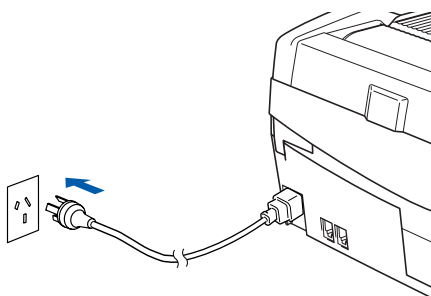


- 13** Choose **Network** and then click **OK**.




- 14** If you want to use the machine's **Scan** key to scan over the network, you must check **Register your computer with the "Scan To" functions at the machine** box. You must also enter a name for your Macintosh® in **Display Name**. The name you enter will appear on the machine's LCD when you press the **Scan** key and choose a scan option. You can enter any name up to 15 characters long. (For more information on network scanning, see *Chapter 11 of the Software User's Guide on the CD-ROM*.)

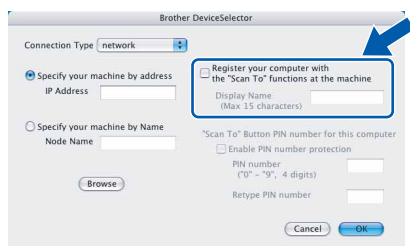

- 15** Click **Browse**.

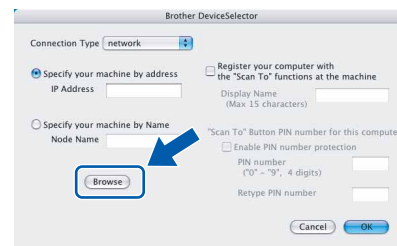


- 16** Choose your model name, and then click **OK**.

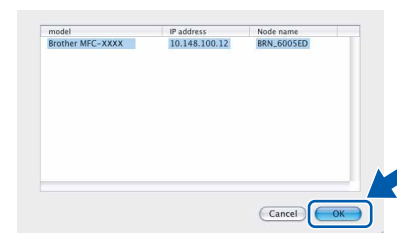


- 17** Click **Go**, then **Applications**.



- 18** Double-click the **Utilities** folder.

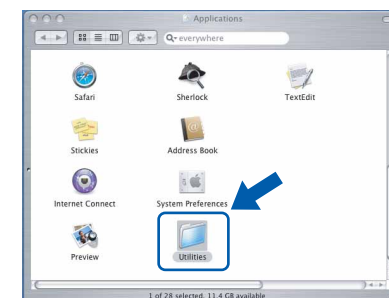


- 19** Double-click the **Printer Setup Utility** icon.

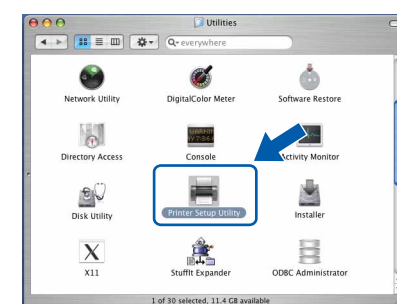


### Note

For Mac® OS X 10.2.x users, open **Print Center** icon.

**20** Click **Add**.

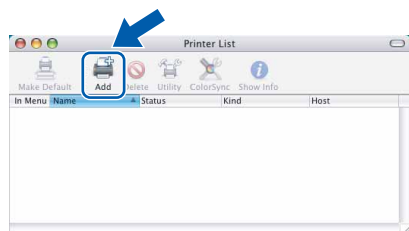


**21** Make the selection shown below.  
(For Mac OS® X 10.2.4 to 10.3 users)

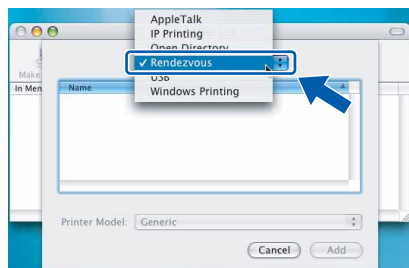

## Note

For Mac OS® X 10.4 users, go to step **22**.

**22** Choose **MFC-XXXX**, and then click **Add**.

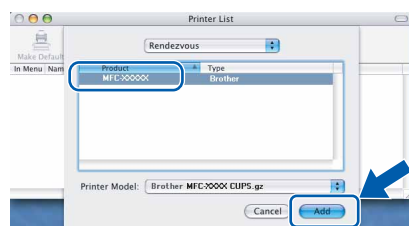


## Note

XXXX is your model name.  
xxxxxx are the last six digits of the Ethernet address.



See Chapter 5 of the Network User's Guide on the CD-ROM.

**23** Click **Printer Setup Utility**, then **Quit Printer Setup Utility**.

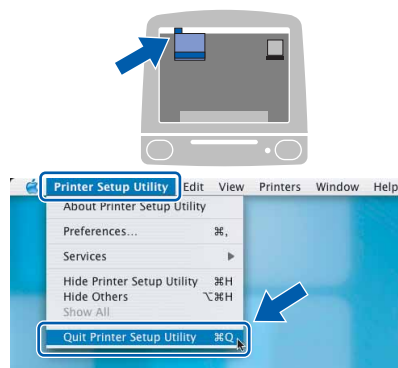


The MFL-Pro Suite, Printer Driver, Scanner Driver and ControlCenter2 have been installed.



For more information about connecting the machine to a Macintosh® network, see Chapter 5 of the Network User's Guide on the CD-ROM.

**24** To install Presto!®PageManager®, click the **Presto! PageManager** icon and follow the on-screen instructions.

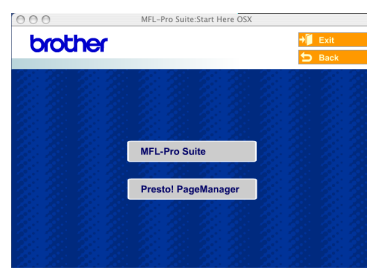

## Note

When Presto!®PageManager® is installed OCR capability is added to the Brother ControlCenter2. You can also easily scan, share, and organize photos and documents using Presto!®PageManager®.




Presto!®PageManager® has been installed and the installation is now complete.

## For Mac OS® 9.1 to 9.2

**Important**

**Make sure that you have finished the instructions from Step 1 *Setting Up the Machine* on page 4-11.**


- 1** Disconnect the machine from the power socket.

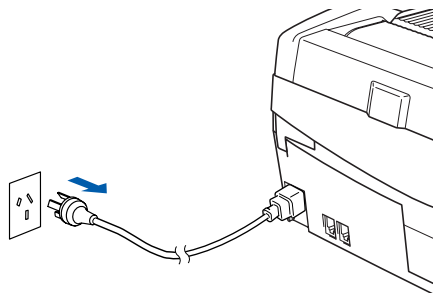

- 2** Turn on your Macintosh®.
- 3** Put the supplied CD-ROM into your CD-ROM drive.




- 4** Double-click the **Start Here OS 9.1-9.2** icon to install the printer and scanner drivers. If the language screen appears, choose your language.

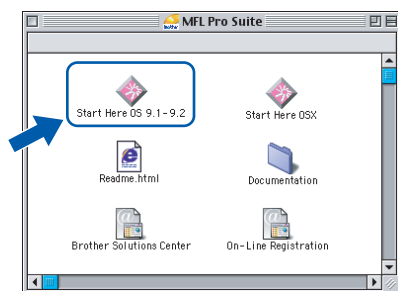


- 5** Click **MFL-Pro Suite** to install.




- 6** Follow the on-screen instructions, and restart your Macintosh®.
- 7** Lift the scanner cover to its open position.

- 8** Connect the network cable to the LAN socket marked with a  symbol. You will find the LAN socket above and to the left of the ink cartridge slots, as shown below.

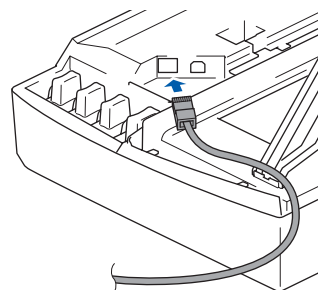

- 9** Carefully guide the network cable into the trench as shown below, following the trench around and toward the back of the machine. Then, connect the cable to your network.

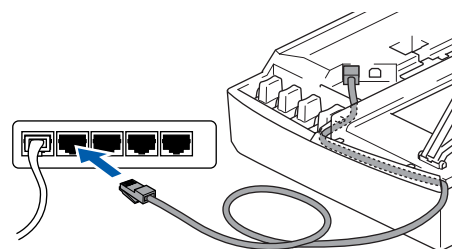
**Improper Setup**

**Make sure that the cable does not restrict the cover from closing, or an error may occur.**


**Note**

*In case of using both USB and LAN cables, route both cables through the trench.*

- 10** Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover.
- 11** Turn on the machine by plugging in the power cord.

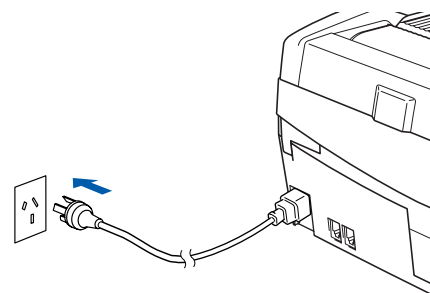


**12** From the **Apple®** menu, click **Chooser**.

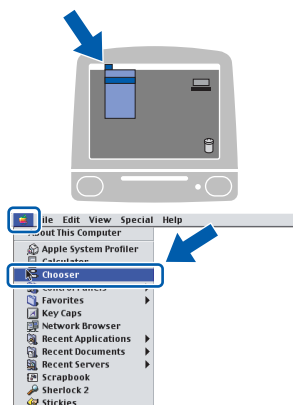

**Presto!®PageManager®** has been installed and the installation is now complete.

**13** Click the **Brother Ink (IP)** icon, and then choose **BRN\_XXXXXX** (where XXXXXX are the last six digits of the Ethernet address). Close the **Chooser**.

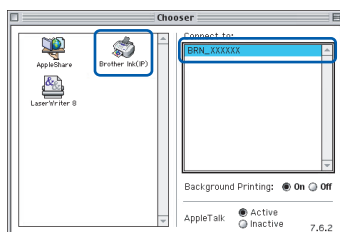

For more information about connecting the machine to a Macintosh® network, see Chapter 5 of the Network User's Guide on the CD-ROM.



The **MFL-Pro Suite, Printer Driver and Scanner Driver** have been installed.



## Note

*ControlCenter2 is not supported in Mac OS® 9.x.*

**14** To install Presto!®PageManager®, click the **Presto! PageManager** icon and follow the on-screen instructions.



## Note

*You can easily scan, share, and organize photos and documents using Presto!®PageManager®.*

This section is for an administrator who wants to configure the machine on a network using the BRAdmin Professional utility. (MFC-425CN only)

## Installing the BRAdmin Professional configuration utility (Windows® only)

The BRAdmin Professional utility is designed to manage your Brother network connected devices such as network-ready Multifunction devices and/or network-ready printers in a Local Area Network (LAN) environment.

BRAdmin Professional can also be used to manage devices from other manufacturers whose products support SNMP (Simple Network Management Protocol).

For more information on BRAdmin Professional, visit us at <http://solutions.brother.com>.


- 1 Put the supplied CD-ROM into your CD-ROM drive. The opening screen will appear automatically. Follow the on-screen instructions.



- 2 Click **Install Optional Applications** on the main menu screen.




- 3 Click **BRAdmin Professional** and follow the on-screen instructions.

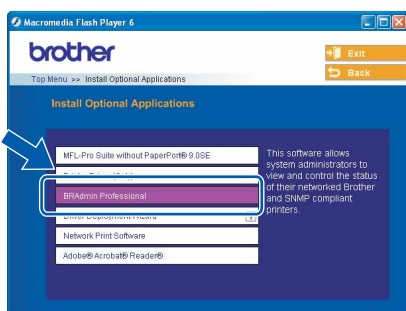


## Setting your IP address, Subnet Mask and Gateway using BRAdmin Professional (Windows® only)


- 1 Start BRAdmin Professional, and choose **TCP/IP**.

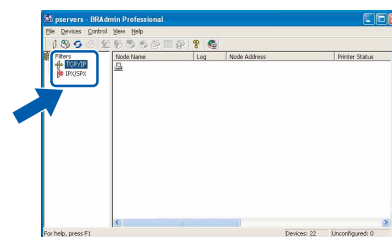


- 2 Click **Devices**, then **Search Active Devices**. BRAdmin searches for new devices automatically.

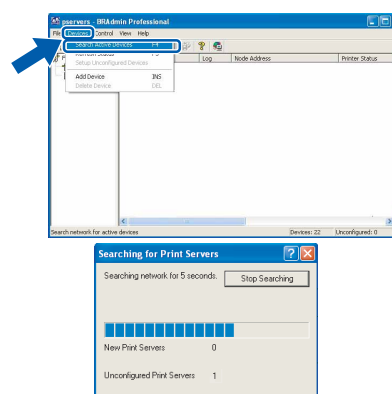

- 3 Double-click the new device.

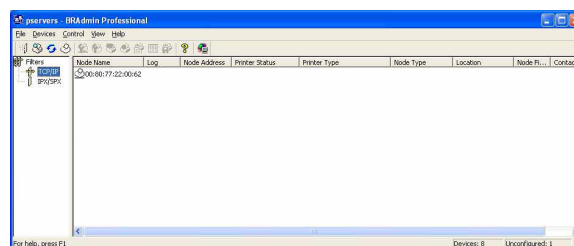

- 4 Enter the **IP Address**, **Subnet Mask** and **Gateway**, and then click **OK**.

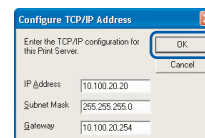

- 5 The address information will be saved to the machine.







### Note

You can use the BRAdmin Professional utility to set a password. (See the Network User's Guide on the CD-ROM.)

## Replacement consumables

When the time comes to replace ink cartridges, an error message will be indicated on the LCD. For more information about the ink cartridges for your machine, visit <http://solutions.brother.com> or contact your local Brother re-seller.

### Ink cartridge

Black	Magenta	Yellow	Cyan
LC47BK	LC47M	LC47Y	LC47C
			

## **Trademarks**

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

Windows and Microsoft are registered trademarks of Microsoft in the U.S. and other countries.

Macintosh and True Type are registered trademarks of Apple Computer, Inc.

PaperPort and OmniPage OCR are registered trademarks of ScanSoft, Inc.

Presto! PageManager is a registered trademark of NewSoft Technology Corporation.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

**All other brand and product names mentioned in this manual are trademarks or registered trademarks of their respective companies.**

## **Compilation and Publication**

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

This product is designed for use in a Professional Environment.

