

Web Connect Guide



Applicable models

This User's Guide applies to the following models:

ADS-2500W and ADS-2600W

Definitions of notes

We use the following icon throughout this user's guide:

NOTE	Notes tell you how you should respond to a situation that may arise, or give tips about how the operation works with other features.
-------------	--

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a trademark of Brother Industries, Ltd.

FLICKR is a registered trademark of Yahoo! Inc.

GOOGLE DOCS, PICASA and PICASA Web Albums are trademarks of Google, Inc. Use of these trademarks are subject to Google Permissions.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Macintosh is a trademark of Apple Inc., registered in the United States and other countries.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

IMPORTANT NOTE

- Please go to the Brother Solutions Center at <http://solutions.brother.com/> and click Manuals on your model's page to download the other manuals.
- Not all models are available in all countries.


©2012 Brother Industries, Ltd. All rights reserved.

Table of Contents

1	Introduction	1
	Brother Web Connect Feature.....	1
	Accessible services	2
	Conditions for using Brother Web Connect	3
	Service account	3
	Internet connection	3
	MFL-Pro Suite installation	3
	Proxy server settings	3
	Setting up Brother Web Connect.....	5
	Step-by-step overview	5
	How to create an account for each of the desired services.....	6
	How to apply for Brother Web Connect access.....	6
	How to register and delete accounts on the machine.....	8
2	Upload	10
	Scanning and uploading documents.....	10
	How to scan and upload documents	10
	How to change scan settings.....	11
3	Shortcut Settings	13
	Adding Web Connect Shortcuts.....	13
	How to change Shortcuts	14
	How to edit Shortcut Names.....	14
	How to delete Shortcuts	14
	How to recall Shortcuts.....	14
A	Troubleshooting	15
	Error messages	15

Brother Web Connect Feature

Certain websites provide services that allow users to upload and view images and files on the website. Your Brother machine can scan images and upload them to these services.

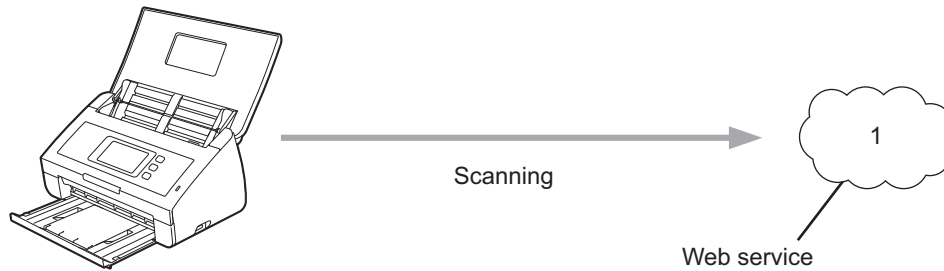

1 Photos and documents

Accessible services

The following services can be accessed from your Brother machine:

■ Picasa Web Albums™

Picasa Web Albums™ is an online photo sharing service. Images can be uploaded, organized into albums, and shared with other users.

URL: <http://picasaweb.google.com/>

■ Google Docs™

Google Docs™ is an online document editing and sharing service.

URL: <http://docs.google.com/>

■ Flickr®

Flickr® is an online photo sharing service. Images can be uploaded, organized into albums, and shared with other users.

URL: <http://www.flickr.com/>

■ Facebook™

Facebook™ is a social networking service that also allows images to be uploaded and shared with other users.

URL: <http://www.facebook.com/>

■ Evernote®

Evernote® is an online file storage and managing service.

URL: <http://www.evernote.com/>

■ Dropbox

Dropbox is an online file storage, sharing and file synchronization service.

URL: <http://www.dropbox.com/>

For details about any of these services, refer to the respective service's website.

The following table describes which types of files can be used with each Brother Web Connect feature:

Accessible Services	Picasa Web Albums™	Google Docs™	Flickr®	Facebook™	Evernote®	Dropbox
Upload scanned images	JPEG	PDF	JPEG	JPEG	JPEG, PDF	JPEG, PDF

NOTE

(For Hong Kong, Taiwan and Korea)

Brother Web Connect supports only file names written in English. Files named in the local language will not be uploaded.

Conditions for using Brother Web Connect

Service account

In order to use Brother Web Connect, you must have an account with the desired service. If you do not already have an account, use a computer to access the website of the service and create an account.

Internet connection

In order to use Brother Web Connect, your Brother machine must be connected to a network that has access to the Internet, through either a wired or wireless connection. See the Quick Setup Guide to connect and configure the machine appropriately.

For network setups that use a proxy server, the machine must also be configured to use a proxy server (see *Proxy server settings* on page 3).

NOTE

A proxy server is a computer that serves as an intermediary between computers without a direct Internet connection and the Internet.


MFL-Pro Suite installation

The initial installation of Brother Web Connect requires a computer that has access to the Internet and has Brother MFL-Pro Suite installed. Follow the steps outlined in the Quick Setup Guide to install the MFL-Pro Suite (from the supplied installer DVD-ROM) and configure the machine to be able to scan over your wired or wireless network.


Proxy server settings

If the network uses a proxy server, the following proxy server information must be configured on the machine:

- Proxy server address
- Port number
- User name
- Password

- 1 Press .
- 2 Press `Network`.
- 3 Press `Web Connect Settings`.
- 4 Press `Proxy Settings`.
- 5 Press `Proxy Connection`.

Introduction

- 6 Press **On**.
- 7 Press the option that you want to set, and then enter the proxy server information.
Press **OK**.
- 8 Press .


Setting up Brother Web Connect

Step-by-step overview

Configure the settings using the following procedure:


Step 1: Create an account with the desired service (see page 6).

Access the service's website using a computer and create an account. (If you already have an account, there is no need to create an additional account.)

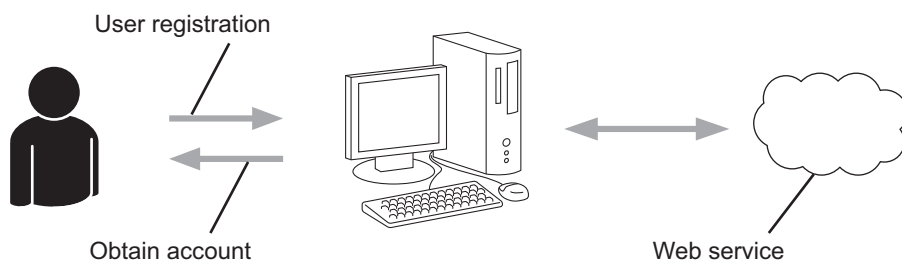


Step 2: Apply for Brother Web Connect access (see page 6).

Start Brother Web Connect access using a computer and obtain a temporary ID.

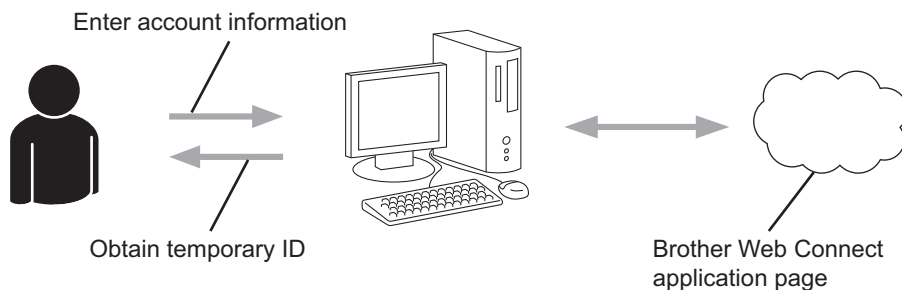

Step 3: Register (on the machine) the account information that is needed to access the desired services (see page 8).

Enter the temporary ID to enable the service on the machine. Specify the account name as you would like it to be displayed on the machine, and enter a PIN if you would like to use one.

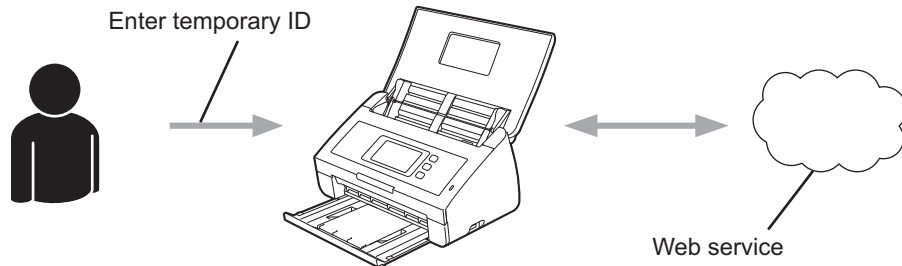

The machine can now use the service.

How to create an account for each of the desired services

In order to use Brother Web Connect to access an online service, you must have an account with that online service. If you do not already have an account, use a computer to access the website of the service and create an account. After creating an account, log on and use the account once with a computer before using the Brother Web Connect feature. Otherwise, you may not be able to access the service using Brother Web Connect.

If you already have an account, there is no need to create an additional account.

Continue with the next procedure, *How to apply for Brother Web Connect access* on page 6.

How to apply for Brother Web Connect access

In order to use Brother Web Connect to access online services, you must first apply for Brother Web Connect access using a computer that has Brother MFL-Pro Suite installed.

- 1 Turn on your computer.
- 2 Access the Brother Web Connect application web page.

- Windows®

If you have already installed MFL-Pro Suite, choose  / **All Programs / Brother / ADS-XXXXX** (where XXXXX is your model name) / **Brother Web Connect**.

The web browser will start and access the application page.

NOTE

You can also access the page directly by typing "<https://moi.bwc.brother.com/portal/>" into your web browser's address bar.

- Macintosh

If you have already installed MFL-Pro Suite, double-click **Macintosh HD / Applications / Brother / Utilities / Brother Web Connect**.

The web browser will start and access the application page.


NOTE

You can also access the page directly in the following ways:


- From the supplied installer DVD-ROM
 - 1 Put the supplied installer DVD-ROM into your DVD-ROM drive. Double-click the **Brother Support** icon.
 - 2 Click the **Brother Web Connect** icon.
 - From your web browser

Type "<https://moi.bwc.brother.com/portal/>" into your web browser's address bar.
-

3 Select the desired service.

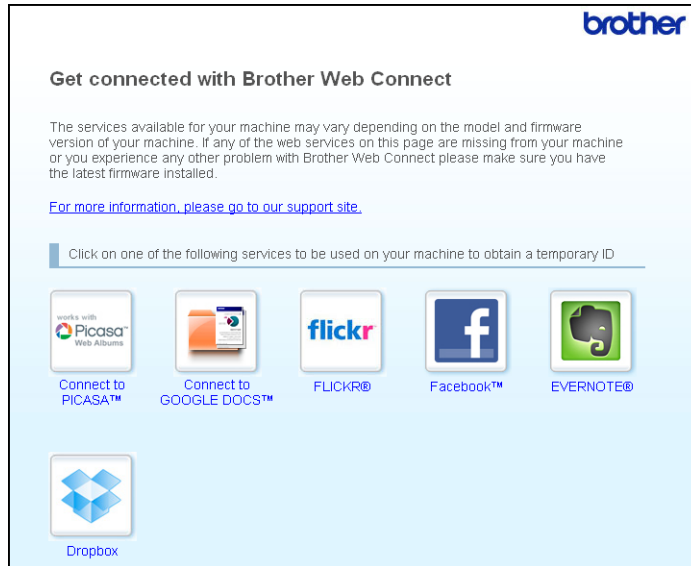

4 Follow the on-screen instructions and apply for access.
When finished, your temporary ID will be displayed. This temporary ID is needed when registering accounts to the machine, so make a note of the ID. The temporary ID is valid for 24 hours.

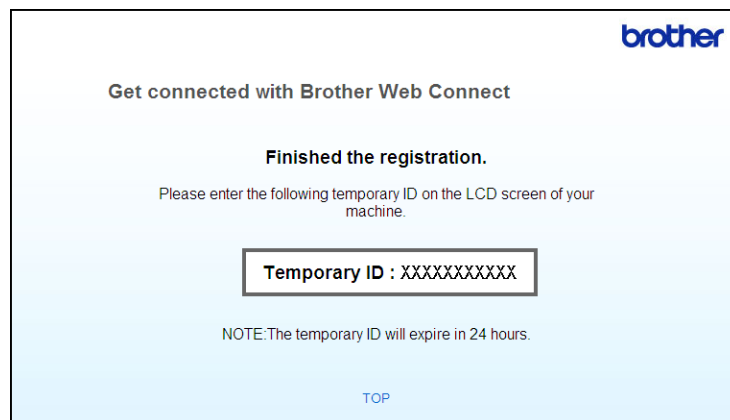

5 Close the web browser.
Continue with the next procedure, *How to register and delete accounts on the machine* on page 8.

How to register and delete accounts on the machine

Enter the account information and configure the machine so that it can access the service:


Register an account

- 1 Before you register an account, confirm that the correct time and date are set on the machine's control panel. See the Quick Setup Guide included with your machine for instructions on setting the correct time and date.
- 2 Swipe left or right, or press ◀ or ▶ to display `Scan 2`.
- 3 Press `to Web`.
Information regarding the Internet connection is displayed on the machine's LCD. Read the information and press `OK`.
- 4 You will be asked if you want to display this information again in the future.
Press `Yes` or `No`.
- 5 Choose the desired service.
- 6 If information regarding Brother Web Connect is displayed, press `OK`.
- 7 Press `Register/Delete Account`.
- 8 Press `Register Account`.
- 9 A message is displayed prompting you to enter the temporary ID you received when you applied for Brother Web Connect access.
Press `OK`.
- 10 Enter the temporary ID.
Press `OK`.

NOTE

An error message will appear on the LCD if the information you entered does not match the temporary ID you received when you applied for access or if the temporary ID has expired. Either enter the temporary ID correctly, or apply for access again and receive a new temporary ID (see *How to apply for Brother Web Connect access* on page 6).


- 11 A message is displayed, prompting you to enter a name for the account as you want it to be displayed on the LCD.
Press `OK`.
- 12 Enter the name using the buttons on the LCD.
Press `OK`.

- 13 Do one of the following:
 - To set a PIN for the account, press **Yes**. Enter a four-digit number and press **OK**. (A PIN prevents unauthorized access to the account.)
 - If you do not want to set a PIN, press **No**.
- 14 You will be asked if you want to register the account information you entered.
 - Press **Yes** to register.
 - Press **No** to enter the information again. Go back to step 10.
- 15 Account registration is complete.
Press **OK**.
- 16 Press .

NOTE

Up to 10 accounts can be registered on the machine.

Delete an account

- 1 Swipe left or right, or press ◀ or ▶ to display **Scan 2**.
- 2 Press **to Web**.
Information regarding the Internet connection is displayed on the machine's LCD. Read the information and press **OK**.
- 3 You will be asked if you want to display this information again in the future.
Press **Yes** or **No**.
- 4 Choose the desired service.
- 5 Press **Register/Delete Account**.
- 6 Press **Delete Account**.
- 7 Press the accounts that you want to delete. The selected accounts will be indicated by check marks.
- 8 Press **OK**.
- 9 You will be asked to confirm your selections.
Press **Yes** to delete.
- 10 Account deletion is complete.
Press **OK**.
- 11 Press .

Scanning and uploading documents

Scanned photos and images can be uploaded directly to a service without using a computer.

For details about services and supported features, see *Accessible services* on page 2.

How to scan and upload documents

- 1 Load your document.
- 2 Swipe left or right, or press ◀ or ▶ to display *Scan 2*.
- 3 Press *to Web*.
Information regarding the Internet connection is displayed on the machine's LCD. Read the information and press *OK*.
- 4 You will be asked if you want to display this information again in the future.
Press *Yes* or *No*.
- 5 Choose the desired service.
- 6 Swipe up or down, or press ▲ or ▼ to display your account name, and press it.
- 7 If the PIN entry screen is displayed, enter the four-digit PIN and press *OK*.
- 8 If the screen that prompts you to specify the file format of the image to be uploaded is displayed, select the desired file format.

NOTE

When scanning and uploading JPEG files, black and white scanning is not available, and each page is uploaded as a separate file.

- 9 The scan settings screen will be displayed. Do one of the following:
 - To change scan settings, see *How to change scan settings* on page 11. After changing the scan settings, go to step 10.
 - If you do not want to change any settings, press *OK*.
- 10 Press *OK*.
The machine scans the document and starts uploading.

NOTE

- Uploaded images are saved in an album named "From_BrotherDevice".
 - For information regarding restrictions, such as the size or number of images that can be uploaded, refer to the respective service's website.
-

How to change scan settings

The scan settings screen is displayed before you scan the documents that you want to upload (see step 9 on page 10):

Scan Type

- 1 Press **Scan Type**.
- 2 Choose **Color, Gray or B&W**.
- 3 If you do not want to change any other settings, press **OK**.

NOTE

When scanning and uploading JPEG files, black and white scanning is not available, and each page is uploaded as a separate file.

Resolution

- 1 Press **Resolution**.
- 2 Choose **150 dpi, 200 dpi, 300 dpi or 600 dpi**.
- 3 If you do not want to change any other settings, press **OK**.

Document Size

- 1 Press **Document Size**.
- 2 Choose **A4, Letter, Legal, B5, A5, B6, A6 or Business Card**.
- 3 If you do not want to change any other settings, press **OK**.

File Size

- 1 Press **File Size**.
- 2 Choose **Small, Medium or Large**.
- 3 If you do not want to change any other settings, press **OK**.

2-sided Scan

- 1 Press **2-sided Scan**.
- 2 Choose **LongEdge, ShortEdge or Off**.

Upload

- 3 If you do not want to change any other settings, press **OK**.


NOTE

The default setting of 2-sided Scan is `LongEdge`.

Adding Web Connect Shortcuts

The settings for the following services can be included in a Web Connect Shortcut:

- Picasa Web Albums™
- Google Docs™
- Flickr®
- Facebook™
- Evernote®
- Dropbox

- 1 Press **Shortcuts**.
- 2 Press  where you haven't added a shortcut.
- 3 Press **Scan to Web**.
- 4 Information regarding the Internet connection is displayed. Read the information and confirm it by pressing **OK**.
- 5 Swipe up or down, or press ▲ or ▼ to display the available services, and then press the desired service.
- 6 Press your account.
If the account needs a PIN, enter the PIN for the account using the keyboard on the Touchscreen.
Press **OK**.
- 7 Read and confirm the displayed list of functions you have chosen, and then press **OK**.
- 8 Press **OK** to save your shortcut.

NOTE


The shortcut name will be assigned automatically. To change shortcut names, see *How to edit Shortcut Names* on page 14.

How to change Shortcuts


Web Connect Shortcuts cannot be changed. Instead, delete the shortcut (see *How to delete Shortcuts* on page 14) and create a new shortcut (see *Adding Web Connect Shortcuts* on page 13).

How to edit Shortcut Names

3

- 1 Press `Shortcuts`.
- 2 Press .
- 3 Press the shortcut you want to change or delete.
- 4 Press `Edit Shortcut Name`.
- 5 The software keyboard will appear on the LCD. Enter a new shortcut name and then press `OK`.

How to delete Shortcuts

- 1 Press `Shortcuts`.
- 2 Press .
- 3 Press the shortcut you want to change or delete.
- 4 Press `Delete`.
- 5 The LCD shows you the shortcut name you are deleting. Press `Yes`.

How to recall Shortcuts

Shortcut settings are displayed on the Shortcut screen. To recall a shortcut, press the shortcut name.

Error messages

As with any sophisticated office product, errors may occur. If an error occurs, your machine will display an error message. The most common error messages are shown below.

You can correct most errors yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.

Error Message	Cause	Action
Network connection failed. Verify that the network connection is good.	The machine is not connected to a network.	<ul style="list-style-type: none"> ■ Check the network cable is inserted correctly. ■ If the to Web button was pressed soon after the machine was turned on, the network connection may not have been established yet. Wait and try again.
Connection failed to server. Check network settings.	<p>Network or server settings are incorrect.</p> <p>There is a problem with the network or server.</p>	<ul style="list-style-type: none"> ■ Confirm that network settings are correct, or wait and try again later. ■ If the to Web button was pressed soon after the machine was turned on, the network connection may not have been established yet. Wait and try again.
Connection failed to server. Wrong Date&Time.	Date and time settings are incorrect.	Set the date and time correctly. Note that if the machine's power cord was disconnected for more than 60 hours, the date and time settings may be incorrect.
Authentication is invalid. Reissue temporary ID, and register account again.	The machine's authentication information (needed to access the service) has expired or is invalid.	Apply for Brother Web Connect access again to receive a new temporary ID, and then use the new ID to register the account to the machine (see <i>How to apply for Brother Web Connect access</i> on page 6 and <i>How to register and delete accounts on the machine</i> on page 8).
Failed to upload. Unsupported file or corrupt data. Confirm data of file.	<p>There is a problem with the file you are trying to upload, such as one of the following:</p> <ul style="list-style-type: none"> ■ The file exceeds the service's limit on number of pixels, file size, etc. ■ The file type is not supported. ■ The file is corrupted. 	The file cannot be used.

Error Message	Cause	Action
Service temporarily unavailable. Try again later.	There is a problem with the service and it cannot be used now.	Wait and try again. Try accessing the service from a computer to confirm whether it is available or not.
Incorrect PIN code. Enter PIN correctly.	The PIN registered to the machine is incorrect. The PIN is the four-digit number that was entered when registering the account to the machine.	Enter the correct PIN.
Incorrect or expired ID. Or this temporary ID is already used. Enter correctly or reissue temporary ID. Temporary ID is valid for 24 hours after it is issued.	The temporary ID that was entered is incorrect.	Enter the correct temporary ID.
	The temporary ID that was entered has expired. A temporary ID is valid for 24 hours.	Apply for Brother Web Connect access again and receive a new temporary ID, and then use the new ID to register the account to the machine (see <i>How to apply for Brother Web Connect access</i> on page 6 and <i>How to register and delete accounts on the machine</i> on page 8).
Display name has already been registered. Enter another display name.	The name entered as the display name has already been registered.	Enter a different display name.
Max Qty of accounts reached. Try again after deleting unnecessary accounts.	The maximum number of accounts (10) have already been registered.	Delete any unnecessary accounts and try again.
Account is invalid. Please register account and shortcut again after deleting this shortcut.	The shortcut cannot be used because the account was deleted after the shortcut was registered.	Delete the shortcut, and then register the account and shortcut again.

A

brother[®]

**Visit us on the World Wide Web
<http://www.brother.com/>**



www.brotherearth.com