

brother

TZe
TAPE**HS**
TUBE

QUICK SETUP GUIDE


P-touch

E550W

Read this guide before you start using your P-touch.

Keep this guide in a handy place for future reference.

Please visit us at support.brother.com where you can get product support and answers to frequently asked questions (FAQs).

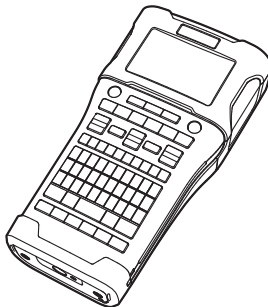

www.brother.com

INTRODUCTION

Thank you for purchasing the P-touch model E550W.

Your new E550W is an intuitive, easy to operate and feature rich labeller that produces professional looking and high quality labels.

This manual contains various precautions and basic procedures for using the P-touch. Read this manual carefully before using and keep in a handy place for future reference.

Available Manuals

The following manuals are available for this P-touch. The latest manuals can be downloaded from the Brother support website at support.brother.com.

Quick Setup Guide (this guide)

This guide provides information you should read before using the P-touch, such as setting up the machine.

User's Guide (PDF manual on the included CD-ROM)

This guide provides basic information about using the P-touch along with detailed troubleshooting tips.

Network User's Guide for E550W

This guide provides information about the network settings. This guide can be downloaded from the Brother support website at support.brother.com.

Available Applications for Use with Computers

P-touch Editor

P-touch Transfer Manager

P-touch Update Software

Refer to "Using P-touch Software" on page 39 for details.

Available Applications for Use with Mobile Devices

Brother offers various applications for use with the P-touch, including applications that allow you to print directly from your Apple iPhone, iPad, and iPod touch or Android™ smartphone, and applications that allow you to transfer data, such as templates, symbols, and databases that were created using a computer, to the P-touch wirelessly.

The Brother applications can be downloaded free-of-charge from the App Store or Google Play.

Software Development Kits

A software development kit (SDK) is available. Visit the Brother Developer Center (www.brother.com/product/dev/index.htm).

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Compilation and Publication Notice

Under the supervision of Brother Industries, Ltd., this manual has been compiled and published covering the latest product's descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

If new versions of the E550W operating system becomes available, this manual may not reflect the updated features. Therefore, you may find that new operating system and the contents in this manual may be different.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Trademarks and Copyrights

Microsoft, Windows Vista, Windows Server and Windows are either registered trademarks or trademarks of Microsoft Corp. in the United States and/or other countries.

Apple, Macintosh, Mac OS, iPhone, iPad and iPod are trademarks of Apple Inc., registered in the United States and other countries.

The names of other software or products used in this document are trademarks or registered trademarks of the respective companies that developed them.

Wi-Fi and Wi-Fi Alliance are registered trademarks of the Wi-Fi Alliance.

Each company whose software title is mentioned in this manual has a Software Licence Agreement specific to its proprietary programs.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Open Source Licensing Remarks

This product includes open-source software.




To see the open source licensing remarks, please go to the manual download selection on your model's home page of Brother support website at support.brother.com.

Contents









GETTING STARTED	17
Unpacking Your P-touch	17
General Description	18
LCD Display	19
Key Names and Functions	21
Power Supply	23
AC Adapter	23
Rechargeable Li-ion Battery	23
Alkaline/Ni-MH Battery	26
Inserting a Tape Cassette	27
Turning Power On/Off	28
自動關機 Time	28
Feeding Tape	29
送帶並裁切	29
送帶不裁切	29
LCD Display	30
畫面對比度	30
背光	30
EDITING A LABEL	31
Selecting a Labelling Application Type	31
GENERAL	31
FACEPLATE	31
CABLE WRAP	31
CABLE FLAG	32
PATCH PANEL	32
PUNCH-DOWN BLOCK	33
熱縮套管	33
Creating a Bar Code Label	34
Setting Bar Code Parameters and Entering Bar Code Data	34
Editing and Deleting a Bar Code	35
Entering a Serialize Label	35
連續	35
Advanced Serialize	36
USING P-TOUCH SOFTWARE	39
Using P-touch Software	39
Features	39
System Requirements	39
Installing the Software and Printer Driver	40
Uninstalling the Printer Driver	42
Uninstalling the Software	43

Safety Precautions

To prevent injury and damage, important notes are explained using various symbols.
The symbols and their meanings are as follows:

 DANGER	Indicates an imminently hazardous situation which, if the product is handled without following the warnings and instructions, will result in death or serious injuries.
 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.













The symbols used in this manual are as follows:

	Indicates a prohibited action.		Indicates that disassembly is prohibited.
	Indicates that exposure to water is prohibited.		Indicates a part of the machine that should not be touched.
	Indicates an action that must be done.		Indicates that you should unplug the machine.
	Indicates a risk of fire under certain circumstances.		Indicates the possibility of an electrical shock.

DANGER

Rechargeable Li-ion Battery

Carefully observe the following precautions for the rechargeable Li-ion battery (hereafter referred to as “rechargeable battery”). If these precautions are not followed, overheating, leaking, or cracks in the battery may result in an electrical short, explosion, smoke, fire, electric shock, injury to yourself or others, or damage to the product or other property.

- | | |
|--|--|
| <p> Use the rechargeable battery only for its intended purpose. The P-touch and rechargeable battery are designed to function exclusively with each other. DO NOT insert the rechargeable battery into a different P-touch, or a different rechargeable battery into your P-touch, otherwise fire or damage may result.</p> <p> To charge the rechargeable battery, insert it into the P-touch, and then use the AC adapter designed specifically for this P-touch.</p> <p> DO NOT charge the rechargeable battery near a fire or in direct sunlight. This could activate the protection circuitry, which is designed to prevent danger from high heat. Activation of the protection circuitry could cause charging to stop, charging to occur with excessive current/voltage if the protection circuitry fails, or an abnormal chemical reaction within the battery.</p> <p> When charging the rechargeable battery, use only a battery charger designed specifically for the rechargeable battery.</p> <p> DO NOT allow wires or other metal objects to come into contact with the terminals of the rechargeable battery. DO NOT carry or store the rechargeable battery with metal objects such as necklaces or hairpins. This could cause an electrical short, and lead metal objects such as wires, necklaces, or hairpins to overheat.</p> | <p> DO NOT use or leave the rechargeable battery near fire, heaters, or other high temperature (above 80 °C) locations.</p> <p> DO NOT allow the rechargeable battery to come into contact with or to be immersed in water.</p> <p> DO NOT use the rechargeable battery in corrosive environments, such as areas where salty air, salt water, acids, alkalis, corrosive gases, chemicals, or any corrosive liquid are present.</p> <p> DO NOT use the rechargeable battery if it is damaged or leaking.</p> <p> DO NOT directly solder any connections to the rechargeable battery. This could cause internal insulation to melt, gas to be emitted, or safety mechanisms to fail.</p> <p> DO NOT use the rechargeable battery with the polarity (+) (-) reversed. Check the orientation of the rechargeable battery before inserting it, and do not try to force the rechargeable battery into the P-touch. Charging the rechargeable battery with the polarity reversed could cause an abnormal chemical reaction within the rechargeable battery or abnormal current flow during discharge.</p> <p> DO NOT directly connect the rechargeable battery to a household electrical supply.</p> |
|--|--|

⚠ DANGER


Rechargeable Li-ion Battery







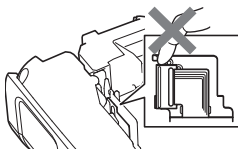


- ⊘ Liquid (electrolyte) leaking from the P-touch or rechargeable battery may indicate that the rechargeable battery is damaged. If the rechargeable battery leaks, immediately stop using the P-touch, unplug the AC adapter, and isolate the P-touch by placing it in a bag. Do not touch the electrolyte. If electrolyte gets in the eyes, do not rub them. Immediately rinse liberally with tap water or other clean water and seek the advice of a medical professional. If left alone, the electrolyte could cause eye damage. If electrolyte contacts your skin or clothing, immediately rinse them with water.
- ⊘ DO NOT put the rechargeable battery, or a P-touch with the rechargeable battery installed, into a microwave oven or a high pressure container.
- ⊘ DO NOT leave a drained rechargeable battery in the P-touch for a long period of time. This could shorten the life of the rechargeable battery or lead to an electrical short.
- ⚠ If the P-touch can only be used for a short period of time, even though the rechargeable battery is fully charged, the rechargeable battery may have reached the end of its service life. Replace the rechargeable battery with a new one. When removing and replacing the rechargeable battery, cover the terminals of the old rechargeable battery with tape to avoid creating a short in the battery.
- ⊘ DO NOT disassemble, modify, or attempt to repair the rechargeable battery.
- ⊘ DO NOT dispose of the rechargeable battery in fire or intentionally overheat. This could cause the internal insulation to melt, gas to be emitted, or safety mechanisms to fail. Additionally, the electrolyte solution could catch fire.
- ⊘ DO NOT puncture the rechargeable battery with any objects, subject it to severe shocks or throw it. Damage to the rechargeable battery's protection circuit could cause the rechargeable battery to be recharged at an abnormal current/voltage or cause an abnormal chemical reaction within the rechargeable battery.
- ⊘ DO NOT incinerate the rechargeable battery or dispose of it with household waste.

WARNING

P-touch

Follow these guidelines to avoid fire, electric shock, the risk of injury to yourself or others, and/or damage to the P-touch or other property.









-  DO NOT allow the P-touch to get wet or use the P-touch in areas that may become wet, such as bathrooms or near sinks.
-  DO NOT touch any metal parts near the print head. The print head becomes very hot during use and remains very hot immediately after use. Do not touch it directly with your hands.
-  DO NOT use the P-touch with a foreign object in it. If water, a metallic substance, or any other foreign object enters the P-touch, disconnect the AC adapter and remove the batteries, and contact Brother customer service.
-  Do not use the P-touch in special environments, such as near medical equipment. Electromagnetic waves may cause the medical equipment to malfunction.
-  Users with heart pacemakers should move away from the P-touch if they sense any abnormalities. Then, immediately seek the advice of a medical professional.
-  DO NOT disassemble the P-touch. For inspection, adjustment, and repair of the P-touch, contact Brother customer service.
-  Plastic bags are used in the packaging of your P-touch. To avoid danger of suffocation, keep these bags away from babies and children.
-  If you notice heat, an abnormal odour, discolouration of the P-touch, deformation, or anything else unusual while using or storing the P-touch, immediately stop using the P-touch, disconnect the AC adapter, and remove the batteries.
-  To prevent damage, do not drop or hit the P-touch.

WARNING

Alkaline batteries/Ni-MH rechargeable batteries

Follow these guidelines to avoid liquid leakage, heat, rupture of the battery and cause personal injury.

-  DO NOT throw into fire, heat up, short-circuit, recharge, or disassemble the battery.
-  DO NOT allow batteries to get wet, for example, by handling them with wet hands or spilling beverages onto them.
-  If fluid leaked from the batteries gets into your eyes, immediately rinse your eyes with a large amount of clean water, and then seek medical attention. If leaked fluid enters your eyes, loss of eyesight or other damage to the eyes may result.
-  DO NOT allow a metal object to contact both the plus and minus ends of a battery.
-  DO NOT use sharp objects, such as tweezers or a metallic pen, to remove or replace the batteries.
-  DO NOT use a damaged, deformed, or leaking battery, or a battery whose label is damaged. Doing so may result in generating excessive heat. Use of a damaged or leaking battery may also lead to battery fluid getting on your hands. If leaked fluid gets onto your hands and you rub your eyes, loss of eyesight or other damage to the eyes may result. Immediately rinse your hands with a large amount of clean water, and then seek medical attention.

WARNING


AC Adapter

Follow these guidelines to avoid fire, damage, electric shock, failure or the risk of injury.

- ❗ Make sure that the plug is fully inserted into the power outlet. Do not use an outlet that is loose.
- ❗ Always use the specified AC adapter, and always plug the AC adapter into an electrical outlet with the specified voltage (220-240 V). Failure to do so may result in injury to yourself or others, or damage to the P-touch or other property. Brother does not assume any responsibility for any accident or damage, resulting from not using the specified AC adapter and adapter cord.
- ⊘ DO NOT connect the AC adapter or adapter cord to other products.
- ⚠ DO NOT touch the AC adapter and the P-touch during a thunderstorm. There may be a remote risk of electric shock from lightning when the P-touch is used during a thunderstorm.
- ⊘ DO NOT touch the AC adapter or power plug with wet hands.
- ⊘ DO NOT use the AC adapter in places with high humidity or moisture, such as bathrooms.
- ⊘ DO NOT use a damaged adapter cord or power plug.
- ⊘ DO NOT place heavy objects on, damage, or modify the adapter cord or plug. Do not forcibly bend or pull the adapter cord.
- ⊘ DO NOT drop, hit, or otherwise damage the AC adapter.

Tape Cutter

- ⊘ DO NOT touch the blade of the cutter unit.

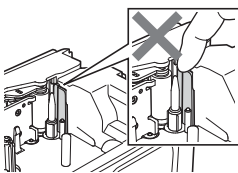

⚠ CAUTION

Alkaline batteries/Ni-MH rechargeable batteries

Follow these guidelines to avoid liquid leakage, overheating or rupture of the battery.

- ⊘ DO NOT use a battery other than the one specified for use with your P-touch. Do not use combinations of old and new batteries or combinations of different types, different charging levels, different manufacturers or different models.
- ⚠ If fluid leaked from the battery gets on your skin or clothes, immediately rinse them with clean water.
- ⚠ Remove the batteries if you do not intend to use the P-touch for an extended period of time.
- ⚠ Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- ⚠ When using Ni-MH rechargeable batteries, charge the batteries before using them with the appropriate, specialised battery charger.
- ⊘ DO NOT disassemble or modify the batteries.
- ⊘ DO NOT expose the batteries to heat or dispose of the batteries in a fire.

AC Adapter

- ⚠ If you do not intend on using the P-touch for an extended period of time, disconnect the AC adapter from the power outlet.
- ⚠ When disconnecting the AC adapter from the power outlet, always hold the AC adapter.
- ⊘ DO NOT use the AC adapter in places of high humidity such as bathrooms.
- ⊘ DO NOT overload an electrical circuit with the AC adapter.
- ⊘ DO NOT disassemble or modify the AC adapter.
- ⊘ DO NOT allow the AC adapter/power plug to get wet, for example, by handling them with wet hands or spilling beverages on to them.

Tape Cutter









Follow these guidelines to avoid minor personal injury and damage to the P-touch.

- ⊘ DO NOT open the tape compartment cover when operating the cutter unit.
- ⊘ DO NOT apply excessive pressure to the cutter unit.

CAUTION

P-touch

Follow these guidelines to avoid minor personal injury and damage to the P-touch.

-  Store the P-touch on a flat, stable surface such as a desk or in a drawer.
-  DO NOT leave the P-touch or any tape within the reach of young children.
-  DO NOT place any heavy objects on top of the P-touch.
-  Always use the suggested AC adapter (AD-E001) for the P-touch and plug it into an outlet with the specified voltage. Failure to do so could result in damage or failure of the P-touch.
-  DO NOT use the P-touch in places with moisture or high humidity, such as bathrooms.
-  DO NOT allow the P-touch to get wet, for example, by handling it with wet hands or spilling beverages onto it.
-  DO NOT disassemble or modify the P-touch.
-  If you notice heat, an abnormal odour, discolouration of the P-touch, deformation, or anything else unusual while using or storing the P-touch, immediately discontinue the use of the P-touch, disconnect the AC adapter, and remove the batteries.

General Precautions

Rechargeable Li-ion battery

- At the time of purchase, the rechargeable Li-ion battery is slightly charged so that the operation of the P-touch can be verified; however, the rechargeable Li-ion battery should be fully charged with the AC adapter before the P-touch is used.
- If the P-touch will not be used for a long period of time, remove the rechargeable Li-ion battery from the P-touch, and then store it in a location where it is not exposed to static electricity, high humidity, or high temperatures (temperatures between 15 and 25 °C 40 to 60% humidity are recommended). In order to maintain the efficiency and life of the Li-ion rechargeable battery, charge it at least every six months.
- If you notice anything unusual about the rechargeable Li-ion battery the first time it is used, for example overheating or rust, DO NOT continue to use the battery. Contact Brother customer service.

P-touch

- DO NOT install the P-touch near any device that will cause electromagnetic interference. The P-touch may malfunction if left near a television, radio, microwave oven, etc.
- DO NOT use the P-touch in any way or for any purpose not described in this guide. Doing so may result in injury or damage to the P-touch.
- DO NOT put any foreign objects into the tape exit slot, AC adapter connector, or any other part of the P-touch.
- DO NOT touch the print head (see page 8) with your fingers. Use the optional print head cleaning cassette (TZe-CL4) or a soft wipe (e.g. a cotton swab) when cleaning the print head (see the User's Guide).
- DO NOT clean any part of the P-touch with alcohol or other organic solvents. Only use a soft, dry cloth.
- DO NOT place the P-touch in direct sunlight, near heaters or other hot appliances, or in any location exposed to extremely high or low temperatures, high humidity, or dust. The standard operating temperature range of the P-touch is 10 to 35 °C.
- DO NOT leave any rubber or vinyl, or products made of rubber or vinyl, on the P-touch for an extended period of time, otherwise the P-touch may become marked.
- Depending on the environmental conditions and the applied settings, some characters or symbols may be difficult to read.
- Use Brother TZe tapes or HSe tubes with the P-touch.
- DO NOT pull or apply pressure to the tape in the cassette to avoid damaging the P-touch.
- DO NOT try to print labels using an empty tape cassette or without a tape cassette in the P-touch. Doing so will damage the print head.
- DO NOT attempt to cut the tape while printing or feeding since this will damage the tape.
- Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, and the colour of the label may change or be transferred to other objects.
- DO NOT expose the tape cassettes to direct sunlight, high temperatures, high humidity, or dust. Store tape cassettes in a cool, dark place. Use the tape cassettes soon after opening the tape cassette package.
- Markings made with oil-based or water-based ink may be visible through a label affixed over them. To hide the markings, use two labels layered on top of each other or use a dark-coloured label.

INTRODUCTION

.....

- Any data stored in memory will be lost due to failure or repair of the P-touch, or if the battery expires.
- When power is disconnected for more than two minutes, all text and format settings will be cleared. Any text files stored in the memory will also be cleared.
- A protective clear plastic sticker is placed over the display during manufacturing and shipping. This sticker should be removed prior to use.
- The length of the printed label may differ from the displayed label length.
- You can also use 熱縮套管 in this model.
Check the Brother website (www.brother.com) for further information. You cannot print frames, pre-set P-touch templates, or use certain font settings when using 熱縮套管 . Printed characters may also be smaller than when using TZe tape.
- The P-touch is not equipped with a charging feature for Ni-MH rechargeable batteries.
- The printed label may differ from the image that appears on the LCD.
- Note that Brother Industries, Ltd. does not assume responsibility for any damage or injury arising from the failure to follow the precautions listed in this manual.
- We strongly recommend that you read this User's Guide carefully before using your P-touch, and then keep it nearby for future reference.

CD-ROM

- DO NOT scratch the CD-ROM, expose it to extremely high or low temperatures, place heavy objects on top of it, or bend it.
- The software on the CD-ROM is intended for use with the P-touch, and may be installed on more than one computer.

Symbols Used in this Guide

The following symbols are used throughout this guide to indicate additional information.



: This symbol indicates information or directions that may result in damage or injury if ignored, or operations that will result in errors.



: This symbol indicates information or directions that may help you understand and use the P-touch more efficiently.

How to Use the P-touch

■ Create a label with the P-touch

1 GETTING STARTED

- Preparing the P-touch. **P. 17**

2 CREATING A LABEL


- Selecting a labelling application type. **P. 31**
- Entering and editing text.
- Entering 符號 .
- Setting 兩端空白 .

“Editing a Label” in the User’s Guide



In addition to entering text, the P-touch has a large range of formatting options.

Create labels like these:

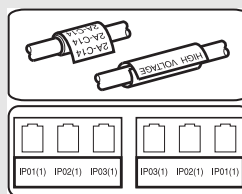

3 LABEL PRINTING

- Printing a label.

“Label Printing” in the User’s Guide



Before printing, you can check the layout of your label using the preview function.

Create labels like these:



- ! • Remove the labels soon after they are cut so that they do not remain in the tape exit slot.
- Do not position the P-touch vertically when using it. Otherwise, the cut labels could fall into the machine and cause a malfunction.

INTRODUCTION

■ Create a label by connecting your P-touch to a computer

1 GETTING STARTED

Your P-touch can be used as a stand alone handheld labeller, or it can be connected to a PC or Mac and used with the included P-touch Editor software to create more elaborate labels.

To use your P-touch connected to a computer, attach your P-touch to a computer via the included USB cable and install the P-touch Editor software and drivers.

- Prepare the P-touch.
- Prepare the PC. **P. 39**

2 CREATING A LABEL


- Launch the P-touch Editor Software.
Enter the label text using P-touch Editor.

"Editing a Label" in the User's Guide

Software Help



Create labels like these:

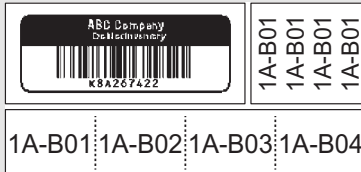

3 LABEL PRINTING

- Print the label

"Label Printing" in the User's Guide

Software Help











- Remove the labels soon after they are cut so that they do not remain in the tape exit slot.
- Do not position the P-touch vertically when using it. Otherwise, the cut labels could fall into the P-touch and cause a malfunction.

GETTING STARTED


Unpacking Your P-touch

Check that the box contains the following components* before using your P-touch labeling system:

■ E550W		
P-touch 	AC adapter  The plug may differ by country.	USB cable 
	Li-ion Battery 	Strap 
Tape Cassette 	CD-ROM 	Quick Setup Guide 


* The components included in the box may differ depending on your country.


General Description

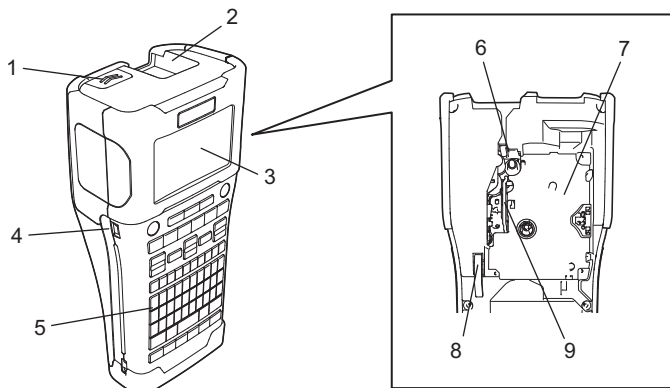

- 1. Cover latch**
- 2. Tape exit slot**
- 3. LCD display**
- 4. Mini-USB port**
- 5. Keyboard**

- 6. Tape cutter**
- 7. Tape cassette compartment**
- 8. Release lever**
- 9. Print head**


 When shipped from the factory, the LCD display is covered with a protective sheet to prevent damage. Remove this sheet before using the P-touch.

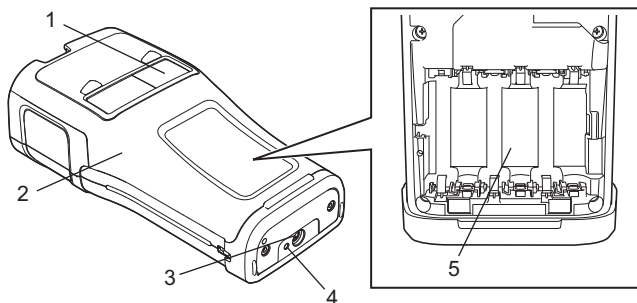

- 1. Tape viewer**
- 2. Rear cover**
- 3. AC adapter connector**

- 4. LED lamp**
- 5. Battery compartment**

LCD Display

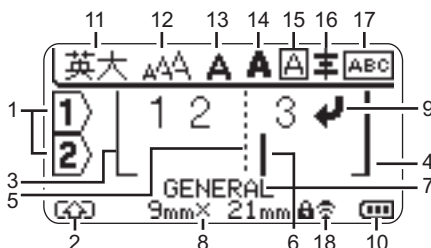

1. Line number

Indicates line number within the label layout.

2. Shift Mode

Indicates shift mode is on.

3. Start Line/4. End Line

The area between the start and end line will be printed.

The short lines extending from the start/end lines show the end of the label layout.

5. Block Separator Line

Indicates the end of a block.

6. Cursor

Indicates the current data input position. Characters are entered to the left of the cursor.


7. Labelling Application Type

Labelling Application Type
Indicates current labelling application type.

8. Tape size

Indicates the tape size as follows for the text entered:

Tape width x Label length


If the label length has been specified,  also appears on the right side of the tape size.

9. Enter/Return symbol

Indicates the end of a line of text.


10. Battery Level

Indicates remaining battery level. It displays only when using Li-ion battery.

 - Full

 - Half

 - Low

 - Empty

11. Caps mode

- Indicate the current inputting method 倉頡 / 簡易倉頡 / 廣東拼音 .
- Indicate the uppercase or lowercase.

12.-16. Style guidance

Indicates the current character size (12), character width (13), character style (14), frame (15) and alignment (16) settings.





The alignment guidance may not be displayed depending on the selected labelling application type.


17. Layout guidance

Indicates the orientation, layout, separator, reverse, and repeated text settings. The displayed items vary according to the selected labelling application type.

18. Wireless connection

Indicates the current state of the wireless connection.

	Connected in WLAN mode
	Disconnected in WLAN mode
	Connected/Disconnected in Direct mode
 (Blinking)	Establishing connection by setup wizard Establishing connection by Ad-hoc mode
(Off)	Wireless connection OFF

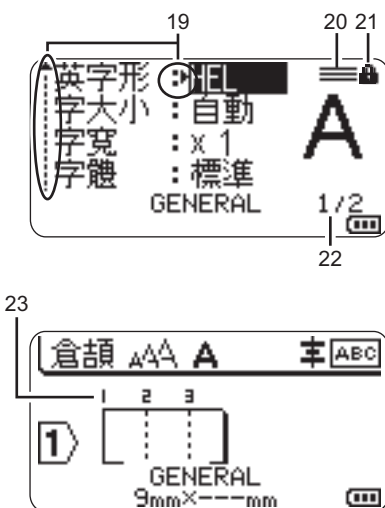

19. Cursor selection

Use the ▲ and ▼ keys to select menu items and the ◀ and ▶ keys to change the settings.

20. Specified line mark

Indicates that separate settings are made for each line.

21. Lock mark

Indicates that some items cannot be changed.

22. Counter

Indicates currently selected number/ selectable number.


23. Block Number

Indicates the block number.



Refer to “LCD Display” on page 30 for details on changing the contrast and 背光 settings of the LCD.

Key Names and Functions

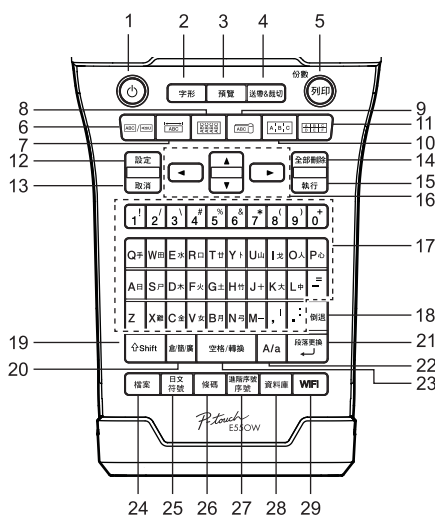

- 1. Power**
Turns the P-touch on and off.
- 2. 字形**
Sets character and label attributes.
- 3. 預覽**
Displays a preview of the label.
- 4. 送帶&裁切**
Feeds 24.5 mm of blank tape then cuts the tape.
- 5. 列印**
 - Prints the current label design onto the tape.
 - Prints multiple copies with the **Shift** key.
- 6. General**
Creates general purpose labels.
- 7. Faceplate**
Creates labels for faceplates, nameplates and single port applications.
- 8. Cable Wrap**
Creates labels that wrap around a cable, fiber or wire.
- 9. Cable Flag**
Creates cable flag labels.
- 10. Patch Panel**
Creates single and multiple line labels for a group of ports on a patch panel.
- 11. Punch Block**
Creates labels up to 3 lines for punch-down blocks.
- 12. 設定**
Sets the P-touch operating preferences (Language, Adjustment, etc.).
- 13. 取消**
Cancels the current command and returns the display to the data entry screen or the previous step.
- 14. 全部刪除**
Clears all text entered, or all text and current label settings.
- 15. 執行**
Selects the displayed option.
- 16. Cursor (▲▼◀▶)**
Moves the cursor in the direction of the arrow.

GETTING STARTED

.....

17. Letter

- Use these keys to type letters or numbers.
- Uppercase letters and symbols can be entered using these keys in combination with the 倉 / 簡 / 廣 or **Shift** key.

18. 倒退

Deletes the character to the left of the cursor.

19. Shift

Use this key in combination with the letter and number keys to type uppercase letters or the symbols indicated on the number keys.

20. 倉 / 簡 / 廣

Toggle the inputting method among 倉頡 / 簡易倉頡 / 廣東拼音 .

21. 段落更換

- Enters a new line when entering text.
- For only the “GENERAL” label application type, enters a new block when used in combination with the **Shift** key.

22. A/a

Turn Caps mode on and off.

23. 空格 / 轉換

- Enters a blank space.
- Returns a setting to the default value.

24. 檔案

Enables frequently used labels in the file memory to be printed, opened, saved, or deleted.

25. 符號

- Use this to select and enter a 符號 from a list of available 符號 .
- To be pressed with the shift key at the meantime, the Japanese (hiragana/katakana) input will be on.

26. 條碼

Opens “ 條碼設定 ” screen.

27. 序號

- Prints serialized labels.
- Serializes and prints any 2 numbers on a label simultaneously when used in combination with the **Shift** key.

28. 資料庫

Uses the selected range of records in the downloaded database to create a label.


29. WiFi

Starts WLAN/Wireless Direct communication.

Power Supply


AC Adapter


Use the AD-E001 (AC adapter) for this P-touch. Connect the AC adapter directly to the P-touch.

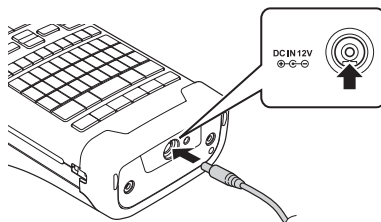

! The AD-18 or AD-24ES cannot be used.

- 1 Insert the plug on the AC adapter cord into the connector marked DC IN 12 V on the P-touch.
- 2 Insert the AC adapter plug into a standard electrical outlet.


- !
- Turn the P-touch off before disconnecting the AC adapter.
 - Do not pull or bend the AC adapter cord.
 - When disconnected from the power and battery for more than two minutes, all text and format settings will be cleared.
 - Downloaded symbols, templates and databases will be saved, even with no power available.
 - After the AC adapter plug is inserted into the electrical outlet, it may take a few seconds until the  (Power) button is enabled.

-  To safeguard and backup the P-touch memory, when the AC adapter is unplugged it is recommended to have rechargeable Li-ion batteries (BA-E001), AA-size alkaline batteries (LR6) or Ni-MH rechargeable batteries (HR6) installed in the P-touch.

Rechargeable Li-ion Battery


■ Installing the Rechargeable Li-ion Battery

- 1 Open the rear cover by pressing the cover latch.
 1. Rear cover
 2. Cover latch

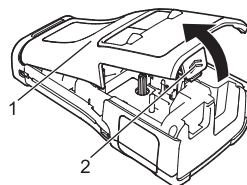

GETTING STARTED

- 2 Insert the rechargeable Li-ion battery into the battery compartment.

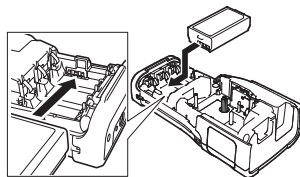

- 3 Confirm that the hooks on the edge of the rear cover are inserted correctly, and then reattach the cover.

! If you cannot attach the rear cover, check to ensure the white lever is in the up position. If not, lift the lever, and then attach the cover.


■ Removing the Rechargeable Li-ion Battery

Remove the battery cover and the rechargeable Li-ion battery, and then reattach the battery cover.

■ Charging the Rechargeable Li-ion Battery


The rechargeable Li-ion battery can be charged while it is inserted in the P-touch. Perform the following procedure to charge the rechargeable Li-ion battery.


- Before using the rechargeable Li-ion battery, use the following procedure to charge it.
- Up to 6 hours may be needed to fully charge the rechargeable Li-ion battery.

- 1 Make sure that the P-touch is turned off. If the P-touch is turned on, press and hold the  (Power) button to turn it off.

- 2 Make sure that the rechargeable Li-ion battery is installed in the P-touch.

- 3 Use the AC adapter to connect the P-touch to an AC power socket.

The LED next to the adapter connector turns on during charging, it goes off when the rechargeable Li-ion battery is fully charged. The battery level indicator on the display will fill three bars .

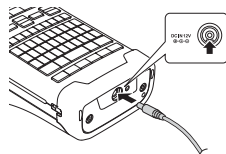

■ Stopping Rechargeable Li-ion Battery Charging

To stop the rechargeable Li-ion battery from charging, disconnect the AC adapter.

! Tips on Using the Rechargeable Li-ion Battery

- Charge the rechargeable Li-ion battery before use. Do not use it before it is charged.
- The rechargeable Li-ion battery charging can take place in 5 to 35 °C environments. Charge the rechargeable Li-ion battery in an environment in this temperature range. If the surrounding temperature is out of this range, the rechargeable Li-ion battery will not be charged, and the battery indicator will remain lit.
- If the P-touch is used when both the rechargeable Li-ion battery is installed and the AC adapter is connected, the battery indicator may turn off and charging may stop even if the rechargeable Li-ion battery has not been fully charged.



Rechargeable Li-ion Battery Characteristics

Understanding the properties of the rechargeable Li-ion battery will allow you to optimise its usage.

- Using or storing the rechargeable Li-ion battery in a location exposed to high or low temperatures may accelerate its deterioration. In particular, using a rechargeable Li-ion battery with a high charge (90% or more) in a location exposed to high temperatures will considerably accelerate battery deterioration.
- Using the P-touch while the rechargeable Li-ion battery is installed and charging may accelerate the battery's deterioration. If using the P-touch when the rechargeable Li-ion battery is installed, disconnect the AC adapter.
- If the P-touch will not be used for longer than one month, remove the rechargeable Li-ion battery from the P-touch, and then store the battery in a cool place away from direct sunlight.
- If the rechargeable Li-ion battery will not be used for a long period of time, we recommend charging it every 6 months.
- If you touch a part of the P-touch while the Li-ion battery is charging, that part of the P-touch may feel warm. This is normal, and the P-touch may be used safely. If the P-touch becomes extremely hot, discontinue use.

Specifications


- Charging time: Approximately 6 hours when charged by an AC adapter (AD-E001)
- Nominal Voltage: DC 7.2 V
- Nominal Capacity: 1,850 mAh

GETTING STARTED

Alkaline/Ni-MH Battery

- 1** After making sure that the power is off, remove the rear cover on the back of the P-touch. If the batteries are already in the P-touch, remove them.

⚠ Make sure that the power is turned off when replacing batteries.

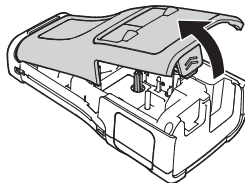

- 2** Insert six new AA-size alkaline batteries (LR6), or fully charged Ni-MH rechargeable batteries (HR6). Make sure that the positive (+) and negative (-) ends of the batteries match the positive (+) and negative (-) marks inside the battery compartment.


Users of alkaline batteries

⚠ Always replace all six batteries at the same time using brand new ones.


Users of Ni-MH rechargeable batteries

⚠ Always replace all six batteries at the same time with fully charged ones.


💡 Visit us at support.brother.com for the latest information about recommended batteries.

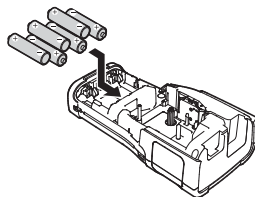

- 3** Attach the rear cover by inserting the three hooks at the bottom into the slots on the P-touch, then pushing down firmly until it snaps into place.

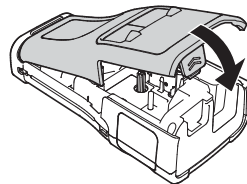


- ⚠
- Remove the batteries if you do not intend to use the P-touch for an extended period of time.
 - Dispose of the battery at an appropriate collection point, not in the general waste stream. In addition, be sure to observe all applicable regulations.
 - When storing or discarding the battery, wrap it (for example with cellophane tape), to prevent it from short-circuiting.
- (Battery insulation example)
1. Cellophane tape
 2. Alkaline or Ni-MH battery



Inserting a Tape Cassette


Tape cassettes of 3.5 mm, 6 mm, 9 mm, 12 mm, 18 mm or 24 mm width, and Tube cassettes of 5.8 mm, 8.8 mm, 11.7 mm, 17.7 mm or 23.6 mm width can be used in your P-touch.

- ❗ If the new tape cassette has a cardboard stopper, be sure to remove the stopper before inserting the cassette.




- 1** Check that the end of the tape is not bent and that it passes through the tape guide. If the tape is not passed through, pass it through the tape guide as shown in the illustration.

1. End of tape
2. Tape guide

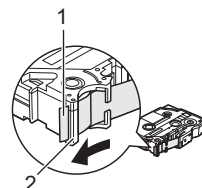


- 2** After making sure that the power is off, place the P-touch on a flat surface as shown in the illustration, and then open the rear cover. If there is already a tape cassette in the P-touch, remove it by pulling it straight up.

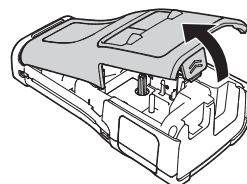

- 3** Insert the tape cassette into the tape compartment, with the end of the tape facing the P-touch tape exit slot, and press firmly until you hear a click.


1. Tape exit slot

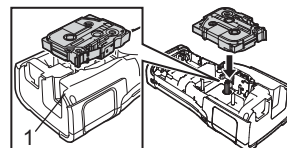

- ❗
- When inserting the tape cassette, make sure that the tape and ink ribbon do not catch on the print head.
 - Make sure that there is no slack in the tape, and then carefully insert the tape cassette. If there is slack in the tape, the tape will catch on the protrusion (2) when the cassette is inserted and become bent or wrinkled, causing the tape to jam.

To fix the slack in the tape, refer to the illustration in step 1 and pull the tape outside of the tape guide.

- When removing the tape cassette, make sure that the tape does not catch on the protrusion (2).

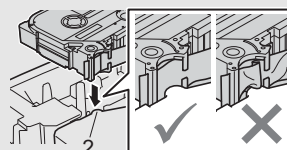


GETTING STARTED

4 Close the rear cover.



- Place the P-touch on a flat surface as shown in the illustration, and then attach the rear cover.
- If you cannot attach the rear cover, check to ensure the white lever (1) is in the up position. If not, lift the lever, and then attach the cover.

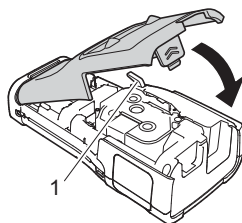


- **Do not pull the label coming out of the tape exit slot. Doing so will cause the ink ribbon to be discharged with the tape. The tape may no longer be functional after the ink ribbon discharges.**
- Store tape cassettes in a cool dark location, away from direct sunlight and high temperature, high humidity, or dusty locations. Use the tape cassette as quickly as possible after opening the sealed package.

Extra Strength Adhesive Tape:

- For rough and textured surfaces, we recommend using Extra Strength Adhesive Tape.
- **Although the instruction sheet included with the Extra Strength Adhesive Tape cassette recommends cutting the tape with scissors, the tape cutter that this P-touch is equipped with is able to cut Extra Strength Adhesive Tape.**

Turning Power On/Off

Press the  (Power) button to turn the P-touch on.

Press and hold the  (Power) button again to turn the P-touch off.



- Your P-touch has a power saving function that automatically turns itself off if no key is pressed within a certain time, under certain operating conditions. Refer to the “自動關機 Time” for details.

自動關機 Time

If you use the AC adapter or Li-ion battery, you can change the setting of the 自動關機 time.



- When you use alkaline batteries or Ni-MH batteries, the 自動關機 time cannot be changed. (The time is fixed to 20 minutes.)

1 Press the 設定 key, select “自動關機” using the ▲ or ▼ key, and then press the 執行 or 段落更換 key.

2 Select the battery shown on the LCD display by using the ▲ or ▼ key and set the value using the ◀ or ▶ key.
“AC 變壓器” or “鋰電池” can be selected.

3 Press the 執行 or 段落更換 key.

● 自動關機 Time ●

Setting	Value	Setting	Value
AC 變壓器	關	鋰電池	關
	10 分		10 分
	20 分		20 分
	30 分		30 分
	40 分		40 分
	50 分		50 分
	1 小時		1 小時
	2 小時		
	4 小時		
	8 小時		
	12 小時		

- ❗
- If you connect the AC adapter to the P-touch after you specified “自動關機”, the setting for “AC 變壓器” becomes valid.
 - The default value is “1 小時” for the AC Adapter and “30 分” for the Li-ion battery.

Feeding Tape

- ❗
- Be sure to feed tape to remove any slack in the tape and ink ribbon after inserting the tape cassette.
 - **Do not pull the label coming out of the tape exit slot. Doing so will cause the ink ribbon to be discharged with the tape. The tape may no longer be functional after the ink ribbon discharges.**
 - Do not block the tape exit slot during printing or when feeding tape. Doing so will cause the tape to jam.

送帶並裁切

The Feed & Cut function feeds 24.5 mm of blank tape, and then cuts the tape.


- 1 Press the **送帶&裁切** key.
“送帶並裁切?” will appear on the LCD display.
 - 2 Using the ▲ or ▼ key to select the “送帶並裁切” and then press either **執行** or **段落更換**.
The message “執行中。” appears while the tape is fed, and then the tape is cut.
- 💡 To exit or cancel this function press **取消**.

送帶不裁切

This function will advance the tape approximately 24.5 mm, resulting in a blank label sticking out of the tape cassette. This action is recommended when using Fabric tapes, which should be cut using scissors.

GETTING STARTED

.....


- 1 Press the **送帶&裁切** key.
“送帶並裁切？” will appear on the LCD display.
 - 2 Using the **▲** or **▼** key to select the “送帶不裁切”, and then press either **執行** or **段落更換** key.
The message “執行中。” appears while the tape is fed.
-  To exit or cancel this function press **取消**.

LCD Display

畫面對比度

You can change the contrast setting of the LCD display to one of five levels (+2, +1, 0, -1, -2) to make the screen easier to read. The default setting is “0”.

- 1 Press the **設定** key, select “調整” using the **▲** or **▼** key, and then press the **執行** or **段落更換** key.
- 2 Select “畫面對比度” using the **▲** or **▼** key, and then set the value using the **◀** or **▶** key.
- 3 Press the **執行** or **段落更換** key.


-  • Press the **取消** key to return to the previous step.
• Pressing the **空格 / 轉換** key on the contrast setting screen sets the contrast to the default value “0”.

背光

You can change the 背光 setting either to **開** or **關**.

The display is easier to see with the 背光 on. The default setting is on.

- 1 Press the **設定** key, and then select “進階” using the **▲** or **▼** key. Press **執行** or **段落更換** key.
- 2 Select “背光” using the **▲** or **▼** key, and press the **執行** or **段落更換** key.
- 3 Select “開” or “關” using the **▲** or **▼** key, and press the **執行** or **段落更換** key.

-  • Power can be saved when the 背光 is turned off.
• The 背光 will automatically turn off, press any key to re-enable it. During printing, the 背光 is disabled. The 背光 turns on during data transmissions.

EDITING A LABEL

Selecting a Labelling Application Type

You can select six different types of labelling applications.



GENERAL

Labels printed with this mode can be used for general purposes. In this mode you can specify the following items.

- 長度: **自動**, 10mm-999mm
- 方向: (**Horizontal**), (**Vertical**)



When the GENERAL mode is selected, you can press the **Shift** key and then press the **段落更換** key to add a new block.

Horizontal

ABCDE

Vertical

ΑΒΓΔΕ

FACEPLATE

Labels printed with this mode can be used to identify various faceplates. Block of text is evenly spaced on a single label. In this mode, and you can specify the following items.

- 長度: **50mm**, 10mm-999mm
- 段落數: **1**, 1 - 5
- 方向: (**Horizontal**), (**Vertical**)

1 block

1A-B01

2 blocks

1A-B01 1A-B02

CABLE WRAP

Labels printed with this mode can be wrapped around a cable or wire. In the CABLE WRAP mode, the text is printed as shown in the illustrations. You can also specify the following items.

- 單位長度: **直徑 (Custom Diameter)**, 長度 (Custom Length), CAT5/6, CAT6A, COAX, AWG, 旋轉
- 值: Depending on UOM
- 連續標籤: **關**, **關**
- Cross-ID: **關**, **關**

Standard

2A-C14
2A-C14
2A-C14
2A-C14
2A-C14
2A-C14

旋轉


2A-C14
2A-C14
2A-C14
2A-C14

Text: Type in single or multiple lines of data.



When using 可彎曲式 Tape:

- We recommend using 可彎曲式 Tape for Cable Wrap and Cable Flag labels.
- Labels made with 可彎曲式 Tape are not designed for use as electrical insulation.
- When wrapping labels around cylindrical objects, the diameter (1) of the object should be at least 3 mm.
- The overlapping (2) ends of the label or the label flag should be at least 5 mm.




When using Self-Laminating Tape:

- We recommend using Self-Laminating Tape for Cable Wrap labels.
- The text is horizontally printed.
- When you insert the Self-Laminating Tape and select Cable Wrap, you can specify the following items.
 - 長度: **自動**, 15mm-300mm
 - 垂直偏移 (Adjusting Vertical Position): -7, -6, -5, -4, -3, -2, -1, **0**, +1, +2, +3, +4, +5, +6, +7
 - Cross-ID: **關**, **關**

EDITING A LABEL


CABLE FLAG

Labels printed with this mode can be wrapped around a cable or wire, and both ends of the label stick together to form a flag. The text on flag labels is printed on both ends of the label, leaving a blank space in the middle that wraps around the cable. In this mode, you can specify the following items.

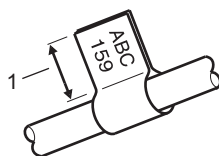

Flag at least 15 mm

- 旗幟標籤設計： (The same text is printed on each block.),
 (Two different texts are printed on each block.)
- 旗幟標籤長度：**30mm**, 10mm-200mm
- 纜線直徑：**6mm**, 3mm-90mm
- 方向： (**Horizontal**), (Vertical)
- Cross-ID: ,

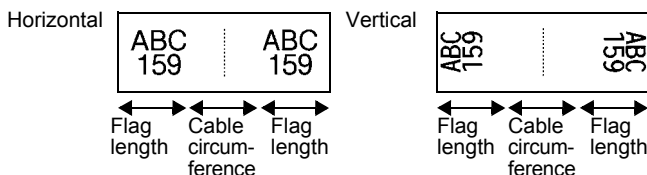


- You can enter up to two bar codes when is selected in flag layout.
- We recommend using 可彎曲式 Tape for Cable Flag labels.
- Labels made with 可彎曲式 Tape are not designed for use as electrical insulation.

PATCH PANEL

Labels printed with this mode can be used to identify various types of panels. In this mode, you can specify the following items.

- 段落長度：**15.0mm**, 5.0mm-300.0mm
- 段落數：**4**, 1-99
- 分行： (**Tic**), (Dash), (Line),
 (Bold), (Frame), (None)
- 方向： (**Horizontal**), (Vertical)
- 反轉： ,
- 進階： ,



Adjust 段落長度 independently when “進階” is set to “開”.



- 無邊： ,
Set the left and right label margins to zero.



“進階”和“無邊” cannot be set to “開” at the same time.

PUNCH-DOWN BLOCK

Labels printed with this mode can be used to identify a type of electrical connection often used in telephony. There are up to three lines for each block on a single label and you can enter three lines for each block. In this mode, you can specify the following items.

- 模組寬度 : **200mm**, 50mm-300mm
- 段落類型 : **4 Pairs**, 2 Pairs, 3 Pairs, 5 Pairs, 空格
- 順序類型 : 1 2 3 (**None**), 1 2 3 (Horizontal), 1 2 4 5 (Backbone)
- 初始值 : ---, 1 - 99999

B01	B02	B03	B04	B05	B06
B07	B08	B09	B10	B11	B12

1	4	8	12	16	20	24
28	32	36	40	44	48	


- When “ 空格 ” is selected in “ 段落類型 ”, “ 順序類型 ” is set to None.
- When None is selected in “ 順序類型 ”, “ 初始值 ” shows “---” and you cannot set a value. Selecting Horizontal or Backbone however, allows you to set the “ 初始值 ” from 1 to 99,999.

熱縮套管

When using 熱縮套管 , the 熱縮套管 setting screen will be displayed when any of the labelling application type keys is pressed.

- 長度 : **自動** , 25mm-999mm
- However, the maximum printing length is 500 mm when using 熱縮套管 with a width of 5.8 or 8.8 mm.

Text: Type in single or multiple lines of data.

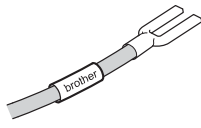

- When using 熱縮套管 :**
- You cannot print frames.
 - Portions of some decorative characters may be cut off when a line is broken.
 - The printed characters may be smaller than when using TZe tape.

Creating a Bar Code Label

Using the Bar Code function you can create labels with one dimensional bar codes for use with asset control tags, serial number labels, and even POS and stock control systems. Selectable “條碼” are listed in the User's Guide.



- The P-touch is not designed exclusively for creating bar code labels. Always check that bar code labels can be read by the bar code reader.
- For best results, print bar code labels in black ink on white tape. Some bar code readers may not be able to read bar code labels created using coloured tape or ink.
- Use the “大” setting for “寬度” whenever possible. Some bar code readers may not be able to read bar code labels created using the “小” setting.
- Continuously printing a large number of labels with bar codes can overheat the print head, which may affect printing quality.

Setting Bar Code Parameters and Entering Bar Code Data

- 1 Press the 條碼 key.
The “條碼設定” screen is displayed.



Up to five bar codes can be entered on a label.

- 2 Select an attribute using the ▲ or ▼ key, and then set a value for that attribute using the ◀ or ▶ key.

- 規格: **CODE39**, CODE128, EAN-8, EAN-13, GS1-128 (UCC/EAN-128), UPC-A, UPC-E, I-2/5 (ITF), CODABAR

- 寬度: 小, 大

- 底部文字: 有, 無

- 檢查碼: 無, 有

Check digit only available for Code39, I-2/5 and Codabar protocols.



Characters may not appear below the bar code even when “有” is selected for “底部文字”, depending on the tape width being used, the number of lines entered, or the current character style settings.

- 3 Press the 執行 or 段落更換 key to apply the settings.



New settings are NOT applied if you do not press the 執行 or 段落更換 key.

- 4 Type in the bar code data.
Special characters can be entered in the bar code when using the CODE39, CODE128, CODABAR or GS1-128 protocols. When not using special characters, go to step 7.

< 條碼輸入 >

CODE39

▶ *2013/ * ◀

(11)

- 5 Press the 符號 key.
A list of characters available for the current protocol is displayed.

- 6 Select a character using the ▲ or ▼ key, then press the 執行 or 段落更換 key to insert the character in the bar code data.

< 條碼輸入 >

CODE39

▶ *2013/ * ◀

(11)

- 7 Press the **執行** or **段落更換** key to insert the bar code in the label. The bar code is displayed on the text entry screen.



To print labels refer to the User's Guide.



- Press the **取消** key to return to the previous step.
- Press the **空格 / 轉換** key to set the selected attribute to the default value.

Editing and Deleting a Bar Code


- To edit bar code parameters and bar code data, position the cursor beneath the bar code mark on the data entry screen and then open the **條碼設定** screen. Refer to “Setting Bar Code Parameters and Entering Bar Code Data” on page 34.
- To delete a bar code from a label, position the cursor to the right of the bar code mark on the data entry screen and press the **倒退** key.

Entering a Serialize Label


Numerically serialized labels can be created. You can set the increment and count for the series. In **連續** mode, you can create a series of labels by incrementing one numeric character in the pattern. In advanced serialize mode, you can choose simultaneous or advanced. Simultaneous mode creates a series of labels by incrementing two different numbers at the same time. Advanced mode creates a series of labels by allowing you to select two sequences in the pattern and increment them consecutively.

連續

- 1 Enter text.
Example: Create labels 1A-A01, 1A-A02, 1A-A03, 1A-A04 from 1A-A01 by using this function.




- 2 Press the **序號** key and the screen to **指定範圍** is displayed.




- 3 Use the **▲**, **▼**, **◀** or **▶** keys to position the cursor under the first character, and then press **執行** or **段落更換** key. Then position the cursor under the last character to be incremented. Press **執行** or **段落更換** key.

Example: Select 1 of A01.



- 4 Select “**計算**” and “**遞增**” by using the **▲** or **▼** key and set the value by using the **◀** or **▶** key.

Example: When you want to increase the number by one four times, set “**計算**”: 4, “**遞增**”: 1.




EDITING A LABEL

- 5 Press the **執行** or **段落更換** key to display the screen that you set.

Example:

1A-A01 1A-A02 1A-A03 1A-A04




- When you press the **序號** key, you can do the setting again. After redoing the setting, the message “確認在這個動作後，覆蓋所有資料？” is shown. If it's ok to overwrite, press **執行** key.
- You can select **全部** / **當前畫面** / **範圍** when printing as there are multiple pages of labels.
- To print labels refer to the User's Guide.

Advanced Serialize

■ 同時

- 1 Enter text.

Example: Create labels 1A-A01, 1A-B02, 1A-C03, 1A-D04 from 1A-A01 by using this function.




- 2 Press the **Shift** and **序號** keys and select “同時” by using the **▲** or **▼** key and press the **執行** or **段落更換** key.



- 3 指定首區範圍 of characters that you want to increase.

- To specify one character, use the **▲**, **▼**, **◀** or **▶** key to position the cursor under the character and press the **執行** or **段落更換** key twice.
- To specify a range of characters, use the **▲**, **▼**, **◀** or **▶** key to position the cursor under the first character in the range and press the **執行** or **段落更換** key. Then, position the cursor under the last character in the range and press the **執行** or **段落更換** key.

Example: Select 1 of A01.




- 4 Repeat step 3 to 指定二區範圍 of characters that you want to increase.

Example: Select A of A01.




You cannot select the first character(s) because it is greyed out.



- 5 Select “計算” and “遞增” by using the **▲** or **▼** key and set the value by using the **◀** or **▶** key.


Example: When you want to increase the number by one four times, set “計算”: 4, “遞增”: 1.



- 6 Press the **執行** or **段落更換** key to display the screen that you set.

Example:

1A-A01 1A-B02 1A-C03 1A-D04






- When you press the **Shift** and **序號** keys, you can do the setting again. After redoing the setting, the message “確認在這個動作後，覆蓋所有資料？” is shown. If it's ok to overwrite, press **執行** key.
- You can select 全部 / 當前畫面 / 範圍 when printing as there are multiple pages of labels.
- To print labels refer to the User's Guide.

■ 進階

1 Enter text.

Example: Create labels 1A-A01, 1A-A02, 1A-A03, 1A-A04 and 1A-B01, 1A-B02, 1A-B03, 1A-B04 from 1A-A01 by using this function.




2 Press the **Shift** and **序號** keys and select “進階” by using the ▲ or ▼ key and press the **執行** key.



3 指定首區範圍 of characters that you want to increase.


- To specify one character, use the ▲, ▼, ◀ or ▶ key to position the cursor under the character and press the **執行** or **段落更換** key twice.
- To 指定範圍 of characters, use the ▲, ▼, ◀ or ▶ key to position the cursor under the first character in the range and press the **執行** or **段落更換** key. Then, position the cursor under the last character in the range and press the **執行** or **段落更換** key.

Example: Select 1 of A01.




4 Select “計算” and “遞增” by using the ▲ or ▼ key and set the value by using the ◀ or ▶ key.

Example: When you want to increase the number by one four times, set “計算”: 04, “遞增”: 1.




5 Repeat steps 3 and 4 to 指定二區範圍 of characters that you want to increase, the increment value, and the count value.

Example: Select A of A01. When you want to increase the number by one twice, set “計算”: 02, “遞增”: 1.





You cannot select the first character(s) because it is greyed out.



6 Press the **執行** or **段落更換** key to display the screen that you set.

Example:



EDITING A LABEL



- When you press the **Shift** and **序號** keys, you can do the setting again. After redoing the setting, the message “確認在這個動作後，覆蓋所有資料？” is shown. If it's ok to overwrite, press **執行** key.
- You can select **全部 / 當前畫面 / 範圍** when printing as there are multiple pages of labels.
- To print labels refer to the User's Guide.



- Press the **取消** key to return to the previous step.
- Serialize mode can be also applied to bar codes. A bar code is counted as a character.
- Any symbols or other non-alphanumeric characters in the auto-numbering sequence are ignored.
- Serialize mode sequence can only contain a maximum of five characters.
- The “計算” value can be set to a maximum sequence number of 99.
- The “遞增” value can be set in increments of one to nine.



- Letters and numbers increase as shown below:

0 → 1 ...9 → 0 → ...
A → B ...Z → A → ...
a → b ...z → a → ...
A0 → A1 ...A9 → B0 → ...

Spaces (shown as underscores “_” in the example below) can be used to adjust the spacing between characters or to control the number of digits that are printed.

_9 → 10 ...99 → 00 → ...
_Z → AA ...ZZ → AA → ...
1_9 → 2_0 ...9_9 → 0_0 → ...

USING P-TOUCH SOFTWARE

Using P-touch Software

Install the P-touch software and printer driver to use your printer with your computer. Visit your model's page on the Brother support website at support.brother.com and download the following software:

- Windows: The printer driver, P-touch Editor, P-touch Update Software, P-touch Transfer Manager, and the Printer Setting Tool.
- Mac: The printer driver and P-touch Editor.

To print from computer, you must connect it to the printer using a USB cable.

Features

P-touch Editor	Makes it easy for anyone to create a wide variety of custom labels in complex layouts by using fonts, templates, and clip art.
Printer Driver	Lets you print labels from the connected P-touch when using P-touch Editor on your computer.
P-touch Update Software	The software can be upgraded to the latest version.
P-touch Transfer Manager	Allows you to transfer templates and other data to the printer and save backups of your data on the computer. (Windows only.)

System Requirements

Before installation, check that your system configuration meets the following requirements. For the latest list of compatible operating systems, visit support.brother.com.

OS	Windows	Windows Vista/Windows 7/Windows 8/Windows 8.1 Microsoft Windows Server 2008/2008 R2/2012/2012 R2
	Macintosh	OS X v10.7.5/10.8.x/10.9.x/10.10.x
Hard disk	Windows	Disk space: 70 MB or more
	Macintosh	Disk space: 500 MB or more
Memory	Windows	Windows Vista/Windows Server 2008/2008 R2/2012/2012 R2: 512 MB or more Windows 7: 1 GB or more (32-bit) or 2 GB or more (64-bit) Windows 8/Windows 8.1: 1 GB or more (32-bit) or 2 GB or more (64-bit)
	Macintosh	OS X v10.7.5: 2 GB or more OS X v10.8.x: 2 GB or more OS X v10.9.x: 2 GB or more OS X v10.10.x: 2 GB or more
Monitor	Windows	SVGA, high colour or higher graphics card
	Macintosh	256 colours or more
Others		CD-ROM drive

Installing the Software and Printer Driver

The procedure for installing the software varies depending on the OS of the computer. The installation procedure is subject to change without notice.

The P-touch names in the following screens may differ from your purchased P-touch name.

❗ DO NOT connect the P-touch to the computer until directed to do so.


■ For Windows

- ❗ The installation procedure may change depending on the Operating System on your PC. Windows 7 is shown here as an example.
- If you are using Windows 8/Windows 8.1, use Adobe® Reader® to open the PDF manuals on the CD-ROM.
If Adobe® Reader® is installed but cannot open the files, change the “.pdf” file association to “Adobe® Reader®” from the control panel before using the CD-ROM.

- 1 Insert the installer CD-ROM into your CD-ROM drive.
If the language screen appears, choose your language.

- 💡 **For Windows Vista/Windows 7/Windows Server 2008/2008 R2:**
If the installer screen does not automatically appear, display the contents of the CD-ROM drive folder, and then double-click [start.exe].
- For Windows 8/Windows 8.1/Windows Server 2012/2012 R2:**
If the installer screen does not automatically appear, click [Run start.exe] in the [Start] screen, or display the contents of the CD-ROM drive folder from the desktop, and then double-click [start.exe].

- 2 Click [Standard Installation].

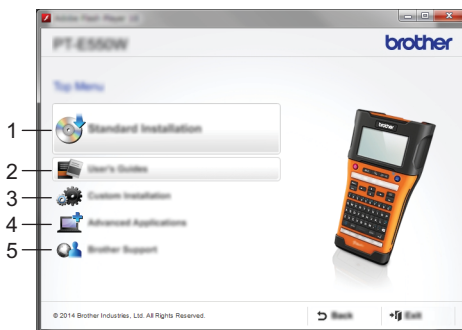

1. Standard Installation

Installs P-touch Editor, the printer driver, P-touch Update Software, the Printer Setting Tool and the User's Guides. (P-touch Transfer Manager is installed together with P-touch Editor.)

2. User's Guides

Displays or installs the User's Guides.

3. Custom Installation

Allows P-touch Editor, the printer driver, P-touch Update Software and the Printer Setting Tool to be individually selected for installation. (P-touch Transfer Manager is installed together with P-touch Editor.)

4. Advanced Applications

Installs the BRAdmin Light utility or displays the Brother Developer Center.

5. Brother Support

Displays the support website (Brother support website).

3 Follow the on-screen instructions to complete setup.**4** The P-touch Update Software can be used to check for updates. If [OK to use P-touch Update Software to update the software to the newest version? (An Internet connection is required to update.)] appears, click [Yes] or [No].

To check for new versions of the software and to update them, click [Yes], and then go to step 5.

To not check for new software versions or update them, click [No], and then go to step 6.




If you click [No] here, you can run the P-touch Update Software at a more convenient time to check for new software versions and update them. Double-click the P-touch Update Software icon on the desktop. (Your computer must be connected to the Internet.)

5 The P-touch Update Software starts up.

If an application appears under [File list], there is a new version of the application. If the check box is selected and [Install] is clicked, that application can be installed. Wait until a message appears indicating that the installation has finished.

If no application appears under [File list], the application currently installed on the computer is the newest version. There is no need to update. Click [Close].

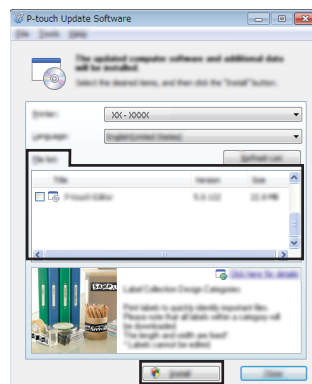**6** When the screen for the online user registration appears, click [OK] or [Cancel].

If you clicked [OK], you will go to the online user registration page before finishing the installation (recommended).

If you clicked [Cancel], installation continues.


7 Click [Finish].

The installation is now complete.





When you are asked to restart the computer, click [Restart].

■ For Macintosh**1** Start your Macintosh, and download the driver, software and manuals from the Brother support website (support.brother.com).



Macintosh users can access this URL directly by clicking the  icon found on the CD-ROM.

Uninstalling the Printer Driver


■ For Windows Vista/Windows Server 2008

- 1** If the P-touch is connected to the computer and is turned on, press and hold the  (Power) button to turn it off.
 - 2** Click  - [Control Panel] - [Hardware and Sound] - [Printers].
 - 3** Select [Brother xx-xxxx] and click [Delete this printer], or right-click the icon and click [Delete].
 - 4** Right-click the [Printers] window, and then click [Run as administrator] - [Server Properties...].
If the authorisation confirmation window appears, click [Continue].
If the [User Account Control] window appears, type in the password, and then click [OK].
The [Print Server Properties] window appears.
 - 5** Click the [Drivers] tab, select [Brother xx-xxxx], and then click [Remove...].
 - 6** Select [Remove driver and driver package], and then click [OK].
 - 7** Close the [Print Server Properties] window.
The printer driver has been uninstalled.
-

■ For Windows 7/Windows Server 2008 R2

- 1** If the P-touch is connected to the computer and is turned on, press and hold the  (Power) button to turn it off.
 - 2** Click  - [Devices and Printers].
 - 3** Select [Brother xx-xxxx] and click [Remove device], or right-click the icon and click [Remove device].
If a User Account Control message appears, type in the password, and then click [Yes].
 - 4** Select [Fax] or [Microsoft XPS Document Writer] in the [Devices and Printers] window, and then click [Print server properties], which appears on the menu bar.
 - 5** Click the [Drivers] tab, and then click [Change Driver Settings].
If a User Account Control message appears, type in the password, and then click [Yes].
Select [Brother xx-xxxx], and then click [Remove...].
 - 6** Select [Remove driver and driver package], and then click [OK].
Follow the on-screen instructions.
 - 7** Close the [Print Server Properties] window.
The printer driver has been uninstalled.
-

■ For Windows 8/Windows 8.1/Windows Server 2012/2012 R2

- 1** If the P-touch is connected to the computer and is turned on, press and hold the  (Power) button to turn it off.
- 2** Click [Control Panel] in [Apps] screen - [Hardware and Sound] - [Devices and Printers].
- 3** Select [Brother xx-xxxx] and click [Remove device], or right-click the icon and click [Remove device].
If a User Account Control message appears, type in the password, and then click [Yes].
- 4** Select [Fax] or [Microsoft XPS Document Writer] in the [Devices and Printers] window, and then click [Print server properties], which appeared in the menu bar.
- 5** Click the [Drivers] tab, and then click [Change Driver Settings].
If a User Account Control message appears, type in the password, and then click [Yes].
Select [Brother xx-xxxx], and then click [Remove...].
- 6** Select [Remove driver and driver package], and then click [OK].
Follow the on-screen instructions.
- 7** Close the [Print Server Properties] window.
The printer driver has been uninstalled.

■ For OS X v10.7.5 - OS X v10.10.x

- 1** Turn off the P-touch.
- 2** Click Apple menu and [System Preferences], and click [Print & Scan] (OS X v10.7.5/ OS X v10.8.x)/[Printers & Scanners] (OS X v10.9.x/OS X v10.10.x).
- 3** Choose [Brother xx-xxxx], and click [-], And then click [Delete Printer].
- 4** Close the [Print & Scan] (OS X v10.7.5/OS X v10.8.x)/[Printers & Scanners] (OS X v10.9.x/OS X v10.10.x) window.
The printer driver has been uninstalled.

Uninstalling the Software

Perform this procedure only if the software is no longer necessary or when reinstalling the software.

For details on how to uninstall the software, please refer to the Help for your OS.

brother

D01J2G001

