


# **User's Guide**

RJ-4250WB RJ-4230B

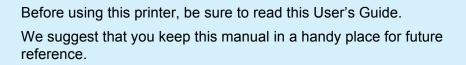

Version 03 ENG

# Introduction

### **Important Notice**

- The contents of this document and the specifications of this product are subject to change without notice.
- Unauthorised duplication or reproduction of any or all content of this document is prohibited.
- Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publications.
- Please note that we cannot assume any responsibility for any damage or lost profit arising from the use of the label created with this printer or the disappearance or change of data due to failure, repair or consumables using the rechargeable Li-ion battery, or any claim from a third party.
- For servicing, adjustments or repairs, contact Brother customer service or your local Brother dealer.
- If the printer operates abnormally or any dysfunction occurs, turn the printer off and disconnect each cord and contact Brother customer service or your local Brother dealer.
- Screen images in this document may differ depending on your version of Windows computer.
- Before using the printer, be sure to read all documents included with the printer for information about safety and correct operation.
- Not all models are available in all countries or regions.

### Trademarks

- Android is a trademark of Google LLC.
- The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Brother Industries, Ltd. is under license.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Epson ESC/P is a registered trademark of Seiko Epson Corporation.
- AirPrint, iPad, iPhone, and iPod touch are trademarks of Apple Inc.
- Wi-Fi<sup>®</sup> is a registered trademark of Wi-Fi Alliance<sup>®</sup>.
- Wi-Fi Protected Setup<sup>™</sup> is a trademark of Wi-Fi Alliance<sup>®</sup>.

### License

- QR Code Generating Program Copyright © 2008 DENSO WAVE INCORPORATED.
- BarStar Pro Encode Library (PDF417, Micro PDF417, DataMatrix, MaxiCode, AztecCode, GS1 Composite, GS1 Databar, Code93, MSI/Plessey, POSTNET, Intelligent Mail Barcode)

Copyright © 2007 AINIX Corporation. All rights reserved.

Blue SDK

Copyright © 1995-2018 OpenSynergy GmbH.

All rights reserved. All unpublished rights reserved.

Portions of this software are copyright © 2014 The FreeType Project (www.freetype.org). All rights reserved.

### **Available Manuals**

You can download the latest manuals from the Brother support website at support.brother.com.

Product Safety Guide <sup>1</sup>	This guide provides safety information; read it thoroughly before using your printer.
Quick Setup Guide <sup>1</sup>	This guide provides basic information about using the printer along with safety information and detailed troubleshooting tips.
User's Guide <sup>2</sup>	This guide includes the contents of the <i>Quick Setup Guide</i> , and additional information about the printer settings, operations, safety precautions, communication settings, troubleshooting tips, and maintenance instructions.
Command Reference <sup>2</sup>	This manual provides information about printer control commands for controlling the printer directly.

<sup>1</sup> Printed manual in the box.

<sup>2</sup> PDF manual on the Brother support website.

# Symbols Used in This Guide

The following symbols are used throughout this guide:

	DANGER	Failure to observe instructions and warnings will result in death or serious injuries. Follow these guidelines to avoid the risk of heat generation, smoking, explosion, or fire.
	WARNING	Failure to observe instructions and warnings could result in death or serious injuries. Follow these guidelines to avoid the risk of heat generation, smoking,explosion, fire, or injury.
	CAUTION	Failure to observe instructions and warnings could result in minor or moderate injuries. Follow these guidelines to avoid injury.
0	Important	Indicates information or directions that should be followed. Ignoring them may result in damage, or failed operations.
	Note	Indicates notes that provide information or directions that can help you better understand and use the product more efficiently.

### **Important Safety Instructions**

# **DANGER**

#### **Rechargeable Li-ion Battery**

- Do not allow the battery to come into contact with liquids.
- Do not charge, use, or leave the battery in high temperature locations (above 60°C).
- Do not attempt to charge the battery using an unsupported charger.
- Use only for its intended purpose.
- Keep away from heat and fire.
- Do not connect the + and terminals with metal objects such as wire. Do not carry or store the battery with metal objects.
- Do not throw, hit or damage the battery in any way.
- Do not solder any connections to the battery.
- Do not disassemble or modify the battery.
- Do not dispose of the battery with household waste.

# **WARNING**

DO NOT use the printer where its use is prohibited, such as on an airplane. This could affect the airplane's equipment, resulting in an accident.

DO NOT use the printer in special environments, such as near medical equipment. Electromagnetic waves may cause the medical equipment to malfunction.

DO NOT allow organic solvents, such as benzene, thinner, nail polish remover, or deodorisers, to come into contact with the plastic cover. These may cause the plastic cover to warp or dissolve, resulting in an electrical shock or fire.

#### Printer, AC Adapter (Optional), or Car Adapter (Optional)

- If foreign objects are inserted into the printer or its connectors and ports, stop using the printer and turn the power off. Then disconnect all cables or remove the battery.
- Do not use, charge and store the product:
  - Where liquids may come into contact.
  - Where condensation forms.
  - Where there is a lot of dust.
  - Where the temperature is extremely high.
  - During a thunderstorm.
- Do not disassemble or alter the product.
- Do not pour chemicals or use combustible sprays on the product.
- Do not use or store the printer, other components, or packaging within the reach of children.
- Remove the battery or disconnect the cables when shipping.
- If the printer is not in use for long periods, remove the battery or disconnect the cables before storing.

#### **Rechargeable Li-ion Battery**

- Keep away from infants. If ingested, contact emergency services immediately.
- Stop using the battery if there are noticeable abnormalities such as smell, heat, deformities, or discolouration.
- If liquid from the battery gets into eyes, wash them immediately with clean water. Contact emergency services immediately.

#### AC Adapter, Car Adapter

- Use only with the specified product.
- Insert the plug firmly into the socket.
- Use the AC adapter with standard electrical sockets (AC 100-240 V 50/60 Hz) and the Car adapter with DC 12 V supplies.
- Do not allow metal objets to come into contact with connectors and ports.
- Do not pull on the cables when disconnecting the AC adapter cord or Car adapter from the electrical socket. Hold the plug and pull it out of the electrical socket.
- Do not damage, twist, severely bend, pull on, place objects on, bind the AC adapter or Car adapter.
- Do not allow the AC adapter and Car adapter cables to be pinched.
- Do not overload electrical sockets.

# **ACAUTION**

RD Rolls use thermal paper, therefore the colour of the label and the printing may change or fade if exposed to sunlight or heat. When using outdoors and when durability is important, we DO NOT recommend using RD Rolls.


Depending on the area, material, and environmental conditions, the label may unpeel or become permanently affixed, and the colour of the label may change or be transferred to other objects. Before affixing the label, check the environmental conditions and the material. Test the label by affixing a small piece of it to an inconspicuous area of the intended surface.

#### Printer

Do not hold the printer by the RD Roll compartment cover or the roll guide.

There is a risk that the cover could detach or the printer could fall.

- When connecting cables and accessories, follow the applicable instructions.
- Do not touch the print head or metal parts sorrounding the head.
- If the printer is used for a long periods of time, the parts of the printer shown may become hot enough to cause a low temperature burn.

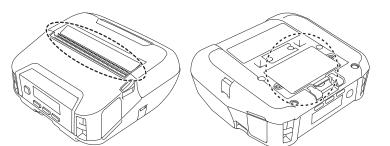

#### **Rechargeable Li-ion Battery**

If liquid from the battery gets onto skin or clothes, immediately rinse with water.

#### AC Adapter, Car Adapter


Make sure you can always access the cable of the adapter so that you can disconnect it immediately in an emergency. **Belt Clip** 

Make sure that the belt clip is attached securely to the printer and the wearer's belt.

# **ACAUTION**

#### Warning Label

Do not touch the blade or print head.

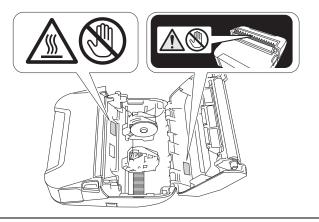

# IMPORTANT

- DO NOT remove the labels affixed to the printer. These labels provide operational information and indicate the printer's model number.
- DO NOT push the power button or LED indicator with an object that has a sharp point, such as a pen. This could damage the button or LED.
- DO NOT transport the printer while cables are connected to the DC connector or mini-USB port. The connector and ports could be damaged.
- DO NOT store the printer in an area exposed to high temperatures, high humidity, direct sunlight, or dust. These could cause discolouration or a malfunction.

General Precautions
Printer
If the Bluetooth and wireless LAN functions are both turned on, the communication speed may decrease due to radio wave interference. If this occurs, turn off the function you are not using (the Bluetooth or wireless LAN function).
DO NOT cover or insert foreign objects into the paper exit slot, DC connector, or mini-USB port.
DO NOT use paint thinner, benzene, alcohol or any other organic solvents to clean the printer. Doing so may cause damage to the surface finish. You can use isopropyl alcohol or ethanol only when cleaning the print head or roller. Use a soft, dry cloth to clean the printer.
When not used for an extended period, remove the roll from the printer.
Always keep the roll compartment cover closed when printing.
This printer uses thermal paper. If the printed paper is marked with ink, for example written on or stamped, the ink may cause the printed text to fade or become discoloured. In addition the applied ink may take some time to dry. Printed text may fade or become discoloured if the label comes into contact with any of the following: vinyl chloride products, leather goods such as wallets and purses, organic compounds such as alcohol, ketones, or esters, adhesive tape, erasers, rubber mats, magic marker ink, permanent marker ink, correction fluid, carbon, glue, diazo sensitised paper, hand lotion, hair care products, cosmetics, water, or sweat.
DO NOT touch the printer with wet hands.
DO NOT use folded, wet or damp paper, otherwise a paper misfeed or malfunction may occur.
DO NOT touch paper or labels with wet hands, otherwise a malfunction may occur.
RD Roll
Use Brother accessories and supplies (indicated by the RD mark)
If the label is affixed to a wet, dirty, or oily surface, it may peel off easily. Before affixing the label, clean the surface to which the label will be affixed.
RD Rolls use thermal paper, therefore ultraviolet rays, wind, and rain may cause the colour of the label to fade and the ends of the label to peel off.
DO NOT expose the RD Roll to direct sunlight, high temperatures, high humidity, or dust. Store in a cool, dark place. Use the RD Roll soon after opening the package.
Scratching the printed surface of the label with your finger nails or metal objects, or touching the printed surface with hands dampened by water, sweat, or medicated cream etc., can cause the colour to change or fade.
DO NOT affix labels to people, animals, or plants. Never affix labels to public or private property without permission.
The last labels of the RD Roll may not be printed correctly, therefore, each roll contains more labels than is indicated on the package.
When a label is removed after being affixed to a surface, a portion of the label may remain.
Once a label is affixed, it may be difficult to remove the label.
Printer, AC adapter, Car adapter, or Accessories
Observe all applicable regulations when disposing of these products.

# **Table of Contents**

# Section I Basic Operations

1	Set Up the Printer	13
	Parts Description	13
	Control Panel	
	LCD	15
	LED Indicators	17
	Button Functions	19
	Battery Installation/Removal	20
	Install the Battery	
	Recharge the Battery	
	While Installed in the Printer	21
	Stop Battery Charging	24
	Tips on Using the Battery	
	When not Using the Battery	
	Power On or Off	
	Set the Language	25
	Insert the Roll	
	Tear Off Media	
	Attach the Belt Clip	29
	Install Software on Your Windows Computer or Mobile Device	
	Available Software	
	Install the Printer Driver and Software (When Using a Computer)	32
	Connect the Printer to a Computer or Mobile Device	
	Connect Using USB (Computer Only)	33
	Connect Using Bluetooth	
	Connect Using Wi-Fi (RJ-4250WB Only)	35
	Connect Using NFC (Android)	
	LCD	
	LCD Settings	40

#### 2 How to Use the Printer

Print from Windows Computer	43
Printing with the Printer Driver	
Set Printer Driver Options	
Custom Printing from Mobile Devices	

#### Change the Printer Settings

Printer Setting Tool	45
Before Using the Printer Setting Tool	
Use the Printer Setting Tool	
Communication Settings	
Settings Dialog Box	48
Menu Bar	
General Tab	53

Wireless LAN Tab (RJ-4250WB Only)	
Wireless Direct Tab (RJ-4250WB Only)	
Bluetooth Tab	
Apply Setting Changes to Multiple Printers	
Device Settings	
Settings Dialog Box	
Menu Bar	
Basic Tab	71
Advanced Tab	73
Print Position / Sensor	75
Display Settings Tab	77
Apply Setting Changes to Multiple Printers	78
P-touch Template Settings	79
P-touch Template	79
P-touch Template Settings Dialog Box	80
Paper Size Setup	82
Paper Size Setup Dialog Box	
Distribute Paper Formats	87
Change Settings When Printing from a Mobile Device	87

#### 4 Other Functions

Print the Printer Information	88
Mass Storage Mode	
Description	
Use of Mass Storage Mode	
Print JPEG Images	
Remote Update (RJ-4250WB Only)	

# Section II Software

5	How to Use P-touch Editor	92
	Use of P-touch Editor	
	Start P-touch Editor	
	Print with P-touch Editor	
	Tips for Creating Templates	
	Create a Template	
	Link a Database to a Template	
6	How to Use P-touch Transfer Manager & P-touch Library	102
	P-touch Transfer Manager	
	Transfer the Template to P-Touch Transfer Manager	
	Transfer Templates or Other Data from Computer to the Printer	
	Back up Templates or Other Data Saved in the Printer	
	Delete Printer Data	
	Create Transfer Files and Transfer Package Files	
	Use of P-touch Library	
	Start P-touch Library	
	Open and Edit Templates	115

88

	Print Templates Search for Templates	
7	How to Transfer Templates with P-touch Transfer Express	119
	Prepare P-touch Transfer Express	119
	Transfer the Template to P-Touch Transfer Manager	120
	Save the Template as a Transfer Package File (.pdz)	
	Distribute the Transfer Package File (.pdz) and P-Touch Transfer Express to the User	123
	Transfer the Transfer Package File (.pdz) to the Printer	124
	How to Undete D touch Software	127
8	How to Update P-touch Software	
8	-	
8	Update P-touch Software Update the Firmware	127
8	Update P-touch Software	127
	Update P-touch Software Update the Firmware	127 129 <b>132</b>
	Update P-touch Software Update the Firmware Wireless Network (RJ-4250WB Only)	127 129 <b>132</b>
	Update P-touch Software Update the Firmware Wireless Network (RJ-4250WB Only) Network Features How to Change the Printer's Network Settings	127 
	Update P-touch Software Update the Firmware Wireless Network (RJ-4250WB Only) Network Features How to Change the Printer's Network Settings (IP Address, Subnet Mask and Gateway)	
	Update P-touch Software Update the Firmware Wireless Network (RJ-4250WB Only) Network Features How to Change the Printer's Network Settings (IP Address, Subnet Mask and Gateway) Use of BRAdmin Light Utility	127 .129 <b>132</b> 132 
	Update P-touch Software Update the Firmware Wireless Network (RJ-4250WB Only) Network Features How to Change the Printer's Network Settings (IP Address, Subnet Mask and Gateway)	
	Update P-touch Software Update the Firmware Wireless Network (RJ-4250WB Only) Network Features How to Change the Printer's Network Settings (IP Address, Subnet Mask and Gateway) Use of BRAdmin Light Utility Other Management Utilities Use Web Based Management (Web Browser)	
	Update P-touch Software Update the Firmware Wireless Network (RJ-4250WB Only) Network Features How to Change the Printer's Network Settings (IP Address, Subnet Mask and Gateway) Use of BRAdmin Light Utility Other Management Utilities	

# Section III Appendix

10	Printer Maintenance	139
	Exterior Maintenance	
	Print Head Maintenance	
	Roller Maintenance	
	Paper Exit Slot Maintenance	
	Linerless Platen Maintenance	
11	Product Specifications	142
••		
12	Battery Charger (Optional:PA-BC-003)	144
	Battery Charger (Optional:PA-BC-003)	144
	Battery Charger (Optional:PA-BC-003) Parts Description	<b>144</b>
	Battery Charger (Optional:PA-BC-003) Parts Description Specifications	<b>144</b> 
	Battery Charger (Optional:PA-BC-003) Parts Description Specifications How to Charge Batteries.	<b>144</b> 
	Battery Charger (Optional:PA-BC-003) Parts Description Specifications How to Charge Batteries Wall Mounting	<b>144</b> 
	Battery Charger (Optional:PA-BC-003) Parts Description Specifications How to Charge Batteries.	<b>144</b> 

13	Linerless Platen Kit (Optional:PA-LPR-001)	150
	Parts Description	
	Install the Linerless Platen	151
14	Charging Cradle (Optional:PA-CR-002)	153
	Parts Description	
	Specifications	
	How to Charge Batteries	
	Printer Removal	
	Wall Mounting	
15	Troubleshooting	157
	Overview	157
	Printing Problems	
	Printed Image Problems	
	Printer Problems	
	Network Setup Problems	
	Cannot Print over the Network	
	Printer Is Not Found on the Network Even after Successful Installation	
	Security Software Problems	
	Check the Operation of Network Devices	

 Problems with Battery Charger (Optional)
 164

 Problems with Charging Cradle (Optional)
 165

 Problems with the Linerless Platen (Optional)
 165

 Error Messages from the Printer
 166


# **Section I**




Set Up the Printer	13
How to Use the Printer	43
Change the Printer Settings	45
Other Functions	88

Set Up the Printer


# **Parts Description**

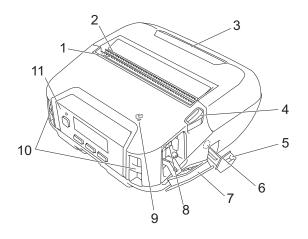

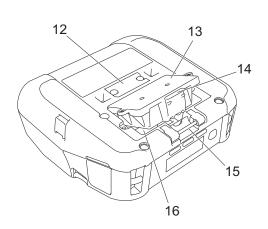

- 1 Upper tear bar
- 2 Lower tear bar
- 3 Roll compartment cover
- 4 Roll cover release lever
- 5 DC connector cover
- 6 DC connector
- 7 Interface cover
- 8 Mini-USB port
- 9 Near-Field Communication (NFC) sensor
- 10 Shoulder strap slots
- 11 Control panel
  - See Control Panel on page 14.
- 12 Charging cradle terminal cover
- 13 Battery cover
- 14 Battery cover latch
- 15 Belt clip hook
- 16 Battery compartment

## **Control Panel**

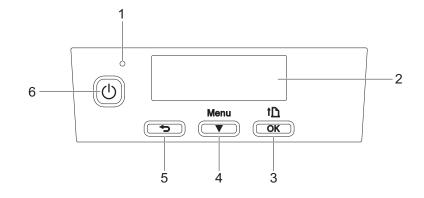

#### 1 LED indicator

See LED Indicators on page 17.


2 LCD

See LCD on page 15.

- 3 ↑ (Feed) /OK button To feed the paper or print the printer settings
- 4 Menu /▼ (Select) button
- 5 🕤 (Back) button
- 6 () (Power) button To turn the printer on/off

### LCD

When the printer is turned on, the main screen appears.

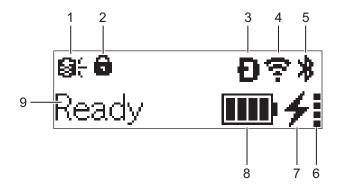

#### 1 Update icon (RJ-4250WB only)

Indicates the FTP connectivity and update status.

 $\Theta \leftarrow$ : There is new data.

(flashing): Data update failed.

**Q?** (flashing): Cannot connect to the server.

2 Menu key lock icon

Displayed when the [Menu Key Function] in Printer Setting Tool is set to [Disable].

**3 Wireless Direct icon (RJ-4250WB only)** Indicates when Wireless Direct is available.

#### 4 WLAN icon (RJ-4250WB only)

 $\mathbf{r}, \mathbf{r}, \mathbf{r}, \mathbf{r}$ : The printer is connected to the network.

#### 5 Bluetooth icon

Indicates Bluetooth is on. When the icon is flashing, auto re-pairing is in operation (see *Auto re-pairing* on page 64).

#### 6 Battery health level icon

When the printer is turned on, the battery health level is displayed. It does not appear when the battery cannot be charged.

Message	lcon	Condition
BatteryHealth Excellent		No problems. The battery may be used.
BatteryHealth Good		Still healthy. The battery can be used.
Battery Poor Replace soon		Battery health is deteriorating.
Batt. Very Poor Replace battery		The battery is badly deteriorated.

1

Set Up the Printer

#### 7 Charge status icon

Displays the charge status of the battery.

- Charging (AC adapter connected): 4
- Not Charging (Battery cannot charge when battery temperature is above 40°C or below 0°C): \*
- Not Charging (Charging is finished or paused): No icon is displayed.

#### 8 Battery level

Indicates the remaining battery level.

- Full:
- High:
- Half:
- Low:
- 9 Printer status

### **LED Indicators**

The indicator lights and flashes to indicate the printer's status. The symbols used in this section explain the meaning of the different indicator colours and patterns:

• or • or •

Indicator is lit in the colour shown

Indicator is flashing in the colour shown

Indicator is off

LED Indicator	Status
	Power off
	Charging complete (when power is turned off)
_	No charging (when power is turned off)
	Battery level: Half or more
	Charging complete (when power is turned on)
	Power on (when the battery is not connected but the AC adapter is connected)
	No charging (when power is turned on)
	Charging
	Boot mode
	Battery level: low
	Sleep mode

LED Indicator	Status
	Roll end error
	Feed error
	Cover open error
	Communication error
	WPS connection error
	BLF file error
	No template error
	Memory full error
- <b>-</b>	ESC/P Memory full error
	JPEG file error
	Battery deterioration error
	Mass storage error
	Battery level: empty
	System error
	Database search error
	Battery error (if the battery is not fully charged after the specified amount of time)

If the indicator is lit in red (Boot Mode), contact your local Brother dealer.

# **Button Functions**

(Power) button function	Operation		
Turn the printer on	While the printer is turned off, press the $\bigcirc$ (Power) button.		
Turn the printer off	While the printer is turned on, press the () (Power) button until the message [System Off] appears on the LCD. (If the [Auto Power Off] feature is enabled in the Device Settings, the printer will turn itself off automatically after the selected period of inactivity.)		
Start the printer in mass storage mode	If you press and hold the () (Power) button while also pressing the Menu/▼ (Select) button, the printer starts in mass storage mode (see <i>Mass Storage</i> <i>Mode</i> on page 89).		

(Back) button function	Operation	
Clear the selected menu item and return to the beginning.	Press the 👈 (Back) button to return to the previous setting category.	
Cancel the current print job.	Press the 👈 (Back) button to cancel the current print job.	

Menu/ ▼ (Select) button function	Operation	
Enter the menu selection mode	While the printer is turned on, press the Menu / ▼ (Select) button.	
Select the menu option	When the menu is displayed, press the Menu / ▼ (Select) button to select the next option.	
Execute a file stored in the mass storage area	If you press this button while the printer is running in mass storage mode, you can execute a command file stored in the mass storage area (see <i>Mass Storage Mode</i> on page 89).	

↑[_] (Feed)/ OK button function	Operation
Feed the paper	When the paper type is set to [ <b>Die-cut Label</b> ] or [ <b>Media With Marks</b> ]: Press the 1 (Feed) /OK button to automatically feed the paper to the print
	position. When the paper type is set to [ <b>Continuous Length Tape</b> ]: Press the 1 (Feed) /OK button to feed the paper.
Print the printer information	Make sure that a roll is set, and then press and hold the The (Feed) /OK button. The printer starts printing its settings (see <i>Print the Printer Information</i> on page 88).
Activate the function mode for the selected item	Press the 1 (Feed) / OK button to activate the selected menu option.


1


# **Battery Installation/Removal**

#### Important

Make sure you charge the rechargeable Li-ion battery (PA-BT-006) either in the printer, or in the charger before initial use.

#### **Install the Battery**



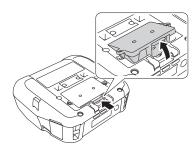

2 Insert the battery until it locks into place.



### Note

- To remove the battery, reverse the installation procedure.
- Do not lose the battery cover as you will need to reattach it later.


# **Recharge the Battery**

### While Installed in the Printer

To charge the rechargeable Li-ion battery (PA-BT-006), insert it into the printer and do the following:

### Note

- Before using the battery, use the following procedure to charge it.
- · Print speed varies with the available battery power.



2 Use the compatible Brother AC adapter (PA-AD-600) and the AC power cord to connect the printer to an electrical socket (see *How to Recharge the Battery with the AC Adapter (Optional)* on page 22), or use the Brother compatible car adapter (PA-CD-600CG) to connect the printer to a DC power socket (see *How to Recharge the Battery with the Car Adapter (Optional)* on page 23).



• The LED indicator light is orange when the battery is charging.

When the battery is fully charged, the LED indicator turns off (when power is turned off) or lights in green (when power is turned on).

- · Charging time is approximately 4 hours. It varies on the environmental conditions.
- Due to the temperature of the battery, charging may stop if the ambient temperature is outside the following range: 0°C to 40°C.
- The recommended charging temperature range for the battery is from 5°C to 35°C.


### How to Recharge the Battery with the AC Adapter (Optional)

# **Note**

The AC adapter and AC power cord are optional accessories. When purchasing the printer, purchase the adapter and power cord appropriate for the region where the printer will be used.

By using the AC Adapter, you can use the printer even if the battery is not installed.

- 1 Open the DC connector cover and connect the AC adapter to the printer.
- 2 Connect the AC power cord to the AC adapter.
- 3 Connect the AC power cord to a nearby electrical socket (100 240 VAC, 50 60 Hz).

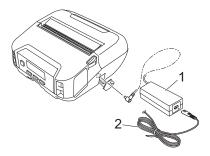

- 1 AC adapter
- 2 AC power cord

Set Up the Printer

#### How to Recharge the Battery with the Car Adapter (Optional)

Connect the printer to your vehicle's 12 V DC power socket (cigarette lighter or similar) to charge the rechargeable battery.




The car adapter is an optional accessory.

The printer will function without a battery installed and external power applied.

1 Connect the car adapter to the vehicle's 12 V DC power socket.

2 Open the DC cover and connect the car adapter to the printer.

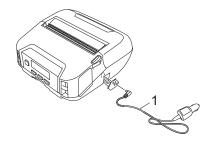

1 Car adapter

# How to Recharge the Battery with the Battery Charger (Optional) or Charging Cradle (Optional)

The battery can be charged using the battery charger (Optional) or Charging Cradle (Optional). For more information, see *Battery Charger (Optional:PA-BC-003)* on page 144, or *Charging Cradle (Optional:PA-CR-002)* on page 153.

### **Stop Battery Charging**

To stop the battery charging, disconnect the AC adapter or car adapter from the DC connector.

### Tips on Using the Battery

- High density (dark) printing discharges the battery faster than low density printing. You can adjust the print density setting in the Device Settings (see Device Settings on page 67).
- The battery charging must take place in an environment with a temperature between 0°C and 40°C, otherwise the battery will not be charged. If the charging stops because the environment temperature is too low or too high, place the printer in an environment with a temperature between 0°C and 40°C and try charging again.
- The recommended charging temperature range for the battery is from 5°C to 35°C.
- If you use the printer when both the battery is installed and the AC adapter or car adapter is connected, charging may stop even if the battery is not fully charged.

#### **Battery Characteristics**

To ensure the highest performance and longest life from the battery:

- Do not use or store the battery in a location exposed to extreme high or low temperatures as it may deteriorate more quickly.
- Remove the battery when storing the printer for long periods of time.
- Store batteries with less than a 50% charge in a cool dry place out of direct sunlight.
- Recharge the battery every six months if it is stored for long periods of time.
- It is normal and safe for the printer to become warm while charging. Disconnect the charger and stop using the printer if it becomes hot to the touch.
- When the printer is turned on, the battery health status is displayed on the LCD.

For battery health status displays, see *LCD* on page 15.

#### When not Using the Battery

The printer may be operated without the battery in the following ways:

- When an AC adapter (PA-AD-600) or car adapter (PA-CD-600CG) is connected to the printer.
- When the printer is installed in the Charging Cradle (PA-CR-002).

#### 🖉 Note

When the battery is not installed, securely fasten the battery cover with self-tapping screws (M2.6 x 6 mm) (not included).

# Power On or Off

On: Press the () (Power) button.

Off: Press the () (Power) button until the message [System Off] appears on the LCD.




- When the printer is connected to the AC adapter, power turns on automatically by default.
- Do not remove the battery until the LCD turns off when the AC adapter is not connected to the printer and the electrical socket.

# Set the Language

- Press the Menu / ▼ (Select) button to select the [Settings] menu, and then press the † (Feed) / OK button.
- 2 Select [□ Language], and then press the f (Feed) / OK button.
- 3 Select a language, and then press the  $\uparrow$  (Feed) / OK button.


# **Insert the Roll**


1 Push the roll cover release lever to open the roll compartment cover.

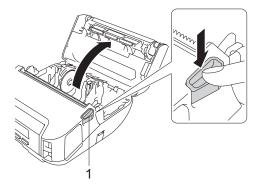


1 Roll cover release lever





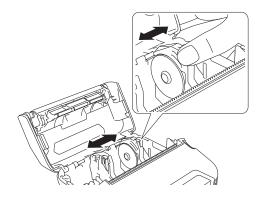


3 Insert the roll.

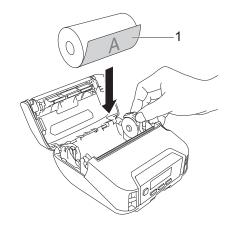

1 Print surface (faces outwards on the roll)

4 Close the roll compartment cover until it locks.

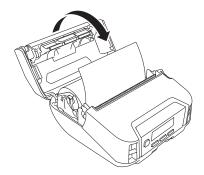




For best performance, use genuine Brother RD rolls.



- When using die-cut labels, set the paper type to [**Die-cut Label**], and press the † ☐ (Feed) / OK button after inserting the roll. The printer will feed the label to the top of form position.
- To remove the roll, reverse the installation procedure.
- Make sure inserted rolls turn correctly.

### **Tear Off Media**

Receipt paper, labels, and tags can be torn off by swiftly pulling up or down on the media according to the set cutting position. Linerless media can only be torn upwards.

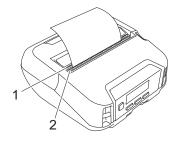

#### 1 Lower tear bar

2 Upper tear bar



Do not touch the blade.

### 🖉 Note


- The [Tear Bar] is set in the [Upward] position at the time of purchase. (When [Linerless] to [On] in the [Advanced] tab of the Printer Setting Tool, the [Tear Bar] cannot be selected.)
- To adjust the cutting position, open the Printer Setting Tool, and go to [**Print Position / Sensor**] in the [**Device Settings**], and then enter the setting you want in the [**Tear Adjust**] field. For more information, see *Print Position / Sensor* on page 75.

# Attach the Belt Clip


You can carry the printer on your belt by attaching and using the included belt clip. Follow the instructions below to attach the clip to the printer and to your belt. After attaching the clip to the printer, you can attach and secure it to your belt.




1 Attach the belt clip to the belt clip hook on the printer, as shown:

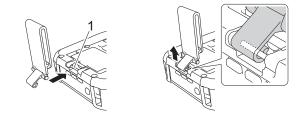

#### 1 Belt clip hook

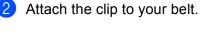

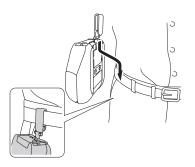

#### Important

- Make sure you attach the belt clip securely to the printer.
- To detach the belt clip, reverse the installation procedure.
- We recommend using a belt that is less than 5 mm thick and width is less than 47.63mm.

# Install Software on Your Windows Computer or Mobile Device

Several printing methods are available, depending on the printer model and the computer or mobile device you use to print from.

See the following tables and install other software on your computer or mobile device as needed.

### **Available Software**

#### For computer

To use the printer with your computer, you must install the printer driver.

Software		RJ-4250WB	RJ-4230B	Features	
1	Printer d	lriver	~	~	—
		Communication Settings	<b>v</b>	~	Allows you to specify the printer's communication
		Device Settings	~	~	settings and device settings from the computer.
	Printer				Allows you to configure the P-touch template settings.
2	Setting Tool	P-touch Template Settings	•	~	P-touch Template provides functions for inserting data from a device (such as a barcode reader connected to the printer) into text and barcode objects in layouts saved on the printer, useful for printing templates and barcodes.
		Paper Size Setup	~	~	Allow you to add the paper sizes not available in the [Paper Size] list of the printer driver.
	P-touch Editor				Allows you to:
3				<ul> <li>✓</li> <li>✓</li> </ul>	Store custom documents as template data.
					Use a large library of labels and tags by connecting to the database.
4	P-touch Transfer Manager		~	~	Allows you to transfer files created with P-touch Editor to a printer and store the files in the printer's memory. You can print them from the printer's memory without connecting to your computer.
5	P-touch Library		~	~	Allows you to manage and print P-touch Editor templates.
6	P-touch Transfer Express		~	~	Allows you to transfer documents to the printer.
7	P-touch Update Software		~	~	Allows you to update the firmware and software.
8	BRAdmin Professional		_	BRAdmin Professional has more powerful features for managing network printers than BRAdmin Light. You can configure and check the status of your network connected printers, and transfer the template to the printer via a network.	

Sof	ftware	RJ-4250WB RJ-4230B		Features
9	BRAdmin Light	~	_	Allows you to configure the initial settings of network connected printers.
10 BRAgent	BRAgent		_	Allows you to manage printers on different local networks* and send data to the computer on which BRAdmin Professional is installed.
	•		* A local network is the area managed by a single router.	
11	Web Based Management	~	—	Allows you to use a standard web browser to manage a printer on your network using HTTP.
	Font Manager	~		Allows you to transfer fonts to the printer and delete fonts from the printer.
				Transferred fonts can be accessed and printed using various print commands.
10				About font usage permission
12				When using fonts, you must abide by all terms and conditions set forth by each rightful font owner. Before downloading fonts, you must confirm that you have legitimate licences to use the fonts and comply with their terms and conditions; otherwise you may not download fonts.

#### For mobile devices

Software		RJ-4250WB	RJ-4230B	Features	
1	Mobile Transfer Express	V	~	Allows you to use a mobile device to transfer files (templates, databases and images) which were prepared using P-touch Transfer Manager (Windows version), to a printer.	
2	AirPrint (For Apple device)	~	_	Allows you to print from an Apple device (iPad, iPhone, or iPod touch) without installing additional software.	
3	Web Based Management	~	—	Allows you to use a standard web browser to manage a printer on your network using HTTP.	
4	Print Service Plugin (Android)	~	~	Allows you to print from an Android device without installing additional software.	
5	Mobile Deploy	~	~	Allows you to perform updates for the settings and firmware of printers in the field using a mobile device. This software will send printer update files pre-uploaded to DropBox or an Http(s) server to target printers.	

A software development kit (SDK) is also available.

To obtain the SDK and Font Manager, visit the Brother Developer Center (www.brother.co.jp/eng/dev/).

# Install the Printer Driver and Software (When Using a Computer)

To print from your computer, install the printer driver, P-touch Editor and other software on your computer. Visit our website (<u>install.brother</u>) and download the installer for the software and manuals. When a serial number is requested, see the base of the printer and enter the number.

# **Connect the Printer to a Computer or Mobile Device**

Connect the printer using one of the methods below:

- USB cable connection (computer only)
   See Connect Using USB (Computer Only) on page 33.
- Bluetooth connection
   See Connect Using Bluetooth on page 34.
- Wireless LAN connection (RJ-4250WB only) See Connect Using Wi-Fi (RJ-4250WB Only) on page 35.
- NFC connection (Android)
   See Connect Using NFC (Android) on page 39.

### **Connect Using USB (Computer Only)**

- Before connecting the USB cable, make sure that the printer is turned off.
- Connect the printer end of the USB cable to the mini-USB port on the side of the printer.
- 3 Connect the other end of the USB cable to the USB port on the computer.
- 4 Turn the printer on.

### **Connect Using Bluetooth**

# Note

Follow the manufacturer's recommendations for your Bluetooth-equipped devices (computers and mobile devices) or Bluetooth adapter, and install any necessary hardware and software.

Use this procedure to pair the printer with the computer using the Bluetooth management software.

- Press the Menu/▼ (Select) button to select the [Bluetooth] menu, and then press the the (Feed) / OK button.
- 2 Select [On/Off] and then press the ↑ (Feed) / OK button. Select [On].
- 3 Use your Bluetooth management software to discover the printer. Select the printer where XXXX is the last four digits of the printer's serial number. You can find the serial number label on the base of the printer. Bluetooth communication is now available.

🖉 Note

- You can also change the printer's communication settings using the Communication Settings (see *Communication Settings* on page 48).
- By default, Bluetooth mode is set to [Classic & LE], so two identical Bluetooth names (for Classic and Low Energy) might be displayed in the Bluetooth menu of your Android device.

### Connect Using Wi-Fi (RJ-4250WB Only)

The following Wi-Fi connection methods are available:

- Wireless Direct
- Infrastructure Mode
- Infrastructure Mode + Wireless Direct
- WPS (Wi-Fi Protected Setup<sup>™</sup>)

#### Wireless Direct

Wireless Direct allows you to connect the printer to your computer or mobile device directly without a Wi-Fi access point/router; the printer serves as a Wi-Fi access point.

1 Confirm the Wireless Direct settings of the printer.

- Using the printer
  - 1 On the printer, press the Menu/ ▼ (Select) button to select the [WLAN] menu, and then press the ↑ (Feed) / OK button.
  - 2 Press the Menu/ ▼ (Select) button to select the [Mode] menu, and then press the † (Feed) / OK button.
  - 3 Select [Direct], and then press the The (Feed) / OK button. The Wireless Direct icon appears on the LCD.
- Using a computer

Connect the printer and computer with a USB cable. Start the Printer Setting Tool on your computer, and click the [Communication Settings] button. Confirm that [Wireless Direct] is selected for [Selected Interface] in the [General] tab.

See Communication Settings on page 48 for more information on the Communication Settings.

On the printer, press the Menu/ ▼ (Select) button to select the [WLAN] menu, and then press the ↑ (Feed) / OK button. Set [On/Off] to [On].

3 Use your computer or mobile device to select the SSID of the printer ("DIRECT-\*\*\*\*\_RJ-4250WB"). If required, enter the password ("425\*\*\*\*\*"). \*\*\*\*\* is the last five digits of the serial number.

### 🖉 Note

- You can change the printer's network settings using the Printer Setting Tool (see *Change the Printer Settings* on page 45).
- The Printer Setting Tool also allows you to apply the network settings changes to multiple printers. (See *Apply Setting Changes to Multiple Printers* on page 66.)
- You can find the serial number label on the base of the printer.

You can also confirm the serial number by printing the printer information (see *Print the Printer Information* on page 88).

 You cannot connect to the Internet via Wi-Fi while using Wireless Direct. To use the Internet, connect using Infrastructure Mode.

#### Infrastructure Mode

Infrastructure Mode allows you to connect the printer to a computer or mobile device via a Wi-Fi access point/router.

#### Before You Begin

First you must configure the Wi-Fi settings of the printer to communicate with your Wi-Fi access point/router. After the printer is configured, computer or mobile devices on your network will have access to the printer.



- If you are going to connect the printer to your network, we recommend that you contact your system administrator prior to installation. You must confirm your Wi-Fi settings before you proceed with this installation.
- To configure the Wi-Fi settings again, or if the status of the printer's Wi-Fi connection is unknown, reset the Wi-Fi settings of the printer.
  - 1 Press the () (Power) button to turn the printer off.
  - 2 Press and hold the † (Feed) / OK button and the () (Power) button for about five seconds. The LED indicator starts blinking in green.
  - 3 While pressing the () (Power) button, press the  $\uparrow$  (Feed) / OK button twice.
  - 4 Release the (<sup>1</sup>) (Power) button.

## 🖉 Note

To achieve the best results with normal everyday document printing, use the printer as close to the Wi-Fi access point/router as possible with minimal obstructions. Large objects and walls between the two devices as well as interference from other electronic devices can affect the data transfer speed of your documents.

#### Connect the printer to your Wi-Fi access point/router

- First, write down the SSID (network name) and password (network key) of your Wi-Fi access point/router.
- 2 Connect the printer and computer with a USB cable.
- On the printer, press the Menu/ ▼ (Select) button to select the [WLAN] menu, and then press the ↑ (Feed) / OK button. Set [On/Off] to [On].


- 4 Configure the Infrastructure Mode settings of the printer.
  - Using the printer
    - 1 On the printer, press the Menu/ ▼ (Select) button to select the [WLAN] menu, and then press the ↑ (Feed) / OK button.
    - 2 Press the Menu/ ▼ (Select) button to select the [Mode] menu, and then press the † (Feed) / OK button.
    - 3 Select [Infrastructure], and then press the † (Feed) / OK button.
  - Using a computer

Start the Printer Setting Tool on your computer, and click the [Communication Settings] button. Select [Wireless LAN] for [Selected Interface] in the [General] tab, and select [Infrastructure] for [Communication Mode] in [Wireless Settings] in the [Wireless LAN] tab.

See Communication Settings on page 48 for more information on the Communication Settings.

5 Start the Printer Setting Tool on your computer, and click the [Communication Settings] button. Select [Wireless Settings] in the [Wireless LAN] tab.

Enter the SSID that you wrote down, or click [Search] and select the SSID from the displayed list.



### 🖉 Note

The required information depends on the authentication method and encryption mode; enter only the information relevant to your network environment.

### **7** Click [**Apply**].

When the connection between the printer and your Wi-Fi access point/router is established, the (Wi-Fi) icon appears on the printer's LCD. Computers and mobile devices that are on the same network as the printer will have access to the printer.

### 🖉 Note

- To change any other network settings, use the Printer Setting Tool (see *Change the Printer Settings* on page 45).
- To connect your mobile device to the Wi-Fi access point/router, select the SSID and enter the password
  of the Wi-Fi access point/router to establish the connection between the mobile device and Wi-Fi access
  point/router.

### Infrastructure Mode + Wireless Direct

Infrastructure Mode and Wireless Direct can be used at the same time.

- Use the printer
  - On the printer, press the Menu/ ▼ (Select) button to select the [WLAN] menu, and then press the ↑ (Feed) / OK button.
  - Press the Menu/ ▼ (Select) button to select the [Mode] menu, and then press the † (Feed) / OK button.

3 Select [Direct/Infra], and then press the † (Feed) / OK button.

Using a computer

**1** Start the Printer Setting Tool on your computer, and click the [**Communication Settings**] button.

Select [Infrastructure and WirelessDirect] for [Selected Interface] in the [General] tab. See Communication Settings on page 48 for more information on the Communication Settings.

### WPS (Wi-Fi Protected Setup™)

If your Wi-Fi access point/router supports WPS, settings and connections can be configured quickly.

1 First, confirm that your Wi-Fi access point/router has the WPS symbol.



- Place the printer within the range of your Wi-Fi access point/router. The range may differ depending on your environment. See the instructions provided with your Wi-Fi access point/router.
- 3 Press the WPS button on your Wi-Fi access point/router.
- On the printer, press the Menu/ ▼ (Select) button to select the [WLAN] menu, and then press the ↑ (Feed) / OK button.
- 5 Press the Menu/  $\checkmark$  (Select) button to select the [WPS] menu, and then press the  $\uparrow \uparrow$  (Feed) / OK button.
- 6 Select [Button Push] or [PIN Code], and then press the the (Feed) / OK button.

For details, see the instructions provided with your Wi-Fi access point/router.

When the connection is established, the WLAN icon appears on the printer's LCD. Computers and mobile devices that are on the same network as the printer will have access to the printer.

### Rote

- The printer will try to connect using WPS for two minutes. If the Menu/ ▼ (Select) button is pressed during that time, the printer will continue trying to connect for an additional two minutes.
- If your computer or mobile device supports the PIN authentication method, select [PIN Code] for better security.


### How to confirm your printer's IP address

- 1 On the printer, press the Menu/▼ (Select) button to select the [WLAN] menu, and then press the † (Feed) / OK button.
- Press the Menu/▼ (Select) button to select the [IP Address] menu, and then press the † (Feed) / OK button.

The LCD displays the IP address and SSID (Network Name) for Wireless Direct or Infrastructure Mode.

### **Connect Using NFC (Android)**

Confirm that the printer's Bluetooth settings and the mobile device's Bluetooth and NFC settings are all set to ON, and touch your mobile device to the printer.



### 🖉 Note

- The printer's Bluetooth mode must be set to [Classic & LE] or [Classic]. [Low Energy] is not supported.
- NFC compatibility with your Android device cannot be guaranteed.

1

# LCD

### **LCD Settings**

### Specify Settings from the Computer

You can specify the LCD settings either by using the printer, or by using the Printer Setting Tool on a computer connected to the printer. For more information about connecting a computer and specifying settings, see *Change the Printer Settings* on page 45.

### Specify Settings from the Printer

Press the Menu/ ▼ (Select) button to select a menu option, and then press the † (Feed) / OK button. Press the Menu/▼ (Select) button to select an option, and then press the † (Feed) / OK button.



- 1 The currently selected option is highlighted.
- 2 The scroll bar indicates the first parameter with the up arrow, and the last parameter with the down arrow. If the last parameter is selected, pressing ▼ (Select) button scrolls back to the first parameter.
- Set the Media Size

1 Press the Menu/ ▼ (Select) button to select the [Media] menu, and then press the OK button.

**2** Select [Select Media], and then press the OK button.

### Detect the Media Size

The die-cut media can be detected automatically.

- 1 Set the die-cut media in the printer.
- 2 Press the Menu/ ▼ (Select) button to select the [Media] menu, and then press the f (Feed) / OK button.
- Select [Auto Detect], and then press the the (Feed) / OK button.

### 🖉 Note

If the media size cannot be detected, set the media size from [Select Media].

### Set the LCD Contrast

Press the Menu/ ▼ (Select) button to select the [Settings] menu, and then press the † (Feed) / OK button.

2 Select [LCD Contrast], and then press the † (Feed) / OK button. Select the option, and then press the † (Feed) / OK button.

#### Set the Beeper

Select whether the printer beeps at startup, shutdown and error.

Press the Menu/ ▼ (Select) button to select the [Settings] menu, and then press the † (Feed) / OK button.

2 Select [Beeper], and then press the † (Feed) / OK button. Select the option, and then press the ↑ (Feed) / OK button.

#### Bluetooth Functions

[On/Off]: To connect the printer and your Bluetooth-equipped devices, see *Connect Using Bluetooth* on page 34.

[Mode]: Bluetooth mode can be selected from [Classic & LE], [Classic], or [Low Energy].

[AutoReconnect]: Automatically reconnects to a previously connected to iOS supported devices including iPhone, iPad and iPod touch.

[Clear History]: Deletes information for auto re-paired devices registered in the printer.

[BT Address]: The Bluetooth address of the printer appears on the display.

[Print Barcode]: The Bluetooth address and corresponding barcode (width:42 mm) can be printed.

### 🖉 Note

When printing large print jobs, set the Bluetooth mode to [Classic].

#### Wi-Fi Options (RJ-4250WB only)

For connection methods and settings using the Wi-Fi function, see *Connect Using Wi-Fi (RJ-4250WB Only)* on page 35.

[On/Off]: Connect your printer to a wireless device.

[Mode]: Select a wireless connection mode.

Available settings: [Direct], [Infrastructure], [Direct/Infra]

[WPS]: Set up a WPS connection.

[WLANAssistant]: This function might be needed while installing the driver.

[IP Address]: View the printer's IP address and SSID (Network Name).

### Remote Update (RJ-4250WB only)

Connect to the FTP server and download new templates, databases, and other files. Set the information of the FTP server in advance using [**Communication Settings**] in the Printer Setting Tool. For more information, see *Communication Settings* on page 48.

This item appears when the FTP server is set and updated files are available.

1 Press the Menu/ ▼ (Select) button to select the [Update] menu, and then press the † (Feed) / OK button.

2 Select [Start], and then press the f (Feed) / OK button. When the update starts, [Receiving] or [Downloading] appears on the LCD.

# How to Use the Printer

# **Print from Windows Computer**

### **Printing with the Printer Driver**

Open the document you want to print.

Connect the printer to a computer using USB, Bluetooth or Wi-Fi (see *Connect the Printer to a Computer or Mobile Device* on page 33).

### 🖉 Note

If necessary, change the printer settings in the printer driver's dialog box, or in the Printer Setting Tool (see *Change the Printer Settings* on page 45).

### Print from the software.

The message [Printing] appears on the LCD. When printing is finished, the printer reverts to the mode selected before printing started.

### 🖉 Note

To print a JPEG image without using the printer driver, see Print JPEG Images on page 90.

### Make Prints Lighter or Darker

You can make prints lighter or darker by adjusting the print density setting in the Device Settings (see *Device Settings* on page 67).

When using the battery, changing the print density setting may result in slight changes in printing speed and the number of pages that can be printed on a single charge.

### Set Printer Driver Options

You can configure various settings such as paper size and number of copies, in the printer driver screen.

### 🖉 Note

You can also use the Printer Setting Tool (see *Change the Printer Settings* on page 45) to configure advanced settings.

# **Custom Printing from Mobile Devices**

A software development kit (SDK) is available.

Visit the Brother Developer Center (www.brother.co.jp/eng/dev/).

You can print from your mobile device using AirPrint (RJ-4250WB only).

For more information, see the *AirPrint Guide*. Visit your model's Manuals page on the Brother support website at <u>support.brother.com</u> to download the guide.

3

# **Change the Printer Settings**

# **Printer Setting Tool**

Using the Printer Setting Tool, you can specify the printer's communication settings, operation settings, P-touch template settings and paper size settings from Windows computer.

### 🖉 Note

The Printer Setting Tool is installed automatically when you use the installer to install the printer driver. For more information, see Install Software on Your Windows Computer or Mobile Device on page 30.



### Important

The Printer Setting Tool is available only with compatible printers.

### **Before Using the Printer Setting Tool**

- Make sure that the printer is connected to an electrical socket and turned on.
- Make sure the printer driver has been installed correctly and you can print.
- Connect this printer to a computer with a USB cable. This tool cannot be used to configure printers connected to a wireless network.

# **Use the Printer Setting Tool**

- 1 Connect the printer you want to configure to the computer.
- 2 Start the Printer Setting Tool.
  - For Windows 10 / Windows Server 2016 (RJ-4250WB):


Click [Start] > [Brother] > [Printer Setting Tool].

The main window appears.

For Windows 8 / Windows 8.1 / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB):

Click the [Printer Setting Tool] icon on the [Apps] screen.

For Windows 7 / Windows Server 2008 (RJ-4250WB) / Windows Server 2008 R2 (RJ-4250WB): Click [Start] > [All Programs] > [Brother] > [Label & Mobile Printer] > [Printer Setting Tool].

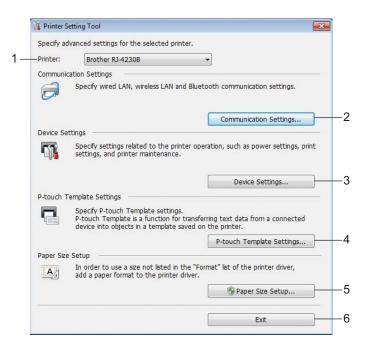

#### 1 Printer

Lists the connected printers.

#### 2 Communication Settings

Specifies the wireless LAN (RJ-4250WB only) and Bluetooth communication settings.

### 3 Device Settings

Specifies printer operation settings, such as power settings and printer settings. Settings can also be specified for the LCD.

#### 4 P-touch Template Settings

Specifies P-touch template settings.

For more information on P-touch Template, download the *P-touch Template Manual/Command Reference* (English only) from the Brother support website at <u>support.brother.com</u>.

### 5 Paper Size Setup

Add media information and settings to the printer driver to use sizes not listed in the [**Paper Size**] list of the printer driver.

### Important

To open [Paper Size Setup], you must be logged on with administrator rights.

#### 6 Exit

Closes the window.

- 3 Check that the printer you want to configure appears next to [**Printer**]. If a different printer appears, select the printer you want from the drop-down list.
- Select the setting you want to change, and then specify or change the settings in the dialog box. For more information on the settings dialog boxes, see *Communication Settings* on page 48, *Device Settings* on page 67, *P-touch Template Settings* on page 79, or *Paper Size Setup* on page 82.
- 5 Click [Apply] [Exit] in the settings dialog box to apply the settings to the printer.
- 6 Click [Exit] in the main window to finish specifying settings.


#### Important

Use the Printer Setting Tool to configure the printer only when the printer is in standby. The printer may malfunction if you try to configure it while it is handling a job.

# **Communication Settings**

With [**Communication Settings**] in the Printer Setting Tool, the printer communication information can be specified or changed when connecting the printer and computer with a USB cable or via a Bluetooth connection. Not only can you change the communication settings for one printer, but you can also apply the same settings to multiple printers.

### **Settings Dialog Box**

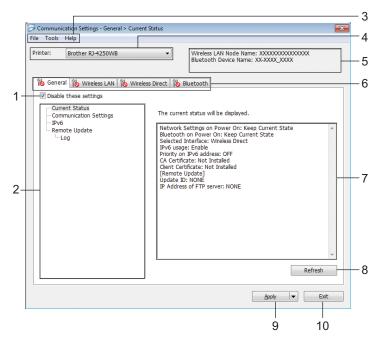

#### 1 Disable these settings

When this check box is selected, not selected appears in the tab, and the settings can no longer be specified or changed.

Settings in a tab where *not* appears will not be applied to the printer even if **[Apply]** is clicked. In addition, the settings in the tab will not be saved or exported when the **[Save in Command File]** or **[Export]** command is executed.

To apply the settings to the printer or save or export them, make sure you clear the check box.

### 2 Items

When [**Current Status**] is selected, the current settings appear in the settings display/change area. Select the item for the settings that you want to change.

### 3 Menu Bar

#### 4 Printer

Lists the connected printers.

### 5 Node Name/Bluetooth device name

Displays the node name (nodes can be renamed) and Bluetooth device name. (See 7 Change Node Name/Bluetooth Device Name in Menu Bar on page 50.)

### 6 Settings Tabs

Contains settings that may be specified or changed.

If 1 appears in the tab, the settings in that tab will not be applied to the printer.

#### 7 Settings Display/Change Area

Displays the current settings for the selected item.

#### 8 Refresh

Updates the displayed settings with the most recent information.

#### 9 Apply

Applies the settings to the printer.

To save the specified settings in a command file, select [**Save in Command File**] from the drop-down list. The saved command file can be used with the mass storage mode to apply the settings to a printer. (See *Mass Storage Mode* on page 89.)

#### Important

Clicking [Apply] applies all settings in all tabs to the printer.

If the [Disable these settings] check box is selected, the settings in that tab are not applied.


### 10 Exit

Exits [Communication Settings], and returns to the main window of the Printer Setting Tool.

### Important

Changes to settings are not applied to printers if you click [Exit] without first clicking the [Apply] button.

### Menu Bar

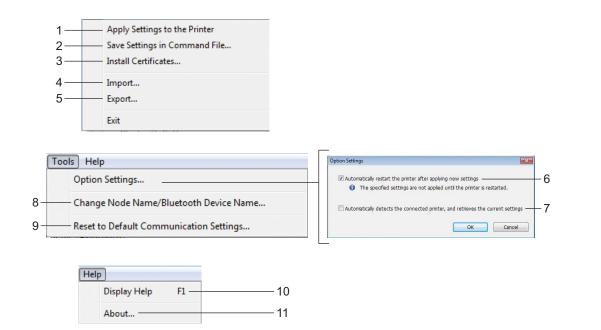

### 1 Apply Settings to the Printer

Applies the settings to the printer.

### 2 Save Settings in Command File

Saves the specified settings in a command file. The file extension is .bin.

The saved command file can be used with the mass storage mode to apply the settings to a printer. (See *Mass Storage Mode* on page 89.)

### 🖉 Note

If the [Disable these settings] check box is selected, the settings in that tab are not saved.

### Important

- The following information is not saved with the command file:
  - Node name
  - IP address, subnet mask and default gateway (when the IP address is set to [STATIC])
- The saved communication settings commands are intended to be used only for applying settings to a printer. To apply the settings to the printer using this command file, use the mass storage mode.
- Saved command files contain authentication keys and passwords. We recommend storing command files only if necessary.
- Do not send the command file to a different printer model.

### 3 Install Certificates (RJ-4250WB only)

Some network authentication methods may require a certificate.

Install a certificate on the connected printer or save a certificate as a command file that can be distributed to the same model printers.

### 4 Import

### Import from the current computer wireless settings

Imports the settings from the computer.



• When importing the wireless settings, administrator privileges for the computer are required.

- Only personal security authentication settings (open system, public key authentication and WPA/WPA2-PSK) can be imported. Enterprise security authentication (such as EAP-FAST), WPA2-PSK (TKIP) and WPA-PSK (AES) settings cannot be imported.
- If multiple wireless networks are enabled on the computer, only the personal settings that are detected first will be imported.
- Only the settings from the [Wireless LAN] tab [Wireless Settings] pane can be imported (communication mode, SSID, authentication method, encryption mode and authentication key).

### Select a Profile to import

Imports the exported file and applies the settings to a printer.

Click [**Browse**] and select the file you want to import. The settings in the selected file appear in the settings display/change area.

## 🖉 Note

- All settings (such as wireless settings or TCP/IP settings) can be imported, except for node names.
- Only the profiles compatible with the selected printer can be imported.
- If the imported profile's IP address is set to [STATIC], change the IP address of the imported profile, if needed, so that it does not duplicate the IP address of an existing printer on the network.

### 5 Export

Saves the current settings in a file.

### 🖉 Note

If the [Disable these settings] check box is selected, the settings in that tab are not saved.

### Important

Exported files are not encrypted.

### 6 Automatically restart the printer after applying new settings

If this check box is selected, the printer automatically restarts after communication settings are applied. If this check box is cleared, your must restart the printer manually.



When configuring multiple printers, you can reduce the time needed to change settings by clearing this check box. In this case, we recommend selecting this check box when configuring the first printer so that you can confirm that each setting is operating as intended.

#### 7 Automatically detects the connected printer, and retrieves the current settings

If this check box is selected and a printer is connected to the computer, the printer is automatically detected and the printer's current settings are displayed in the [**Current Status**] pane.

### 🖉 Note

If the model of the connected printer is different from that of the printer shown in the [**Printer**] drop-down list, the settings available on all tabs change to match the connected printer.

### 8 Change Node Name/Bluetooth Device Name

Allows renaming a node and Bluetooth device.

### 9 Reset to Default Communication Settings

Returns the communication settings to their factory settings.

### 10 Display Help

Displays the Help.

### 11 About

Displays the version information.

### **General Tab**

### **Communication Settings**

unication Settings	
Wireless LAN Node Name: XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	
Wetooth         Specify the settings for the communications device to be used.         Wireless LAN         Network Settings on Power On:         Keep Current State         Selected Interface:         Wireless Direct         Bluetooth         Bluetooth on Power On:         Keep Current State	— 1 — 2 — 3
Apply I Exit	
	Wireless LAN Node Name: XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX

### 1 Network Settings on Power On (RJ-4250WB only)

Specifies the conditions for connecting via Wi-Fi when the printer is turned on. Available settings: [**On by default**], [**Off by default**], [**Keep Current State**]

### 2 Selected Interface (RJ-4250WB only)

Available settings: [Infrastructure], [Infrastructure and Wireless Direct], [Wireless Direct]

### 3 Bluetooth on Power On

Specifies the conditions for connecting via Bluetooth when the printer is turned on. Available settings: [**On by default**], [**Off by default**], [**Keep Current State**]

### IPv6 (RJ-4250WB only)

inter: Brother RJ-4250WB General Wireless LAN Wireless Direct	Bluetooth	AN Node Name: XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
Disable these settings Current Status - Communication Settings - Communication Setings - Communication Settings - Com	Specify the IPv6 setting IPv6 usage:	js. Enable ▼ ■ Priorty on IPv6 address —

### 1 IPv6 usage

Available settings: [Enable], [Disable]

### 2 Priority on IPv6 address

Select to give priority to an IPv6 address.

### Remote Update (RJ-4250WB only)

Brother RJ-4250WB	Bluetooth	AN Node Name: XXXXXXXXXXXXXXXX Device Name: XX-XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
ral Wireless LAN Wireless Direct isable these settings	t Bluetooth	
Current Status Communication Settings IPv6	Please specify FTP con	nection details for Remote Update.
Remote Update	IP Address of FTP serv	er:
Log	Port:	21
	✓ PASV Mode	
	User name:	
	Password:	
		Display the key and password on-screen
	Path(D):	/
	Setting file name:	updateinfo.ini

### 1 IP Address of FTP server

Type the FTP server address.

2 Port

Specifies the port number used to access the FTP server

3 User name

Type a user name that has permission to log in to the FTP server.

4 Password

Type the password associated with the user name you entered in the Username field.


5 Path

Type the path to the folder on the FTP server where you want to download the update file from.

### 6 Setting file name

Specifies the update file name on the FTP server.

Log

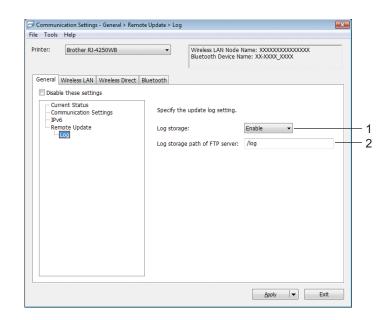

### 1 Log storage


Select whether to export the update log to the FTP server. Available settings: [**Enable**], [**Disable**]

### 2 Log storage path of FTP server

Type the path to the folder on the FTP server where you want to export the log data.

## Wireless LAN Tab (RJ-4250WB Only)

### TCP/IP (Wireless)

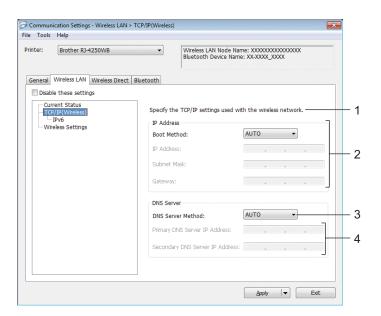

### 1 Boot Method

Available settings: [AUTO], [BOOTP], [DHCP], [RARP], [STATIC]

2 IP Address/Subnet Mask/Gateway

You can type these settings only when the IP address is set to [STATIC].

3 DNS Server Method

Available settings: [AUTO], [STATIC]

4 Primary DNS Server IP Address/Secondary DNS Server IP Address You can type these settings only when the DNS server is set to [STATIC].

### IPv6

rinter: Brother RJ-4250WB	Wireless LAN Node Name: XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	
General Wireless LAN Wireless Dire	uct Bluetooth	
	Specify the TCP/IP(IPv6) settings used with the wireless network.	
Wireless Settings	Static IPv6 Address:	
	Enable this address	
	Primary DNS Server IPv6 Address:	
	Secondary DNS Server IPv6 Address:	
	IPv6 Address List:	
	Ψ	

### 1 Static IPv6 Address

Specifies a permanent IPv6 address.

2 Enable this address

Enables the specified static IPv6 address.

- **3 Primary DNS Server IPv6 Address/Secondary DNS Server IPv6 Address** Specifies the DNS server IPv6 addresses.
- 4 IPv6 Address List

Displays the list of IPv6 addresses.

### Wireless Settings

Brother RJ-4250WB		eless LAN Node Name: XXXXXXXXXXXXXXX tooth Device Name: XX-XXXX_XXXX	
eneral Wireless LAN Wireless D	rect Bluetooth		
Disable these settings	Specify the author	entication method used with wireless.	
TCP/IP(Wireless)	Communication N		
Wireless Settings	SSID(Network N		h
	Channel:	Auto 👻	
	Authentication M	lethod: Open system	
	Encryption Mode	: None 🔻	
	WEP Key:		
	Passphrase:		
	User ID:		
	Password:		
	Display the ke	y and password on-screen	_

#### **1** Communication Mode

The [Infrastructure] mode setting is available only for RJ-4250WB.

#### 2 SSID (Network Name)

Clicking [Search] displays the available SSID selections in a separate dialog box.

### 3 Channel

This setting is selected automatically for RJ-4250WB.

#### 4 Authentication Method/Encryption Mode

The supported encryption modes for the authentication methods are as shown in *Authentication Methods and Encryption Modes* on page 60.

#### 5 WEP Key

You can specify a setting only when WEP is selected as the encryption mode.

#### 6 Passphrase

You can specify a setting only when WPA/WPA2-PSK is selected as the authentication method.

#### 7 User ID/Password

You can specify settings only when EAP-FAST, PEAP, EAP-TTLS or EAP-TLS is selected as the authentication method. In addition, with EAP-TLS, it is not necessary to register a password, but a client certificate must be registered. To register a certificate, connect to the printer from a web browser, and then specify the certificate. For more information, see *Web Based Management* on page 136 or *Install Certificates (RJ-4250WB only)* on page 51.

#### 8 Display the key and password on-screen

If this check box is selected, keys and passwords are displayed in plain (non-encrypted) text.

### **Authentication Methods and Encryption Modes**

Authentication Method	Encryption Mode
Open System	None / WEP
Shared Key	WEP
WPA/WPA2-PSK	TKIP+AES / AES
EAP-FAST/NONE	TKIP+AES / AES
EAP-FAST/MS-CHAPv2	TKIP+AES / AES
EAP-FAST/GTC	TKIP+AES / AES
PEAP/MS-CHAPv2	TKIP+AES / AES
PEAP/GTC	TKIP+AES / AES
EAP-TTLS/CHAP	TKIP+AES / AES
EAP-TTLS/MS-CHAP	TKIP+AES / AES
EAP-TTLS/MS-CHAPv2	TKIP+AES / AES
EAP-TTLS/PAP	TKIP+AES / AES
EAP-TLS	TKIP+AES / AES

### Important

To specify higher level security settings:

When performing certificate verification with EAP-FAST, PEAP, EAP-TTLS or EAP-TLS authentication methods, the certificate cannot be specified from the Printer Setting Tool. After the printer is configured to connect to the network, specify the certificate by accessing the printer from a web browser.

For more information, see *Web Based Management* on page 136 or *Install Certificates (RJ-4250WB only)* on page 51.

## Wireless Direct Tab (RJ-4250WB Only)

### **Wireless Direct Settings**

Tools Help		
Brother RJ-4250WB		Name: XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
eneral Wreless LAN Wreless Direct Disable these settings	Bluetooth Specify the Wireless Direct setti SSID/Network Key Generation: SSID(Network Name): Network Key: Channel:	ngs. STATIC
		Apply V Exit

### 1 SSID/Network Key Generation

Available settings: [AUTO], [STATIC]

### 2 SSID (Network Name)/Network Key

Specifies the SSID (25 ASCII characters or fewer) and the network key (63 characters or fewer) you want to use in the Wireless Direct mode.

You can only specify a setting when [STATIC] is selected for [SSID/Network Key Generation].



The factory default SSID is "DIRECT-\*\*\*\*\*\_RJ-4250WB" and password is "425\*\*\*\*\*". \*\*\*\*\* is the last five digits of the serial number.


(You can find the serial number label on the base of the printer.)

#### 3 Channel

Specifies the channel to use in the Wireless Direct mode.

### **Bluetooth Tab**

### **Bluetooth Settings**

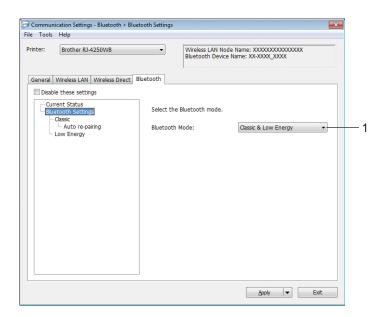

### 1 Bluetooth Mode

Set the control mode when Bluetooth is enabled. Available settings: [Classic & Low Energy], [Classic Only], [Low Energy Only]

### Classic

Brother RJ-4250WB	•		lode Name: XXXXXXXXXXXXXXX ice Name: XX-XXXX_XXXX
Seneral   Wireless LAN   Wireless Direct	t Bluetooth		
Disable these settings			
Current Status Bluetooth Settings	Specify t	he Classic Bluetooth	n settings.
Classic Auto re-pairing Low Energy	Visible to	Other Devices:	Discoverable
	Legacy p	airing for Bluetooth	2.0 and earlier
	🔲 Chang	e PIN code	
	PIN o	ode:	******
	Dis	play the PIN code o	on-screen
	Pairing fo	r Bluetooth 2.1 and	d later(SSP)
	E Re	quest Secure Simpl	e Pairing (SSP) settings during pairing

#### **1** Visible to Other Devices

Allows the printer to be "discovered" by other Bluetooth devices. Available settings: [**Discoverable**], [**Not Discoverable**]

### 2 Change PIN code

If this check box is selected, you can change the PIN code.


3 Display the PIN code on-screen

If this check box is selected, your computer displays the PIN by default.

### 4 Request Secure Simple Pairing (SSP) settings during pairing

If this check box is selected when using Classic Bluetooth Mode, it is necessary to perform additional printer key operations to press † (Feed) / OK button in the printer (authentication process) when pairing with devices running Bluetooth Version 2.1 or later.

Auto re-pairing

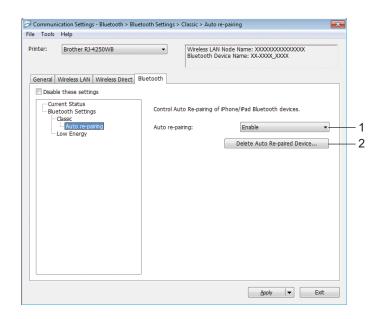


### 1 Auto re-pairing

Sets whether or not to automatically reconnect to a previously connected iOS device. Available settings: [**Enable**], [**Disable**]

### 2 Delete Auto Re-paired Device

Pressing this button deletes information for auto re-paired devices registered in the printer.

### Low Energy

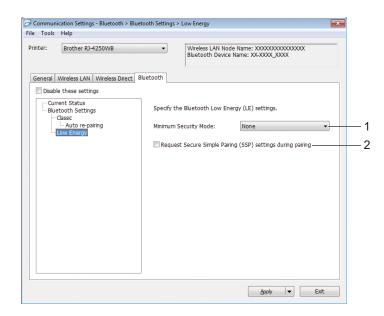

### 1 Minimum Security Mode

Select the minimum security level when using [Low Energy Only] mode.

Available settings: [None], [Unauthenticated Encryption], [Authenticated Encryption], [LE Secure Connections]

### 2 Request Secure Simple Pairing (SSP) settings during pairing

If this check box is selected when using [**Low Energy Only**] mode, additional Printer key operations to press † (Feed) / OK button in the printer (authentication process) are required when pairing with Low Energy compatible devices.

### **Apply Setting Changes to Multiple Printers**

1 After applying the settings to the first printer, disconnect the printer from the computer, and then connect the second printer to the computer.

2 Select the newly connected printer from the [**Printer**] drop-down list.

### 🖉 Note

If the [Automatically detects the connected printer, and retrieves the current settings] check box in the [Option Settings] dialog box is selected, the printer connected with the USB cable is automatically selected.

For more information, see Communication Settings on page 48.

### 3 Click [Apply].

The same settings that were applied to the first printer are applied to the second printer.

### 🖉 Note

We recommend selecting the [**Automatically restart the printer after applying new settings**] check box when configuring the first printer so that you can confirm that a connection with the Wi-Fi access point/router can be correctly established with the settings. For more information, see *Communication Settings* on page 48.

Repeat steps 1 – 3 for all printers whose settings you want to change.

#### Important

If the first printer's IP address is set to [**STATIC**], the other printers will also use the same address. If needed, you can change each printer's IP address in the [**Wireless LAN**] tab.

### 🖉 Note

To save the current settings in a file, click [File] - [Export].

The same settings can be applied to another printer by clicking [File] - [Import], then selecting the exported settings file. (See *Communication Settings* on page 48.)


# **Device Settings**

With [**Device Settings**] in the Printer Setting Tool, printer settings can be specified or changed when connecting the printer and computer with a USB cable or via a Bluetooth connection. Not only can you change the device settings for one printer, but you can also apply the same settings to multiple printers.

When printing from a computer applications, various print settings can be specified from the printer driver; however, by using [**Device Settings**] in the Printer Setting Tool, more advanced settings can be specified.

When [**Device Settings**] is opened, the printer's current settings are retrieved and displayed. If the current settings could not be retrieved, the previous settings are displayed. If the current settings could not be retrieved and previous settings have not been specified, this tool's default settings are displayed.

### **Settings Dialog Box**

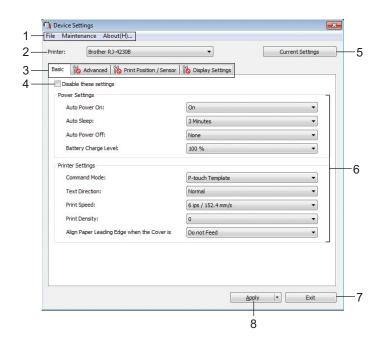

### 1 Menu Bar

Select a command contained in each menu from the list.

#### 2 Printer

Specifies the printer whose device settings are to be configured.

If only one printer is connected, it is unnecessary to make a selection because only that printer will appear.

### 3 Settings Tabs

Contains settings that may be specified or changed.

# 🖉 Note

If *not* appears in the tab, the settings in that tab cannot be specified or changed. In addition, the settings in the tab will not be applied to the printer even if **[Apply]** is clicked. The settings in the tab will also not be saved or exported when the **[Save in Command File]** or **[Export]** command is executed.

### 4 Disable these settings

When this check box is selected, no prease in the tab, and the settings can no longer be specified or changed.

Settings in a tab where **b** appears will not be applied to the printer even if **[Apply]** is clicked. In addition, the settings in the tab will not be saved or exported when the **[Save in Command File]** or **[Export]** command is executed.

### 5 Current Settings

Retrieves the settings from the currently connected printer and displays them in the dialog box. Settings

will also be retrieved for parameters on tabs with 100

### 6 Parameters

Displays the current settings.

7 Exit

Exits [Device Settings], and returns to the main window of the Printer Setting Tool.

### 8 Apply

Applies the settings to the printer.

To save the specified settings in a command file, select [**Save in Command File**] from the drop-down list. The saved command file can be used with the mass storage mode to apply the settings to a printer. (See *Mass Storage Mode* on page 89.)

### Menu Bar

	File Maintenance About(H)	
1—	Apply Settings to the Printer	
2—	Check Setting	
3—	Save Settings in Command File	
4—	Import	
5—	Export	
	Exit	
Ma	aintenance About(H)	
	Save Print Log in File	-6
	Print Unit Settings	-7
	Reset to Factory Defaults	-8
	Reset only Device Settings	-9
	Delete Template and Database	- 10
	Delete Print Log	- 11
	Option Settings	- 12
	File Maintenance About(H)	-13

### 1 Apply Settings to the Printer

Applies the settings to the printer.

Performs the same operation as when [Apply] is clicked.

### 2 Check Setting

Displays the setting currently registered.

### 3 Save Settings in Command File

Saves the specified settings in a command file.

Performs the same operation as when [Save in Command File] is selected from the [Apply] drop-down list.

### 4 Import

Imports the exported file.

### 5 Export

Saves the current settings in a file.

### 6 Save Print Log in File

Saves the print log in a file in the CSV format.

### 7 Print Unit Settings

Prints a report containing firmware version and device setting information.

You can also print this report using the The (Feed) / OK button (see *Print the Printer Information* on page 88).

### 8 Reset to Factory Defaults

Resets all printer settings to factory settings.

### 9 Reset only Device settings

Resets the settings that can be changed in the Device Settings to factory settings. The templates, databases and print log stored in the printer are not reset.

### 10 Delete Template and Database

Deletes the templates and databases stored in the printer.

#### **11 Delete Print Log**

Deletes the print log stored in the printer.

#### **12 Option Settings**

If the [**Do not display an error message if the current settings cannot be retrieved at startup**] check box is selected, a message will not be displayed next time.

### 13 About

Displays the version information.

### **Basic Tab**

	Printer: Brother RJ-4230B	<u>Qurrent Settings</u>
	Basic Advanced Print Position / Sensors [	Display Settings
	Disable these settings	
	Power Settings Auto Power On:	On 💌
_	Auto Sleep:	3 Minutes
-	Auto Power Off:	Off 🔹
-	Battery Charge Level:	100 %
	Print Settings	
-	Command Mode:	P-touch Template 🔻
	Text Direction:	Normal
	Print Speed:	5 ips / 127 mm/s 🔻
	Print Densit <u>y</u> :	•
	Align Paper Leading Edge when the Cove Closed:	r is Do not Feed 🔹

### 1 Auto Power On

Specifies whether the printer turns on automatically when the AC Power Cord is plugged into an electrical socket.

Available settings: [On], [Off]

### 2 Auto Sleep

Designates the amount of time to elapse before the Printer automatically goes into sleep mode. Available settings: [**Off**], 1/2/3/4/5/6/7/8/9 minutes

### 3 Auto Power Off

Specify the amount of time that passes before the printer turns off automatically. Available settings: [**Off**], 10/30 minutes, 1/3/6/9/12 hours

### 4 Battery Charge Level

Specify the maximum charge level. Available settings: **[80 %]**, **[100 %]** 

## 🖉 Note

To get the longest life from the battery, select [80 %]. Although the number of pages that can be printed on a single charge will be less when you select [80 %], you can get a longer overall battery life.

### 5 Command Mode

Select the printer's command format.

Available settings: [Raster], [ESC/P], [P-touch Template], [CPCL emulation], [CPCL Line Print emulation]

#### 6 Text Direction

Select the printing orientation.

#### Available settings: [Normal], [Inverted 180 Degrees]

This setting is applied only if the printer driver is not used. If the printer driver is used, the setting specified in the driver will be applied.

#### 7 Print Speed

Select the printer's printing speed. Available settings: [3 ips / 76.2 mm/s], [4 ips / 101.6 mm/s], [5 ips / 127 mm/s]

#### 8 Print Density

Adjust the printer's printing density. Available settings: -5–+5

#### 9 Align Paper Leading Edge when the Cover is Closed

Select whether the paper is automatically fed when the cover is closed. Available settings: [**Feed**], [**Do not Feed**]

# Advanced Tab

inter: Brother RJ-4230B	▼ Current Setting
Basic Advanced Print Position / Ser	nsor Display Settings
Disable these settings	
Key Function	
	Feed
	File
Menu Key Function:	Menu 🗸
	File
Print Information Report	
Contents:	All
Others	
JPEG Printing Setting:	Error Diffusion 👻
Serialize Mode:	Cont From Last
	Enable -
Print Data after Printing:	Erase All Print Data 🔻
	Off •
Linerless:	Off

#### 1 Feed Key Function

Select the operation that is performed when the <sup>†</sup> (Feed) / OK button is pressed. If [**Program Settings**] is selected, click the [**File**] button and select the command file. Available settings: [**Feed**], [**Disable**], [**Program Settings**]

#### 2 Menu Key Function

Select the operation that is performed when the Menu /  $\checkmark$  (Select) button is pressed. If [**Program Settings**] is selected, click the [**File**] button and select the command file. Available settings: [**Menu**], [**Disable**], [**Program Settings**]

#### **3** Printer Information Report

Select which sections are printed when printing the printer setup information. Available settings: [AII], [Usage Log], [Printer Settings], [Printer Transfer Data] (See *Print the Printer Information* on page 88)

#### 4 JPEG Printing Setting

Selects the method of image processing when printing JPEG images. Available settings: [**Simple Binary**], [**Error Diffusion**]

#### 5 Serialize Mode

Select whether or not to serialise from the last number printed. Available settings: [Cont From Last], [From Starting#]

#### 6 Save Printer Print Log

Select whether or not to save the printer's print log. If [**Disable**] is selected, [**Maintenance**] - [**Save Print** Log in File] cannot be enabled.

Available settings: [Enable], [Disable]

### 7 Print Data after Printing

Select whether or not print data is erased automatically after it is printed. Available settings: [Erase All Print Data], [Keep Print Data]

#### 8 Airplane Mode

Disables the Bluetooth interface and Wi-Fi connection. This function is useful when you use the printer in a place where signal transmissions are not allowed. Available settings: **[On]**, **[Off]** 

#### 9 Linerless

Select when using linerless media. Available settings: [**On**], [**Off**]

# Print Position / Sensor

Printer: Brother RJ-4230B	•	Current Setting
Disable these settings	isplay Settings	
Adjustment Printing Reference Point Adjustment:	Along Label Width:	0.00 -
* Does not adjust raster prints	Along Label Length:	0.00 🚔 -
Tear Adjust:		0.00 📮 -
Media Sensor (Transmissive/Gap)		
Detection Sensitivity:	0	
Luminescence Adjustment:	0	•
Media Sensor (Reflective/Bar)		
Mark Detection Sensitivity:	0	
Luminescence Adjustment:	0	•

If RD Rolls are being used, you do not need to adjust the sensors.

#### 1 Printing Reference Point Adjustment Along Label Width / Printing Reference Point Adjustment Along Label Length

Adjust the position of the reference point (point of origin for printing). This corrects printing misalignments resulting from differences in printer models or from the fixed margins of some software.

The reference point cannot be adjusted for raster printing.

Available settings: [Along Label Width]: -150.0 mm to 150.0 mm, [Along Label Length]: -10.0 mm to 10.0 mm

#### 2 Tear Adjust

Adjust the tear bar tear off position for paper media. Available settings: -10.0 mm to 10.0 mm

#### 3 Media Sensor (Transmissive/Gap)

The following transmissive/gap sensor parameters can be adjusted.

#### [Detection Sensitivity]

Adjust the precision of the sensor that detects the gaps (spacing) for die-cut labels.

Available settings: -2-+2

#### [Luminescence Adjustment]

Adjust the amount of light emitted by the transmissive/gap sensor.

Available settings: -2–+2

Change the Printer Settings

### 4 Media Sensor (Reflective/Bar)

The following reflective/black mark sensor parameters can be adjusted.

#### [Mark Detection Sensitivity]

Adjust the precision of the sensor that detects the black marks.

Available settings: -2-+2

#### [Luminescence Adjustment]

Adjust the amount of light emitted by the reflective/black mark sensor. Available settings: -2–+2

# **Display Settings Tab**

Basic Advanced Print Position / Sensor Display Settings Display Settings Language: English					
Disable these settings Display Settings Language: LCD Contrast: Backlight Timeout: Tone Settings	Printer: Brother F	J-4230B	•	Current Settin	
Display Settings Language: English • LCD Contrast: 0 • Backlight Timeout: 10s • Tone Settings	Basic Advanced Prir	nt Position / Sensor Displa	y Settings		
Display Settings Language: Englich • LCD Contrast: 0 • Backlight Timeout: 10s • Tone Settings	Disable these setting	qs			
LCD Contrast: Backlight Timeout: Tone Settings		5 			
Backlight Timeout:	Language:		English		
Tone Settings	LCD Contrast:		0		
Tone Settings	Backlight Timeout:		10s		
Beeper:					
	Beeper:		On		

#### 1 Language

Select the language for the LCD.

Available settings: [Dansk], [Deutsch], [English], [Español], [Français], [Italiano], [Nederlands], [Norsk], [Português], [Suomi], [Svenska], [中文], [日本語]

### Note

The available display languages may differ depending on the printer model being used. If the selected language cannot be used for the LCD, the display language will not be changed. Make sure that the LCD can display the selected language.

#### 2 LCD Contrast

Select the brightness of the LCD. Available settings: -2–+2

#### 3 Backlight Timeout

Specify the amount of time of inactivity before the backlight of the LCD turns off automatically. Available settings: [**Off**], [**5s**], [**10s**], [**20s**], [**30s**], [**60s**]

#### 4 Beeper

Select whether the printer beeps when it is turned on or off, or if an error occurs. Available settings: **[On]**, **[Off]** 

# **Apply Setting Changes to Multiple Printers**

1 After applying the settings to the first printer, disconnect the printer from the computer, and then connect the second printer to the computer.

2 Select the newly connected printer from the [**Printer**] drop-down list.

Click [Apply]. The same settings that were applied to the first printer are applied to the second printer.

- 4 Repeat steps **1 3** for all printers whose settings you want to change.
- **Note**

To save the current settings in a file, click [File] - [Export].

The same settings can be applied to another printer by clicking [File] - [Import], and then selecting the exported settings file. (See *Device Settings* on page 67.)

# P-touch Template Settings

P-touch Template mode provides functions for inserting data from an external device (such as a barcode reader, controller or programmable logic device connected to the printer) into text and barcode objects in layouts saved on the printer, useful for printing templates and barcodes.

With [**P-touch Template Settings**] in the Printer Setting Tool, settings for using the P-touch Template functions can be specified or changed.

To use the P-touch Template functions, you must send the template to the printer using the transfer function. For more information about the transfer function, see *How to Use P-touch Transfer Manager & P-touch Library* on page 102.

### P-touch Template

The following are the P-touch Template functions:

#### **Basic operations**

Preset template printing

If frequently used templates are stored in the printer, they can be reprinted by simply scanning the barcode for each template.

Barcode printing

A barcode scanned with the barcode reader can be printed with the protocol and size of a previously created template.

Database-assisted template printing

By linking objects in a template to a database, then scanning the key barcodes for the database, the template can be printed with objects in the template replaced with database data.

#### Advanced operations

Numbering function (serialised number) printing

Templates can be printed while automatically incrementing a number or barcode in the templates.

### 🖉 Note

If a command reference is used, see the *P-touch Template Manual/Command Reference*. You can download the latest versions from the Brother support website:

- 1 Go to support.brother.com
- 2 Select your model, and then select [Manuals].

#### P-touch Template Settings - Brother RJ-4230B Set the Default Command Mode to [P-touch Template]. Specify the settings necessary for the transferred template. If a different Default Command Mode is selected, use [Device Settings]. To indicate a control code in the text box, put `\mark before ASCII code [00 -FF]. ex. TAB: `Dp, CR: UD, `\times J by the each 1-- Default Command Mode: P-touch Template \_\_\_\_ Default Template Number: 1 2-\09 Data Delimiter for P-touch Template: 3 - Trigger for P-touch Template Printing Ocommand Character: ^FF O Data Insertion into All the Objects 10 A bytes Received Data Size: 5 — Character Code Table: Windows 1252 -International Character Set: 6 United States - Command Prefix Character: — Non-Printed Character: Available Return Code: 9-^CR -\_\_\_ 🕅 Replace FNC 1 10 -Default Print Option 12 Inverted 180 Degrees -15 Default Cancel 13 14

# P-touch Template Settings Dialog Box

#### 1 Default Command Mode

Specifies the P-touch Template mode as the default mode. To change the mode, use the Device Settings.

#### 2 Default Template Number

Specifies a template number to select as default when the printer is turned on. However, if a template is not to be transferred to the printer, do not specify a template number.

#### 3 Data Delimiter for P-touch Template

A symbol used to indicate the boundaries between groups of data in a file. Between 1 and 20 characters can be specified.

#### 4 Trigger for P-touch Template Printing

You can specify a trigger to begin printing from a number of options.

[Command Character]: Printing starts when the command character specified here is received. [Data Insertion into All the Objects]: Printing starts when the delimiter for the last object is received. [Received Data Size]: Printing starts when the number of characters specified here is received. However, delimiters are not counted in the number of characters.

#### 5 Character Code Table

Select one of the following character code sets:

Available settings: [Windows 1251], [Windows 1252], [Windows 1250 Eastern Europe], [Brother standard], [Unicode]

#### 6 International Character Set

Lists character sets for specific countries or regions.

Available settings: [United States], [France], [Germany], [Britain], [Denmark], [Sweden], [Italy], [Spain], [Japan], [Norway], [Denmark II], [Spain II], [Latin America], [Korea], [Legal]

The following 12 codes are switched depending on the country or region selected from the list above: 23h 24h 40h 5Bh 5Ch 5Dh 5Eh 60h 7Bh 7Ch 7Dh 7Eh

For switched characters, see the *P-touch Template Manual/Command Reference* (which can be downloaded from the Brother support website).

#### 7 Command Prefix Character

Specifies the prefix character code, which identifies commands used in P-touch Template mode.

#### 8 Non-Printed Character

Characters specified here are not printed when data is received. Specify 1 to 20 characters.

#### 9 Available Return Code

The line feed code is used when feeding data to indicate that the following data should be moved to the next line in a text object. One of the following four line feed codes can be selected, or 1 to 20 characters can be specified as the line feed code.

Available settings: [^CR], [\0D\0A], [\0A], [\0D]

#### 10 Replace FNC1

See the P-touch Template Manual/Command Reference.

#### **11 Number of Copies**

Set the number of copies. A number between 1 and 99 can be specified.

#### 12 Inverted 180 Degrees

If this check box is selected, the data will be printed after it has been rotated 180 degrees.

#### 13 Set

After the **[Set]** button is clicked, the settings are saved as an .ini file when the dialog box is closed. To save the specified settings in a command file, select **[Save in Command File]** from the drop-down menu. The saved command file can be used with the mass storage feature to apply the settings to a printer. (See *Mass Storage Mode* on page 89.)

#### 14 Cancel

Cancels the settings and closes the dialog box. The settings will remain unchanged.

#### 15 Default

Click this button to return the settings to their factory defaults.


# **Paper Size Setup**

With [**Paper Size Setup**] in the Printer Setting Tool, paper sizes not available in the [**Paper Size**] list of the printer driver can be added.

Before you print using a paper size other than the available ones, you must register the new paper size by sending it to the printer.

Printing with a paper size not registered with the printer may produce incorrect print results.

# Paper Size Setup Dialog Box

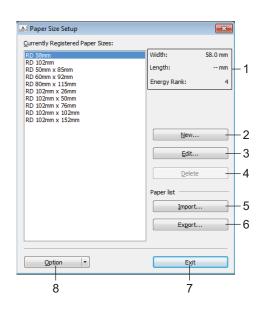

#### 1 Current settings

Displays the current settings for the selected paper format.

#### 2 New

Click this button to display the [**New**] dialog box and register a new paper size. For details, see *New Dialog Box* on page 84.

#### Important

Do not register a paper size that has already been registered, to avoid incorrect print results. To use paper of the same size as one that is currently registered, select the size you want from the [Currently Registered Paper Sizes] list in the [Paper Size Setup] dialog box, and then change and overwrite the settings from the [Edit] dialog box.

#### 3 Edit

Edits the settings for the selected paper format.

To save the selected paper format with the new settings, click [**Overwrite**]. To add a paper format with the new settings, change the name in the [**Paper Size Name**] box, and then click [**Add**].

#### 4 Delete

Deletes the selected paper format. A deleted paper format cannot be restored.

#### 5 Import

Reads the text file containing the paper format settings and uses it to replace the contents of the [Currently Registered Paper Sizes] list.

### Important

When the list is imported, the entire contents of the [**Currently Registered Paper Sizes**] list will be replaced with the imported paper formats.

#### 6 Export

Exports the paper formats in the [**Currently Registered Paper Sizes**] list to a file. The exported formats can then be distributed to other computers. For details, see *Distribute Paper Formats* on page 87.

7 Exit

Exits [Paper Size Setup], and returns to the main window of the Printer Setting Tool.

#### 8 Option

Click the ▼ button, and then select an operation.

Click [**Register Paper Size With Printer**] to register the settings for the selected paper format in the printer.

Click [Save in Command File] to export the paper settings as a command file. (The file extension is ".bin".)


# 🖉 Note

- When the paper format is registered with the printer and [Exit] is clicked, the [Paper Size Setup] dialog box appears with the added paper size in the [Currently Registered Paper Sizes] list. If the software is running, exit the software, and then restart it for the new paper format to appear in the list.
- If the following functions are being used, you can quickly apply their settings to the printer.
  - Mass storage feature (page 89)
  - Bluetooth (Object Push Profile (OPP))
  - Wi-Fi (File Transfer Protocol (FTP))

#### Important

These settings commands are only intended to be used for applying settings to a printer. These commands cannot be imported into [**Paper Size Setup**].

### New Dialog Box

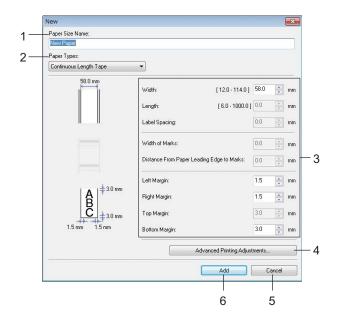

#### 1 Paper Size Name

Type in the name of the paper format to be added.

#### 2 Paper Types

Select the paper type.

Available settings: [Continuous Length Tape], [Die-cut Label], [Media With Marks]

#### 3 Detailed settings

Specify details for the paper format to be added.

#### 4 Advanced Printing Adjustments

Click this button to display the [Advanced Printing Adjustments] dialog box and make advanced printing adjustments for each paper format. For details, see Advanced Printing Adjustments Dialog Box on page 85.


#### 5 Cancel

Cancels the settings and closes the dialog box. The settings will remain unchanged.

#### 6 Add

Click this button to add the paper format.

### Advanced Printing Adjustments Dialog Box

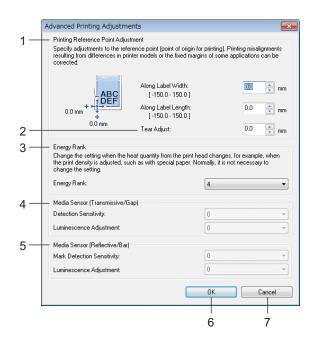

#### 1 Printing Reference Point Adjustment

Adjust the position of the reference point (point of origin for printing). This corrects printing misalignments resulting from differences in printer models or from the fixed margins of some software.

#### 2 Tear Adjust

Adjust the cutting position when the paper is cut using the tear bar. Available settings: -10.0 mm to 10.0 mm

#### 3 Energy Rank

Select a setting when it is necessary to adjust the amount of heat (energy) from the print head, for example, with special paper.

# 🖉 Note

There may be contrast variations in the print result due to the operating environment and media used. Change the setting if necessary.

#### 4 Media Sensor (Transmissive/Gap)

Adjust the precision with which the transmissive/gap sensor detects the gaps (spacing) for die-cut labels and the amount of light emitted by the sensor.

Settings can be specified when [Paper Types] is set to [Die-cut Label].

# 🖉 Note

Because the settings for [**Media Sensor (Transmissive/Gap)**] in the [**Device Settings**] dialog box (See *Print Position / Sensor* on page 75) will have an effect, specify appropriate values. Example settings:

	Setting EX1	Setting EX2
Device Settings	+2	-2
Paper Size Setup	+2	+2
Actual effect	4	0

#### 5 Media Sensor (Reflective/Bar)

Adjust the precision with which the reflective/black mark sensor detects black marks and the amount of light emitted by the sensor.

Settings can be specified when [Paper Types] is set to [Media With Marks].

# Note

Because the settings for [**Media Sensor (Reflective/Bar)**] in the [**Device Settings**] dialog box (See *Print Position / Sensor* on page 75) will have an effect, specify appropriate values. Example settings:

	Setting EX1	Setting EX2
Device Settings	+2	-2
Paper Size Setup	+2	+2
Actual effect	4	0

#### 6 OK

Saves the settings and returns to the previous dialog box.

#### 7 Cancel

Cancels the settings and closes the dialog box. The settings will remain unchanged.

3

# **Distribute Paper Formats**

The paper formats exported from the [**Currently Registered Paper Sizes**] list can be distributed to other computers.

#### **Distributing Only Paper Formats**

If the printer driver has been installed on the recipient's computer, only the paper formats need to be distributed.

At the sender's computer, specify the paper format settings, and then click [**Export**]. (For details, see *Paper Size Setup* on page 82.)

The following files are created: bsr425ed.txt, bsr425ed.ptd, pdt4437.bin or bsr423ed.txt, bsr423ed.ptd, pdt4337.bin

- 2 Save bsr425ed.txt or bsr423ed.txt in any location on the recipient's computer.
- 3 At the recipient's computer, click [Import]. The paper formats are replaced with the imported ones.

# **Change Settings When Printing from a Mobile Device**

If using a mobile device, change the settings as necessary using the software before printing. The settings that can be changed vary according to the software.

# Mote

Before connecting a mobile device, you can specify detailed settings by connecting the printer to a computer, and using the Printer Setting Tool (see *Change the Printer Settings* on page 45).



# **Other Functions**

# **Print the Printer Information**

You can use the **†** (Feed) / OK button to print a report that lists the following printer information:

- Program version
- Printer usage history
- Missing dot test pattern
- Printer settings information
- List of transferred data
- Network setting information



- You can use the Device Settings to set in advance which items will be printed (see *Device Settings* on page 67).
- The node name appears in the Printer Settings. The default node name is "BRWxxxxxxxxx". (Where "xxxxxxxxxx" is based on the printer's MAC Address/Ethernet Address.)
- This operation can also be performed using the Printer Setting Tool.
- 1 Make sure that a roll of receipt paper has been loaded and the roll compartment cover is closed.
- 2 Turn the printer on.
- 3 Press and hold the 1 (Feed) / OK button until [Printing] appears on the LCD. The printer information will be printed.



To print a printer information, use 102 mm continuous roll.

# Mass Storage Mode

# Description

The mass storage mode feature allows you to send a file via the USB interface without loading a printer driver.

This feature is useful for:

- Applying printer settings saved in a command file (.bin file format) or adding templates (.blf file format) distributed by the administrator, to the printer.
- Executing commands without installing the printer driver.
- Using a device with an operating system (including non-Windows operating systems) that has a USB host feature to print and transmit data.

### Use of Mass Storage Mode

- 1 Confirm that the printer is turned off.
- While pressing the Menu / ▼ (Select) button, press and hold the () (Power) button. The printer starts up in mass storage mode. The message [Mass Storage] appears on the LCD.
- Connect the Windows computer or mobile device to the printer via USB. The printer's mass storage area is displayed on the computer or device's screen.

### 🖉 Note

If the mass storage area is not displayed automatically, see the operating instructions for the computer or device's operating system for information about displaying the mass storage area.

- 4 Drag and drop the file you want to copy to the mass storage area.
- 5 Press the Menu / ▼ (Select) button. The command file is executed. The message [Receiving] appears on the LCD.
- 6 After the file has been executed, the message [Mass Storage] appears on the LCD.
- 7 To turn mass storage mode off, turn the printer off. The printer will start up in its normal operating mode.

#### Important

- When the printer is turned off, mass storage mode is deactivated and any files in the mass storage area are deleted.
- This feature supports ".bin", ".blf", and ".jpg" files. Do not use other file formats with this feature.
- Do not create folders in the mass storage area. If a folder is created, files in the folder will not be executed.
- The capacity of the mass storage area is 15.8 MB.
- If multiple files are copied, the order that the files will be executed in cannot be guaranteed.
- Wi-Fi and Bluetooth are not available while the printer is running in mass storage mode.
- · Do not access other files in the mass storage area when executing a copied file.

# **Print JPEG Images**

Image data (JPEG) can be printed without using the printer driver.

### 🖉 Note

- JPEG images can be printed using the mass storage feature.
- The Object Push Profile (OPP) is used for printing via a Bluetooth connection.
- This printer will convert a colour JPEG image to a 'Black & White', image using a dithering process.
- When sending a JPEG image that is already 'Black & White' this dithering process may make your printed image fuzzy.
- To improve the image quality, try to turn off any preprocessing of the JPEG image.
- Only JPEG images can be printed. (Limited to files with the .jpg extension.)
- The maximum file size is 15.8 MB.
- The maximum resolution is as follows:

Height  $\times$  Width = 24000  $\times$  832 dots

If these limits are exceeded, the data received by the printer will be discarded and not printed.

- 1 printed pixel = 1 dot.
- This printer performs binary processing (simple binary) to print the image.
- The image is printed with the height-to-width proportion of the received data.

# Remote Update (RJ-4250WB Only)

The Remote Update feature allows for the semi-automatic update of the printer's settings with a simple connection to a network folder where the update files reside. For more information about Remote Update, see *Remote Update (RJ-4250WB only)* on page 42.

# Section II



# Software

How to Use P-touch Editor	92
How to Use P-touch Transfer Manager & P-touch Library	102
How to Transfer Templates with P-touch Transfer	
Express	119
How to Update P-touch Software	127
Wireless Network (RJ-4250WB Only)	132

5

# How to Use P-touch Editor

# **Use of P-touch Editor**

You must install P-touch Editor and the printer driver to use the printer with Windows computer.

To download the latest driver and software, visit our website at: install.brother

# **Start P-touch Editor**

For Windows 10 / Windows Server 2016 (RJ-4250WB) Click [Start] > [P-touch Editor 5.2] under [Brother P-touch], or double-click the [P-touch Editor 5.2] icon on the desktop.

For Windows 8/ Windows 8.1 / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB)

Click [P-touch Editor 5.2] on the [Apps] screen or double-click the [P-touch Editor 5.2] icon on the desktop.


For Windows 7 / Windows Server 2008 (RJ-4250WB) / Windows Server 2008 R2 (RJ-4250WB) Click [Start] > [All Programs] > [Brother P-touch] > [P-touch Editor 5.2], or double-click the [P-touch Editor 5.2] shortcut icon on the desktop.

When P-touch Editor starts, select whether you want to create a new layout or open an existing layout.

### 🖉 Note

To change how P-touch Editor starts, click [Tools] > [Options] in the P-touch Editor menu bar to display the [Options] dialog box. On the left side, select the [General] heading and then the setting you want in the [Operations] list box under [Startup Settings]. The factory setting is [Display New View].

3 Select an option in the screen.

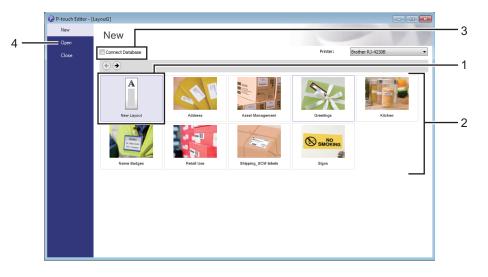


- 1 To create a new layout, double-click [New Layout], or click [New Layout] and then click [->].
- 2 To create a new layout using a preset layout, double-click a category button, or select a category button and then click [→].
- 3 To connect a pre-set layout to a database, select the check box next to [Connect Database].
- 4 To open an existing layout, click [Open].

# **Print with P-touch Editor**

#### Express mode

This mode allows you to quickly create layouts that include text and images.

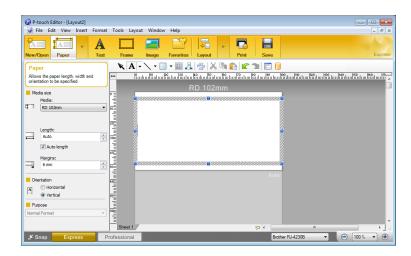


Configure the settings in the Print screen before printing.

To print, click [File] > [Print] from the menu bar or click the print icon.

#### Professional mode

This mode allows you to create layouts using a wide-range of advanced tools and options.

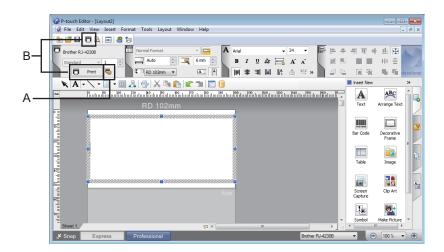

Configure the settings in the Print screen before printing.

To print, click [File] > [Print] from the menu bar or click the print icon (A).


In addition, click the [Print] icon (B) to start printing without changing the settings.

#### Snap mode

This mode allows you to capture all or a portion of your computer screen display, print it as an image, and save it for future use.

1

Click the [**Snap**] mode selection button. The [**Description of Snap mode**] dialog box appears.

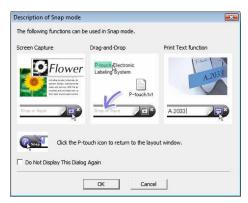

### 2 Click [**OK**].

The [Snap] mode palette appears.



# **Tips for Creating Templates**

From the computer, use P-touch Editor 5.2, which can be downloaded from the website at <u>install.brother</u>, to create a label layout. For more information about its use, see *How to Use P-touch Editor* on page 92.

### Create a Template

#### Label sample



For Windows 10 / Windows Server 2016 (RJ-4250WB) Click [Start] > [P-touch Editor 5.2] under [Brother P-touch], or double-click the [P-touch Editor 5.2] icon on the desktop.


For Windows 8/ Windows 8.1 / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB)

Click [P-touch Editor 5.2] on the [Apps] screen or double-click the [P-touch Editor 5.2] icon on the desktop.

For Windows 7 / Windows Server 2008 (RJ-4250WB) / Windows Server 2008 R2 (RJ-4250WB) Click [Start] > [All Programs] > [Brother P-touch] > [P-touch Editor 5.2], or double-click the [P-touch Editor 5.2] shortcut icon on the desktop.

2) When P-touch Editor starts, select whether you want to create a new layout or open an existing layout.


3 Click [Paper] (1), and then specify the media and length (2). (This example shows the [Express] mode.)

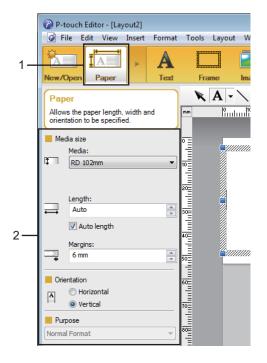

4 Click [**Text**] (1), and then specify the font and style (2).

	P-touch Editor - [Layout2]				
	File Edit View Insert	Format	Tools	Layout	W
1 —		A			2
	New/Open Paper	Text	Fra	me	lma
	Text Allows the text properties to be specified.		nm	A -	<u>ک</u> ۱٬۰۰۰
	Font		P =		
	Arial 👻 24	•			
2—		<u>A</u> `.A`	លក់ទីពេលសំពីលល់សំពីលល់សំពីលល់សំពីលល់សំពីលល់សំពីលល់សំពី		

5 Clicking A - displays the cursor so text can be entered.

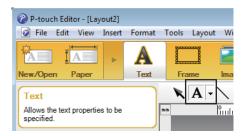

- 6 After adding the text, click the text box to move it within the template.
- Repeat steps ③ and ⑥ to enter text and arrange the layout.
- 8 [File] > [Save as] on the menu bar, and then specify a file name to save the template.


### Insert the Date and Time in a Label

- In P-touch Editor 5.2, open the label layout you want to edit.
- On the menu bar, click [Insert] > [Date/Time] to display the [Date and Time Properties] dialog box. Select settings for the format of the text you want to insert.

Date and Time Properties           Setup         Text         Font         Drawing		×
Category O Date      O Time	Date & Tim	
Format: Same as OS (Short date) ▼ Sample	Year: Month: Day: Time:	2020 V December V 13 V 21 : 1
12/13/2020	Add/Su Units: Time Period:	Days v 10 x
		OK Cancel

#### Important

The date and time inserted into the label will be printed using the printer's default character size. Because the character size is determined by the size of the date and time object, adjust the object to the size you want in P-touch Editor 5.2 before transferring the label layout to the printer.



### Link a Database to a Template

#### Label sample



A database can be linked to the template you created. Since the text in the template can be replaced with text from the database, multiple labels can be printed simply by creating a single template.

For more information on how to create databases and database settings, see [P-touch Editor Help].




Prepare a database file in advance.

### 🖉 Note

- Files saved as XLS, XLSX, MDB, CSV, TXT and ACCDB formats can be used as databases.
- Only one database can be linked to a single template. A maximum of 65,000 records can be created in that database. (The total size of templates and databases combined is limited to 12 MB.)

2 In P-touch Editor 5.2, open the template to be linked to the database.

3 On the menu bar, click [File] - [Database] - [Connect] or 间 to display the [Open Database] dialog box. Select [Connect Database File], click [Browse], and then select the database you want to link.

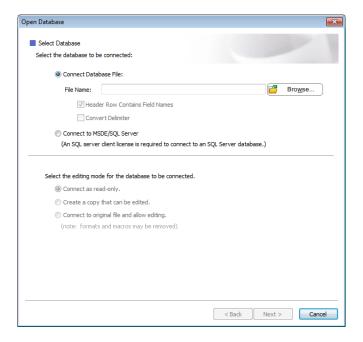


Click [Next].

4 With [Database Field] under [Merge Fields], specify which database column will be linked to which object, and then click [OK].

review:				Merge Fields:	
				Layout Object	Database Field
				"Strawberry"	(None)
				"2.85"	(None)
Channel	de en une c	62.8		"\$"	Product
Suaw	/berry				Price
	Q Q	c			
	•	) / (	)))		
Product	Price				
Product	Price				
	Price				
Strawberry	Price 2.85				
Strawberry Orange	Price 2.85				
Strawberry Orange Apple	Price 2.85 1.55 2.15				
Strawberry Orange Apple Banana	Price 2.85 1.55 2.15 1.55				
Strawberry Orange Apple Banana	Price 2.85 1.55 2.15 1.55				
Strawberry Orange Apple Banana	Price 2.85 1.55 2.15 1.55				
Strawberry Orange Apple Banana	Price 2.85 1.55 2.15 1.55				

5 The template and database will be linked, and the main window appears. Click to select the database row with the text to be replaced, and display a preview of the label.

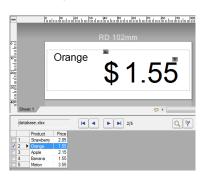

Finally, transfer the created template to the printer using P-touch Transfer Manager.

For details, see How to Use P-touch Transfer Manager & P-touch Library on page 102.

6

# How to Use P-touch Transfer Manager & P-touch Library

# P-touch Transfer Manager

This program allows you to transfer templates and other data to the printer and save backups of your data on Windows computer.


First P-touch Transfer Manager transfers data to the printer, and then P-touch Template sends text data that will be inserted into the template and printed. For more information on P-touch Template, download the *P-touch Template Manual/Command Reference* (English only) from the Brother support website at support.brother.com/manuals.

The transfer function is needed to use P-touch Template.

The template can also be transferred via network.

# **Transfer the Template to P-Touch Transfer Manager**

To use P-touch Transfer Manager, you must first transfer templates created in P-touch Editor to P-touch Transfer Manager.



#### 2 Click [File] > [Transfer Template] > [Transfer].

When P-touch Transfer Manager starts, the main window appears.



The following method can also be used to start the P-touch Transfer Manager.

For Windows 10 / Windows Server 2016 (RJ-4250WB):


Click [Start] > [P-touch Transfer Manager 2.3] under [Brother P-touch].

For Windows 8 / Windows 8.1 / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB):

Click [P-touch Transfer Manager 2.3] on the [Apps] screen.

For Windows 7 / Windows Server 2008 (RJ-4250WB) / Windows Server 2008 R2 (RJ-4250WB): Click [Start] > [All Programs] > [Brother P-touch] > [P-touch Tools] > [P-touch Transfer Manager 2.3].

#### Main window

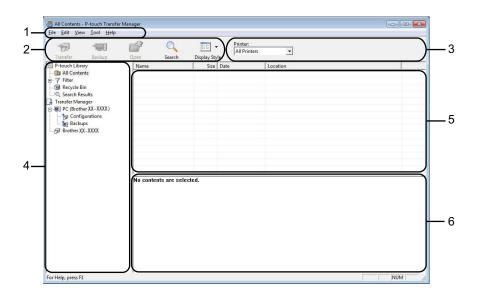

#### 1 Menu bar

Provides access to various commands, which are grouped under each menu title ([File], [Edit], [View], [Tool], and [Help]) according to their functions.

#### 2 Toolbar

Provides access to frequently used commands.

#### 3 Printer selector

Allows you to select which printer the data will be transferred to. When you select a printer, only the data that can be sent to the selected printer is displayed in the data list.

#### 4 Folder list

Displays a list of folders and printers. When you select a folder, the templates in the selected folder are displayed in the template list.

If you select a printer, the current templates and other data stored in the printer are displayed.

#### 5 Template list

Displays a list of templates in the selected folder.

#### 6 Preview

Displays a preview of the templates in the templates list.

# Explanations of the Toolbar Icons

lcon	Button name	Function
	Transfer	Transfers templates and other data from the computer to the printer.
	Save Transfer File	Changes the file type of the data to be transferred to other software.
1	(When not connected to a printer)	Select "BLF" for the filename extension when transferring the data using Wi-Fi. Select "PDZ" when transferring the data using P-touch Transfer Express (USB).
		The available interfaces differ depending on your model.
-	Backup	Retrieves the templates and other data saved in the printer and saves it to a computer.
<b>1</b>	Open	Opens the selected template.
	Search	Allows you to search for templates or other data that are registered to P-touch Library.
	Display Style	Changes the file display style.

# Transfer Templates or Other Data from Computer to the Printer

Use the following procedure to transfer templates, databases and images from the computer to the printer.

 Connect the computer and the printer via USB, and then turn the printer on. The printer model name appears next to a printer icon in the folder view. If you select the printer in the folder view, the current templates and other data stored in the printer appear.

## Note

- If a printer is disconnected or offline, it is not listed in the folder view.
- Before transferring data, check that the computer and the printer are correctly connected via a USB cable or Wi-Fi, and that the printer is on.
- 2) Select the printer that you want to transfer the template or other data to.

All Contents - P-touch Transfer	Manager			*
All Contents: - Prouch Tranette Tender Recipitation (Contents): - Prouch Tranette Provide Tranette Pr	Manager <u>Open</u> <u>Search</u> <u>Rame</u> <u>g</u> earne <u>g</u> eadress eadress No contents are sele	1K8 11/10/2011 525:32 2K8 11/10/2011 528:23	×	
For Help, press F1			NUM	1

3 Right-click the [**Configurations**] folder, select [**New**], and then create a new folder.

ransfer Back	S (	Open Search	Display Sty	All Prin	ters 💌		
-touch Library		Transfer Name		Туре	Date	Key Assign	Name
All Contents		iname	1KB	Layout	11/10/2011 5:25:10		name.lbx
Filter		CD CD		Layout	11/10/2011 5:25:33	-	CD.lbx
Recycle Bin		address address	2KB	Layout	11/10/2011 5:28:23	-	address.lbx
Search Results							
ansfer Manager							
PC (Brother XX-X)	OOX)						
Configurations	New	-					
Backups							
Brother XX-XXX	New M	lessage					
	Propert	ties					
		•			m		
		No contents are s	includ.				

106

4 Drag the template or other data that you want to transfer and place it in the new folder.

#### **Transfer Function Specification**

Data type	Maximum number of transferable items	Restriction details		
Template	255	Each template can contain a maximum of 255 objects.		
Database	255	<ul> <li>Only *.csv files can be transferred.</li> <li>Each *.csv file can contain a maximum of 65000 records.</li> </ul>		
Image (User-defined character)	255	<ul> <li>Only *.bmp files can be transferred.</li> <li>Monochrome *.bmp files are recommended.</li> <li>The size limit is 832 × 832 pixels.</li> </ul>		

# 🖉 Note

You can confirm the available space in the transfer file memory by printing the Printer Setting Report. For more information, see *Print the Printer Information* on page 88. See [**RomFree**] for the available space\*.

\* The available space that appears in "RomFree = \*\*\*\*\*\*byte" may be different from the actual available space.

You can view the templates and other data by selecting:


- The folder in the [Configurations] folder
- [All Contents]
- One of the categories under [Filter], such as [Layouts]

When transferring multiple templates or other data, drag all the files you want to transfer and place them in the new folder.

Each file is assigned a key number (memory location in the printer) when it is placed in the new folder.

Transfer Backup	Open Search	Display Sty	All Print	ters 💌		
P-touch Library	Transfer Name	Size	Туре	Date	Key Assign	Name
	address address		Layout	11/10/2011 5:42:32	-	address.lbx
Y Filter	CD		Layout	11/10/2011 5:45:02	-	CD.lbx name.lbx
Search Results	<ul> <li>name</li> <li>number</li> </ul>		Layout Layout	11/10/2011 5:53:31 11/10/2011 6:10:45		name.lbx number.lbx
Transfer Manager	o number	IND	Layout	11/10/2011 0:10:45		number.ibx
PC (Brother XX - XXXX)						
Configurations						
Transfer						
Backups						
Brother XX - XXXX						
	4					

5 To change the key number assigned to an item, right-click the item, select [**Key Assign**], and then select the key number you want.

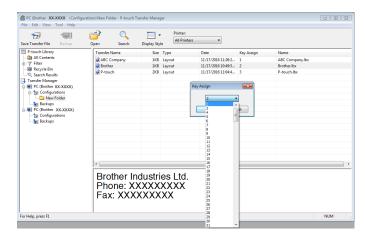

### 🖉 Note


- Except for the data in databases, all data transferred to the printer is assigned a key number.
- If the template or other data transferred to the printer has the same key number as another template already saved in the printer, the new template will overwrite the old one. You can confirm the templates key number assignments saved in the printer by backing up the templates or other data. For more information, see *Back up Templates or Other Data Saved in the Printer* on page 110.
- If the printer memory is full, remove one or more templates from the printer's storage memory. For more information, see *Back up Templates or Other Data Saved in the Printer* on page 110.
- 6 To change the names of templates or other data that will be transferred, click the item you want, and then type the new name. The number of characters used for the template names may be limited depending on the printer model.
- Select the folder containing the templates or other data that you want to transfer, and then click [Transfer]. A confirmation message appears.

Transfer Backup	Open Search	Display Sty	All Printers	•		
P-touch Library	Transfer Name	Size	Туре	Date	Key Assign	Name
All Contents	address	2KB	Layout			address.lbx
Y Filter	CD		Layout	11/10/2011 5:45:02	-	CD.lbx
B Recycle Bin	2 name		Layout	11/10/2011 5:53:31		name.lbx
C Search Results	i number	1KB	Layout	11/10/2011 6:10:45	-	number.lbx
Transfer Manager I PC (Brother XX - XXXX)						
· · · · · · · · · · · · · · · · · · ·						
Transfer						
Backups						
Brother XX - XXXX						
	•			m		



- You can also transfer individual items to the printer without adding them to a folder. Select the template or other data that you want to transfer, and then click [Transfer].
- Multiple items and folders can be selected and transferred in one operation.

8 Click [**OK**].



The selected items are transferred to the printer.

# Back up Templates or Other Data Saved in the Printer

Use the following procedure to retrieve the templates or other data saved in the printer and save it to a computer.


#### Important

- Backed up templates or other data cannot be edited on the computer.
- Depending on the printer model, templates or other data backed up from one printer model may not be able to be transferred to another printer model.
- Connect the computer and the printer and turn the printer on. The printer model name is displayed in the folder view.
   If you select a printer in the folder view, the current templates and other data stored in the printer are displayed.
- Select the printer to back up from, and then click [Backup]. A confirmation message appears.

Transfer Backup	Open Search	Display Style	Printer: All Printers	•	
P-touch Library	Transfer Name	Size Typ	e Date	Key Assign	Connected Database Name
All Contents	6 number	1KB Ten	plate 11/10	0/2011 20:57 2	-
- 🌱 Filter	ගි name ගි CD ගි address	1KB Ten		0/2011 20:57 5	-
- 🔞 Recycle Bin	6 CD	5KB Ten	plate 11/10	0/2011 20:57 6	-
	6 address	1KB Ten	plate 11/10	0/2011 20:57 7	-
Transfer Manager					
PC (Brother XX - XXXX)					
Configurations					
Transfer					
Backups					
PC (Brother XX - XXXX)					
Configurations					
Transfer	-				
Backups	-				
Brother XX-XXXX					
_	•		m		

#### 3 Click [**OK**].

A new folder is created under the printer in the folder view. The folder name is based on the date and time of the backup. All of the printer's templates and other data are transferred to the new folder and saved on the computer.



# **Delete Printer Data**

Use the following procedure to delete all templates or other data that are saved in the printer.




This feature is only available when the computer and printer are connected via USB.

Connect the computer and the printer. The printer model name appears next to a printer icon in the folder view.

2 Right-click the printer, and then select [Delete All].

nsfer Backup	Open	Search	Display Sty	All Printe	rs 💌		
touch Library	Transfer		Size	Туре	Date	Key Assign	Connected Database Name
All Contents Filter	தி numb தி name	er		Template Template	11/10/2011 20:57 11/10/2011 20:57	2	1
Recycle Bin	61 CD			Template	11/10/2011 20:57	6	-
Search Results	addres	5		Template	11/10/2011 20:57	7	-
insfer Manager	01.23						
PC (Brother XX - XXXX) PC (Brother XX - XXXX)							
PC (Brother XX - XXXX)							
Backups							
Delete All							
Printer Settings							
Properties							
	11				m.		
	manupre	contents are	, stretten.				

A confirmation message appears.



Click [OK].

3

All templates and other data saved in the printer are deleted.

# Create Transfer Files and Transfer Package Files

You can use P-touch Transfer Manager to save template data, which was created using P-touch Editor, in the .blf or .pdz format. You can transfer these files in this format to a printer, from a computer or mobile device. You can also print files in BLF format when the printer is in mass storage mode.



Create the template using P-touch Editor, and then transfer it to P-touch Transfer Manager. For more information, see Transfer the Template to P-Touch Transfer Manager on page 103.

2 Without connecting the printer to the computer, select [Configurations] in the P-touch Transfer Manager window, and then select the template to save.

#### 🖉 Note

You can select multiple templates at the same time.

Click [File] > [Save Transfer File].

#### Important

The [Save Transfer File] button appears only if the printer is disconnected from the computer or offline.

#### 🖉 Note

- If you click [Save Transfer File] after selecting [Configurations], all templates in the folder are saved as the BRAdmin file (.blf) or Transfer Package file (.pdz).
- You can combine multiple templates into a single BRAdmin file (.blf) or Transfer Package file (.pdz).
- 4 In [Save as type], select the format in which to save the template, and then type in the name and save the template.

Select the BLF format when printing using the mass storage mode or connecting your mobile device to the printer using Wireless Direct or Wi-Fi, and select the PDZ format when connecting using Bluetooth. The templates are saved as a BRAdmin file (.blf) or Transfer Package file (.pdz).

# **Use of P-touch Library**

This program allows you to manage and print P-touch Editor templates.

# **Start P-touch Library**

For Windows 10 / Windows Server 2016 (RJ-4250WB):

Click [Start] > [P-touch Library 2.3] under [Brother P-touch].

For Windows 8 / Windows 8.1 / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB):


Click [P-touch Library 2.3] on the [Apps] screen.

```
For Windows 7 / Windows Server 2008 (RJ-4250WB) / Windows Server 2008 R2 (RJ-4250WB):
```

Click [Start] > [All Programs] > [Brother P-touch] > [P-touch Tools] > [P-touch Library 2.3].

When P-touch Library starts, the main window appears.

#### Main window

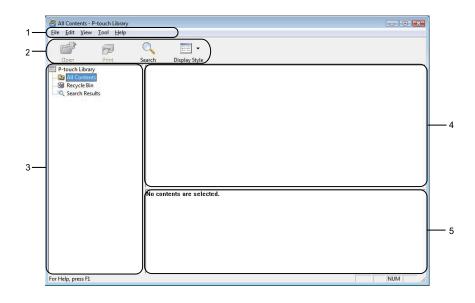

#### 1 Menu bar

Provides access to all available commands, which are grouped under each menu title ([File], [Edit], [View], [Tool], and [Help]) according to their functions.

#### 2 Toolbar

Provides access to frequently used commands.

#### 3 Folder list

Displays a list of folders. When you select a folder, the templates in the selected folder are displayed in the templates list.

#### 4 Templates list

Displays a list of the templates or other data in the selected folder.

#### 5 Preview

Displays a preview of the templates or other data selected in the templates list.

#### **Explanations of the Toolbar Icons**

lcon	Button name	Function
<b>7</b>	Open	Opens the selected template.
	Print	Prints the selected template with the printer.
Q	Search	Allows you to search for templates registered to P-touch Library.
	Display Style	Changes the file display style.

How to Use P-touch Transfer Manager & P-touch Library

# **Open and Edit Templates**

All Contents - P-touch Library Eile Edit View Iool Help								
Open Print	Search Display Style							
P-touch Library	Name	Size Date	Location					
🛅 All Contents 🖼 Recycle Bin	ABC Company.lbx	1KB 11/	C:\Users\User\Documents\My Labels\ABC Company.lbx					
	Brother.lbx		C:\User\User\Documents\My Labels\Brother.lbx					
Search Results	P-touch.lbx	2KB 11/	C:\User\User\Documents\My Labels\P-touch.lbx					
	•							
	ABC Company Phone XXXXXXXX							
For Help, press F1			NUM					

Select the template you want to open or edit, and then click [Open].

The program associated with the template starts, and lets you edit the template.

How to Use P-touch Transfer Manager & P-touch Library

# **Print Templates**

All Contents - P-touch Library				- • 💌
Eile Edit View Iool Help				
	🔪 🥅 •			
Open Print Sear	rch Display Style			
P-touch Library	Name Size	Date	Location	
🛅 All Contents 🔞 Recycle Bin	ABC Company.lbx 1KB		C:\Users\User\Documents\My Labels\ABC Company.lbx	
Search Results			C:\Users\User\Documents\My Labels\Brother.lbx	
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	P-touch.lbx 2KB	11/	C:\Users\User\Documents\My Labels\P-touch.lbx	
			m	- F
	ABC Compan	v		
	Di Compan	, ,,,	~~~	
	Phone XXXX	(X)	(XX	
For Help, press F1	,			NUM

Select the template you want to print and then click [Print].

The connected printer prints the template.

How to Use P-touch Transfer Manager & P-touch Library


# **Search for Templates**

You can search for templates registered to P-touch Library.



Click [Search].

The [Search] dialog box appears.

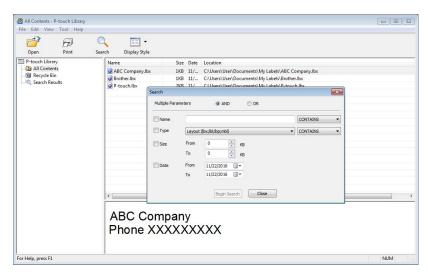

2 Specify the search criteria.

The following search criteria are available:

Settings	Details
Multiple Parameters	Determines how the program searches when multiple criteria are specified. If you select [ <b>AND</b> ], the program searches for files that satisfy all of the criteria. If you select [ <b>OR</b> ], the program searches for files that satisfy any of the criteria.
Name	Allows you to search for a template by specifying the file name.
Туре	Allows you to search for a template by specifying the file type.
Size	Allows you to search for a template by specifying the file size.
Date	Allows you to search for a template by specifying the file date.

#### 3 Click [Begin Search].

The search begins and the search results are displayed.

#### 4 Close the [Search] dialog box.

To confirm the search results, click [Search Results] in the folder view.

6

# 🖉 Note

You can register templates to P-touch Library by dragging and dropping them into the [**All Contents**] folder or to the folder list. You can also configure P-touch Editor to register templates to P-touch Library automatically, using the following procedure:

- 1 From the P-touch Editor menu, select [Tools] > [Options].
- 2 In the [Options] dialog box, click [General] > [Registration Settings].
- 3 Select the timing for registering templates created with P-touch Editor, and then click [OK].


# How to Transfer Templates with P-touch Transfer Express

You can transfer templates to the printer using P-touch Transfer Express. First, the administrator creates a template, and then distributes it together with P-touch Transfer Express. You can then use P-touch Transfer Express to transfer the template directly to the printer.

To download the latest version of P-touch Transfer Express, visit <u>support.brother.com</u> and go to your model's [**Downloads**] page.

#### Important

- To transfer the file as a new template, specify a [Key Assign] number (in P-touch Transfer Manager) that
  is not currently used. If the specified [Key Assign] number is already being used, the existing template
  will be overwritten with the new one.
- This function requires a USB connection.

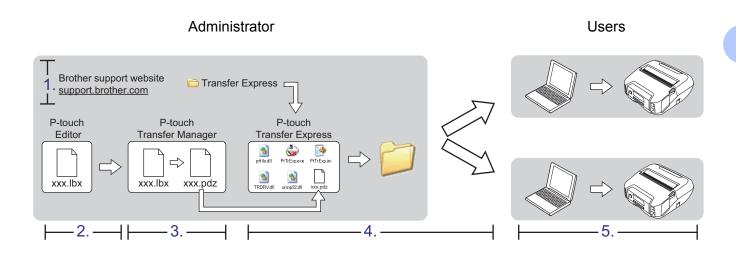

## **Prepare P-touch Transfer Express**


You must prepare P-touch Transfer Express for transferring templates to a printer.

#### Important

- The printer driver must be installed before using P-touch Transfer Express.
- P-touch Transfer Express is available only in English.
- 1 To download the latest version of P-touch Transfer Express, visit <u>support.brother.com</u> and go to your model's [Downloads] page.
- 2 Download P-touch Transfer Express to any location in Windows computer.
- Decompress the downloaded file (.zip).

# **Transfer the Template to P-Touch Transfer Manager**

- 1 In P-touch Editor, open the template you want to use.
- 2 Click [File] > [Transfer Template] > [Transfer].

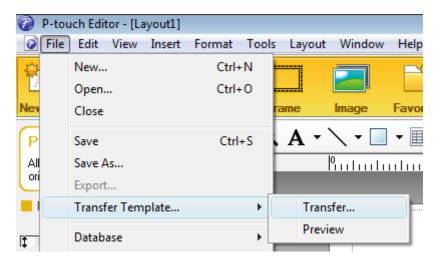

The template is transferred to P-touch Transfer Manager. P-touch Transfer Manager automatically starts up.

#### 🖉 Note

#### • For Windows 10 /Windows Server 2016 (RJ-4250WB):

The template can also be transferred to P-touch Transfer Manager by clicking [**Start**] > [**Brother P-touch**] > [**P-touch Transfer Manager 2.3**] to start P-touch Transfer Manager, and then dragging the .lbx file onto the P-touch Transfer Manager window.

 For Windows 8 / Windows 8.1 / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB):


The template can also be transferred to P-touch Transfer Manager by clicking [**P-touch Transfer Manager 2.3**] on the [**Apps**] screen to start P-touch Transfer Manager, then dragging the .lbx file onto the P-touch Transfer Manager window.

 For Windows 7 / Windows Server 2008 (RJ-4250WB) / Windows Server 2008 R2 (RJ-4250WB): The template can also be transferred to P-touch Transfer Manager by clicking [Start] > [All Programs] > [Brother P-touch] > [P-touch Tools] > [P-touch Transfer Manager 2.3] to start P-touch Transfer Manager, then dragging the .lbx file onto the P-touch Transfer Manager window.


# Save the Template as a Transfer Package File (.pdz)

To create a file in a format that can be used by P-touch Transfer Express, save the template as a Transfer Package file (.pdz).

In the folder view, select [Configurations].

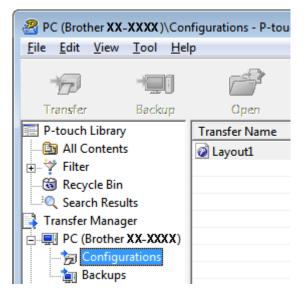


2) Select the template you want to distribute.

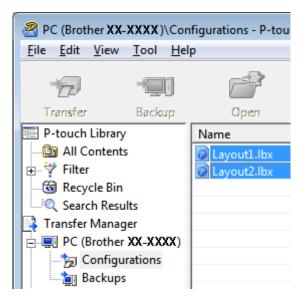

How to Transfer Templates with P-touch Transfer Express



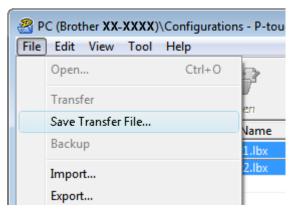

#### Important

The [Save Transfer File] button appears only if the printer is disconnected from the computer or offline.

## 🖉 Note

- If you click [Save Transfer File] after selecting [Configurations] or a created folder, all templates in the folder are saved as the Transfer Package file (.pdz).
- You can combine multiple templates into a single Transfer Package file (.pdz).

4 Type in the name, and then click [Save].

🗸 🗢 🗖 Deskt	op 🕨	_		<b>- €</b> <del>7</del>	Search Desktop	
Organize 👻 Ne	w folde	er			855 -	
Favorites Favorites Forwards Favorites Forwards	III	Name	Size	Item type	Date modified	
File <u>n</u> ame:	Layou	ıt1				
	-	fer Package File (*.pdz)				

The template is saved as a Transfer Package file (.pdz).

# Distribute the Transfer Package File (.pdz) and P-Touch Transfer Express to the User

Mote

If you already have P-touch Transfer Express downloaded, it is not necessary for the administrator to send the Transfer Express folder. In this case, you can simply move the distributed Transfer Package file to the downloaded folder, and then double-click [**PtTrExp.exe**].

Move the Transfer Package file (.pdz) to the downloaded folder.



2 Distribute all the files in the downloads folder to others.

# Transfer the Transfer Package File (.pdz) to the Printer

Using the P-touch Transfer Express software received from the administrator, you can transfer the Transfer Package file (.pdz) to the printer.




#### Important

Do not turn the power off when transferring templates.

- Turn the printer on. 1
- Using a USB cable, connect the printer to the computer.
- Double-click [PtTrExp.exe], which was received from the administrator.
- Transfer a Transfer Package file (.pdz) to the printer.
  - Transferring a single Transfer Package file (.pdz)
    - 1 When there is a single Transfer Package file (.pdz) within the folder containing [PtTrExp.exe], click [Transfer].



2 The transfer of the Transfer Package file begins.

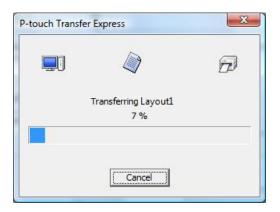

- Transferring multiple Transfer Package files (.pdz)
  - 1 When there are either multiple or no Transfer Package files (.pdz) within the folder containing [PtTrExp.exe], click [Browse].

🙀 P-touch	Transfer Express	×						
٨	Select the Transfer Package file to be transferred to the printer. Then, click the Transfer button to begin transferring.							
Transfe	Transfer Package <u>E</u> lle: Browse							
	2 Iransfer Exit							

2 Select the Transfer Package file you want to transfer, and then click [Open].


阑 Open									×
Look in:	🔋 Transfer Ex	press		•	÷	£	<u>r</u>	<b>-</b>	
Recent Places Desktop Crestec Nagoya Computer Network	Name								
	File <u>n</u> ame: Files of type:	Layout 1.pdz	kage file (*.pdz)				•		)pen ancel

3 Click [Transfer].


🤰 P-touch	Transfer Express	×						
١	Select the Transfer Package file to be transferred to the printer. Then, click the Transfer button to begin transferring.							
	r Package File: rs\xxx\Desktop\Transfer Express\Layout1.pdz							
	为 <u>T</u> ransfer Exit							

How to Transfer Templates with P-touch Transfer Express


4 Click [Yes].



5 The transfer of the Transfer Package file begins.

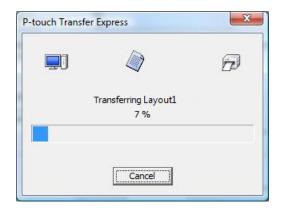

5 Click [**OK**].



The transfer of the Transfer Package file is completed.

# 8

# How to Update P-touch Software

The software can be upgraded to the latest available version using the P-touch Update Software.

### 🖉 Note

- The actual software and the contents of this manual may differ.
- Do not turn the power off when transferring data or updating firmware.

## **Update P-touch Software**

#### Important

Before updating software, install the printer driver.

#### For Windows 10 / Windows Server 2016 (RJ-4250WB)

Click [Start] > [Brother P-touch] > [P-touch Update Software], or double-click [P-touch Update Software] on the desktop.

For Windows 8 / Windows 8.1 / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB)

Click [P-touch Update Software] on the [Apps] screen or double-click [P-touch Update Software] on the desktop.

For Windows 7 / Windows Server 2008 (RJ-4250WB) / Windows Server 2008 R2 (RJ-4250WB) Double-click the [P-touch Update Software] icon.

#### 🖉 Note


The following method can also be used to start the P-touch Update Software.

Click [Start] > [All Programs] > [Brother P-touch] > [P-touch Update Software].



How to Update P-touch Software

2 Click the [Computer software update] icon.

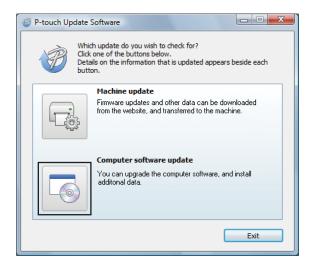

Select the [**Printer**] and [**Language**], select the check box next to the software you want to update and then click [**Install**].

-67	🤯 P-touch Update Software							
Ei	le <u>T</u> ools <u>H</u> elp							
	The updated comput will be installed. Select the desired items							
	Printer: XX - XXXX		•					
	Language: English(United	States)	-					
	<u>F</u> ile list:		<u>R</u> efresh List					
	Title	Version	Size 📩					
	🔲 🗔 P-touch Editor	5.0.122	22.8 MB					
	<		>					
		•	Click here for details					
		Install	Close					

4 A message appears to indicate the installation has finished.

# Update the Firmware

#### Important

- Before updating the firmware you must install the printer driver.
- Do not turn the power off when transferring data or updating firmware.
- If other software is running, exit the software.

1 Turn the printer on and connect the USB cable.

2 For Windows 10 / Windows Server 2016 (RJ-4250WB) Click [Start] > [Brother P-touch] > [P-touch Update Software], or double-click [P-touch Update Software] on the desktop.

For Windows 8 / Windows 8.1 / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB)

Click [P-touch Update Software] on the [Apps] screen or double-click [P-touch Update Software] on the desktop.

For Windows 7 / Windows Server 2008 (RJ-4250WB) / Windows Server 2008 R2 (RJ-4250WB) Double-click the [P-touch Update Software] icon.

#### 🖉 Note

The following method can also be used to start the P-touch Update Software. Click [Start] > [All Programs] > [Brother P-touch] > [P-touch Update Software].



How to Update P-touch Software





Select the [Printer], make sure that [The machine is connected correctly.] message appears, and then click [OK].

🥡 P-touch Update Software
The status of the machine connection will be checked. Select the model being used.
Printer:
The machine is connected correctly. Click the "OK" button.
*If multiple units of the same model are connected, all operations will be applied to all units.
OK Cancel



5 Select the [Language], select the check box next to the firmware to be updated, and then click [Transfer].

#### Important

Do not turn the printer off or disconnect the cable during data transfer.

🛷 P-touch U	pdate Software		
<u>F</u> ile <u>T</u> ools	<u>H</u> elp		
	The latest compatible soft transferred to the machine Select the desired items, and t	-	
Printer:	XX - XXXX		
Language	English(United States)	)	-
<u>File</u> list:			<u>R</u> efresh List
Title		Version	Size
	lie (10mr/1 19k) Laber Caleston	e 11	120KB
	S Iran	sfer	Close

6 Check the content to be updated, and then click [**Transfer**] to begin the update. The firmware update begins.

#### 🖉 Note

Do not turn the printer off or disconnect the cable during the update process.



# Wireless Network (RJ-4250WB Only)

# **Network Features**

The printer can be shared on an IEEE 802.11a/b/g/n wireless network using the internal network print server. The print server supports various functions and methods of connection on a network supporting TCP/IP, depending on the operating system you are running.

## How to Change the Printer's Network Settings (IP Address, Subnet Mask and Gateway)

#### Use of BRAdmin Light Utility

The BRAdmin Light utility is designed for the initial setup of Brother network connectable devices. It can also search for Brother products in a TCP/IP environment, show the status and configure basic network settings, such as the IP address.

#### Install BRAdmin Light

- 1 Visit our website (install.brother) and download the installer for the software and manuals.
  - Double-click the downloaded .exe file and follow the on-screen instructions to proceed with the installation. In the dialog box for selecting which items to install, select BRAdmin Light.

#### 🖉 Note

- If you require more advanced printer management, use the latest Brother BRAdmin Professional utility available as a download from the Brother support website at <u>support.brother.com</u>.
- If you are using firewall, anti-spyware, or antivirus software, temporarily disable them. When you are sure that you can print, re-enable them.
- The node name appears in the current BRAdmin Light window. The default node name of the print server in the printer is "BRWxxxxxxxxxx". ("xxxxxxxxx" is based on the printer's MAC Address / Ethernet Address.)
- · If required, enter the password "initpass".

#### Set the IP address, Subnet Mask and Gateway using BRAdmin Light

Start the BRAdmin Light utility.

- Windows 10 / Windows Server 2016:
  - Click [Start] > [BRAdmin Light] under [Brother].
- Windows 8 / Windows 8.1 / Windows Server 2012 / Windows Server 2012 R2: Click [BRAdmin Light] icon on the [Apps] screen.
- Windows 7 / Windows Server 2008 / Windows Server 2008 R2: Click [Start] > [All Programs] > [Brother] > [BRAdmin Light] > [BRAdmin Light].

2 BRAdmin Light searches for new devices automatically.



Double-click the new, unconfigured device.



#### 🖉 Note

If you do not use a DHCP/BOOTP/RARP server, the device appears as [**Unconfigured**] in the BRAdmin Light utility screen.

4 Select [STATIC] for the [Boot Method]. Enter the [IP Address], [Subnet Mask] and [Gateway] (if needed) of your print server.

and good difference (100	×
	100 100 × 10
Line net	1001.000.000.0
(attended)	000.000.0.0

- 5 Click [**OK**].
- 6 With a correctly programmed IP address, the Brother print server appears in the device list.

# **Other Management Utilities**

The printer can be used with the following management utilities in addition to the BRAdmin Light utility. You can change your network settings using these utilities.

#### Use Web Based Management (Web Browser)

A standard web browser can be used to change your print server settings using the HTTP (Hyper Text Transfer Protocol). (See *Configure the Printer Settings Using Web Based Management (Web Browser)* on page 137.)

#### Use of the BRAdmin Professional Utility

BRAdmin Professional is a utility for more advanced management of network connected Brother devices. This utility can search for Brother products on your network, and show the device status from an easy to read Explorer style window that changes colour to represent the status of each device.



- Please use the latest version of the BRAdmin Professional utility available as a download from the Brother support website at <u>support.brother.com</u>.
- The node name appears in the current BRAdmin Professional window. The default node name is "BRWxxxxxxxxxx". ("xxxxxxxxxx" is based on the printer's MAC Address / Ethernet Address.)
- If you are using firewall, anti-spyware, or antivirus software, temporarily disable them. When you are sure that you can print, re-enable them.
- If required, enter the password "initpass".

# Web Based Management

You can use a standard web browser to manage a printer on your network using HTTP. When using Web Based Management, you can do the following:

- Display the printer status information
- Change network settings such as TCP/IP information
- Display software version information of the printer and print server
- Change network and printer configuration details

₫	Ø	
		Note

- We recommend Microsoft Internet Explorer 11/Edge for Windows. Make sure that JavaScript and Cookies
  are always enabled in whichever browser you use.
- The default login password to manage printer settings is initpass. We recommend you change it to protect your printer from unauthorized access.

To use Web Based Management, your network must use TCP/IP, and the printer and Windows computer must have a valid IP address.

# Configure the Printer Settings Using Web Based Management (Web Browser)

A standard web browser can be used to change your print server settings using the HTTP (Hyper Text Transfer Protocol).



Type http://printer\_ip\_address/ into your browser. (Where printer\_ip\_address is the IP address or the print server name.)

■ For example (if the printer's IP address is 192.168.1.2.):

http://192.168.1.2/

#### 🖉 Note

If you have edited the hosts file on your computer or are using a Domain Name System, you can also enter the DNS name of the print server. As the print server supports TCP/IP and NetBIOS, you can also enter the NetBIOS name of the print server. You can find the NetBIOS name on the printer settings page. The NetBIOS name assigned is the first 15 characters of the node name and by default it appears as "BRWxxxxxxxxxx" where "xxxxxxxxxx" is the Ethernet address.

2	Υ	νou	can	now	change	the	print	server	settings.
-			••••		e		P		



#### Set a password

We recommend to change a login password to prevent unauthorised access to the Web Based Management.



2 Enter the password you want to use (up to 32 characters).

3 Re-enter the password in [Confirm new password] box.

#### 4 Click [Submit].

The next time you access Web Based Management, enter a password in the [Login] box, and then click

After configuring the settings, logout by clicking  $\rightarrow$ .

You can also set a password by clicking [**Please configure the password**] on the printer's web page if you are not setting a login password.

# **Section III**



# Appendix

Printer Maintenance	139
Product Specifications	142
Battery Charger (Optional:PA-BC-003)	144
Linerless Platen Kit (Optional:PA-LPR-001)	150
Charging Cradle (Optional:PA-CR-002)	153
Troubleshooting	157



Maintenance of the printer may be carried out as required. However, some environments may require more frequent maintenance (for example, dusty environments).

# **Exterior Maintenance**

Wipe any dust and marks from the main unit using a soft, dry cloth.

Use a cloth slightly dampened with water on difficult to remove marks.


🖉 Note

Do not use paint thinner, benzene, alcohol, or any other organic solvent.

These may deform or damage the case of the printer.

# **Print Head Maintenance**

Wipe the print head with a lint-free cloth dipped in isopropyl alcohol or ethanol. Carry out the maintenance frequently.

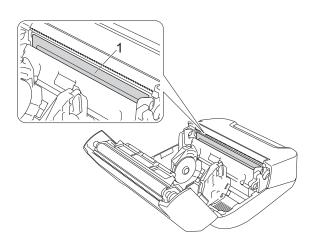


#### 1 Print head

#### 🖉 Note

Use according to the manufacturer's safety guidelines, as applicable.

# **Roller Maintenance**

Wipe the roller with a lint-free cloth dipped in isopropyl alcohol or ethanol. After cleaning the roller, make sure that no lint or other material remains on the roller.

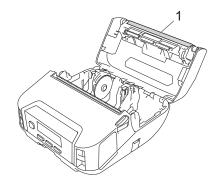


#### 1 Roller

### 🖉 Note

Use according to the manufacturer's safety guidelines, as applicable.

# **Paper Exit Slot Maintenance**

If adhesive accumulates at the paper exit slot and media becomes jammed or if the paper exit slot becomes dirty, wipe the paper exit slot with a lint-free cloth dipped in isopropyl alcohol or ethanol.

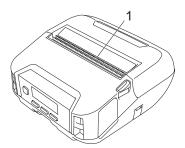


#### 1 Paper exit slot



Use according to the manufacturer's safety guidelines, as applicable.

# **Linerless Platen Maintenance**

When using the Linerless Platen Kit, paper dust may stick to the print head. Clean the print head regularly with a lint-free cloth or cotton swab dipped in isopropyl alcohol or ethanol as shown in the illustration.

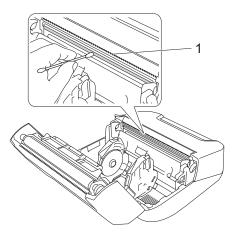

#### 1 Print head

After cleaning the print head, make sure that no lint or other material remains on the print head.

#### Note

Do not clean the roller of the linerless platen (See *Linerless Platen Kit (Optional:PA-LPR-001)* on page 150) to prevent its deterioration.

10

# **Product Specifications**

Items				
Printing				
Printing technology	Direct Thermal			
Print resolution	203 dpi x 203 dpi			
Print speed*	Maximum 127 mm/s			
	Maximum 76 mm/s (When linerless media is used.)			
Maximum print width	104 mm			
Maximum print length	3000 mm			
Minimum print length	12.7 mm			
Size	·			
Weight (including battery)	Approximately 850 g			
Dimensions	Approximately 153 mm (W) x 159 mm (D) x 68 mm (H)			
Interface				
USB	USB Ver. 2.0 (Full Speed) (mini-B)			
Bluetooth	Version 4.2			
	Supported profiles: SPP, OPP, HCRP, GATT			
	Supported protocol: iAP			
Wireless LAN	IEEE 802.11g/n (Wireless Direct)			
(RJ-4250WB only)	IEEE 802.11a/b/g/n (Infrastructure Mode)			
	WPS 2.0			
Environment				
Operating temperature	Operate:			
	The battery: -20°C to 55°C			
	AC adapter: -10°C to 40°C			
	Car adapter: -10°C to 50°C			
	10°C to 30°C (When linerless media is used.)			
	Charge:			
	0°C to 40°C (recommendable: 5°C to 35°C)			
	If the internal temperature of the battery is out of this range, charging may stop.			
Operating humidity	10% to 90% (No condensation, Maximum wet bulb temperature: 27°C)			
	20% to 50% (No condensation, Maximum wet bulb temperature: 27°C) (When linerless media is used.)			
Storage temperature	-20°C to 60°C			
Storage humidity	10% to 90% (No condensation, Maximum wet bulb temperature: 45°C)			


Items	
Power supply	
Battery	Rechargeable Li-ion battery: 7.2 V
Adapter (optional)	AC adapter (15 V)
Car adapter (optional)	Cigarette lighter car adapter (12 V (DC))
Maximum number of labels	10,000 labels *
Charging time	4 hours (when charging at 23°C with the printer turned off, and using a new battery)
Media specification	
Media type	Receipt, Gap/Black mark Label, Tag, Linerless (Optional)
Media width	45 mm to 114 mm
Thickness	Receipt: 0.058 mm to 0.090 mm
	Tag: 0.090 mm to 0.135 mm
	Label: 0.080 mm to 0.170 mm
Roll outside diameter (max)	58 mm
Core diameter (min)	Receipt: 12.7 mm
	Label: 25.4 mm
Media sensor	Transmissive, Reflective

See <u>support.brother.com</u> for a complete and updated list of software.

\*Using Brother's print test data (7% coverage, 102 × 29 mm) at 23°C when performing continuous printing using a USB connection with a new, fully-charged battery.

# **12** Battery Charger (Optional:PA-BC-003)

## **Parts Description**

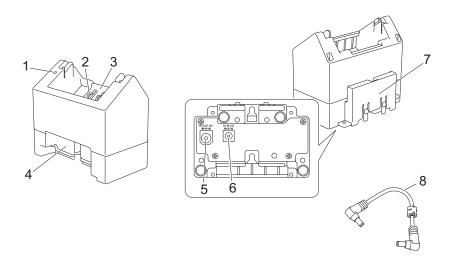

- 1 Charge indicator
- 2 Battery charging terminals
- 3 Battery compartment
- 4 Locking expansion slot
- 5 DC connector OUT
- 6 DC connector IN
- 7 Locking expansion hook
- 8 DC cord

## **Specifications**

Charge time: Approximately 4 hours\*

Charge temperature: 0°C to 40°C (recommendable: 5°C to 35°C)

Operating humidity: 10% to 90% (No condensation)


\* Varies depending on operating environment and the condition of the battery.


## How to Charge Batteries

The AC adapter (PA-AD-600), which is sold separately, is required for charging.

To charge the rechargeable Li-ion battery, use the charger together with the AC adapter (PA-AD-600).

The charger (PA-BC-003) cannot recharge the battery alone.




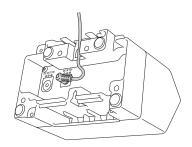

#### 🖉 Note


Insert the AC adapter through the opening in the battery charger as shown in the illustration. Install the AC adapter so the battery charger does not press on it.

- 2 Connect the AC power cord to a nearby electrical socket.
- 3 Align the charging terminals of the charger and the battery, and then insert the battery. The indicator lights in orange when the battery is charging.
- 4 The charge indicator will turn off when charging is complete. You can then remove the battery.

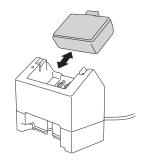

## Wall Mounting

The units can be wall-mounted with two screws per unit. Install the screws vertically with the spacing shown below. Ensure the screws are correctly secured with wall anchors or studs. The cavity must face upward (as shown) to hold the battery in place.

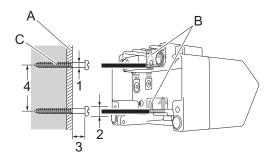

1: Dia. 3 - 4.5 mm 2: Dia. 8.5 mm or less 3: 12.2 mm or more 4: 44.5 - 47.5 mm

- A: Wall material
- B: Wall-mount slots
- C: Screw

#### **Use the Insert Nuts**

Insert nuts are provided on the base of the battery charger. Using these insert nuts, screws may be fastened to a board.


When fastening with screws, use the following types of screws.

- M2.6 Pitch 0.45 Screws
- Screws that are 3.5 mm to 7 mm longer than the thickness of the board

#### 🖉 Note

- When attaching to a vertical board, the method of installation is the same as wall mounting (See *Wall Mounting* on page 146).
- Be sure not to pinch the cables between the base of the battery charger and the board.

Battery Charger (Optional:PA-BC-003)

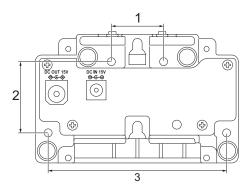


- 1 27.7 mm
- 2 38 mm
- 3 95 mm

## **Connect Multiple Battery Chargers**


Up to four battery chargers can be connected in-line together.

1 Insert the locking expansion hook on one Li-ion battery charger into the slot in another Li-ion battery charger until it locks into place.

Then, connect the AC adapter to the first battery charger.

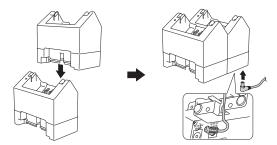

Connect one end of the included DC cord to the DC connector OUT of the first battery charger and connect the other end of the DC cord to the DC connector IN of the second battery charger.

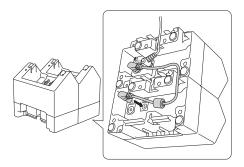


#### Note

· Connect the AC adapter and DC cord through the opening in the battery charger as shown in the illustration.


Install the AC adapter and DC cord so the battery charger does not press on them.

• When connecting battery chargers, it is recommended to use self-tapping screws (M2.6 x 6 mm) (not included) to firmly secure the battery chargers to one another.

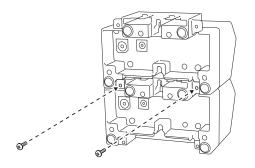

## **Disconnect the Battery Chargers**

- 1 Disconnect the DC cord and AC adapter from the battery chargers.
- Push the tab on the locking expansion hook to release the lock, and then disconnect the battery chargers.

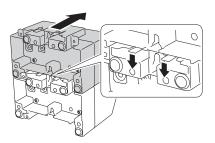

## 13 Linerless Platen Kit (Optional:PA-LPR-001)

This printer is compatible with linerless media.

## **Parts Description**


Linerless Platen

Screws (2)

13

## **Install the Linerless Platen**

1 Push the roll cover release lever to open the roll compartment cover.

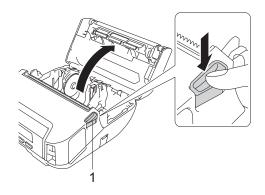

#### 1 Roll cover release lever

Remove the default platen by removing the two screws shown in the illustration.

#### **A** CAUTION


Do not touch the blade when removing the default platen.

🖉 Note

2

It is recommended that the tightening torque be 0.55±0.049 N·m.

3 Install the Linerless Platen, and fasten it using the two screws included in the Linerless Platen Kit.

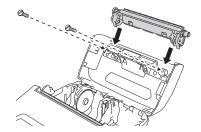

13

### 🖉 Note

The lower tear bar cannot be used when the Linerless Platen is installed.



#### 🖉 Note


- When [Linerless] is set to [On], [Tear Bar] in [Settings] and [Auto Detect] in [Media] cannot be selected on the printer's LCD.
- For best performance, make sure the paper's head margin is at least 9 mm.
- When using the Linerless Platen, paper dust may stick to the print head. Clean the print head regularly (see *Linerless Platen Maintenance* on page 141).

4 Charging Cradle (Optional:PA-CR-002)

## **Parts Description**

Charging Cradle

Charging Cradle Terminal Attachment Screws (2 each)

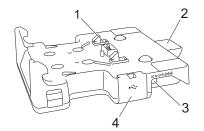



- 1 Charging cradle terminals
- 2 Eject button
- 3 DC connector IN
- 4 USB port (Allows to print from a mobile device or a computer by connecting it to the docking station using a USB cable.)

## **Specifications**

Charge time: About 4 hours\*

Charge temperature: 0°C to 35°C (recommendable: 5°C to 35°C)

Operating temperature:

AC adapter: -10°C to 40°C

Car adapter: -10°C to 50°C

Operating humidity: 10% to 90% (No condensation)

\* Varies depending on operating environment and the condition of the battery.

#### 🖉 Note


- The charging cradle can be used without a battery as a power supply or for printing.
- Do not turn the printer on and the charging cradle simultaneously.
- Sequential printing and the mass storage mode are not supported when the charging cradle is used to print.
- It is recommended to change the setting of the printer driver to [After one page of data is received] in [Other] tab when printing from the charging cradle.

## How to Charge Batteries

The AC adapter (PA-AD-600, sold separately) can be used for providing power from an electrical socket to the charging cradle and charging the battery if installed.


The Charging Cradle (PA-CR-002) cannot recharge the battery alone.

1 Connect the AC adapter to the charging cradle's DC connector IN, and then connect the AC power cord to the AC adapter.

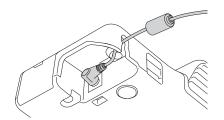

2 Connect the AC power cord to a nearby electrical socket.

3 Remove the charging cradle terminal cover with a flathead screwdriver. Install the charging cradle terminal attachment to the printer using the charging cradle terminal attachment and screws included with the charging cradle.

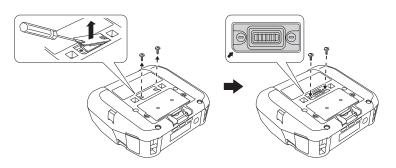

#### 🖉 Note

Install the charging cradle terminal attachment. Make sure the notched corner is aligned correctly.

Align the charging cradle terminals of the charging cradle and the printer, and then press the printer down and onto the charging cradle until the latches lock it firmly in place. The printer's battery indicator lights in orange when charging. 14


Charging Cradle (Optional:PA-CR-002)



5 The printer's battery indicator will turn off when charging is complete.

#### **Printer Removal**

Push the eject button on the back of the charging cradle and lift the printer and remove it from the charging cradle.

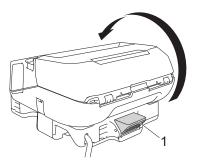


1 Eject button


Charging Cradle (Optional:PA-CR-002)

## Wall Mounting

The charging cradle can be wall mounted. Affix it to the wall using four screws, as shown in the illustration. Make sure you install the charging cradle in the correct direction so that the printer will not fall.

Use screws with the following dimensions: Length: 25 mm or more, Diameter: 9.8 mm or less

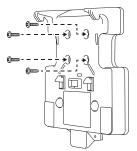

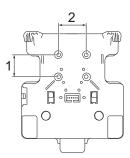

1 Height: 30 mm

2 Width: 38.1 mm

# **15** Troubleshooting

## Overview

This chapter explains how to resolve typical problems you may encounter when using the printer. If you have any problems with the printer, first make sure you have performed the following tasks correctly:

- Remove all protective packaging from the printer.
- Close the roll compartment cover completely.
- Install the battery (see Install the Battery on page 20).
- Connect the AC adapter (see *How to Recharge the Battery with the AC Adapter (Optional)* on page 22).
- Connect the car adapter (see *How to Recharge the Battery with the Car Adapter (Optional)* on page 23).
- Install and select the correct printer driver (see Install the Printer Driver and Software (When Using a Computer) on page 32).
- Connect the printer to a Windows computer or mobile device (see Connect the Printer to a Computer or Mobile Device on page 33).
- Insert the roll correctly (see *Insert the Roll* on page 25).

If you still have problems, read the troubleshooting tips in this chapter. If, after reading this chapter, you are unable to resolve your problem, visit the Brother support website at <u>support.brother.com</u>.

Problem	Solution
The printer does not print, or there is	Is the cable loose (when you are using a USB cable)?
a printing error.	Check that the cable is connected securely.
	Is the roll installed correctly?
	If not, remove the roll and reinstall it.
	(See Insert the Roll on page 25.)
	Is there enough roll remaining?
	If not, install a new roll.
	Is the roll compartment cover open?
	Check that the roll compartment cover is closed.
	Has a print error or transmission error occurred?
	Turn the printer off and on again. If the problem still occurs, contact your Brother dealer.

#### **Printing Problems**

#### Troubleshooting

The printer does not feed paper.       Is there dirt or lint on the roller preventing it from rolling freely? Clean the roller. (See Roller Maintenance on page 140.)         Image: Check that the ejection path of the paper is not blocked.       Image: Check that the roll on page 25.)         Image: Check that the roll compartment cover is closed correctly.       Image: Check that the roll compartment cover.         Image: Check that the roll compartment cover.       Image: Check that the roll compartment cover.         Image: Check that the roll compartment cover.       Image: Check that you entered the media information correctly. You can set the media information using [Paper Size Setup] in the Printer Setting Tool.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.       Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.       Image: Check that there are no items blocking the sensor.	Problem	Solution
• Check that the roll is set correctly by removing the roll and installing it again. (See Insert the Roll on page 25.)         • Ensure that the roll compartment cover is closed correctly.         • Open the roll compartment cover.         • Press the () (Power) button or (Back) button to cancel the print job.         • Turn the printer does not pause between labels.         • Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         • Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         • Upper size setup.         • Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         • Upper size setup.         • Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         • Upper size setup.         • Upper size setup. <td>The printer does not feed paper.</td> <td></td>	The printer does not feed paper.	
(See Insert the Roll on page 25.)         Ensure that the roll compartment cover is closed correctly.         The printer feeds paper continuously.         Press the (b) (Power) button or <b>(Back)</b> button to cancel the print job.         Turn the printer off.         The printer does not pause between labels.         Check that you entered the media information correctly. You can set the media information using [Paper Size Setup] in the Printer Setting Tool.         Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: the sensor is dirty		Check that the ejection path of the paper is not blocked.
Ensure that the roll compartment cover is closed correctly.     Open the roll compartment cover.     Press the () (Power) button or (Back) button to cancel the print job.     Turn the printer off.     Check that you entered the media information correctly. You can set the media information using [Paper Size Setup] in the Printer Setting Tool.     Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.		Check that the roll is set correctly by removing the roll and installing it again.
The printer feeds paper continuously. <ul> <li>Open the roll compartment cover.</li> <li>Press the () (Power) button or (Back) button to cancel the print job.</li> <li>Turn the printer off.</li> <li>Check that you entered the media information correctly. You can set the media information using [Paper Size Setup] in the Printer Setting Tool.</li> <li>Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> <li>Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> <li>Media sensor</li> <li>Med</li></ul>		(See Insert the Roll on page 25.)
continuously. <ul> <li>Press the () (Power) button or (Back) button to cancel the print job.</li> <li>Turn the printer off.</li> </ul> <li>The printer does not pause between labels.</li> <li>Check that you entered the media information correctly. You can set the media information using [Paper Size Setup] in the Printer Setting Tool.</li> <li>Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         <ul> <li>Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> </ul> </li> <li>Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         <ul> <li>Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> <li>Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> <li>Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> <li>Image: Check that the sensor is dirty.</li> <li>Image: Check that the sen</li></ul></li>		Ensure that the roll compartment cover is closed correctly.
<ul> <li>Press the () (Power) button or (Back) button to cancel the print job.</li> <li>Turn the printer off.</li> <li>Check that you entered the media information correctly. You can set the media information using [Paper Size Setup] in the Printer Setting Tool.</li> <li>Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> </ul>		Open the roll compartment cover.
The printer does not pause between labels. <ul> <li>Check that you entered the media information correctly. You can set the media information using [Paper Size Setup] in the Printer Setting Tool.</li> <li>Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> </ul> 1 <ul> <li>Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> </ul> 1 <ul> <li>Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> </ul> 1 <ul> <li>Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> <li> <ul> <li>Image: Check that the sensor is dirty. If the sensor is dirty, wipe it with a dry cotton swab.</li> <li> <ul> <li>Image: Check that the sensor is dirty. If the sensor is dirty. The sensor is dirty.</li> <li>Image: Check that the sensor is dirty.</li> <li> <ul> <li>Image: Check that the sensor is dirty.</li> <li> <ul> <li>Image: Check that the sensor is dirty.</li> <li> <ul> <li>Image: Check that the sensor is dirty.</li> <li> <li> <ul> <li> <li> <ul> <li> <li> <li> </li></li></li></ul> <li> <ul> <li> <li> <li> <li> <li> </li> <li> </li></li></li></li></li></ul> <li> <ul> <li></li></ul></li></li></li></li></ul></li></li></ul></li></ul></li></ul></li></ul></li></ul></li></ul>	continuously.	■ Press the 🕛 (Power) button or 👈 (Back) button to cancel the print job.
Iabels.       media information using [Paper Size Setup] in the Printer Setting Tool.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is not dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is dirty. If the sensor is dirty, wipe it with a dry cotton swab.         Image: Check that the sensor is dirty. If the sensor is dirty. If the sensor is dirty.         Image: Check that that the sensor is dirty.		Turn the printer off.
cotton swab.		
Check that there are no items blocking the sensor.		1 Media sensor
		Check that there are no items blocking the sensor.

Problem	Solution
When printing via the USB cable, the	Is the printer set for sequential printing?
printer repeatedly pauses and then continues printing.	If so, set print mode to buffered printing.
	For Windows 10 / Windows Server 2016 (RJ-4250WB): Open printer properties from [Control Panel] - [Hardware and Sound] - [Devices and Printers], right-click the printer you want, and select [Printing preferences]. Click the [Other] tab and select the option [After one page of data is received].
	For Windows 7 / Windows 8 / Windows 8.1 / Windows Server 2008 R2 (RJ-4250WB) / Windows Server 2012 (RJ-4250WB) / Windows Server 2012 R2 (RJ-4250WB): Open printer properties from [ <b>Devices and Printers</b> ], right-click the printer you want, and select [ <b>Printing preferences</b> ]. Click the [ <b>Other</b> ] tab and select the option [ <b>After one page of data is received</b> ].
	For Windows Server 2008 (RJ-4250WB): Open Printer Properties from [Control Panel] - [Hardware and Sound] - [Printers], click the printer you want, and select [Select printing preferences]. Click the [Other] tab and select the option [After one page of data is received].
An error occurs when the roll cannot be fed to the beginning of the printing.	If a feed error occurs, use the Paper Size Setup of the Printer Setting Tool to assign the correct paper settings to the printer or click [Select Media] to check whether correct media is set in the printer when RD roll is used.

## Printed Image Problems

Problem	Solution	
Printed paper contains streaks or	Is the print head or roller dirty?	
poor quality characters, or paper is not fed correctly.	Although the print head generally remains clean under normal use, lint or dirt from the roller may become stuck on the printer head. If this occurs, clean the roller (see <i>Roller Maintenance</i> on page 140).	
The print quality is poor.	Is there dust or dirt on the print head or roller preventing it from turning freely?	
	Clean the print head or roller (see <i>Print Head Maintenance</i> on page 139 and <i>Roller Maintenance</i> on page 140).	
	Adjust the printing density. The print density can be specified in the Printer Setting Tool.	

Problem	Solution
Printed barcodes cannot be read.	Print labels so that barcodes are aligned with the print head as shown below.
	1 Print head
	2 Barcode
	3 Printing orientation
	Try using another barcode reader.
	Set [Print Speed] to a slower option. The print speed can be specified in the Printer Setting Tool. (See Device Settings on page 67.)
	Adjust [Print Density]. The print density can be specified in the Printer Setting Tool. (See Device Settings on page 67.)
	This printer is not designed exclusively for creating barcode labels. Always check that barcode labels can be read by the barcode reader.

#### **Printer Problems**

Problem	Solution
The LED indicator or the LCD is not	Is the battery inserted correctly?
lit.	Check that the battery is inserted correctly. If it is, check that the battery has sufficient charge remaining.
	Is the adapter cord connected properly?
	Check that the cord is connected correctly.
	If the LED indicator or the LCD still does not light up, contact your Brother dealer.
A data transmission error appears on	Is the correct port selected?
your computer.	Check that the correct port is selected.
	Is the printer in cooling mode?
	The message [Cooling] is displayed on the LCD.
	Wait until the message disappears and then try printing again.
	Are there any unfinished print jobs?
	If you try to print while other users are printing large amounts of data, the printer is unable to accept your print job until the current print jobs are completed. If this occurs, send the print job again after the other jobs are completed.

#### Troubleshooting

Problem	Solution	
I want to reset the printer/delete the	To reset the printer, perform the following procedure:	
data transferred from the computer.	1 Press the () (Power) button to turn the printer off.	
	2 Press and hold the ↑ (Feed) / OK button and the () (Power) button for about five seconds.	
	3 While pressing the () (Power) button, press the ↑ (Feed) / OK button six times.	
	4 Release the () (Power) button.	
	All the transferred data from the computer will be deleted and the printer settings will be reset to the factory settings.	
I want to cancel the current print job.	Make sure that the printer is On, and then press the () (Power) button or → (Back) button.	
Print head, motor, or battery is too	The thermal head, motor, or battery is too hot.	
hot.	Head: If the thermal head becomes too hot, it may produce imaging on the paper in areas not intended to be printed. This condition is normal when printing documents with a lot of "black" content.	
	The printer will stop and resume printing after the print head has cooled down.	
	To avoid or delay this condition, print using a lighter density setting, reduce the amount of black space being printed (for example, remove background shading and colours in graphs and presentation documents), and make sure that the printer has adequate ventilation and is not located in an enclosed space.	
	Motor or battery: Do not use the printer continuously. If the printer is used continuously, the motor or battery will become too hot. In this case, the printer will stop and resume printing after the motor or battery has cooled down.	
	Note	
	This condition may occur more often when the printer is used at high altitude (more than about 3,000 m) due to a lower air density available to cool the printer.	
Transferring the program failed.	The system will recover if the program is transferred again. To resolve the issue, contact your Brother dealer or Brother customer service for assistance.	

### **Network Setup Problems**

Problem	Solution	
You are using security software	Confirm your settings in the installer dialog box.	
	Allow access when the security software alert message appears during the printer installation.	
Your security settings	Make sure the network security settings are correct:	
(SSID/Network Key) are incorrect	See the instructions supplied with your Wi-Fi access point/router for information on how to find the security settings.	
	The default SSID (Network Name) may be your Wi-Fi access point/router's manufacturer name or model number.	
	Contact the manufacturer of your Wi-Fi access point/router or ask your Internet provider or network administrator.	
The printer cannot connect to the mobile device using Wi-Fi or	Move the printer within about one metre of the mobile device when you configure the Wi-Fi network settings.	
Bluetooth.	Move the printer to an obstruction-free area.	
The printer cannot print using Wi- Fi or Bluetooth.	If a wireless computer, Bluetooth-equipped device, microwave oven, digital cordless phone, or other device is near the printer or the Wi-Fi access point/router, move the device away from the printer or Wi-Fi access point/router.	
You are using MAC Address filtering	You can confirm the MAC address by printing out the printer information. Press and hold the <sup>1</sup> (Feed) / OK button to print the printer information.	
	Set the Wi-Fi access point/router so that the MAC address of the printer is allowed for connections. For more information, see the instructions supplied with your Wi-Fi access point/router.	
Your Wi-Fi access point/router is in stealth mode (not broadcasting	Enter the correct SSID name during the installation or when using [Communication Settings] in the Printer Setting Tool.	
the SSID)	Check the SSID name in the instructions supplied with your Wi-Fi access point/router and set up your wireless network again.	
The printer is not connected	Check the WLAN icon on the LCD.	
correctly to the network.	•, •, •, •: The printer is already connected some wireless network. Check the wireless network information and confirm to connect your Wi- Fi access point/router correctly.	
	••••••••••••••••••••••••••••••••••••••	
	No icon : The wireless network feature on your printer is off. Make sure that the printer is in the mode you want to connect to.	
I have checked and tried all of the above, but still cannot complete the wireless configuration.	Turn the printer off and on again. Then try and configure the Wi-Fi settings again.	

#### Cannot Print over the Network Printer Is Not Found on the Network Even after Successful Installation

Problem	Solution	
You are using security software	See Security Software Problems on page 163.	
The printer is not assigned with an available IP address	Confirm the IP address and the Subnet Mask. Verify that both the IP addresses and Subnet Masks of your computer and the printer are correct and located on the same network. For more information on how to verify the IP address and the Subnet Mask, contact your network administrator.	
	Confirm your IP address, Subnet Mask and other network settings in [Communication Settings] in the Printer Setting Tool. See Change the Printer Settings on page 45.	
Your previous printing job failed	If the failed printing job is still in your computer's print queue, delete it.	
	Example (Windows 7): Click [Start], [Devices and Printers] and select the printer from [Printers and Faxes]. Double-click the printer's icon, and then select [Cancel All Documents] in the [Printer] menu.	
The printer is not connected	Check the WLAN icon on the LCD.	
correctly to the network	•, •, •, •:The printer is already connected some wireless network. Check the wireless network information and confirm to connect your Wi- Fi access point/router correctly.	
	••••••••••••••••••••••••••••••••••••••	
	No icon : The wireless network feature on your printer is off. Make sure that the printer is in the mode you want to connect to.	
I have checked and tried all the above, but my printer does not print.	Uninstall the printer driver and the software, and then reinstall them.	

#### **Security Software Problems**

Problem	Solution
You did not choose to allow access when the security alert dialog box appeared during either the standard installation, BRAdmin Light installation, or when printing	If you did not choose to accept the security alert dialog box, the firewall function of your security software may be rejecting access. Some security software might block access without showing a security alert dialog box. To allow access, see the instructions of your security software or contact the manufacturer.
Incorrect port numbers are being	The following port numbers are used for Brother network features:
used for the Brother network features	■ BRAdmin Light → Port number 161 / Protocol UDP
	For more information about how to open the port, see the instructions for the security software or contact the manufacturer.

15

#### **Check the Operation of Network Devices**

Problem	Solution	
The printer and Wi-Fi access point/router are not turned on	Make sure you have confirmed all instructions in Overview on page 157.	
I do not know my printer's	Check [Communication Settings] in the Printer Setting Tool.	
network settings, such as the IP address	See Change the Printer Settings on page 45.	
The printer is not connected	Check the WLAN icon on the LCD.	
correctly to the network.	•, •, •, •: The printer is already connected some wireless network. Check the wireless network information and confirm to connect your Wi- Fi access point/router correctly.	
	••••••••••••••••••••••••••••••••••••••	
	No icon : The wireless network feature on your printer is off. Make sure that the printer is in the mode you want to connect to.	

#### **Problems with Battery Charger (Optional)**

If you experience any problems that you cannot resolve, please contact the reseller where the product was purchased.

Problem	Solution
The charge indicator turned off, but the battery has not fully charged.	Charging stopped because the battery became too hot or too cold. Please wait and try charging the battery later.
The charge indicator flashes orange.	An error occurred during charging.
	Wipe the charging terminals of the charger and the battery with a dry cloth.
	Replace the battery with a new one.
	Wait and try charging the battery later.

#### Problems with Charging Cradle (Optional)

If you experience any problems that you cannot resolve, please contact the reseller where the product was purchased.

Problem	Solution
The charge indicator turned off, but the battery has not fully charged.	Charging stopped because the battery became too hot or too cold. Please wait and try charging the battery later.
The charge indicator flashes red.	An error occurred during charging.
	Wipe the charging cradle terminals of the charging cradle and the battery with a dry cloth.
	Replace the battery with a new one.
	Wait and try charging the battery later.
The printer does not turn on when placed it on the charging cradle.	Set the printer on the charging cradle correctly.
	Check the AC adapter is correctly connected.
	Reconnect the AC adapter.
The printer does not print via a USB cable.	Set the printer on the charging cradle correctly.
	Connect a USB cable correctly.
	If USB cables are connected to the printer and the charging cradle simultaneously, disconnect the one connected to the printer, turn the printer off and turn on again.
	(RJ-4250WB only) Select the correct driver in the Devices and Printers. If the charging cradle is connected, your operating system will also display a copy of the printer driver icon (for example: Brother RJ-4250WB (Copy 1)) in the Devices and Printers. Make sure it is not selected.

#### **Problems with the Linerless Platen (Optional)**

Problem	Solution
The print quality is poor.	Install the Linerless Platen correctly.
	Clean the print head.
The printer does not feed paper.	Install the Linerless Platen correctly.
	Set the roll correctly.
	Check if a label or adhesive has stuck under the roll compartment cover. If so, clean the inside of the cover.
The media is jammed.	Install the Linerless Platen correctly.
	Wipe any adhesive residue left along the ejection path of the paper.
	Try using a different roll (with a weaker adhesive).

## Error Messages from the Printer

Error Message	Cause/Remedy
No Template Selected	There is no template with the specified number. Specify the correct number.
	When printing a template, an error is indicated if the specified template does not exist.
	The template was not transferred. Register the template with the specified number to the printer.
Invalid Database Record	An error will occur when printing a template which specifies an incorrect key code, or a non-existent key code in a linked database.
Media Error! Check Loading	Is the correct roll installed?
	Check that the correct media, for example, type (die-cut label or continuous length tape) and die-cut label size, is installed.
	Is the roll installed correctly?
	If not, remove the roll, and then reinstall it. For details, see <i>Insert the Roll</i> on page 25.
	Is enough of the roll remaining?
	If not, install a new roll.
Cover Open Close Cover	Is the roll compartment cover open? Check that the roll compartment cover is closed.
Communication Error	Transfer of the data failed. When sending a template as a .blf file, an error is indicated if the model name in the file is different.
	Has the wireless LAN or Bluetooth connection been interrupted?
	Turn the printer off and on again.
WPS did not connect Try to connect again	The Wi-Fi access point/router could not be found.
Mass Storage Operation	Is the printer in mass storage mode?
Error!	The printer's file system may be corrupted, or a file's name or contents were changed while the file was being transferred or processed. Turn the printer off and then on again.
	Do not access files on the printer during mass storage processing to avoid further problems.
Recharge Battery!	Does the rechargeable battery have a low charge?
	Use the AC adapter and AC power cord to connect the printer to an electrical socket, or use the car adapter to connect the printer to a DC power socket to charge the battery.
System Error!	If the error message is displayed, contact Brother customer service.
XX	
Memory Full!	Print jobs exceeding 3 m and incompatible files cannot be printed.
	Make sure the data you transfer does not exceed the capacity of the user storage area.

Troubleshooting

Error Message	Cause/Remedy
ChargingError Cannot Charge	Is battery charging incomplete despite continuous charging?
	Confirm that the battery is correctly installed. If charging still fails to complete, the battery may be deteriorated. Replace the battery with a new one.
High Temp!	Is the printer temperature too high?
	If the printer overheats when the Linerless setting is enabled, wait until the printer cools down and then try printing again.

## brother